

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

703717 <u>End Table</u>

REVISION 0: 02/04/2023 REVISION 1: 06/10/2025

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM:703717

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION


AN TOP 1PC
BN LEG 4PCS

ITEM:**703717**

COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

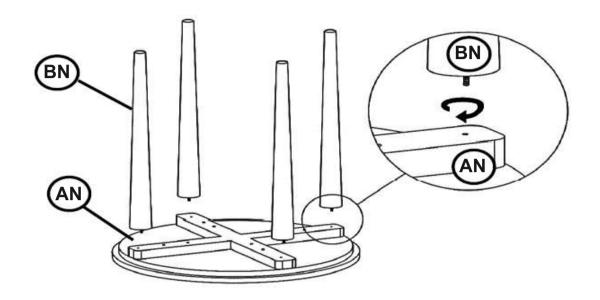


STEP 2 COMPLETE





ITEM:**703717**



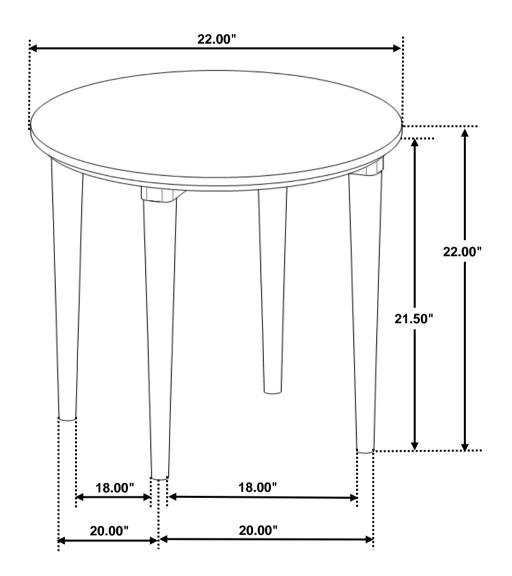

Note: Dimension tolerance ± 5%