

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706223
TV STAND

ITEM:706223

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES












MAX TV SIZE : 85"

PARTS IDENTIFICATION

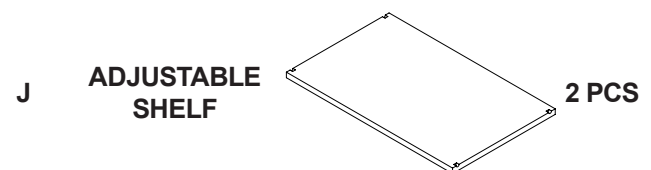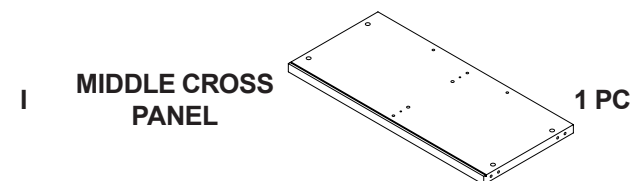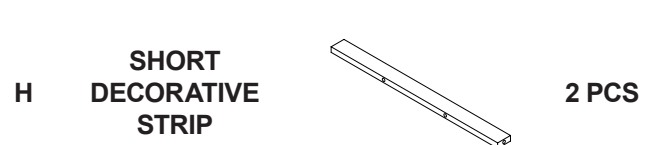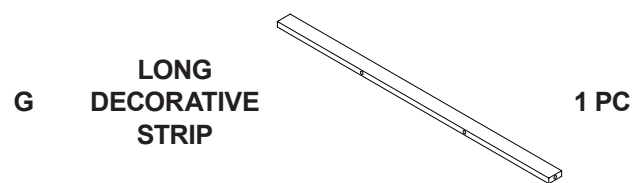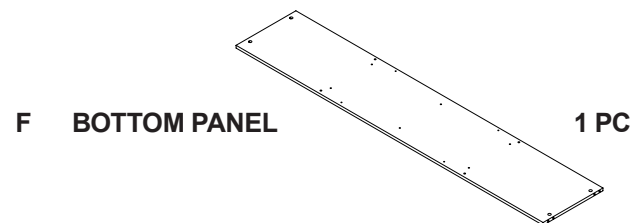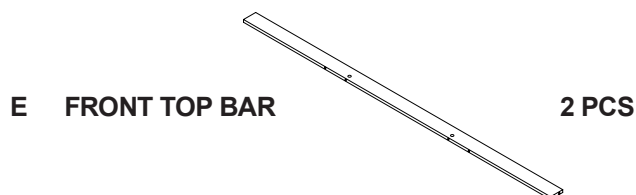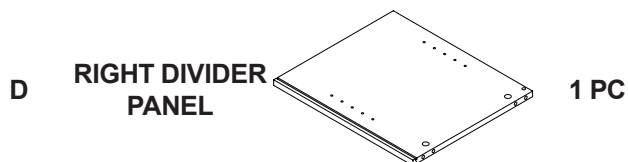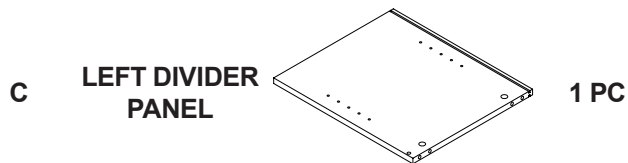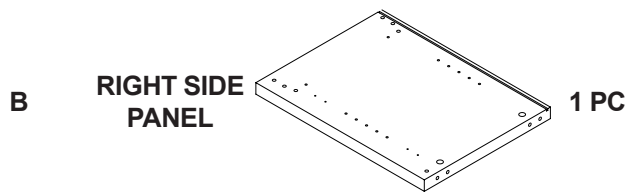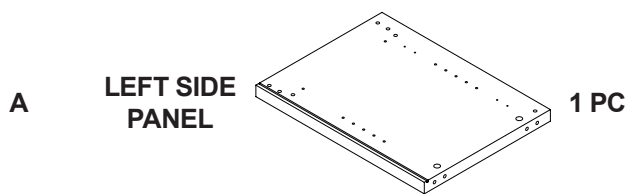











NOTE:

           Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

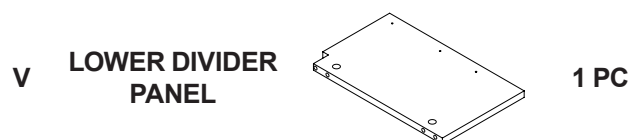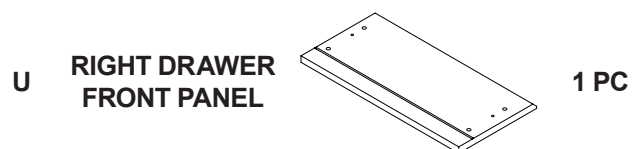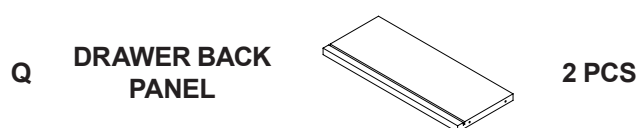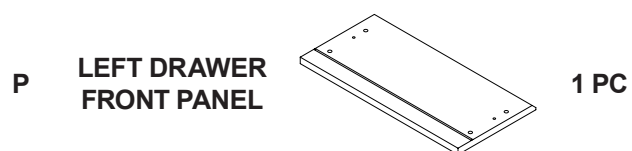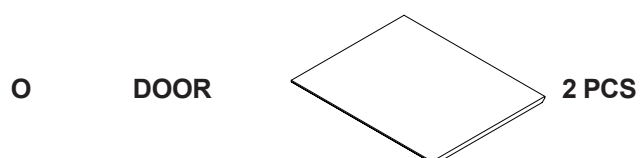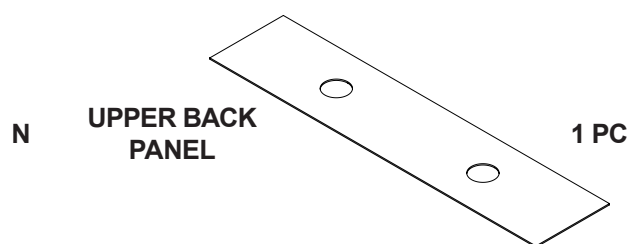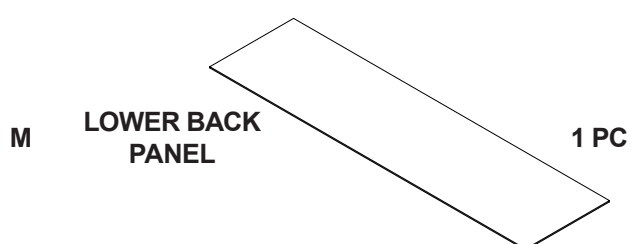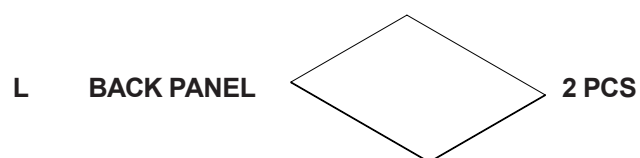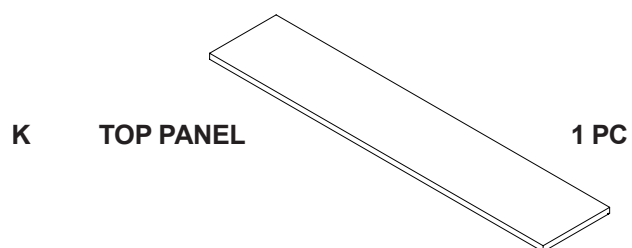

ITEM:706223

          HARDWARE IDENTIFICATION

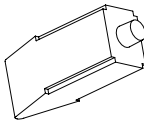Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	GLIDES L = 350mm BLK		2 SET
2	WOODEN DOWEL Ø8 x 30mm		60 PCS	10	GLIDES SCREW Ø3x10mm BLK		24 PCS
3	CAM BOLT Ø7 x 35.5mm SR		28 PCS	11	HINGE Ø35mm SR		4 PCS
4	CAM LOCK Ø15 x 12mm SR		28 PCS	12	HINGE SCREW Ø4 x 15mm SR		16 PCS
5	LONG SCREW Ø4.5x42mm SR		8 PCS	13	PLASTIC COVER Ø 52mm		2 PC
6	SCREW Ø4.3x35mm SR		8 PCS	14	BACK PANEL SUPPORT		6 PCS
7	PLASTIC FEET Ø15mm		8 PCS	15	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	16	STICKER Ø20mm		5 PCS

 
Z9, Z11, Z13 not included in blister packaging.

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **706223**

STEP 1

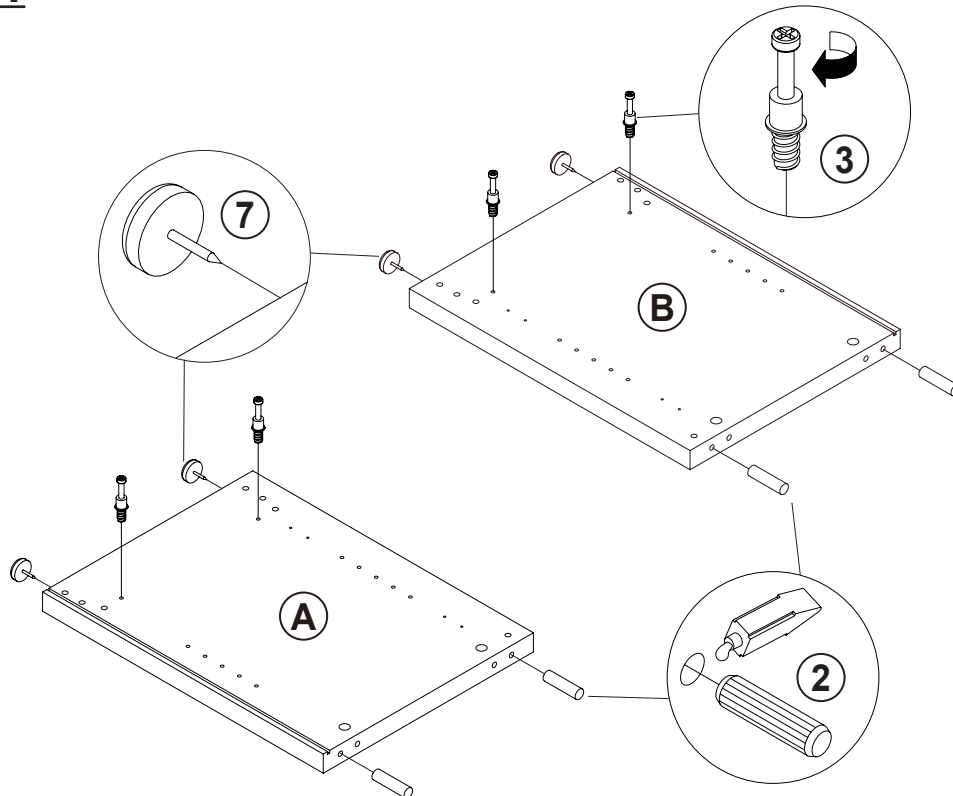

-  **1**
-  **2**
x 4
-  **3**
x 4
-  **7**
x 4

 
STEP 2

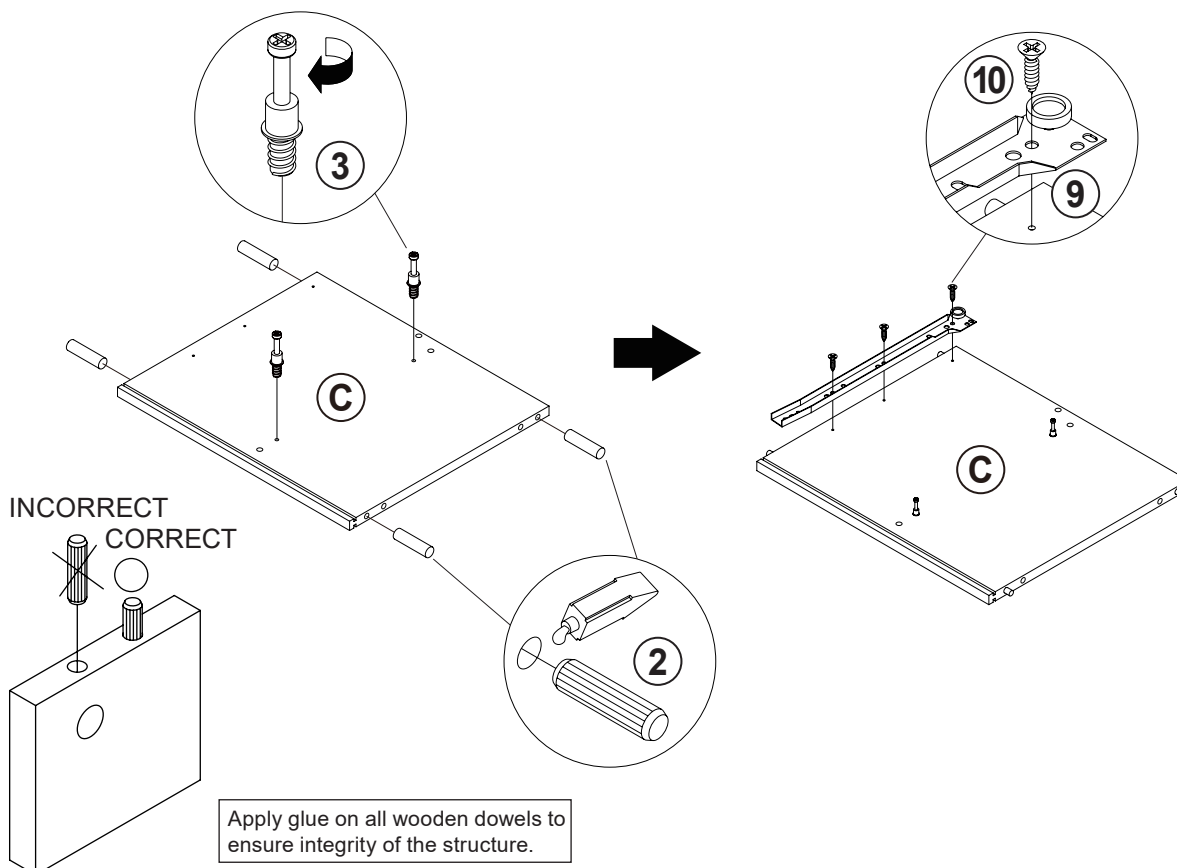


-  **1**
-  **2**
x 4
-  **3**
x 2
-  **9**
x 1
-  **10**
x 3

ITEM: **706223**

 STEP 3

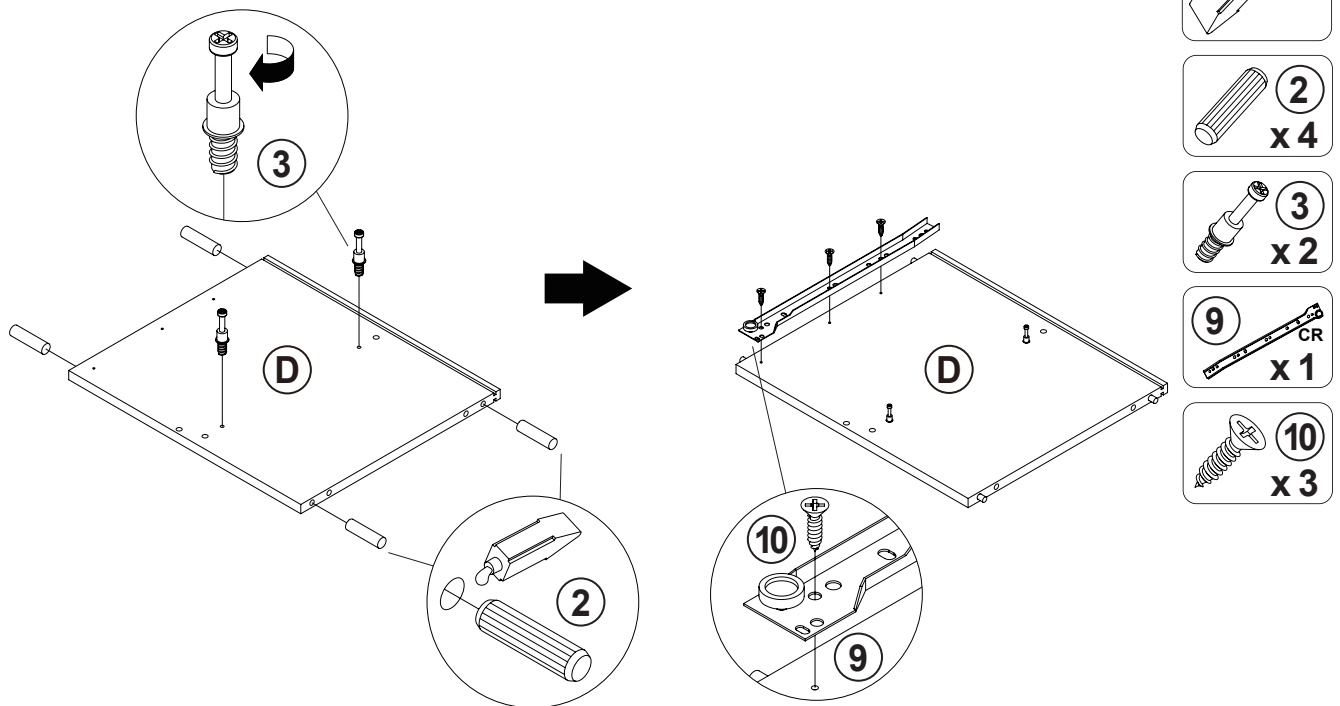


 STEP 4

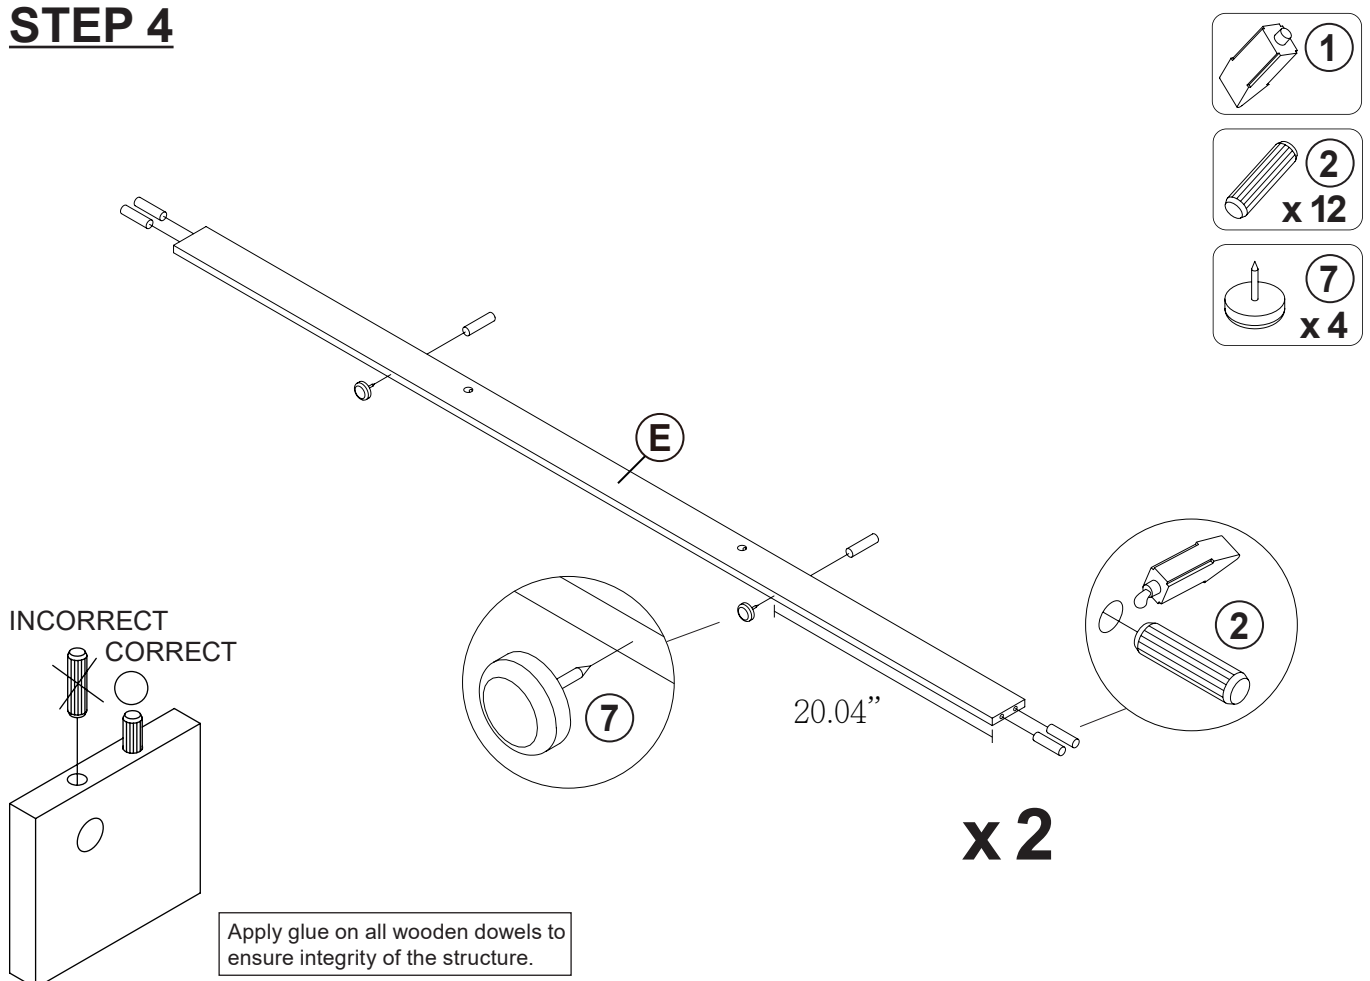


ITEM: **706223**

 STEP 5

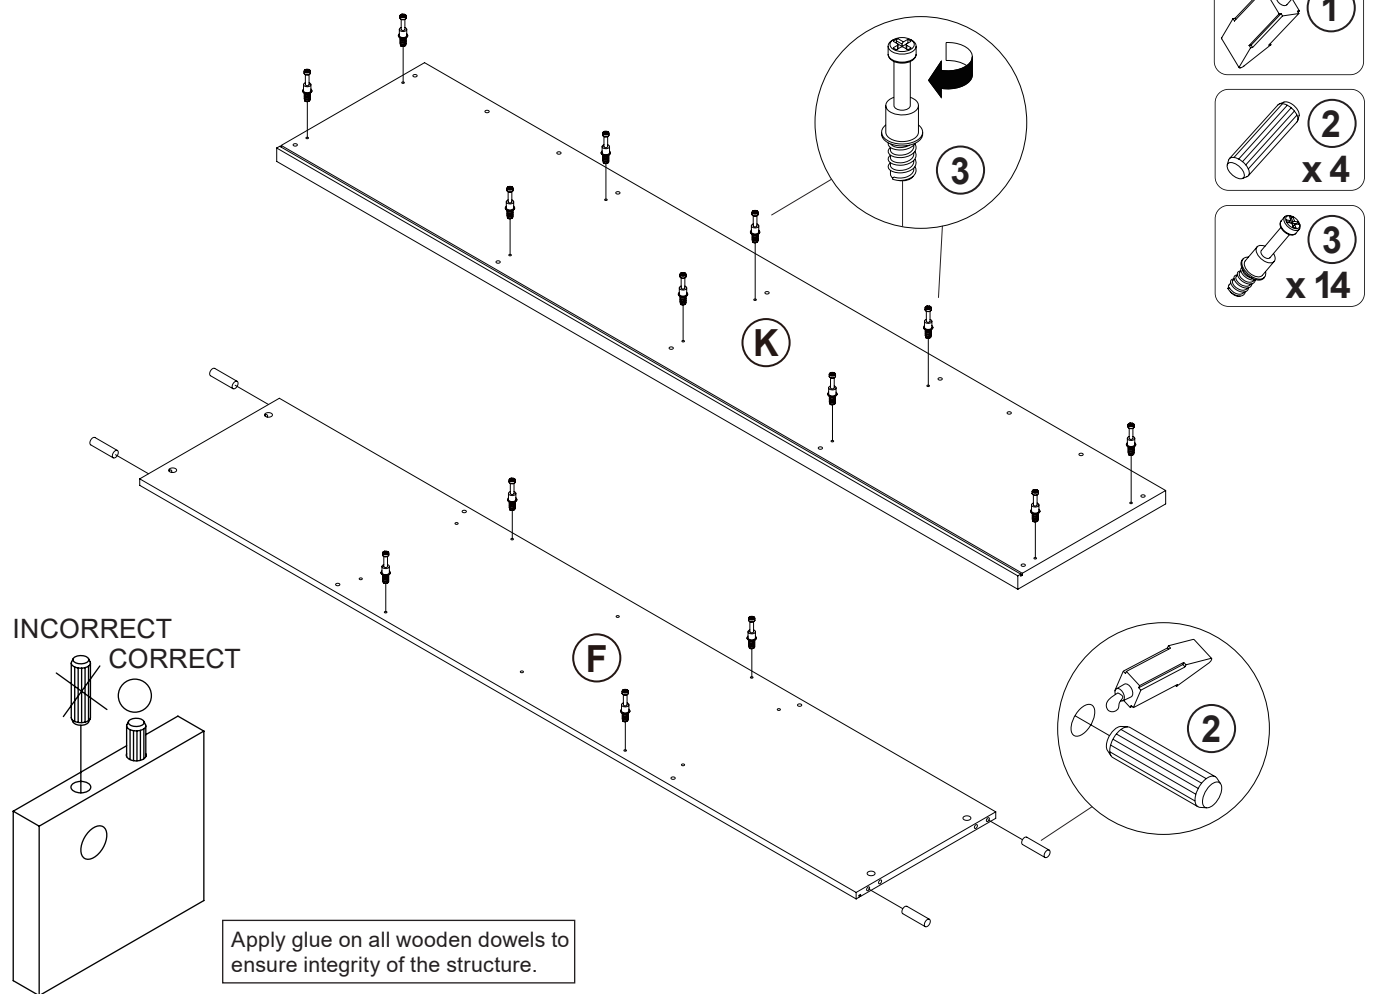

 
STEP 6

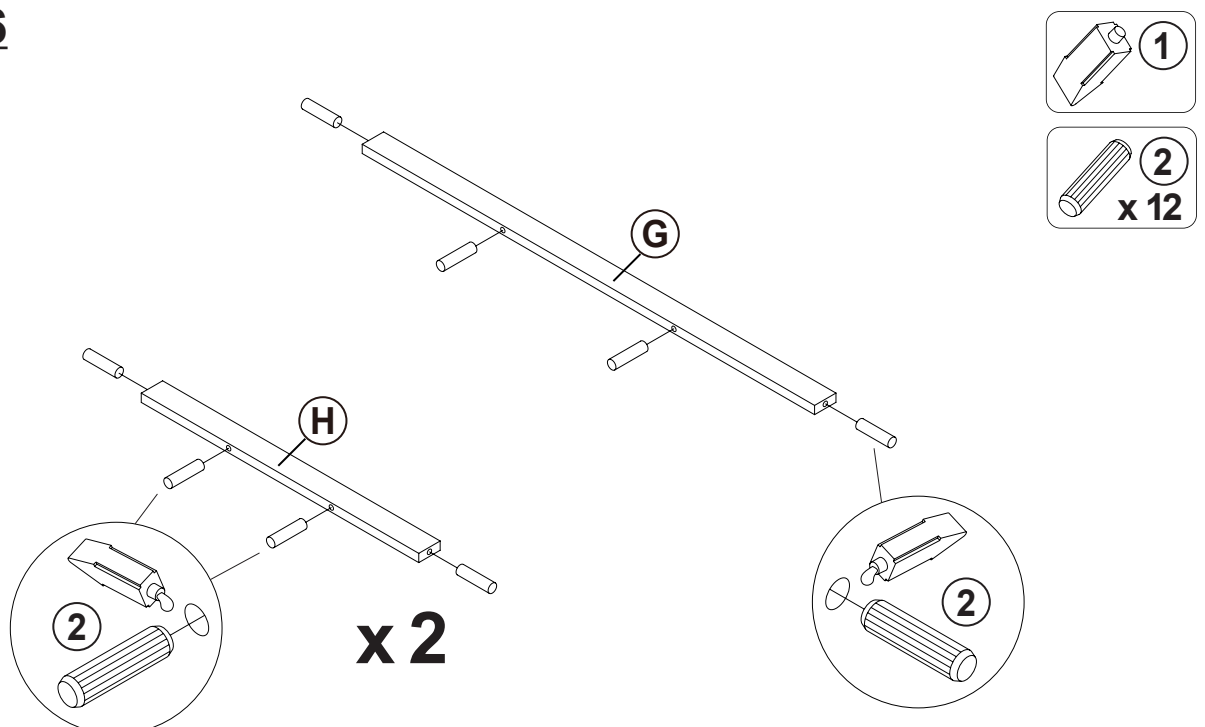


ITEM: **706223**

STEP 7

 COASTER
FINE FURNITURE

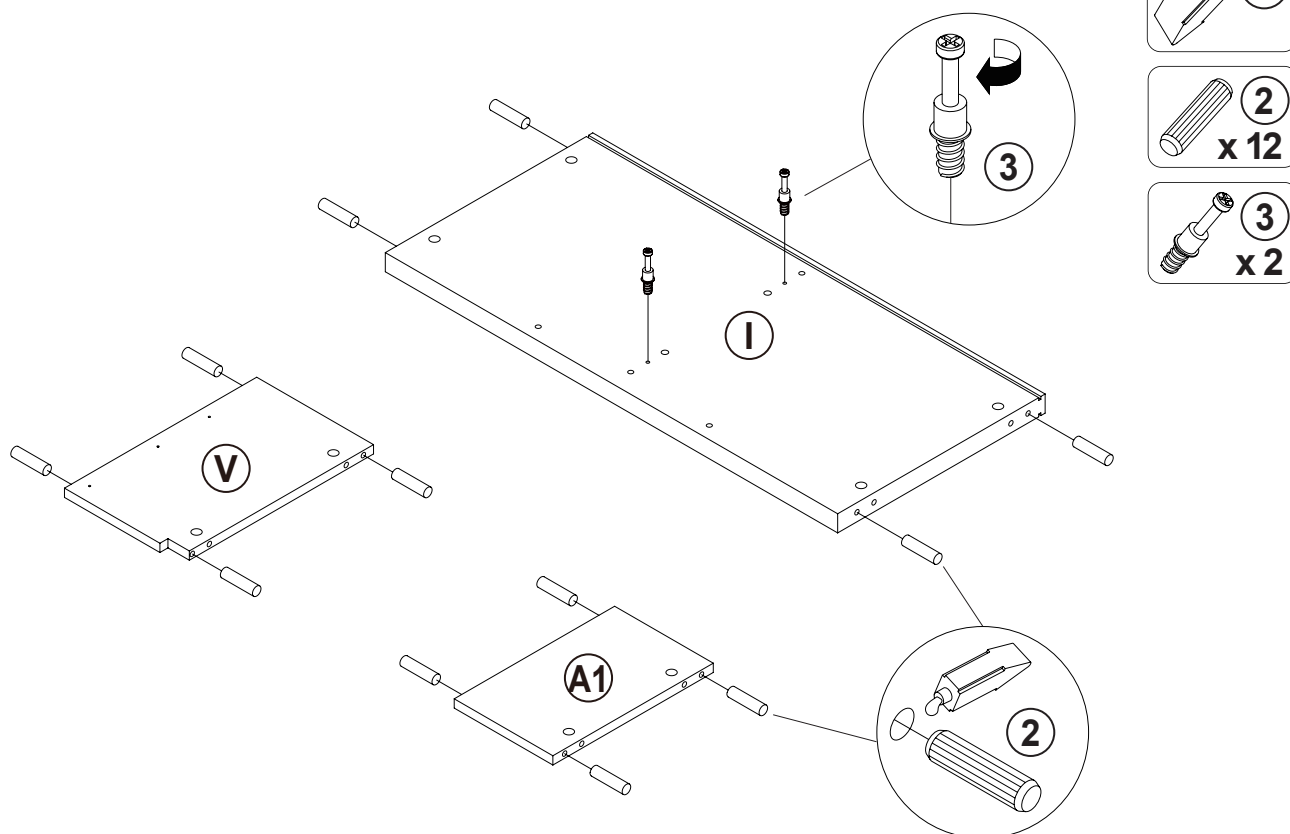


 
STEP 8

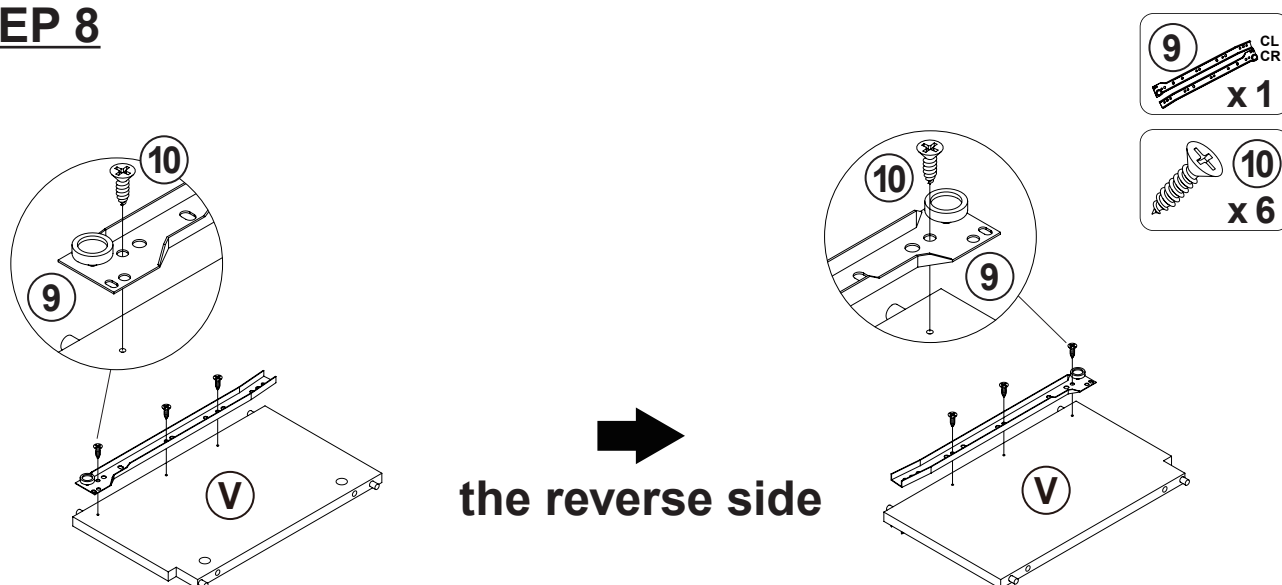



ITEM: **706223**

STEP 9

  COASTER
FINE FURNITURE

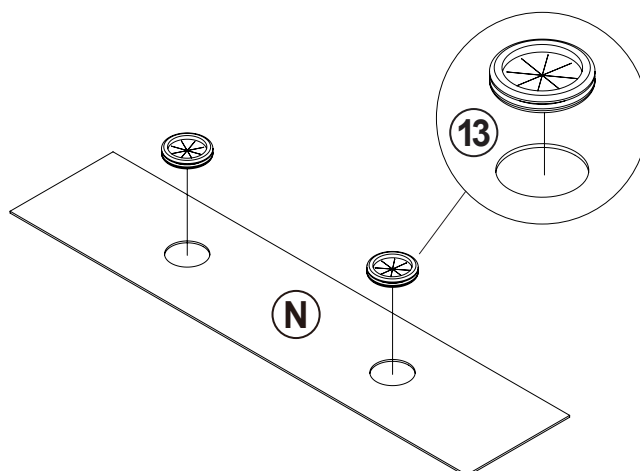


  STEP 10


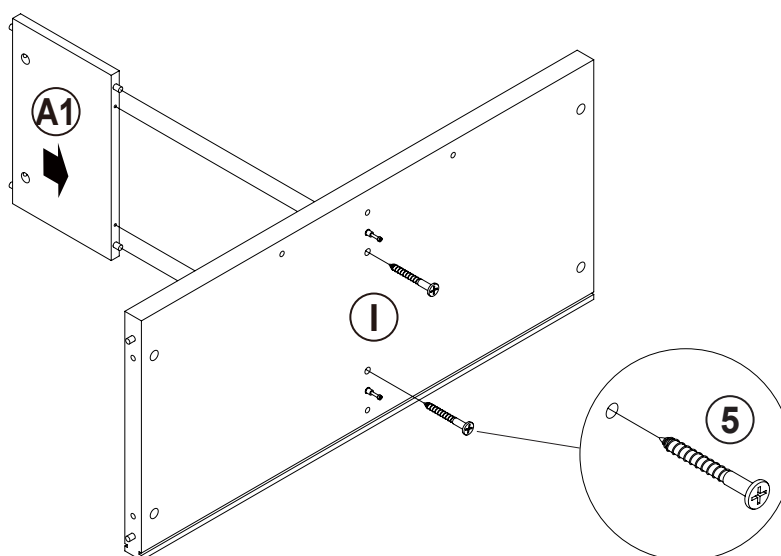



ITEM: **706223**

 STEP 11

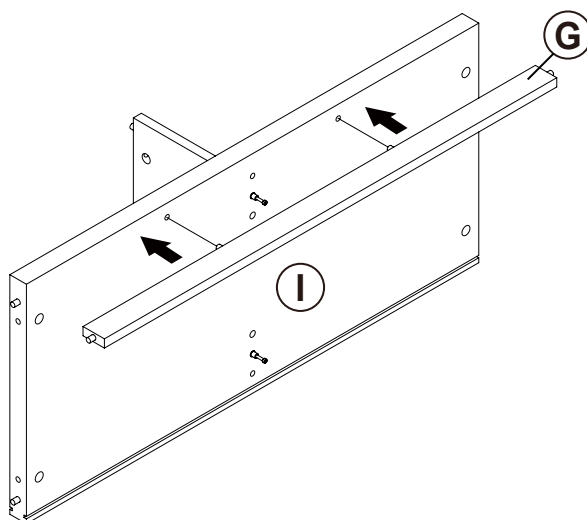

  
 
STEP 12

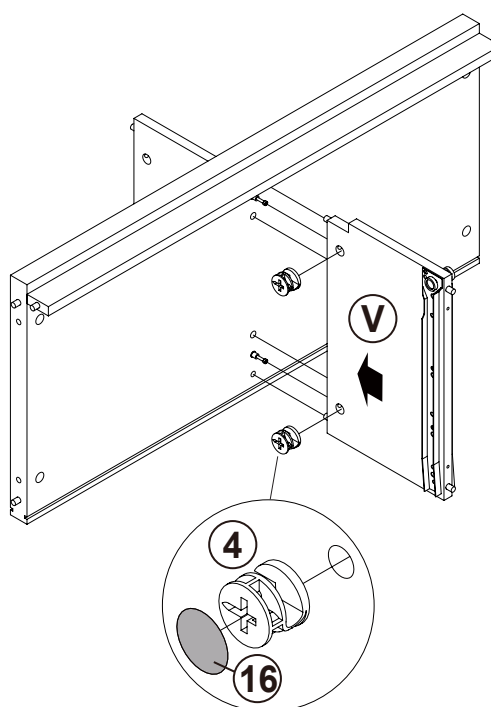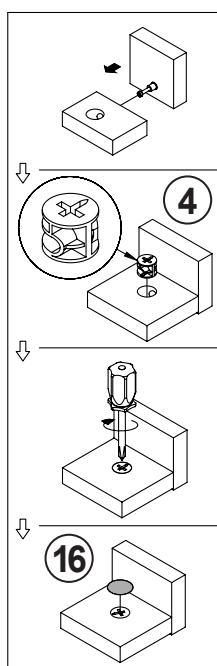



ITEM: **706223**

STEP 13

  COASTER
FINE FURNITURE

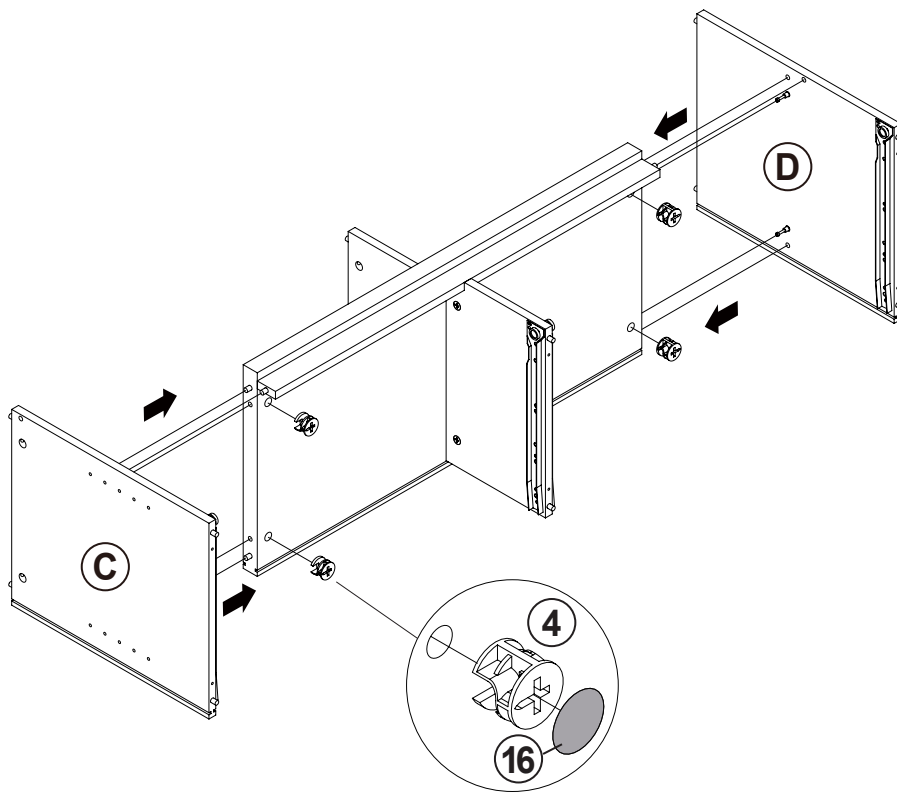

 
 
STEP 14

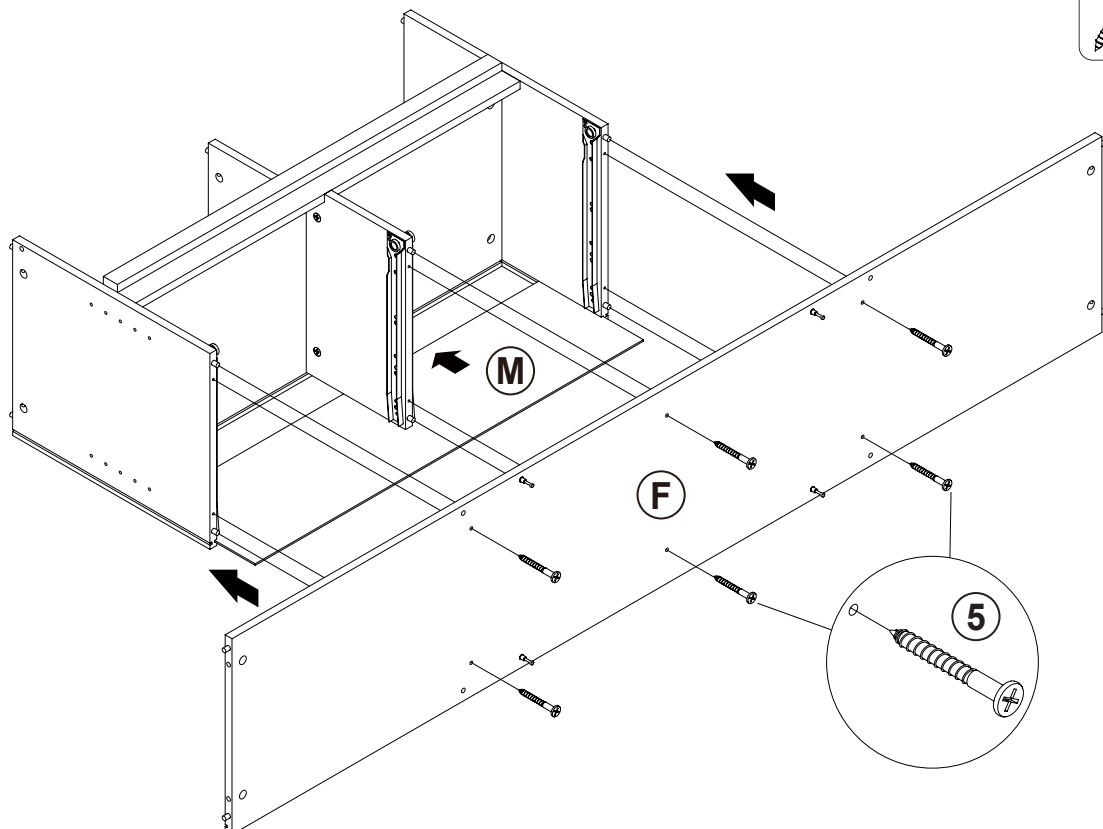




ITEM: **706223**

COASTER
FINE FURNITURE

  STEP 15

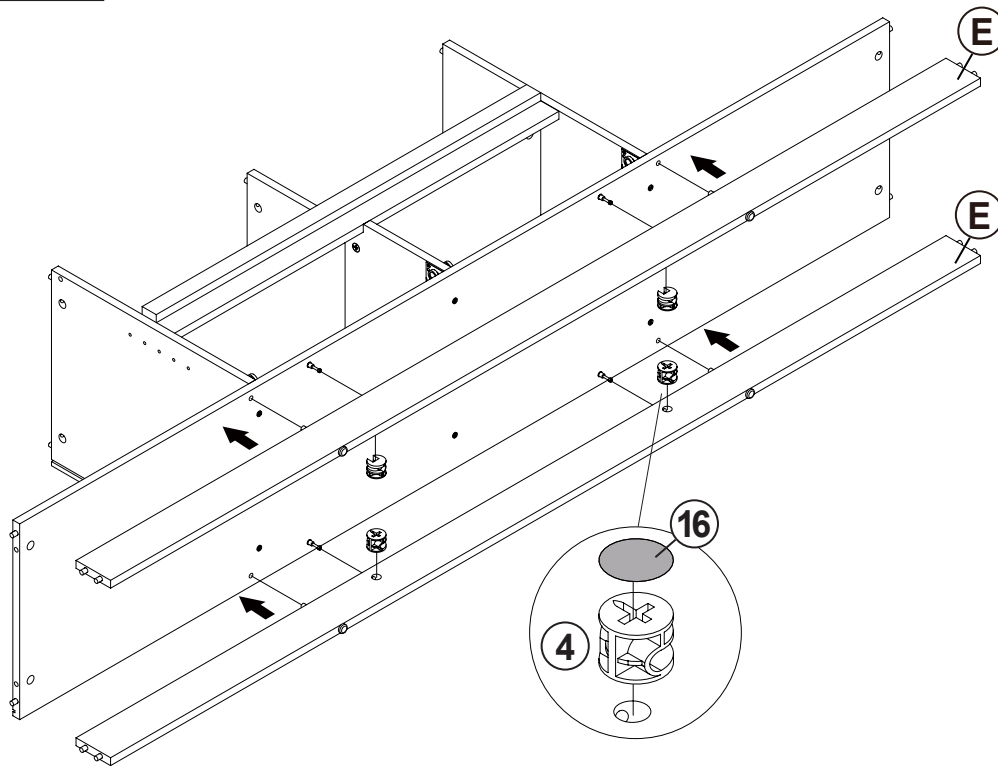


   STEP 16

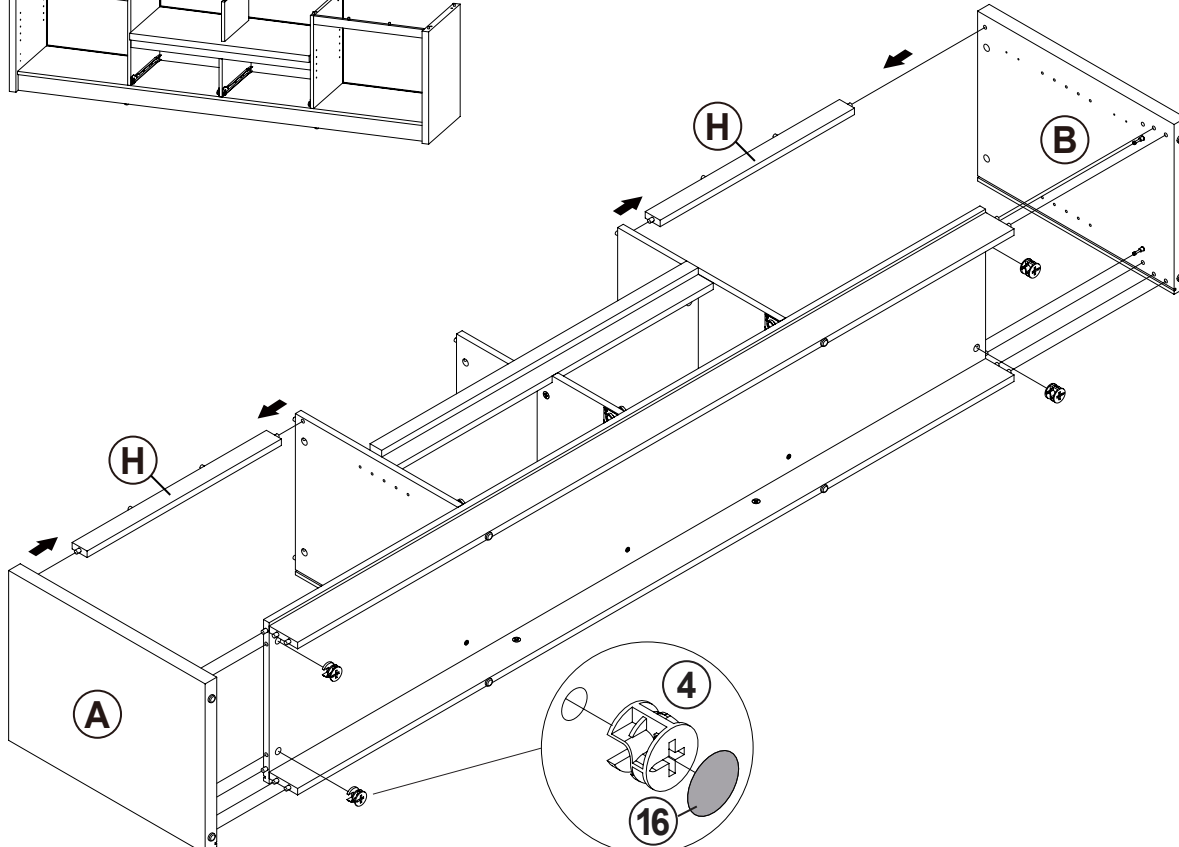

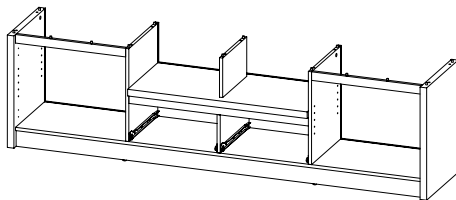


ITEM: **706223**

 STEP 17

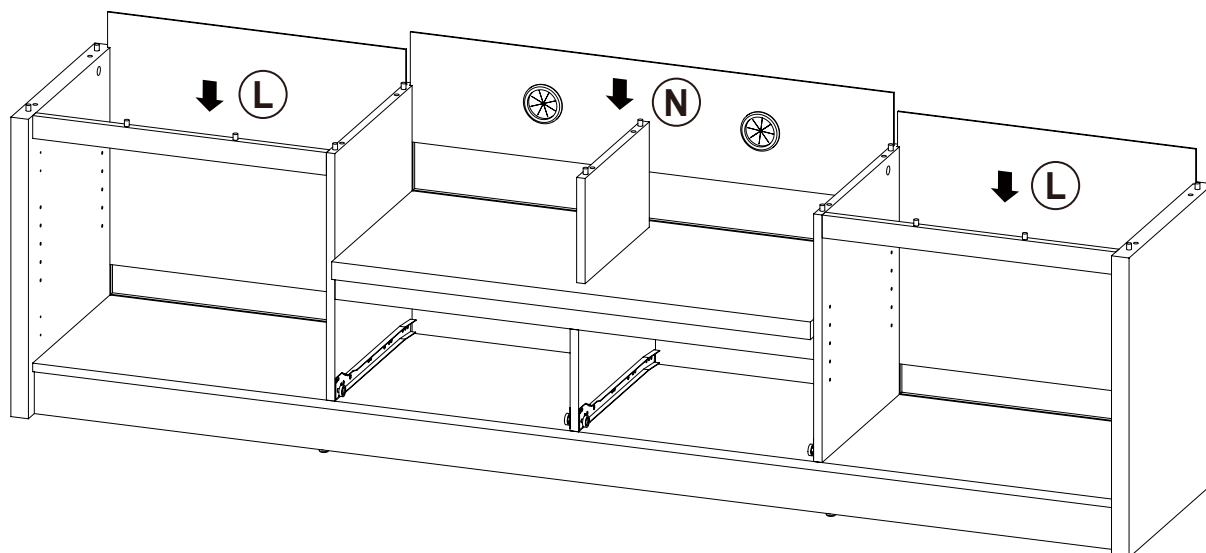

  
 
STEP 18

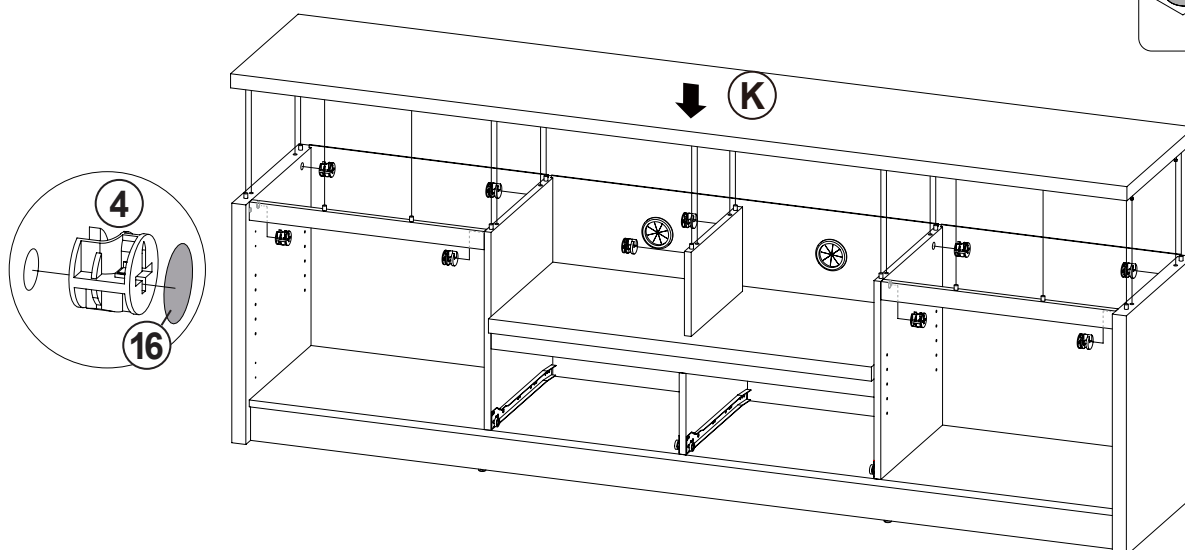


ITEM: **706223**

STEP 19

  COASTER
FINE FURNITURE

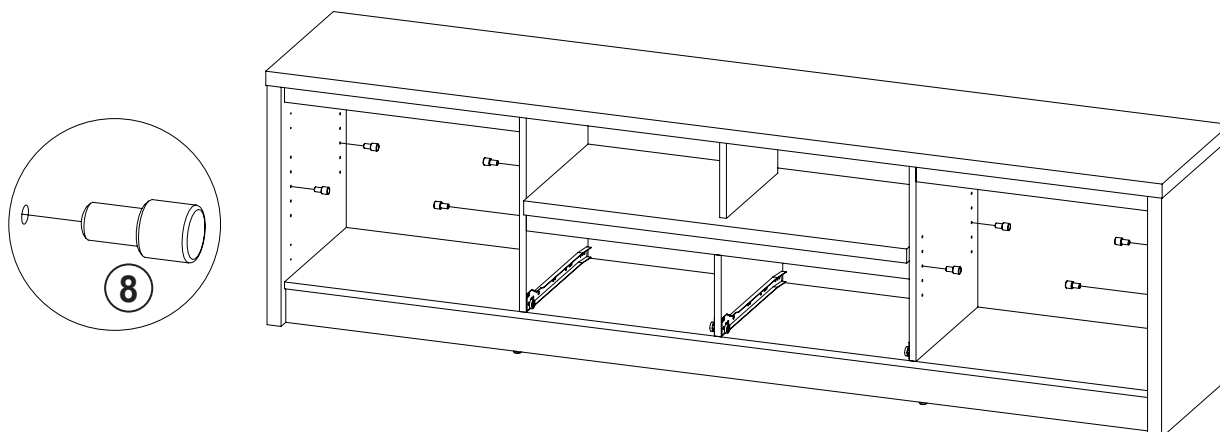


 STEP 20

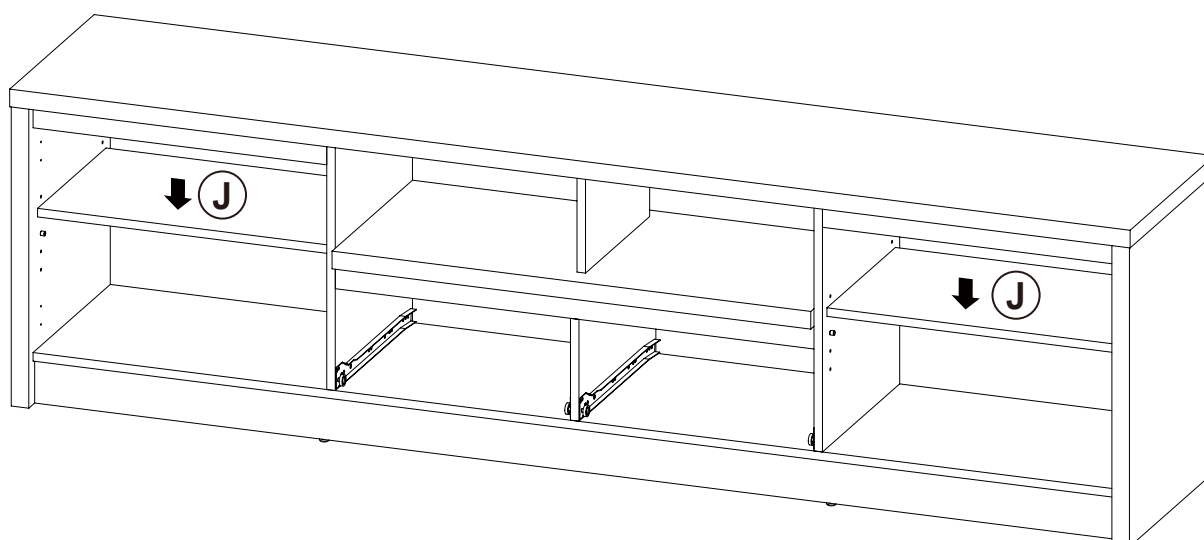


ITEM: **706223**

 
STEP 21

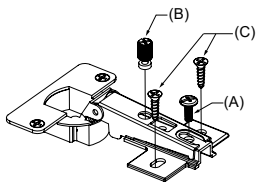




HORIZONTAL BY
SCREW AADJUSTMENT

 



LATERAL BY
SCREW B ADJUSTMENT

 

VERTICAL BY
SCREW C ADJUSTMENT

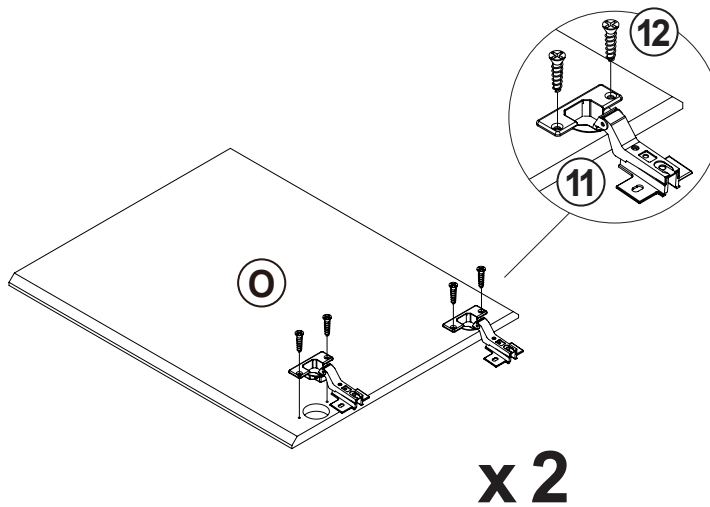   

  
STEP 22

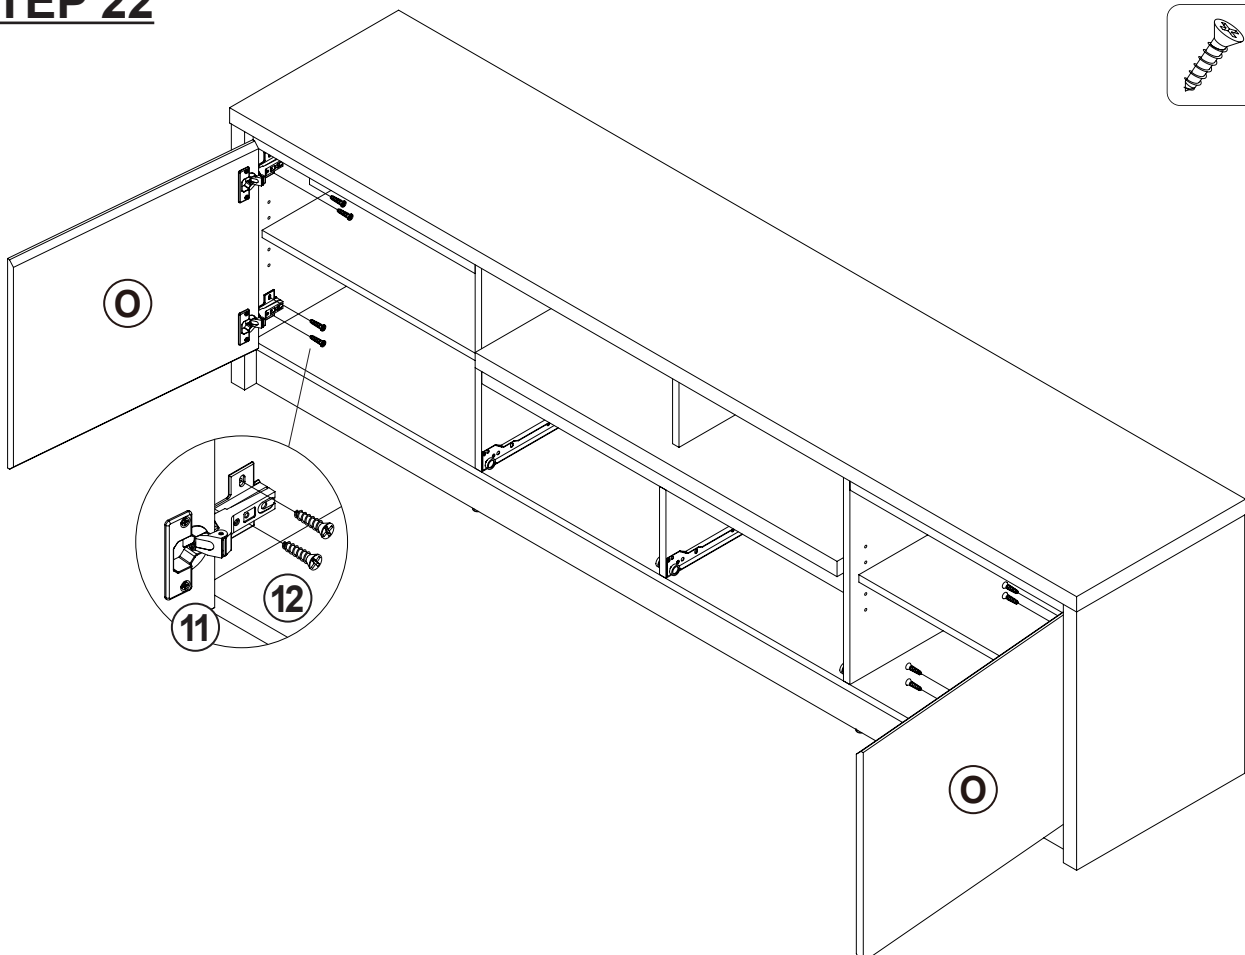


ITEM: **706223**

COASTER
FINE FURNITURE

 
STEP 23-1

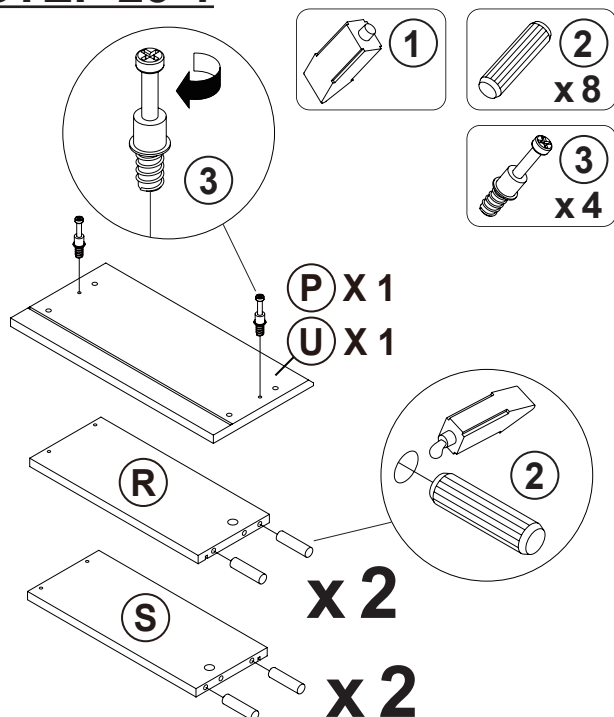

 
STEP 23-2

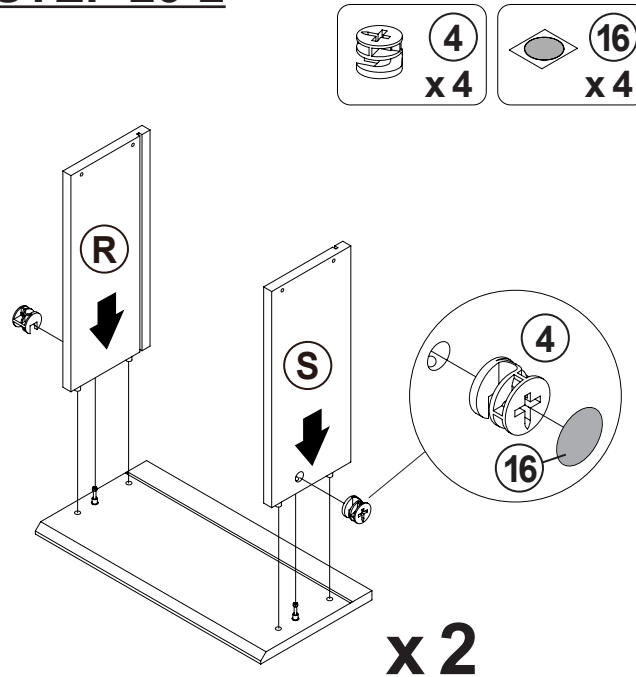

 
STEP 23-3

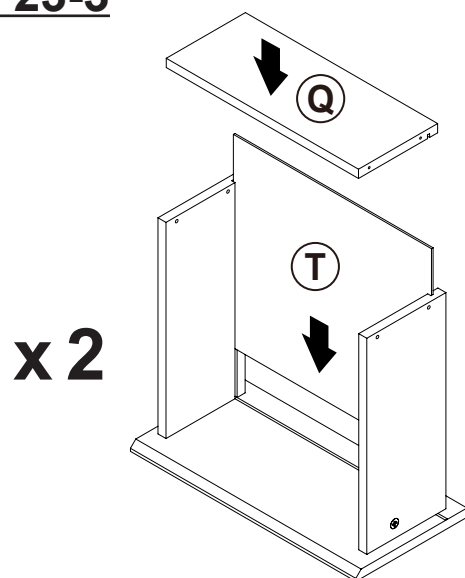

 STEP 23-4

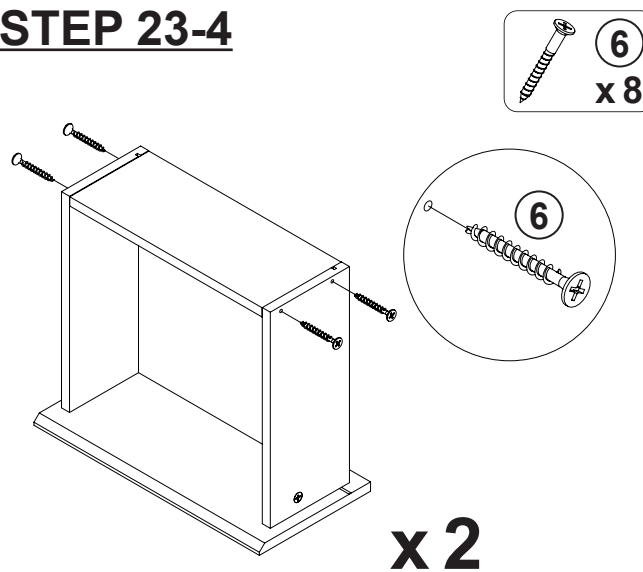


 STEP 23-5




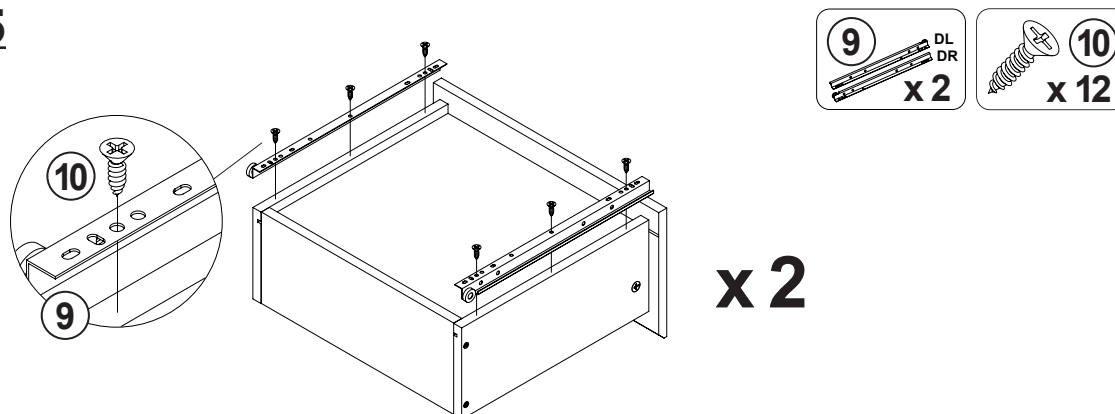


ITEM: **706223**

 STEP 24

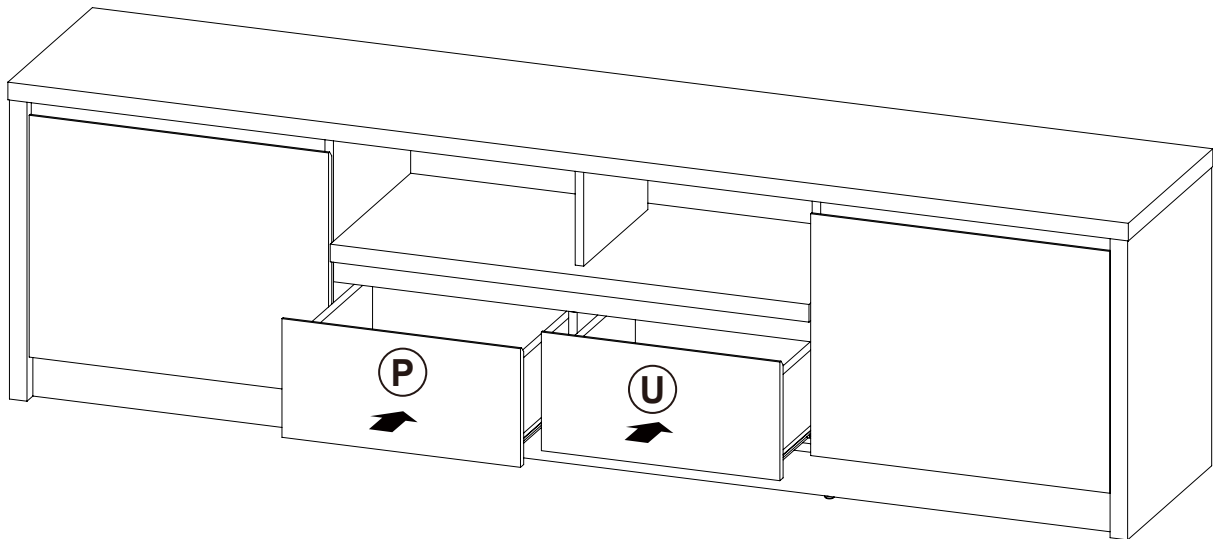

   
 
STEP 25

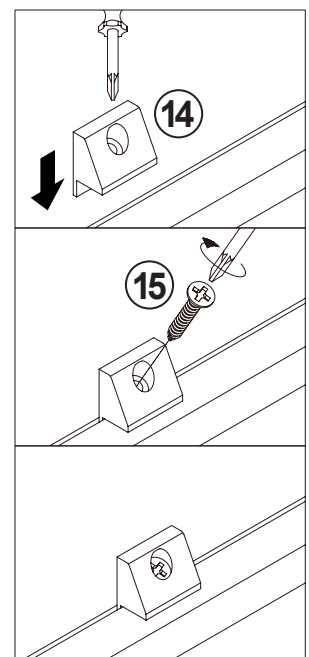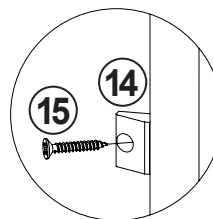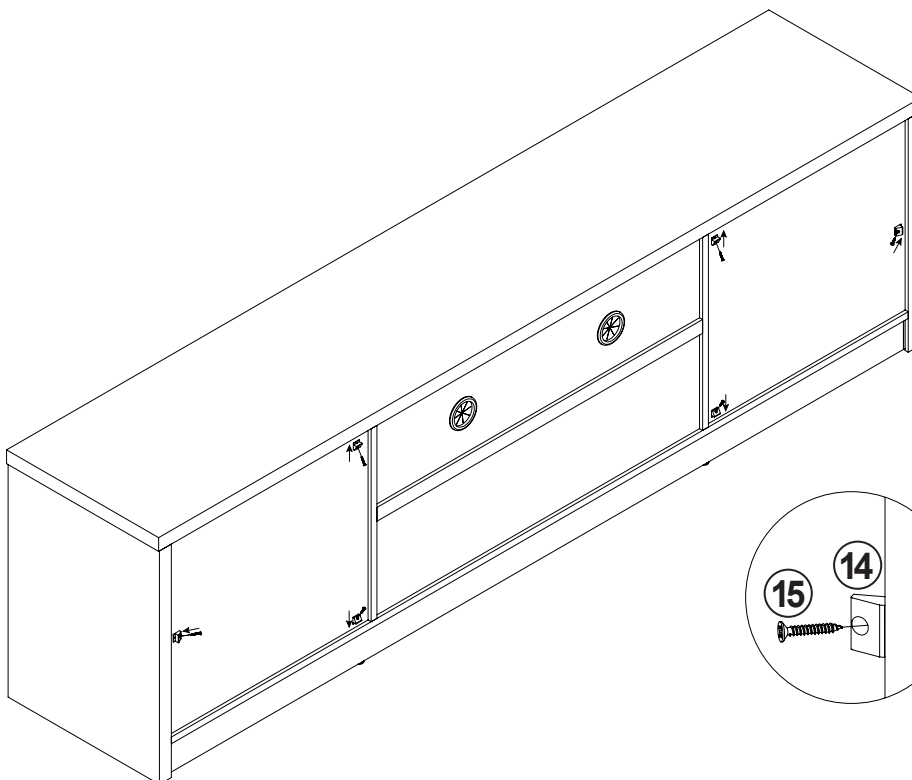
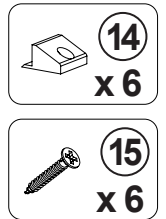


ITEM: **706223**

STEP 26

    COMPLETE

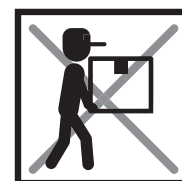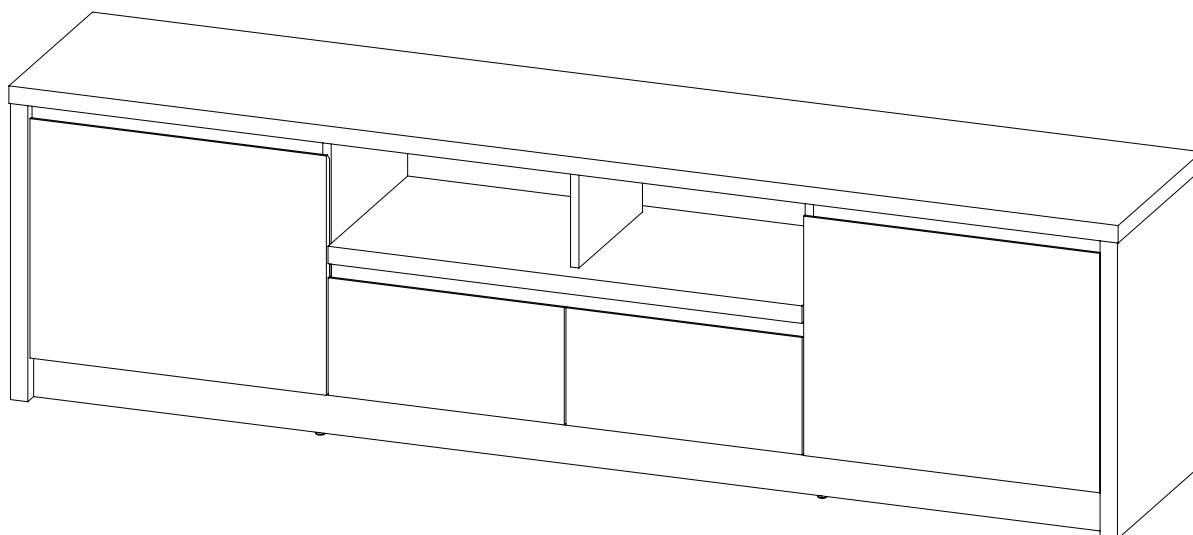

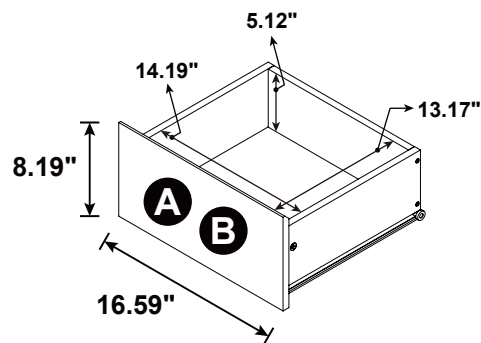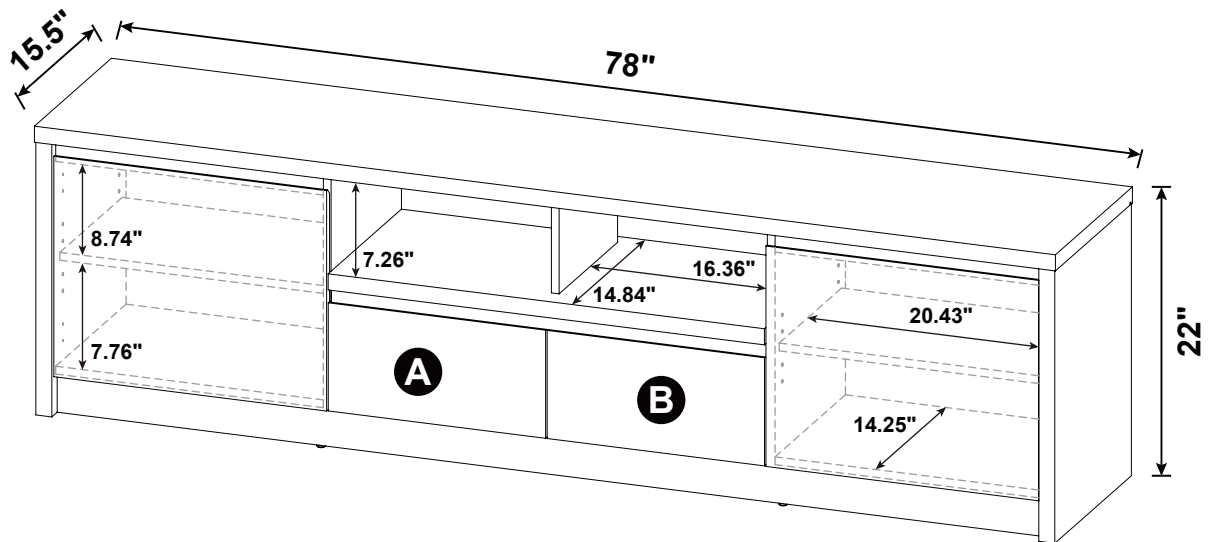

Note : Dimension tolerance $\pm 5\%$

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706224
MEDIA TOWER

ITEM:706224



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!













1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

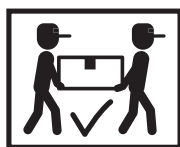

ASSEMBLY TIME

60 MINUTES

            PARTS IDENTIFICATION

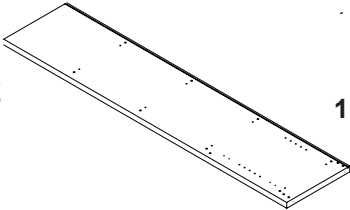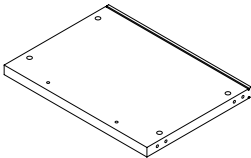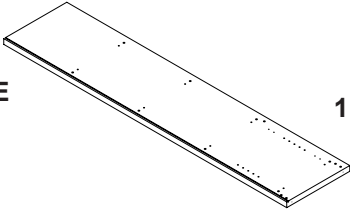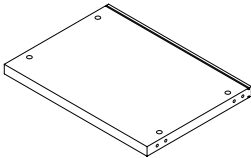

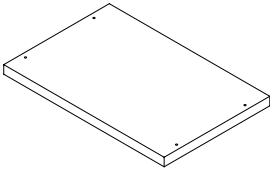
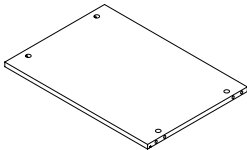
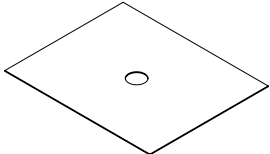
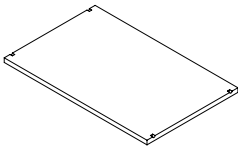
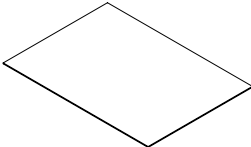

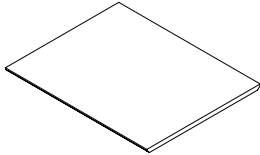
A	LEFT SIDE PANEL		1 PC	G	LOWER CROSS PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	H	UPPER CROSS PANEL		2 PCS
C	FRONT TOP BAR		2 PCS	I	TOP PANEL		1 PC
D	BOTTOM PANEL		1 PC	J	LOWER BACK PANEL		1 PC
E	ADJUSTABLE SHELF		1 PC	K	BACK PANEL		3 PCS
F	FRONT DECORATIVE STRIP		1 PC	L	DOOR		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:706224

         HARDWARE IDENTIFICATION**Z**

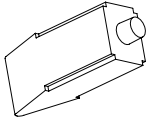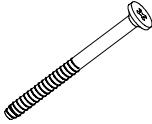NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL Ø8 x 30mm		32 PCS	9	HINGE SCREW Ø4 x 15mm SR		8 PCS
3	CAM BOLT Ø7 x 35.5mm SR		16 PCS	10	BACK PANEL SUPPORT		6 PCS
4	CAM LOCK Ø15 x 12mm SR		16 PCS	11	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
5	BOLT Ø9.5x55mm SR		4 PCS	12	PLASTIC COVER Ø 52mm		1 PC
6	PLASTIC FEET Ø15m		4 PCS	13	STICKER Ø20mm		3 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		4 PCS				

 
Z8, Z12 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **706224**

COASTER
FINE FURNITURE

STEP 1

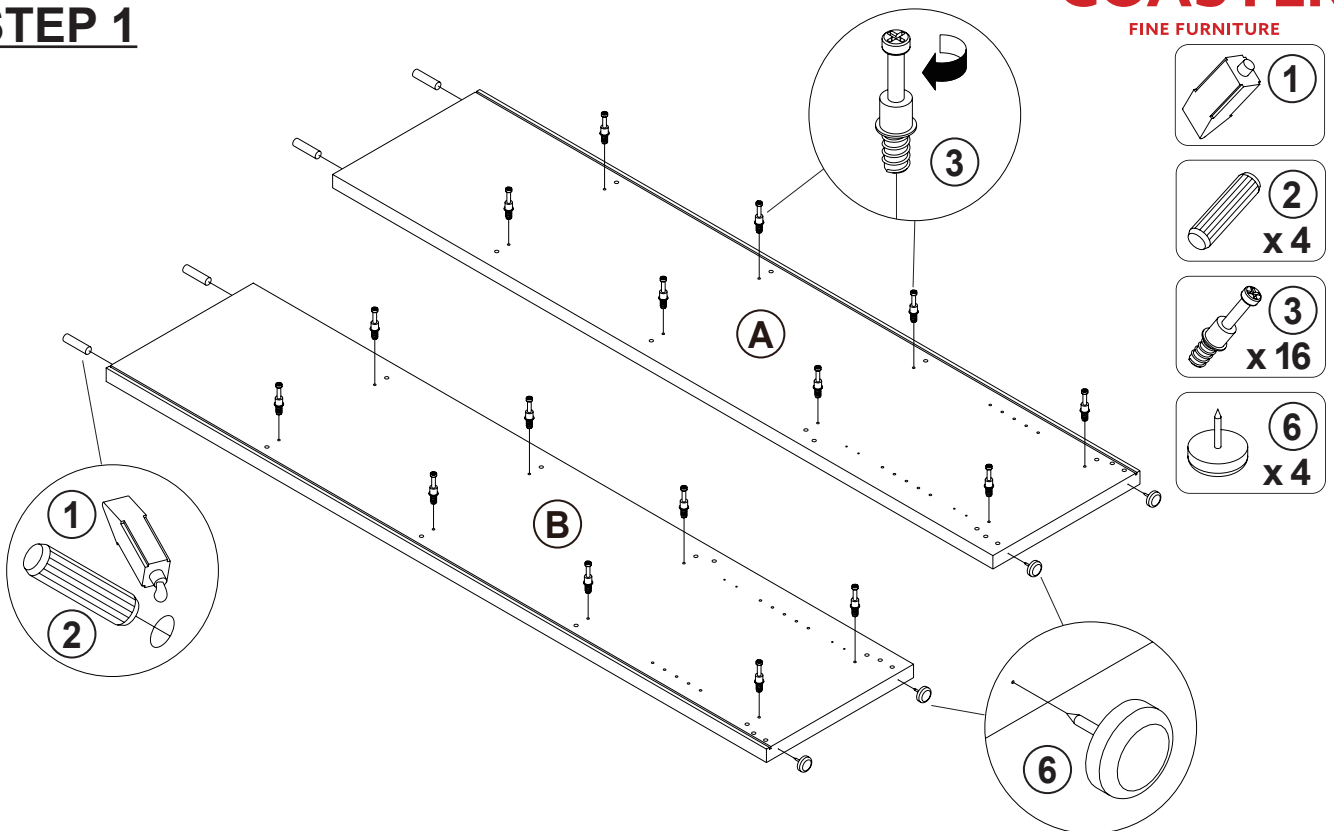


 STEP 2

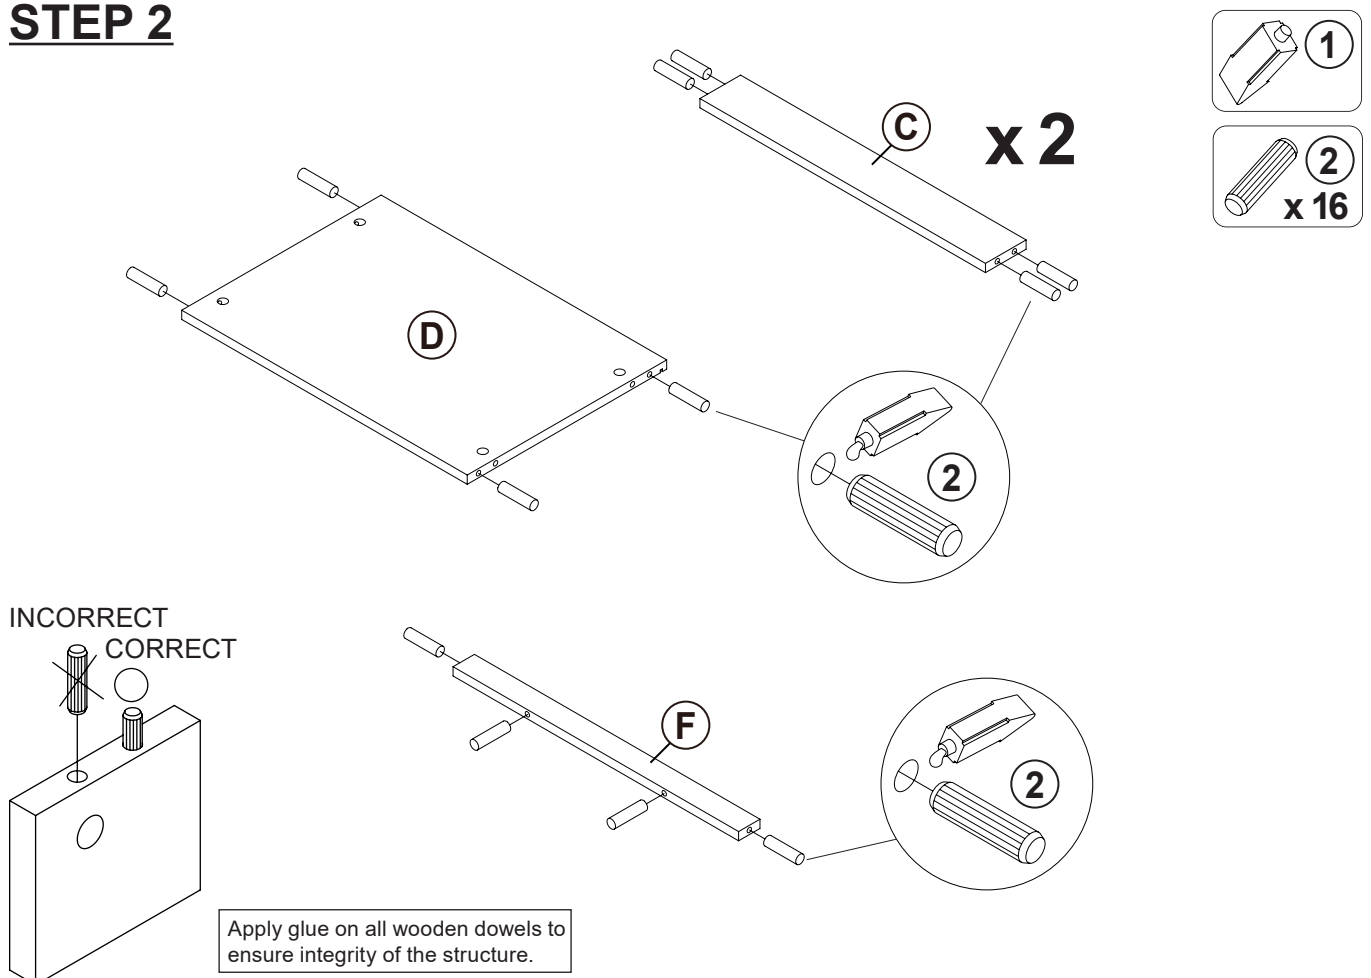


ITEM: **706224**

 STEP 3

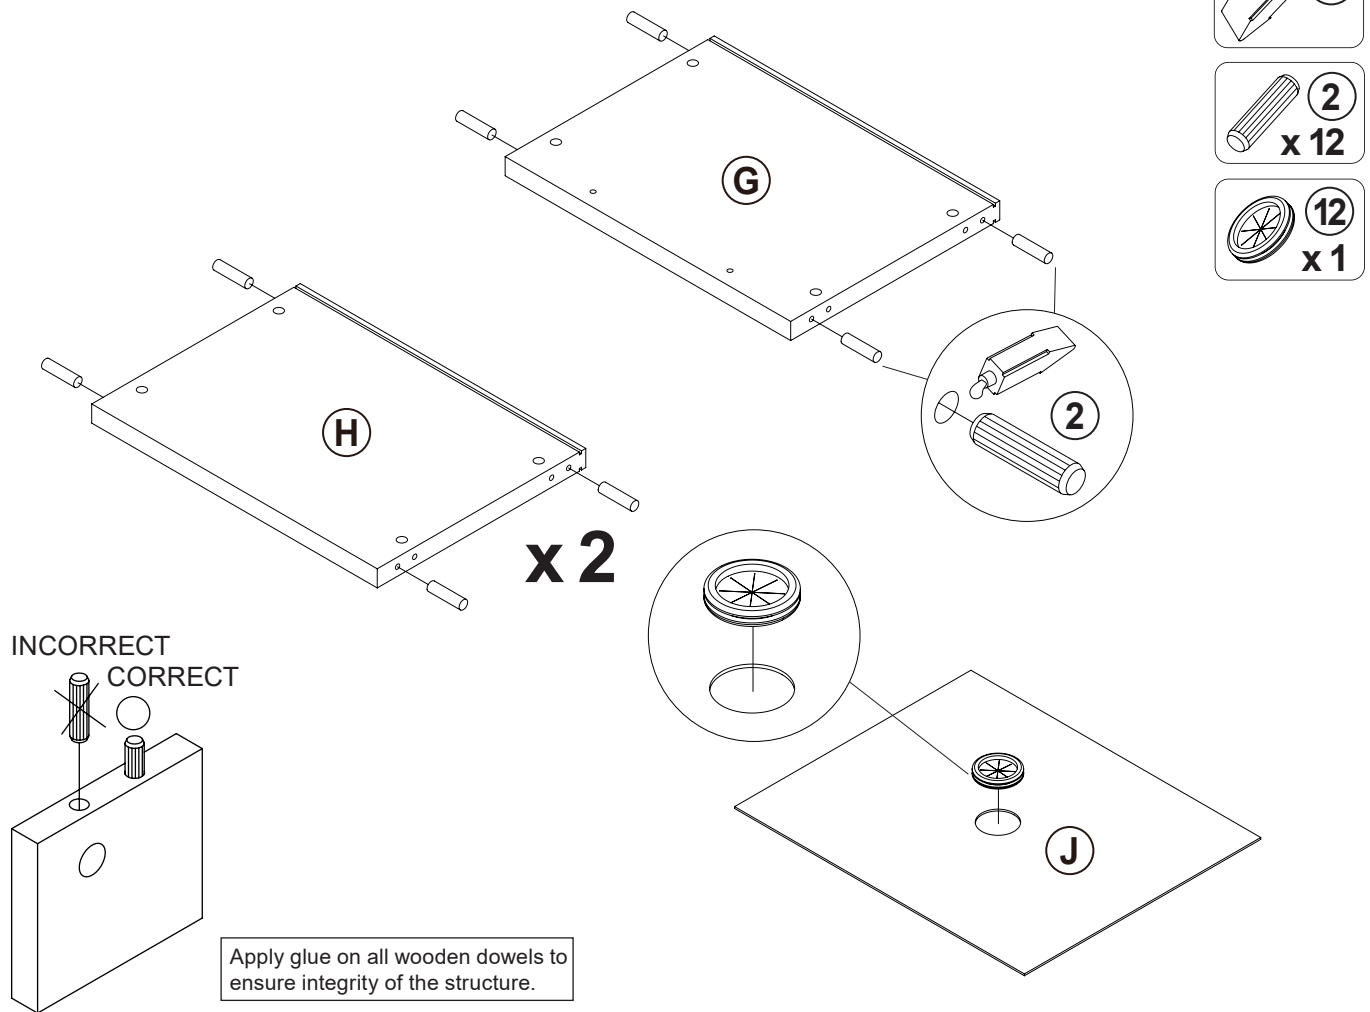


 
STEP 4

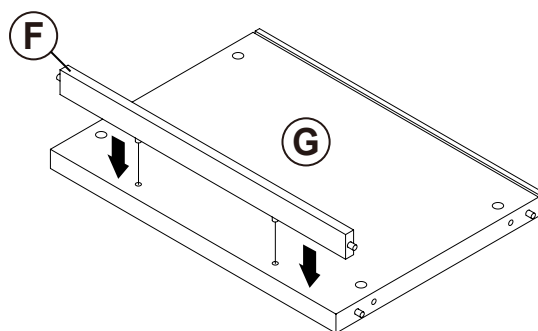



ITEM: **706224**

COASTER
FINE FURNITURE

  STEP 5

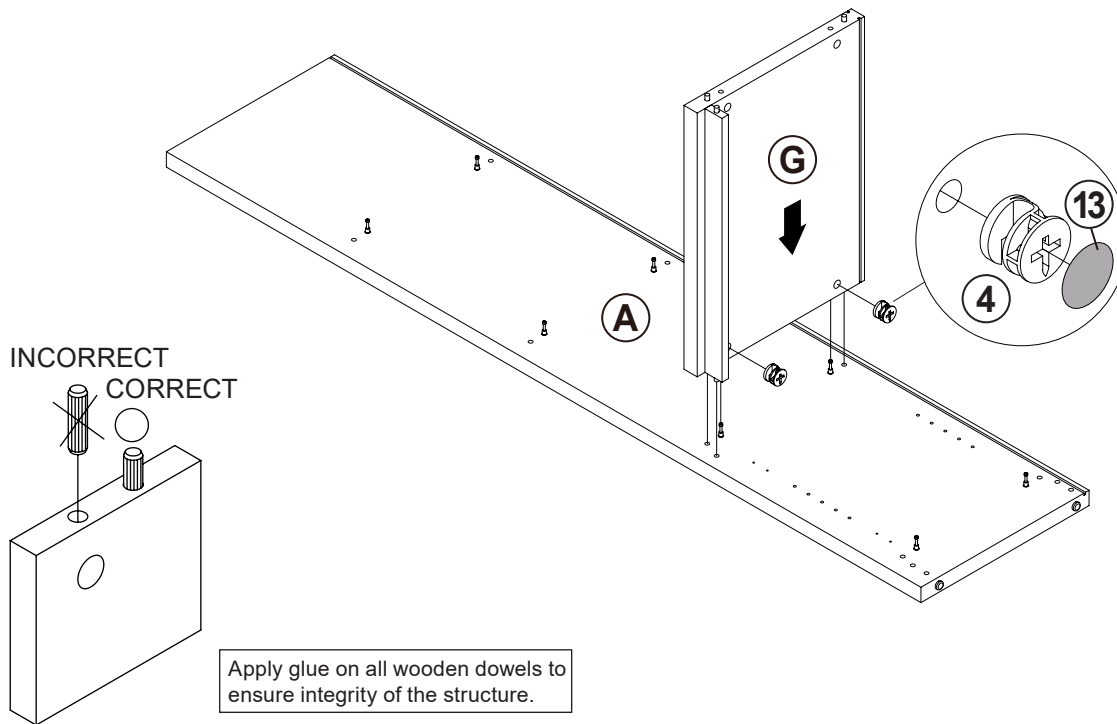


  STEP 6

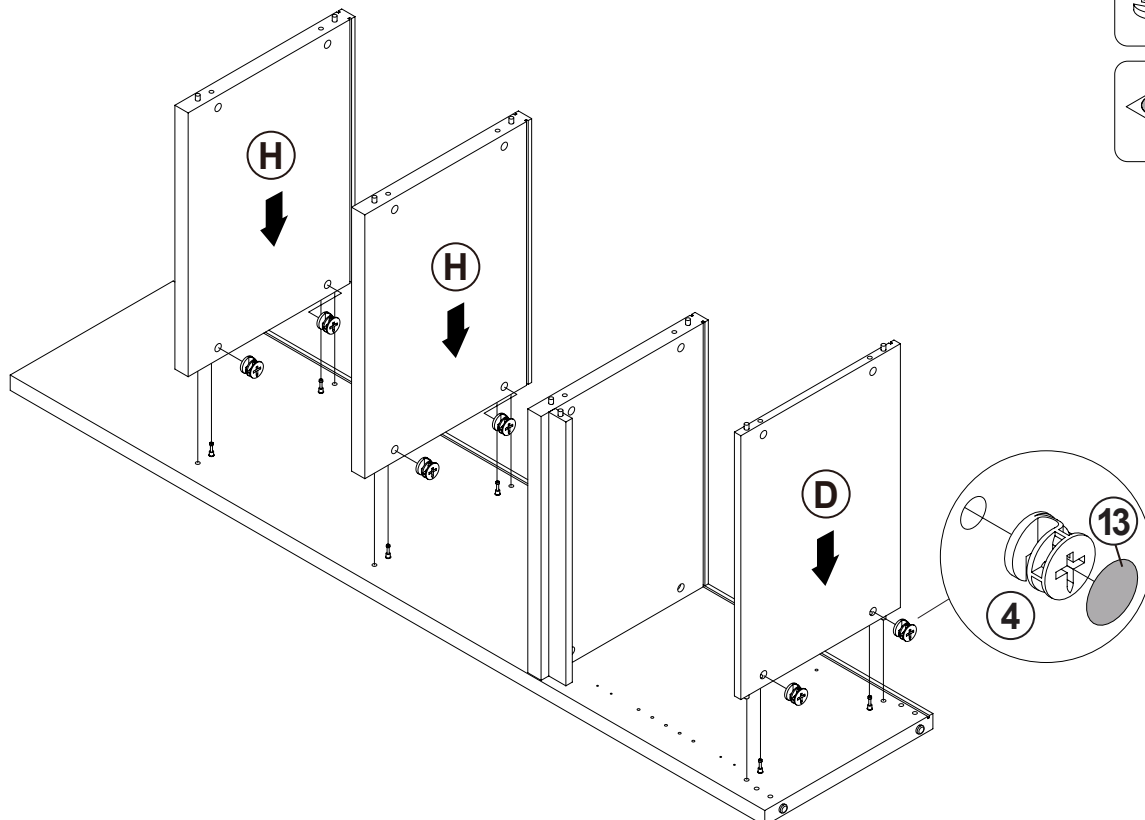


ITEM: **706224**

 STEP 7

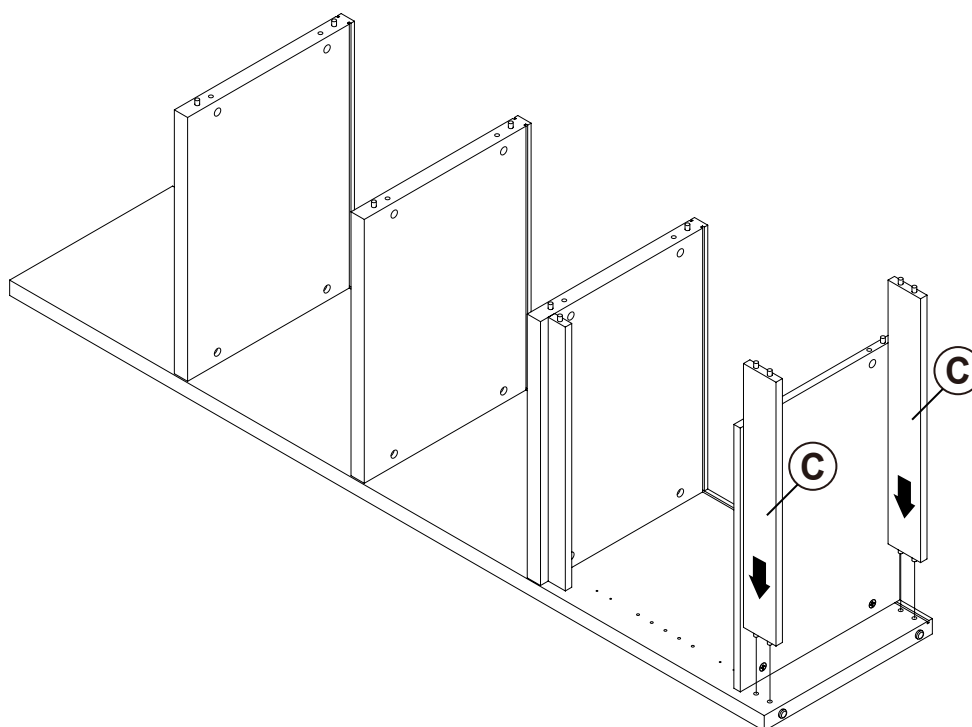




 
STEP 8

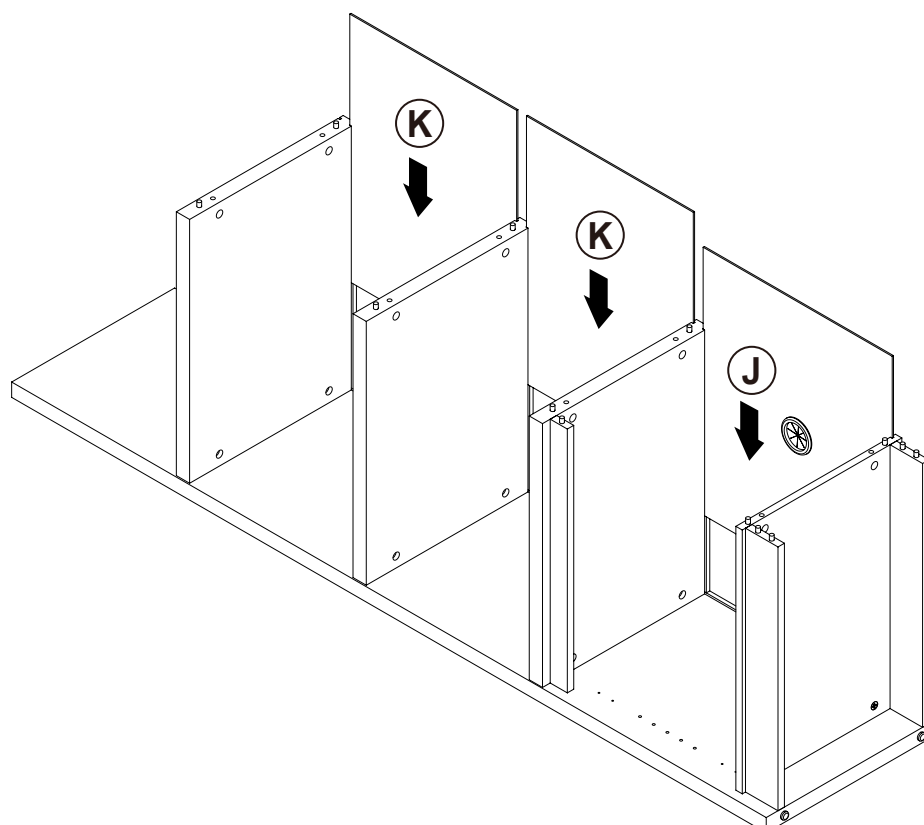





ITEM: **706224**

COASTER
FINE FURNITURE

    STEP 9

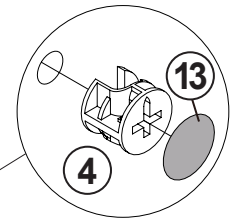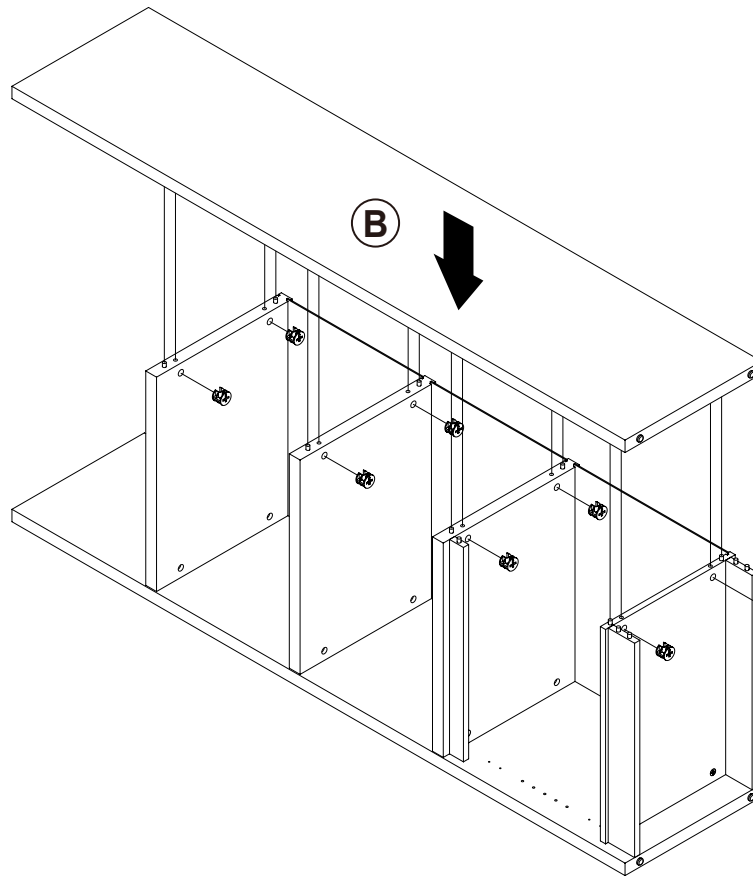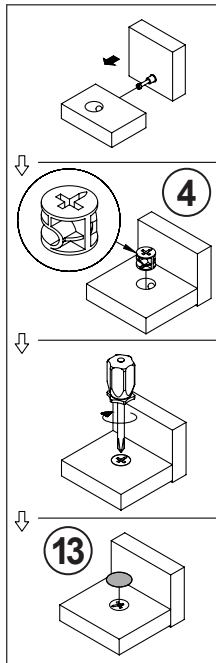

  
 
 
STEP 10

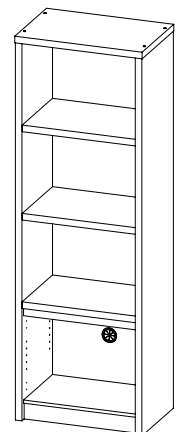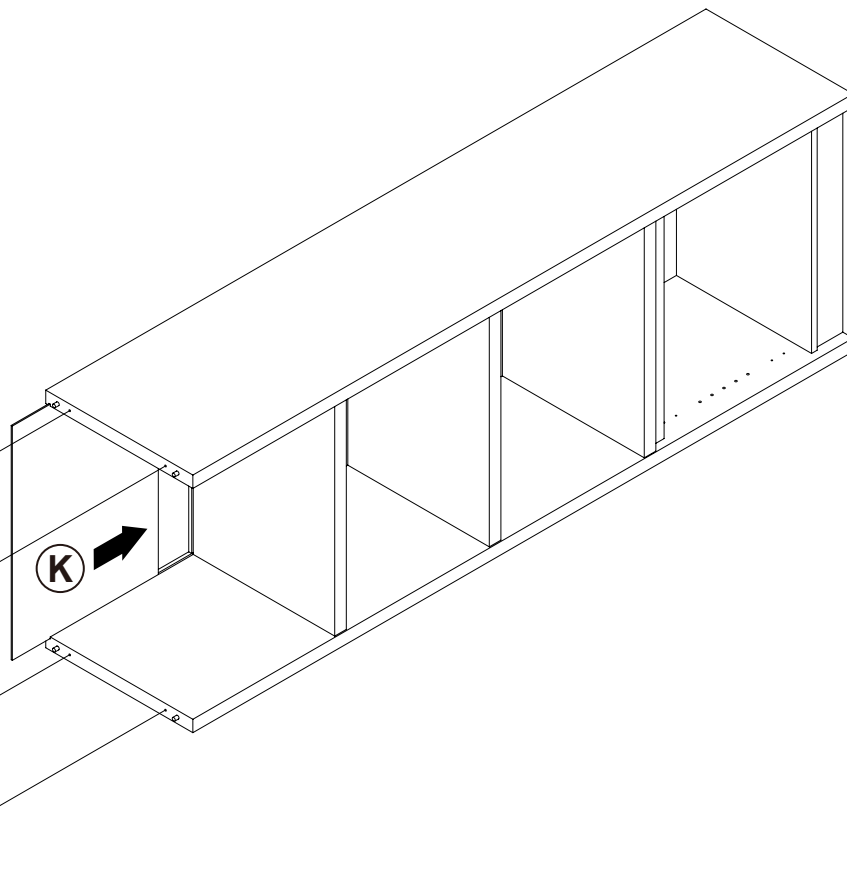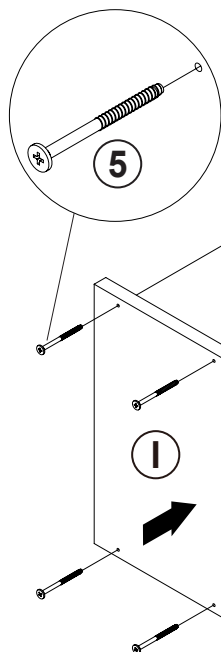


ITEM: **706224**

STEP 11

   COASTER
FINE FURNITURE

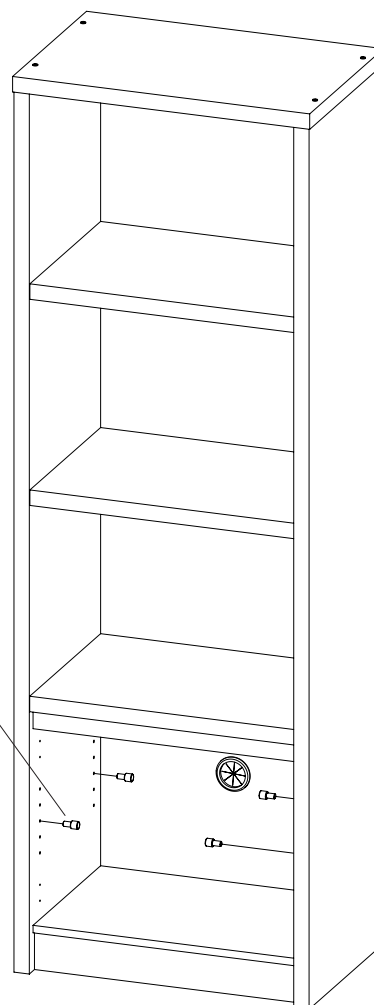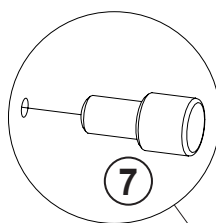



 
STEP 12

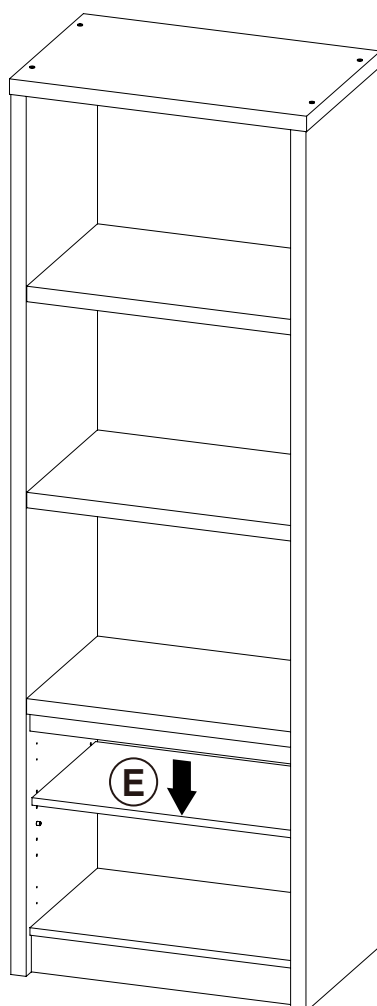


ITEM: **706224**

STEP 13

   
COASTER
FINE FURNITURE

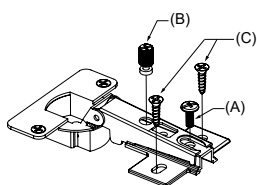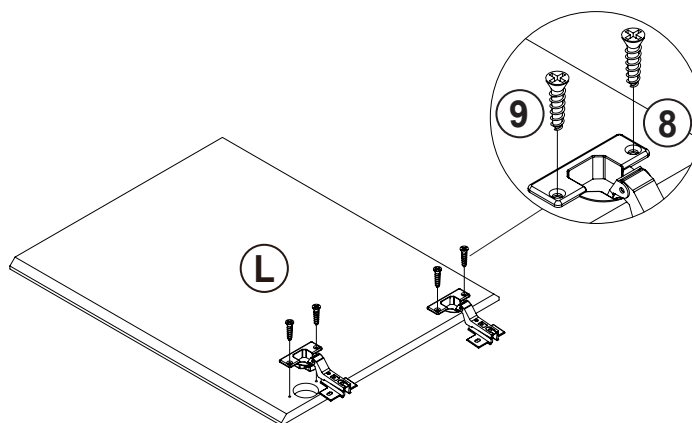


HORIZONTAL BY
SCREW A ADJUSTMENT

 



LATERAL BY
SCREW B ADJUSTMENT

 

VERTICAL BY
SCREW C ADJUSTMENT

 


  STEP 14

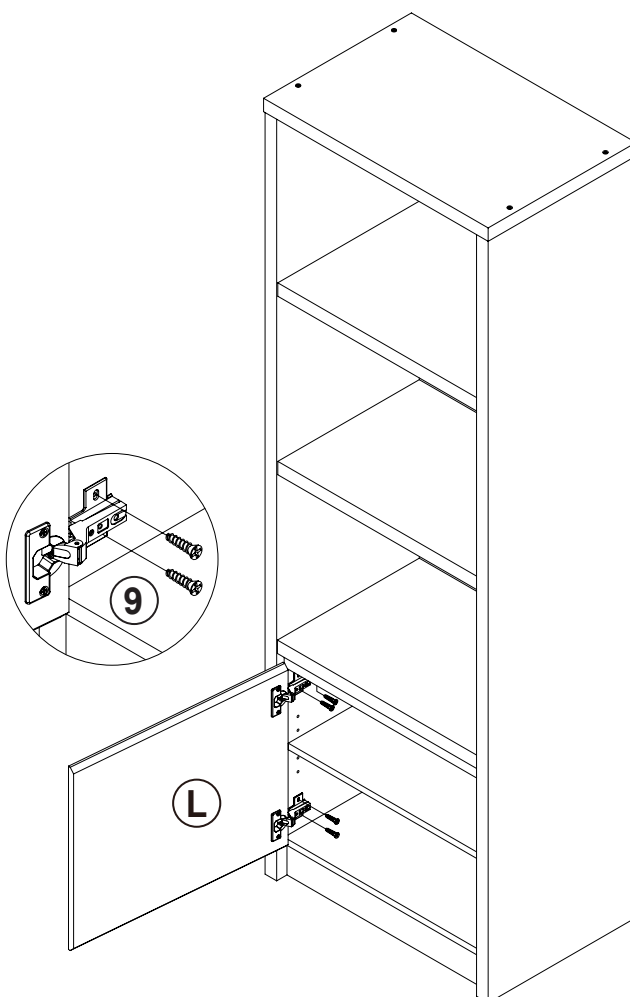

ITEM: **706224**




 
STEP 15

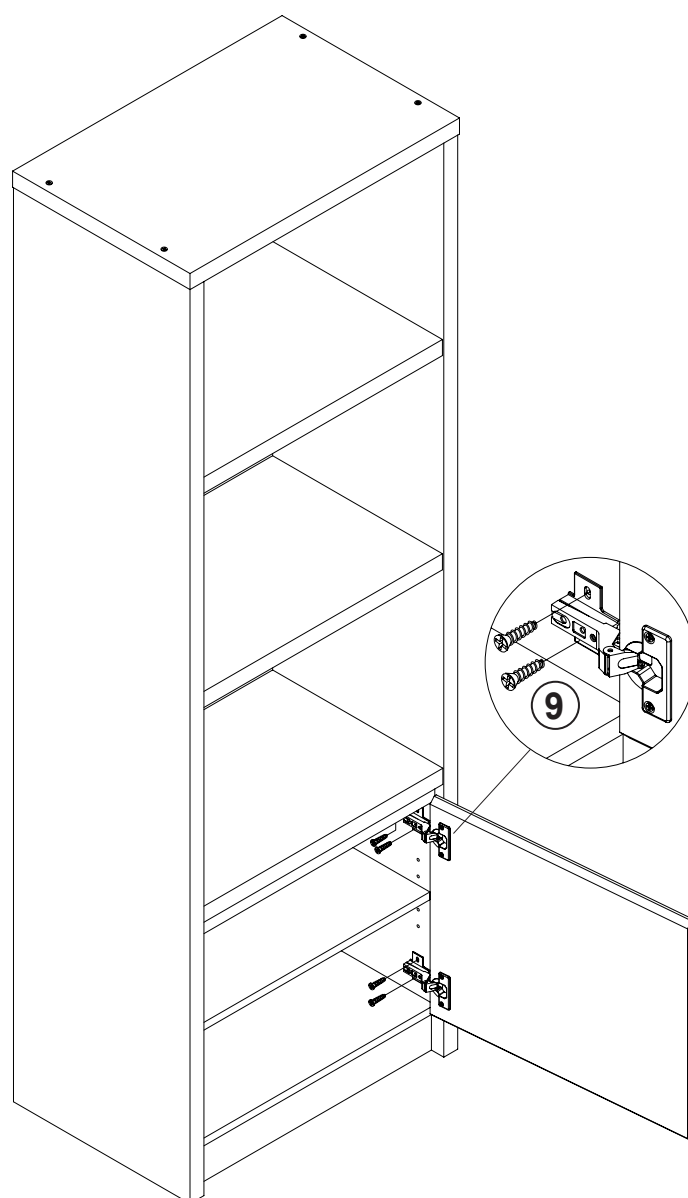

ITEM: **706224**

STEP 16

  
 
 
COASTER
FINE FURNITURE

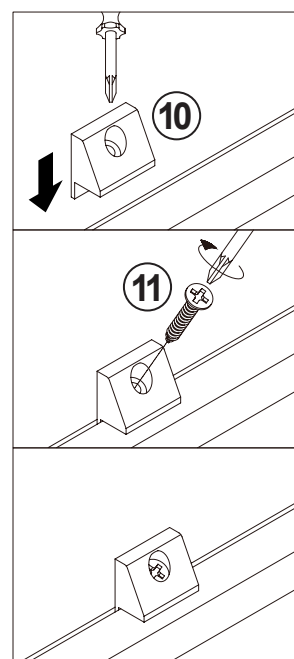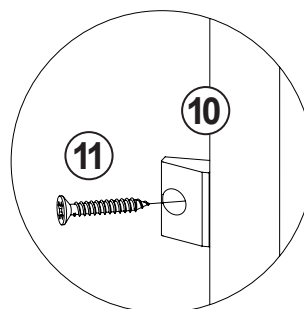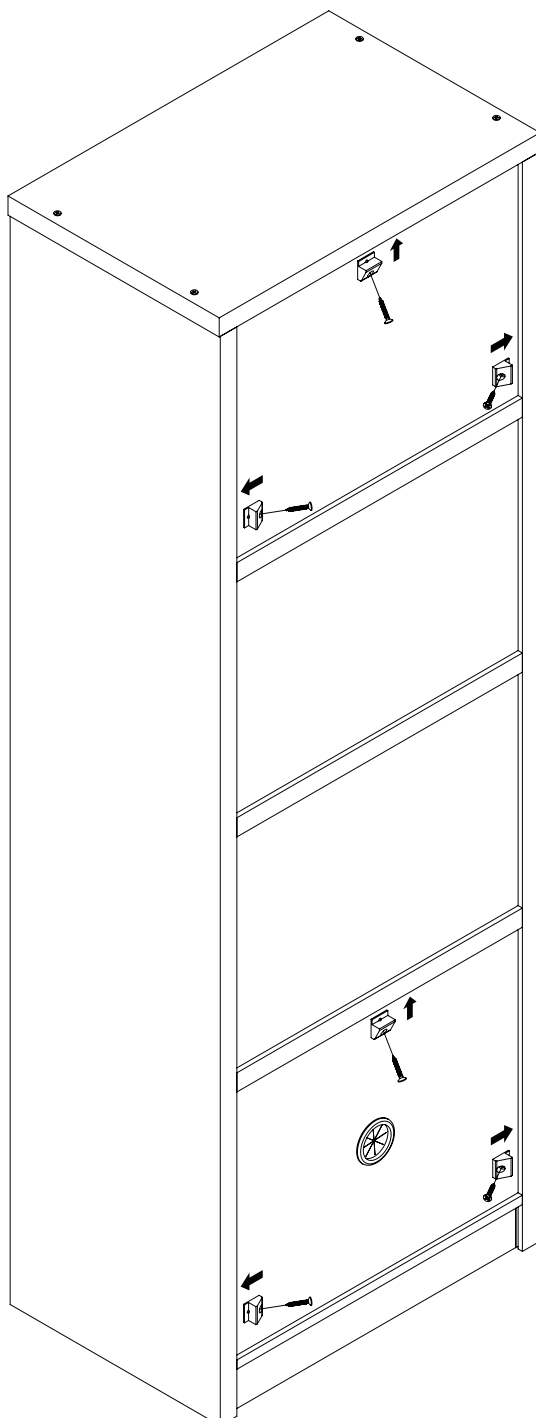


ITEM: **706224**

STEP 17

   COMPLETE

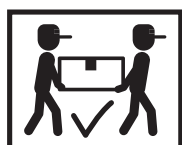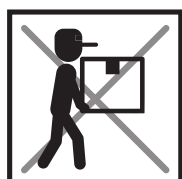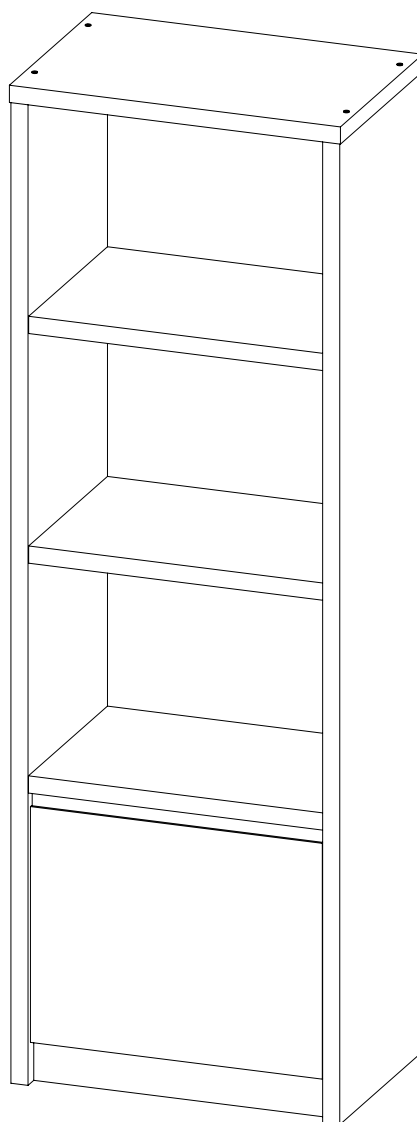

ITEM: 706224

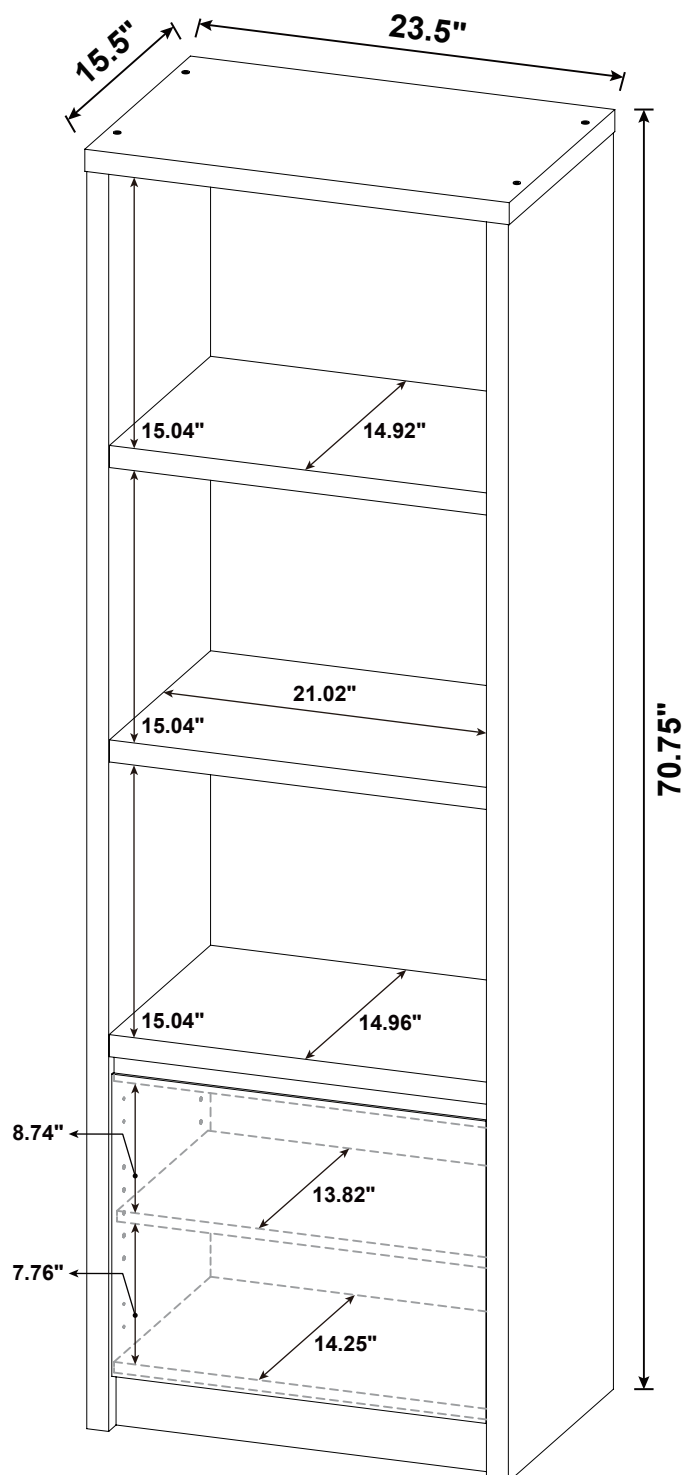 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
 This restraint may protect against tipping furniture.
 Do not allow children to climb on furniture.
 This restraint is not a substitute for proper adult supervision.
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

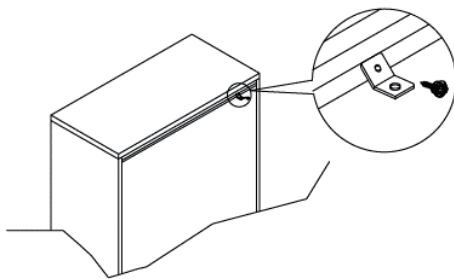

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

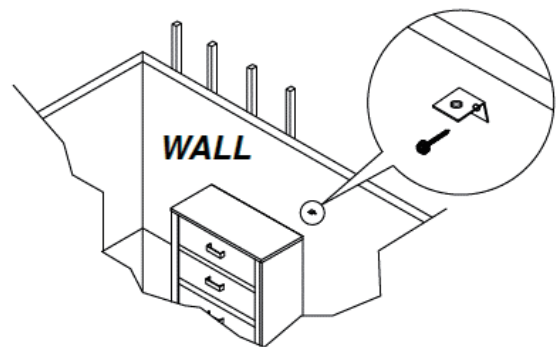

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

