

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

706277
END TABLE

ITEM: 706277

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.






 
WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

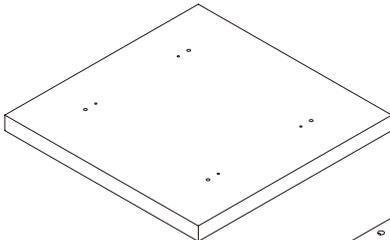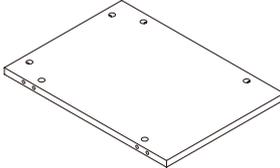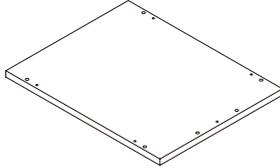A	TOP		1 PC
B	SIDE PANEL		2 PCS
C	FRONT AND BACK PANEL		2 PCS
D	BOTTOM PANEL		1 PC

  HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	4	CAM LOCK Ø15x12mm SR		14 PCS
2	WOODEN DOWEL Ø8x30mm		16 PCS	5	PLASTIC FEET Ø15mm		4 PCS
3	CAM BOLT Ø7x35.5mm SR		14 PCS	6	STICKER Ø20mm		2 PCS







NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: 706277

STEP 1




-  **2**
x 16
-  **3**
x 14
-  **4**
x 14
-  **5**
x 4

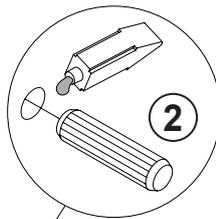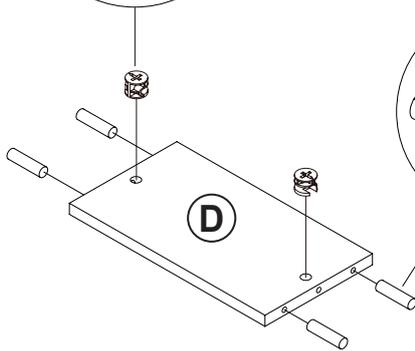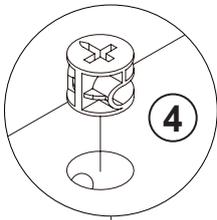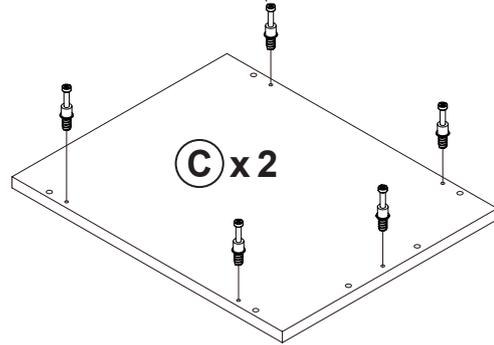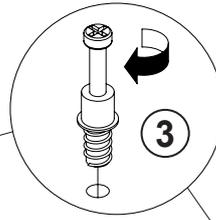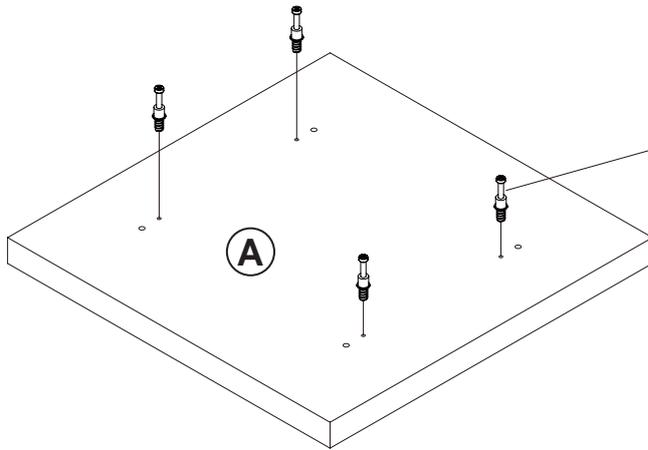

Apply glue on all wooden dowels to ensure integrity of the structure.

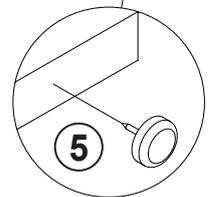
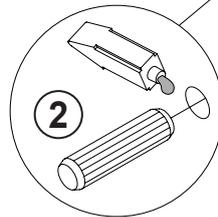
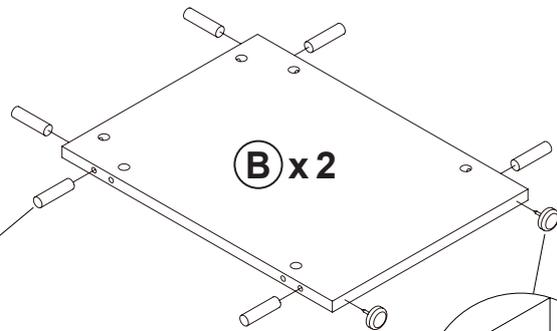


INCORRECT
CORRECT

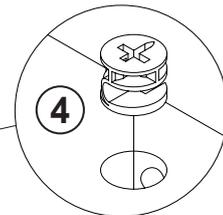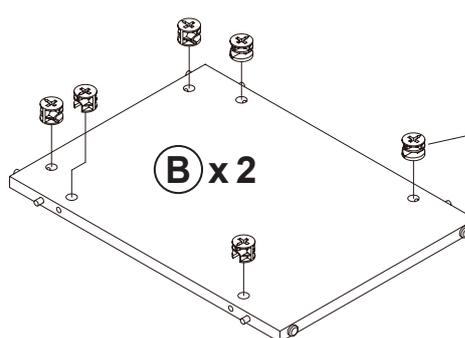
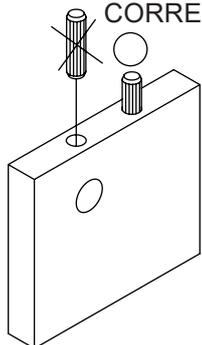


ITEM: 706277

 STEP 2

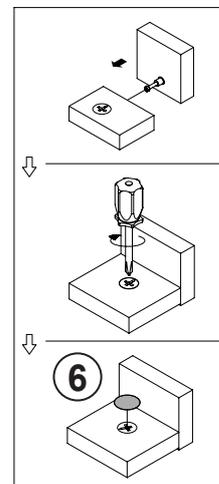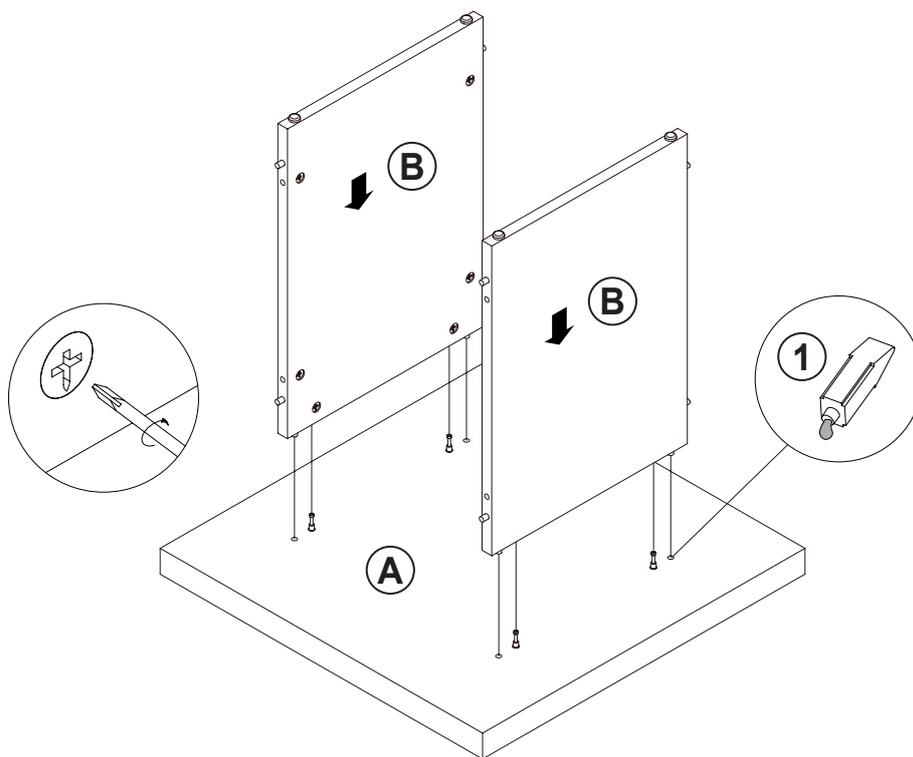

 
STEP 3

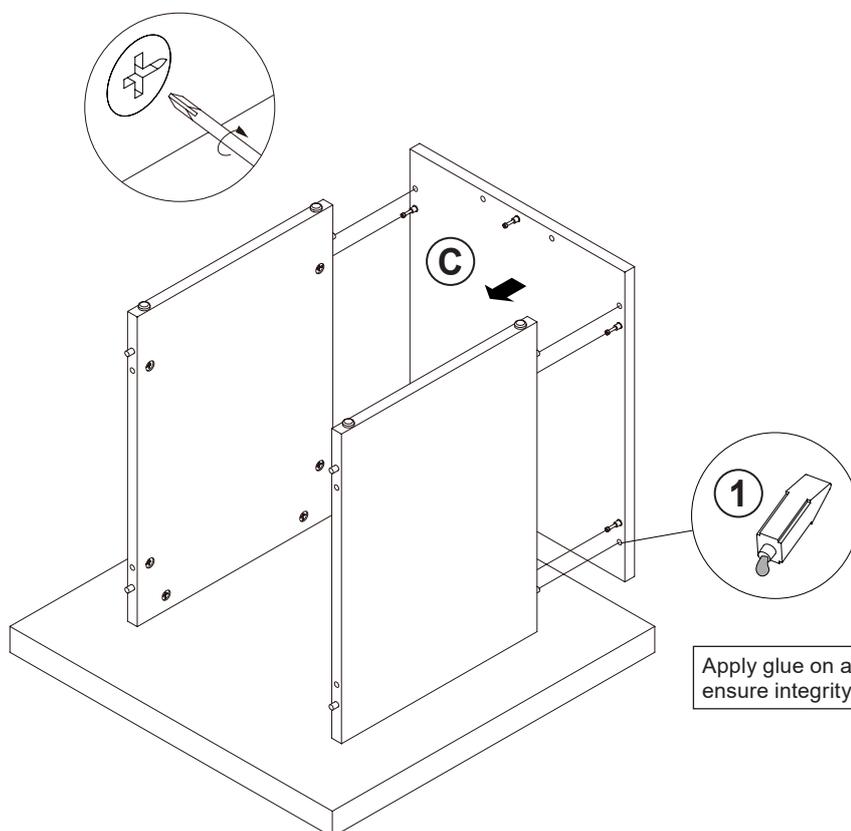

Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: 706277


STEP 4

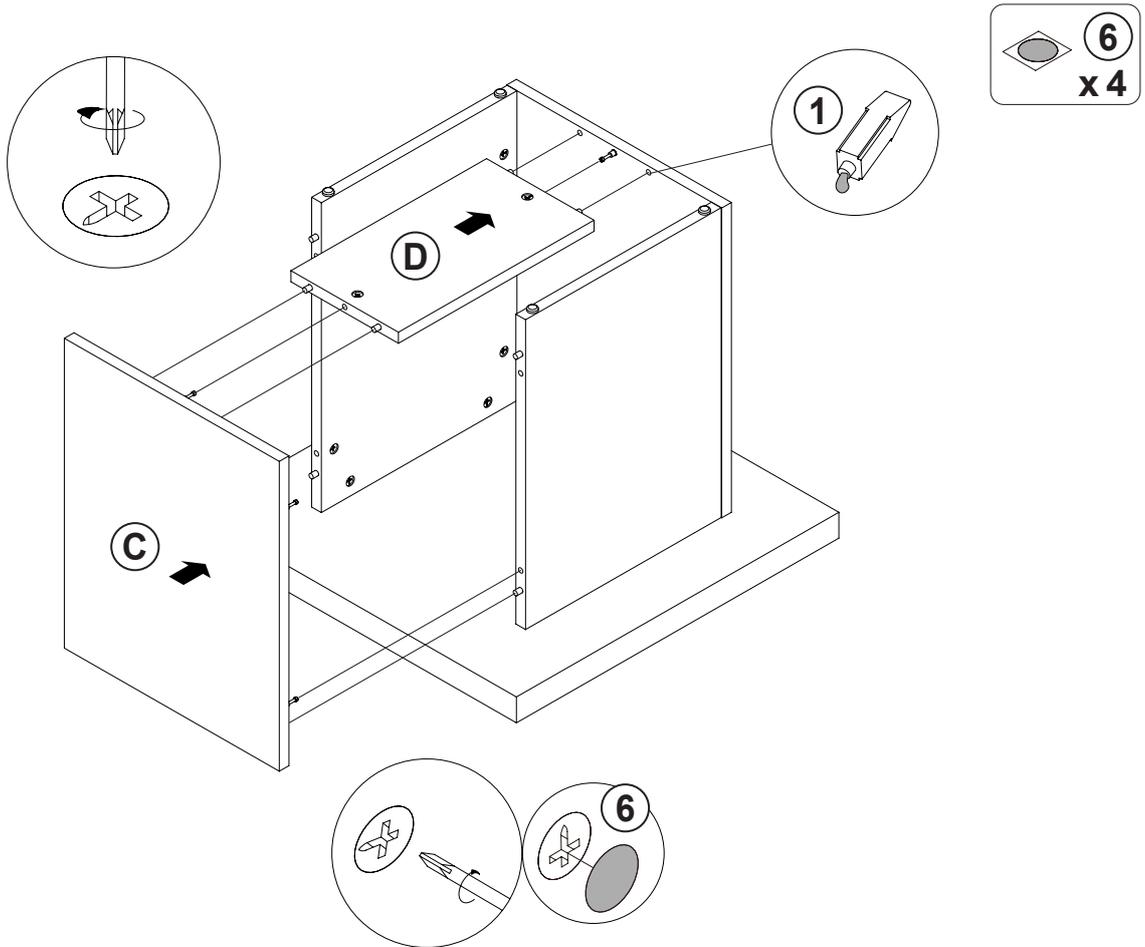

STEP 5

COMPLETE

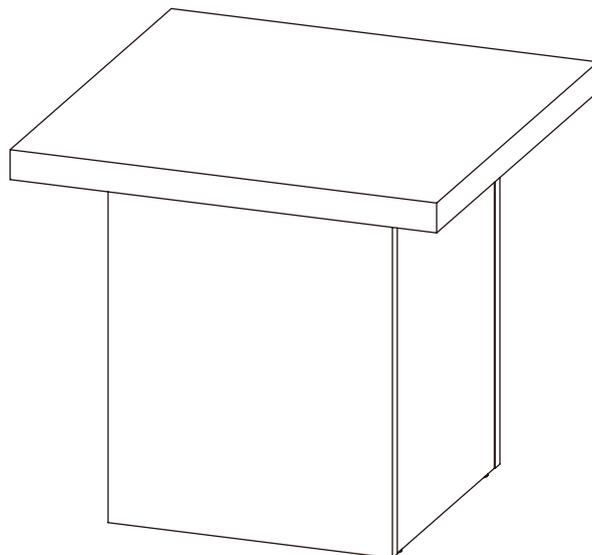

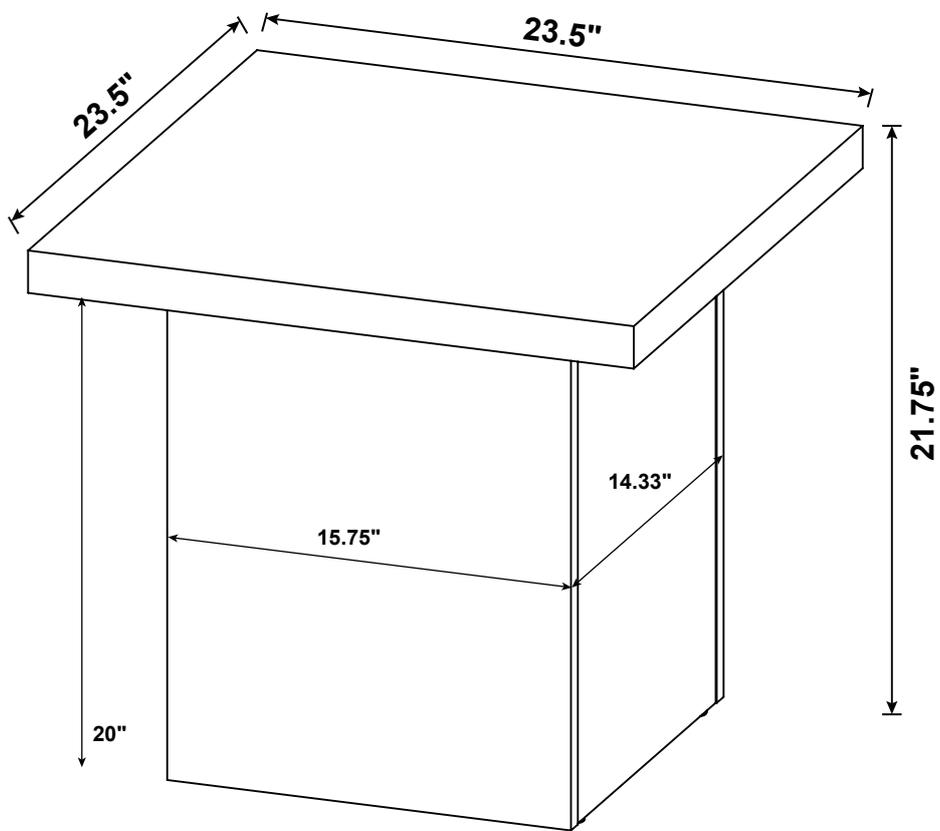

Note : Dimension tolerance $\pm 5\%$

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706278
COFFEE TABLE

ITEM: 706278

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

A TOP PANEL

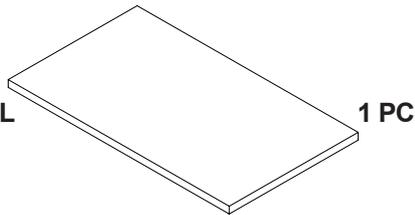


1 PC

C LEG PANEL

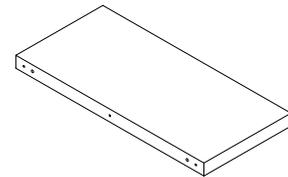



2 PCS

B MOUNTING PANEL

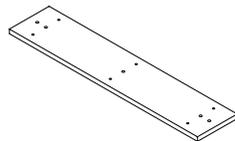

2 PCS

 HARDWARE IDENTIFICATION

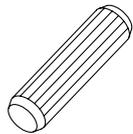

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		4 PCS	4	ALLEN WRENCH (4mm SR)		1 PC
2	LONG SCREW Ø4.5x42mm SR		12 PCS	5	FLOOR PROTECTOR		4 PCS
3	BOLT Ø7x60mm BLK		6 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: 706278

STEP 1

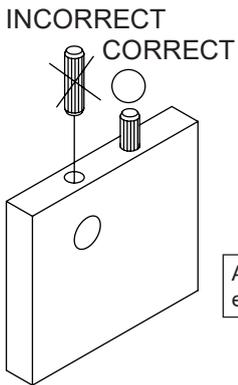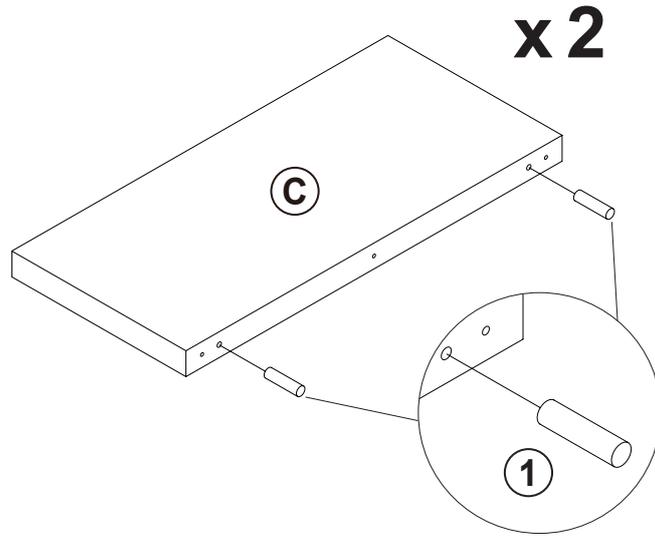

Apply glue on all wooden dowels to ensure integrity of the structure.

 
 
STEP 2

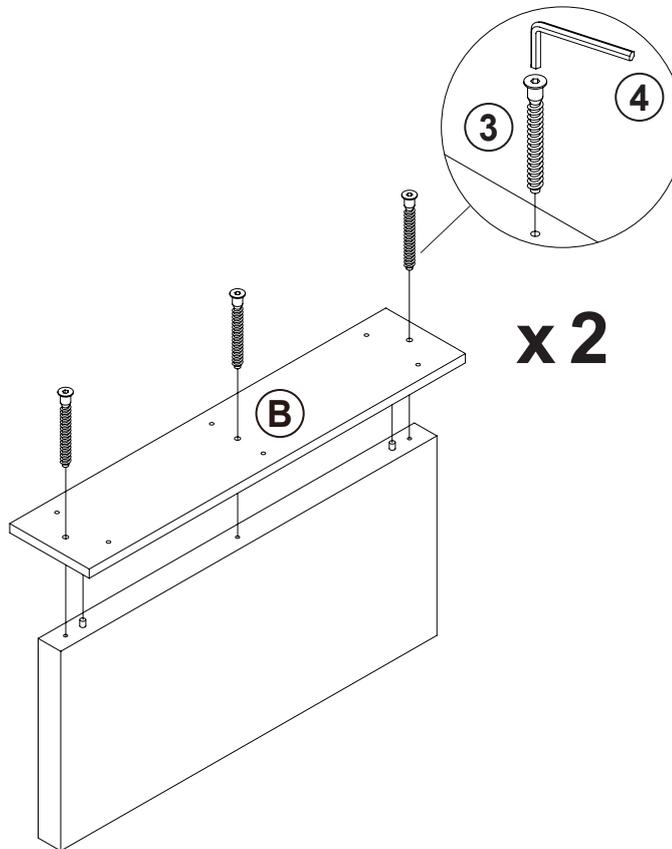



ITEM: 706278

COASTER
FINE FURNITURE

 STEP 3

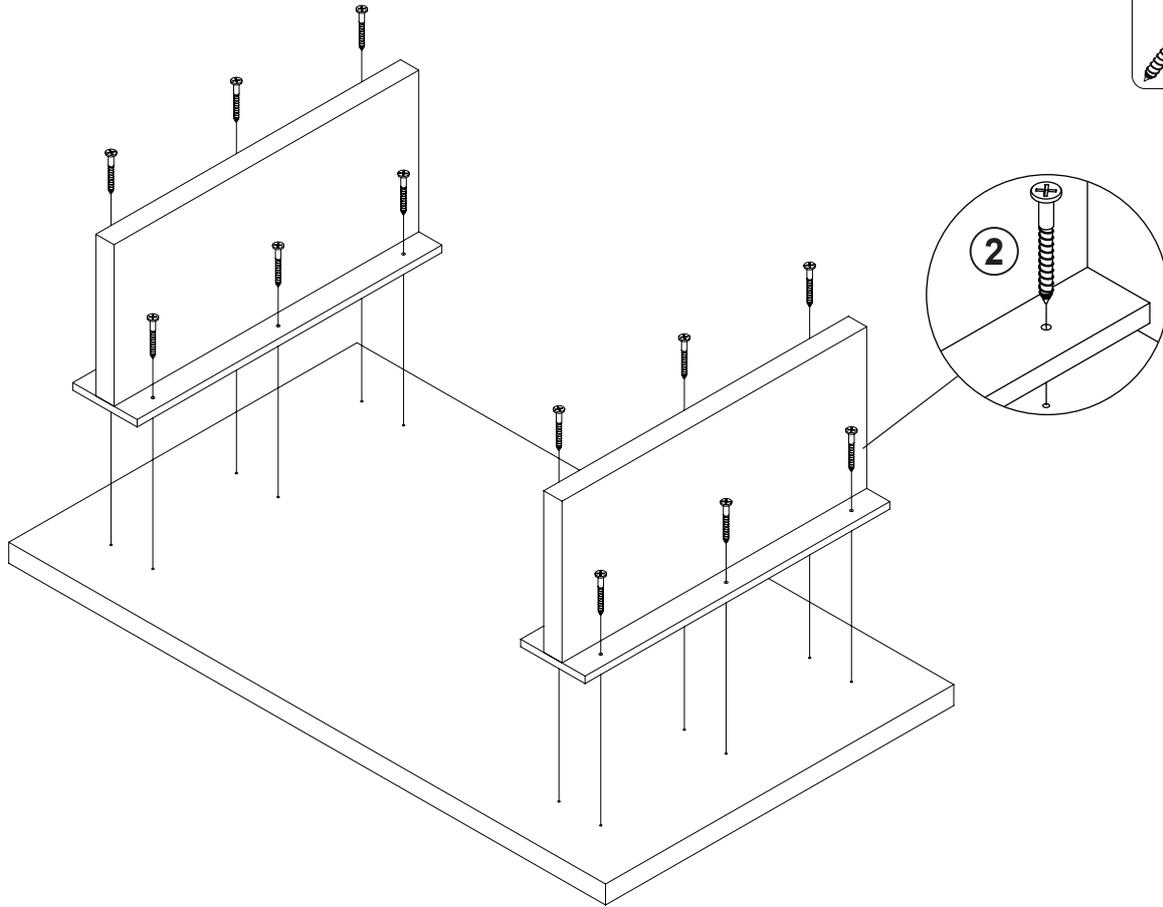

 STEP 4

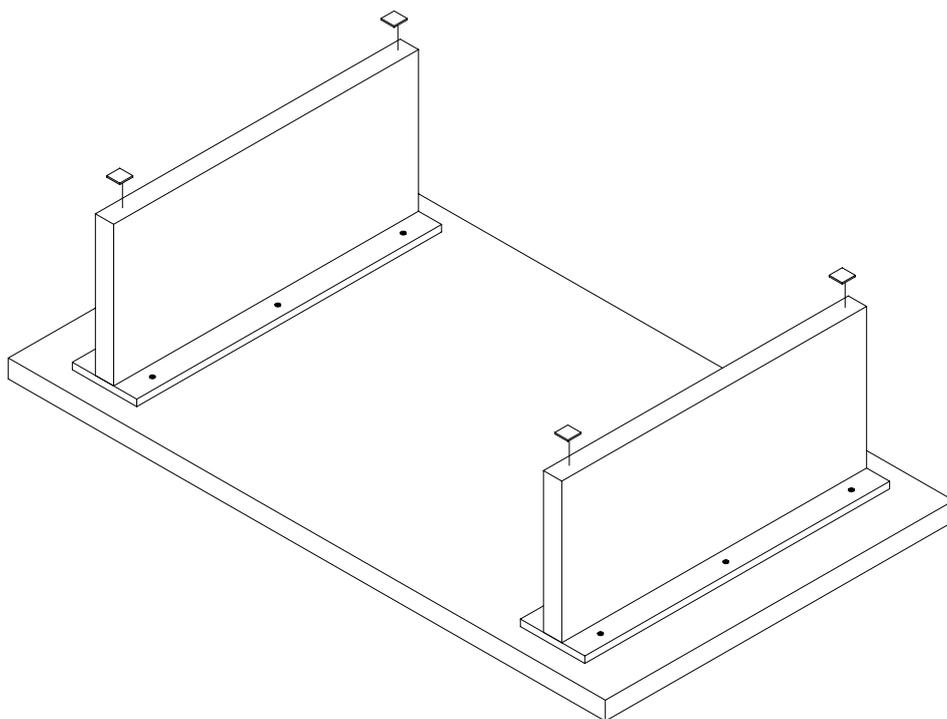


ITEM: 706278




STEP 5

COMPLETE

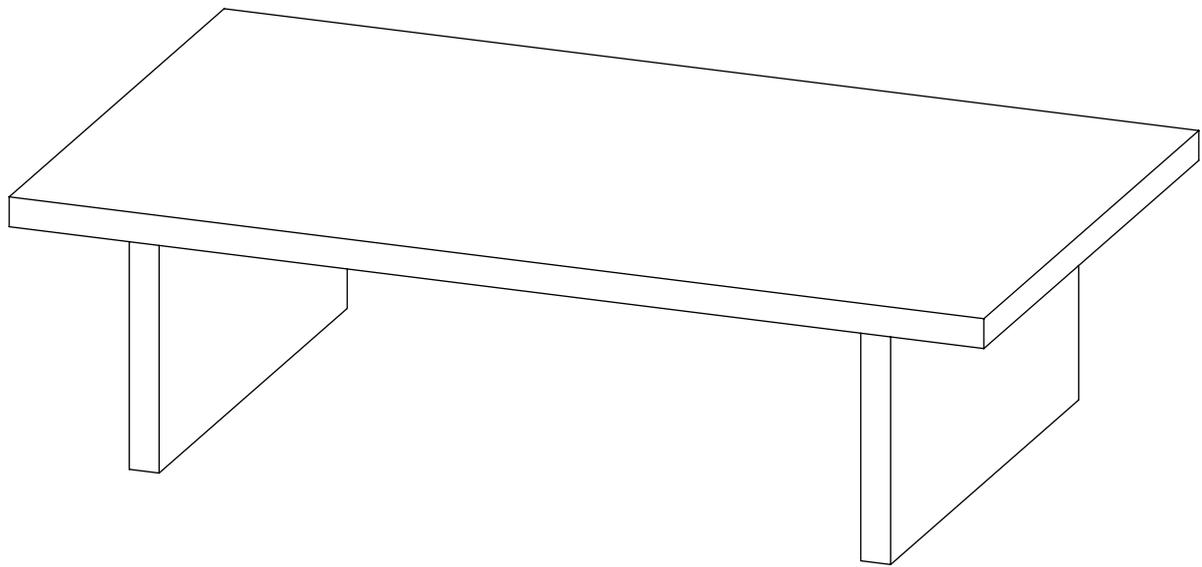

ITEM: 706278

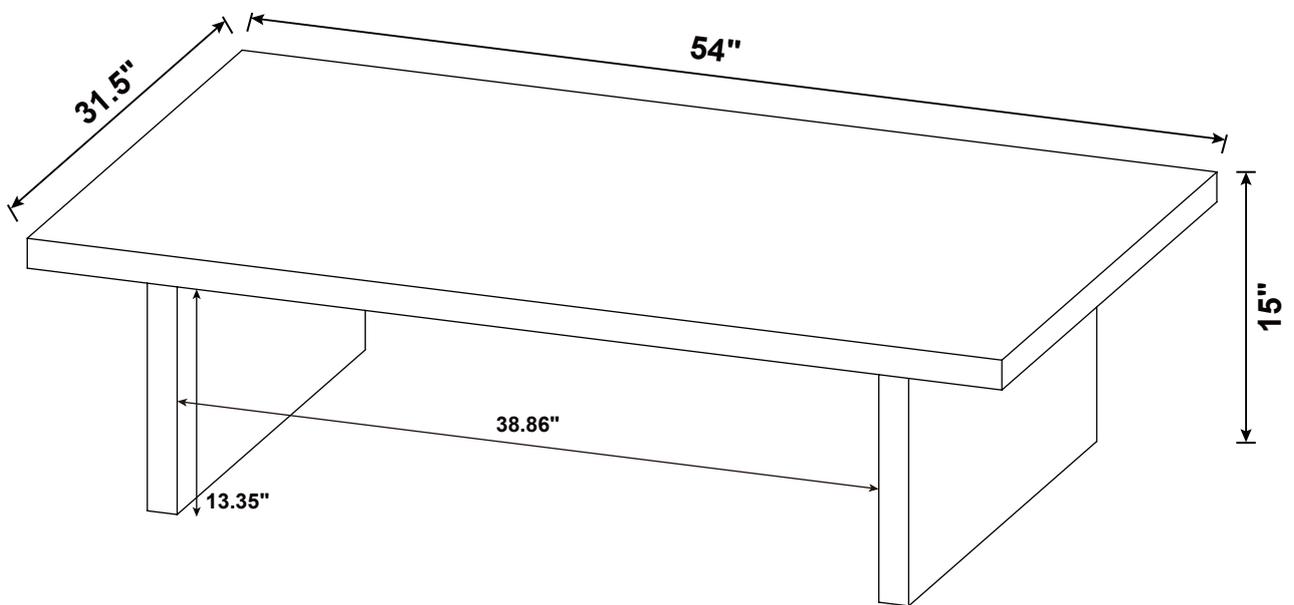

Note : Dimension tolerance $\pm 5\%$