

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706638
COFFEE TABLE

ITEM:706638

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

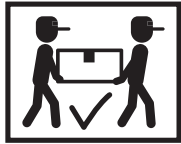





ASSEMBLY TIME

30 MINUTES

      PARTS IDENTIFICATION

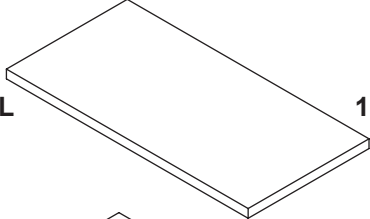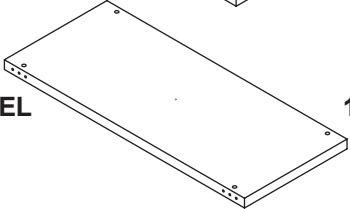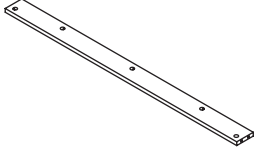A	TOP PANEL		1 PC	D	RIGHT SIDE PANEL		2 PCS
B	BOTTOM PANEL		1 PC	E	SHORT DECORATIVE STRIP		2 PCS
C	LEFT SIDE PANEL		2 PCS	F	LONG DECORATIVE STRIP		1 PC

    HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm SR		21 PCS
2	WOODEN DOWEL Ø8x30mm		28 PCS	5	PLASTIC FEET Ø15m		5 PCS
3	CAM BOLT Ø7x35.5mm SR		21 PCS	6	STICKER Ø20mm		4 PCS

 
 
 
 
 
 
 
 
 
 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **706638**

STEP 1

COASTER
FINE FURNITURE

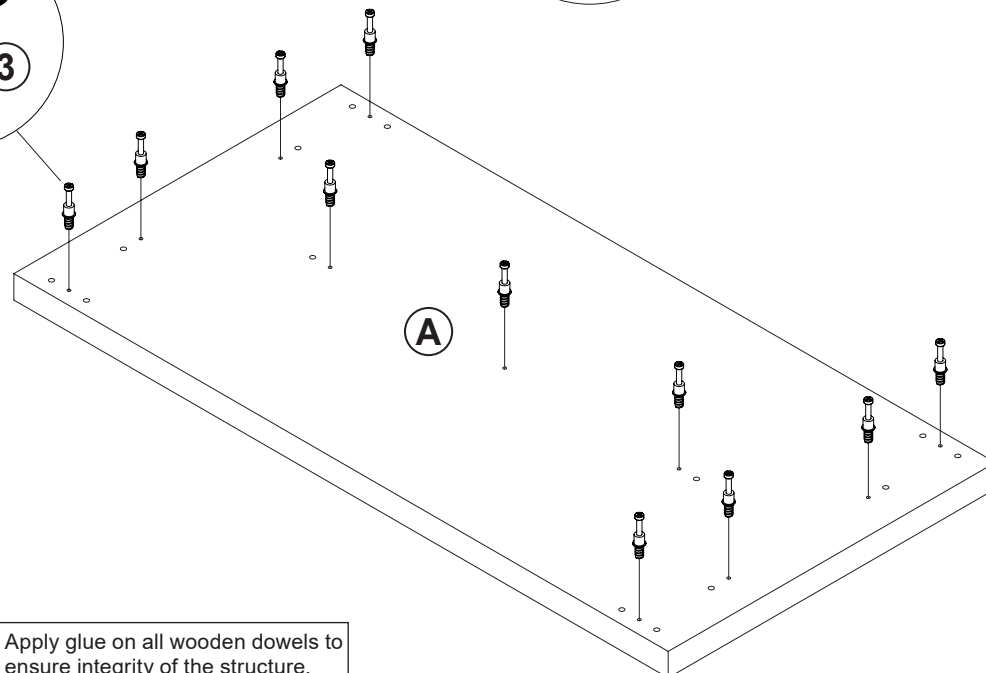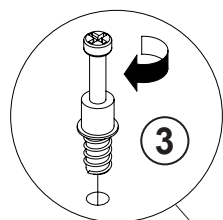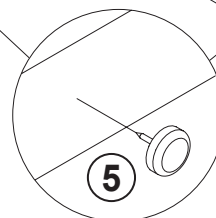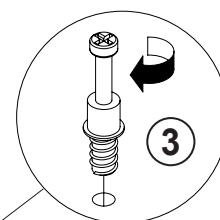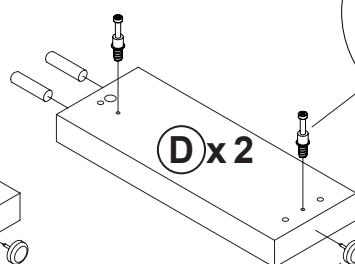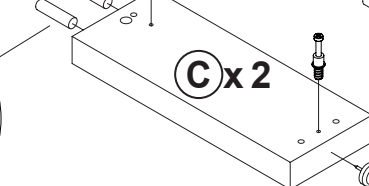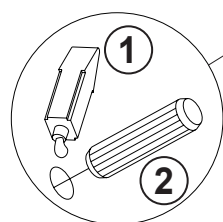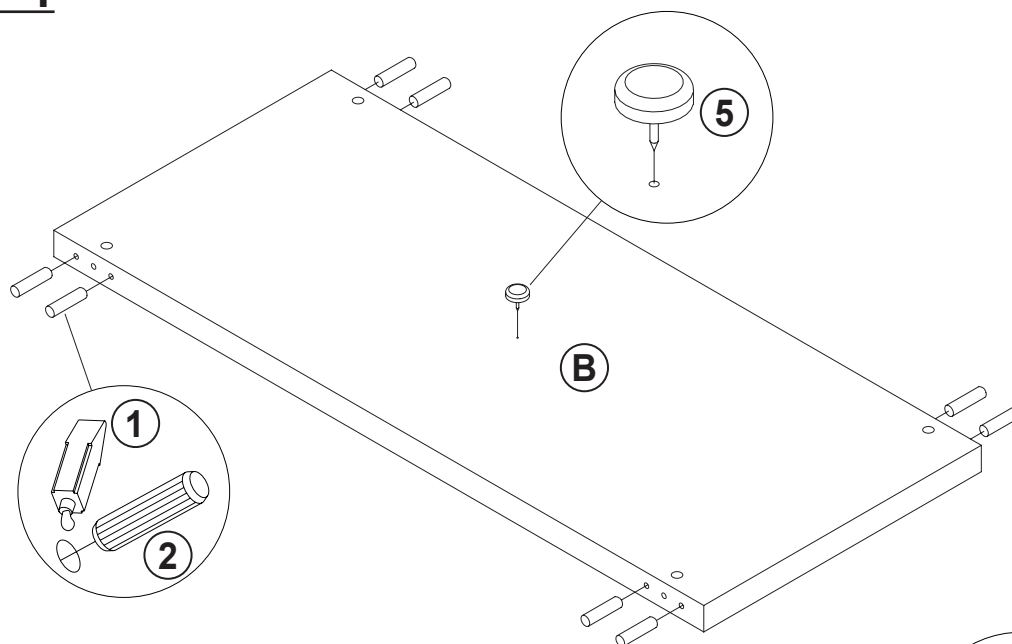



INCORRECT
CORRECT

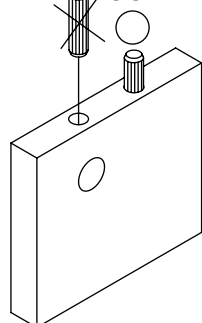 


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **706638**

  STEP 2

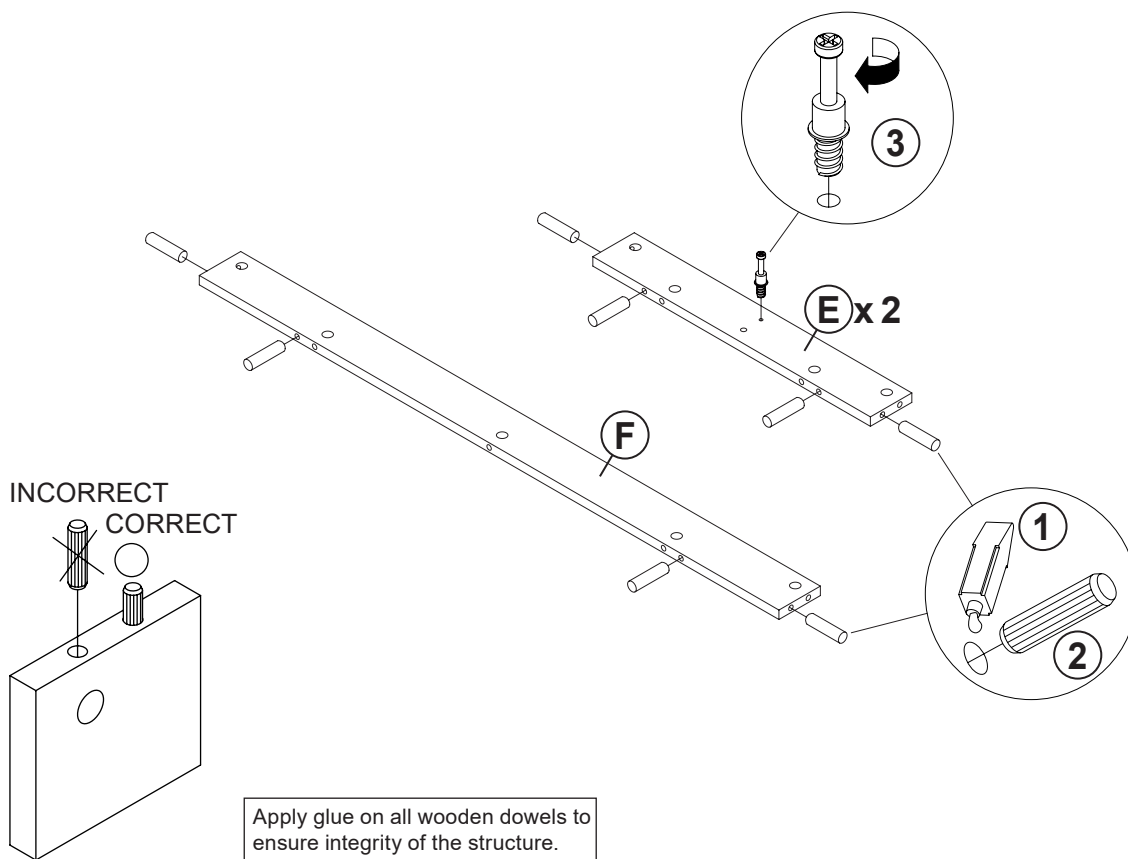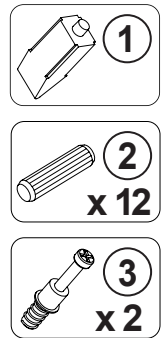


 
STEP 3

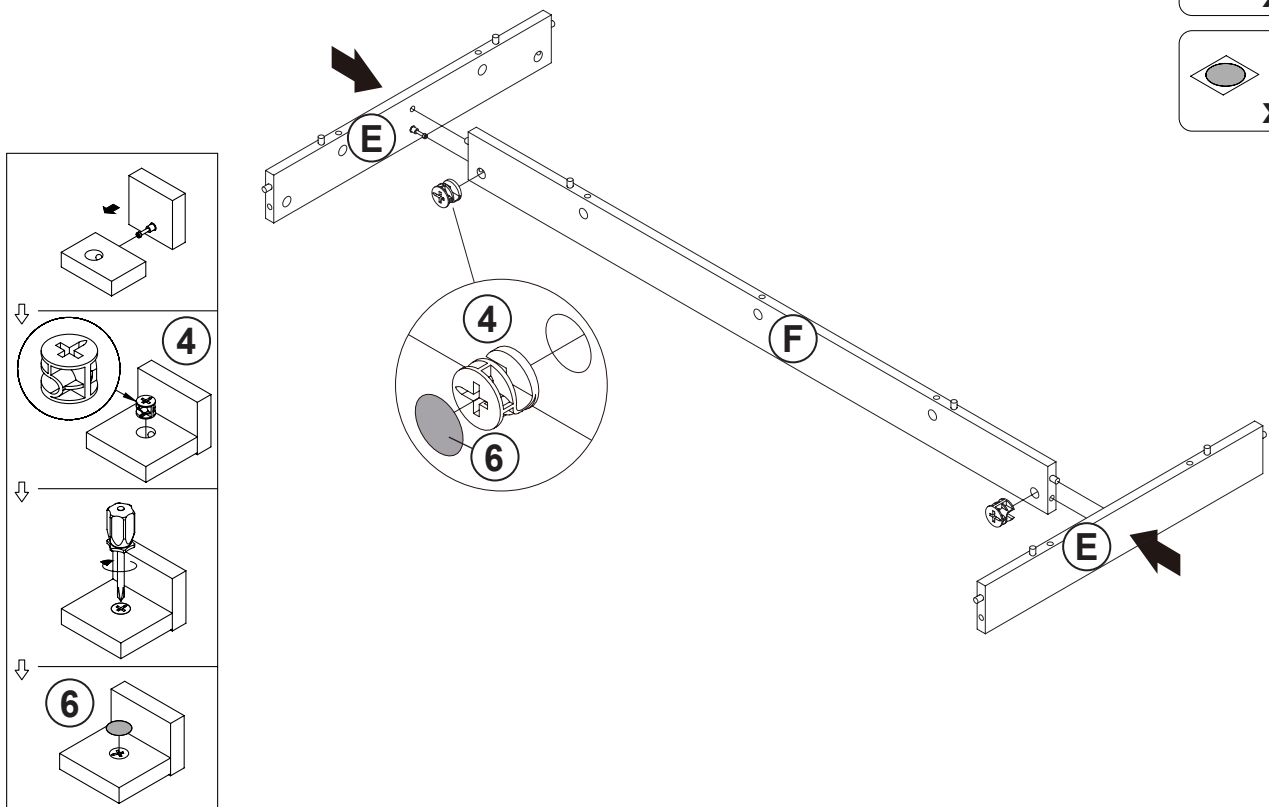



ITEM: **706638**

COASTER
FINE FURNITURE

  STEP 4

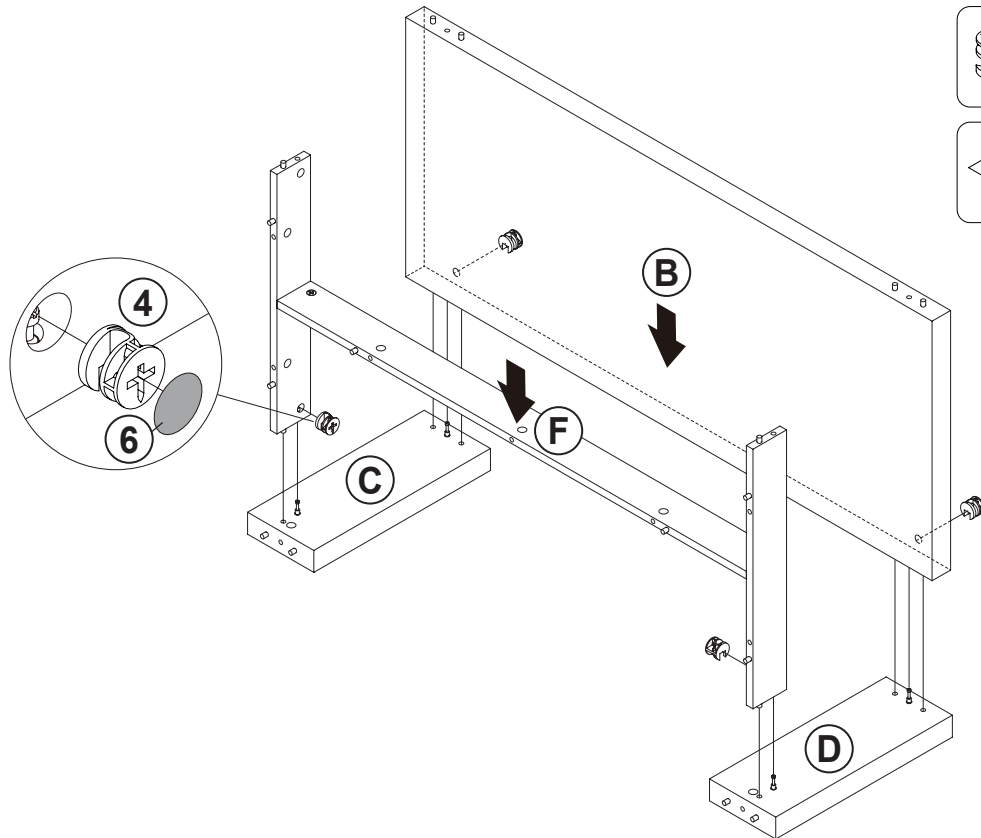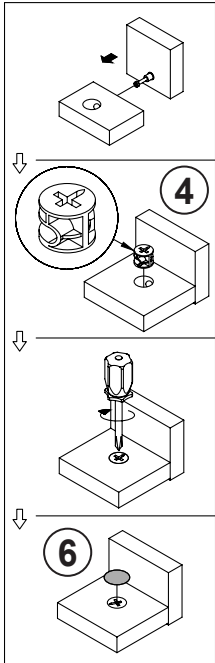


 
 
STEP 5

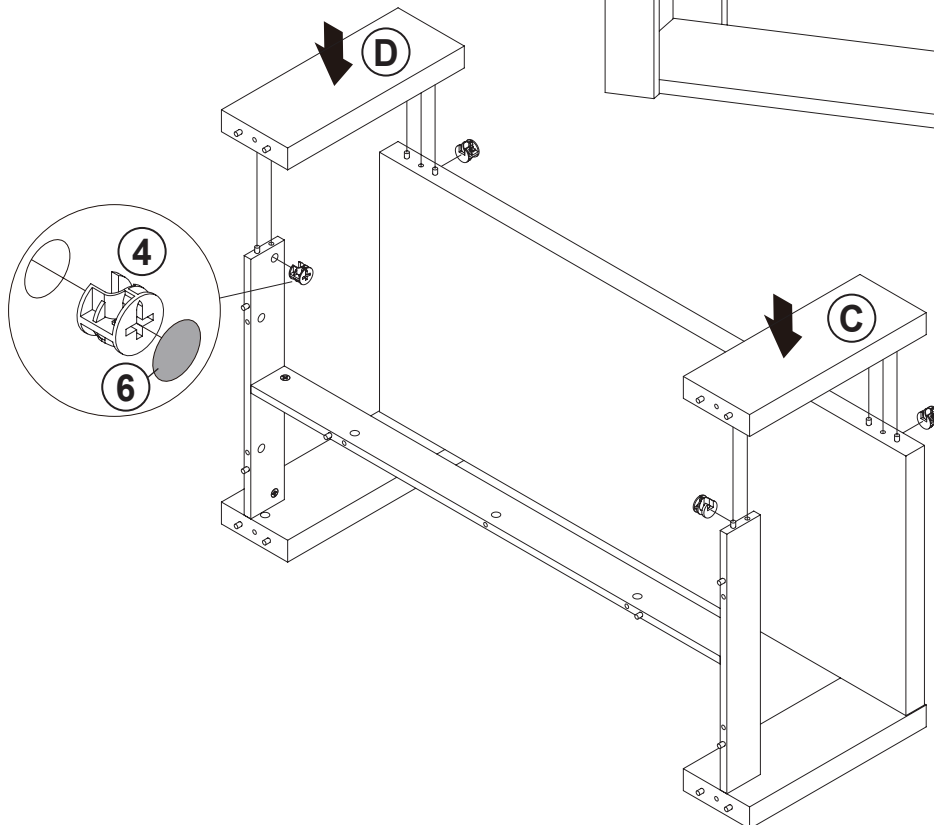

ITEM: **706638**



COASTER
FINE FURNITURE

   STEP 6

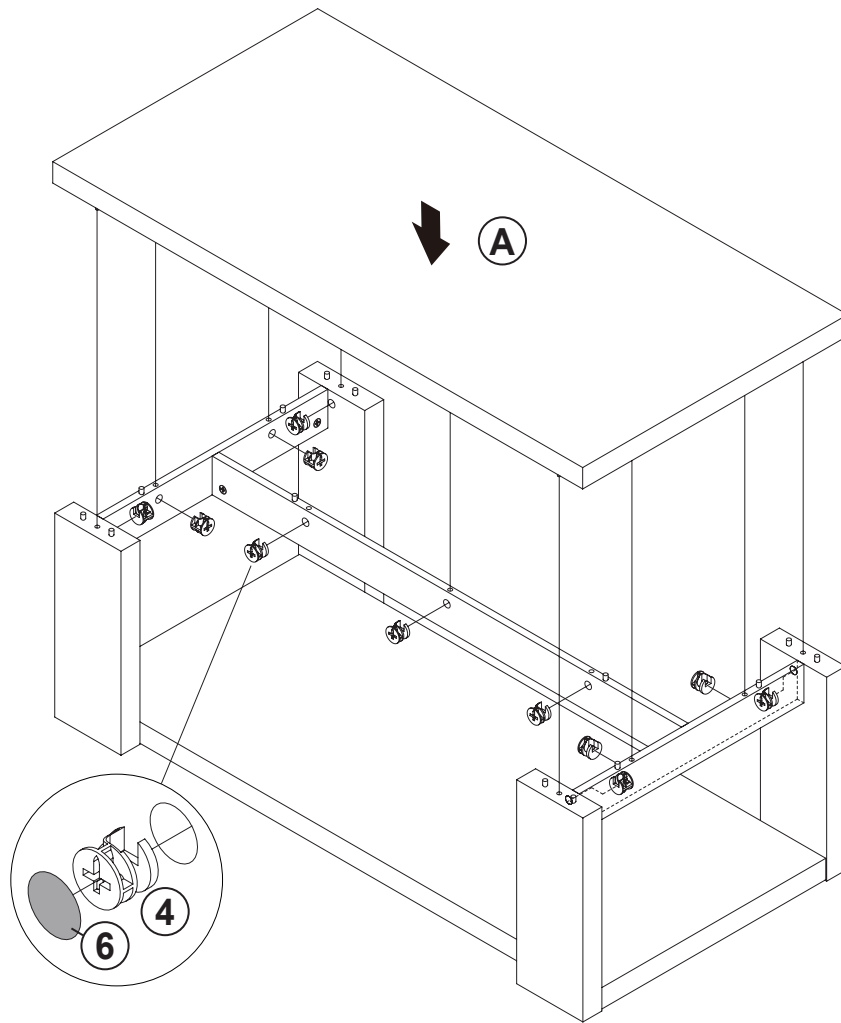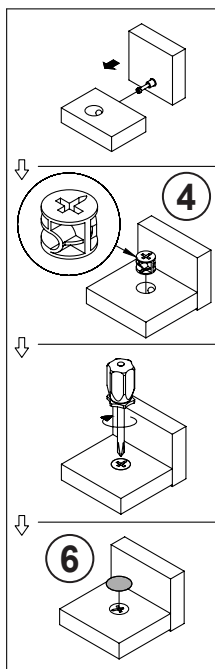


STEP 7

  COMPLETE

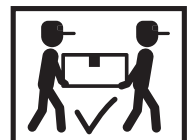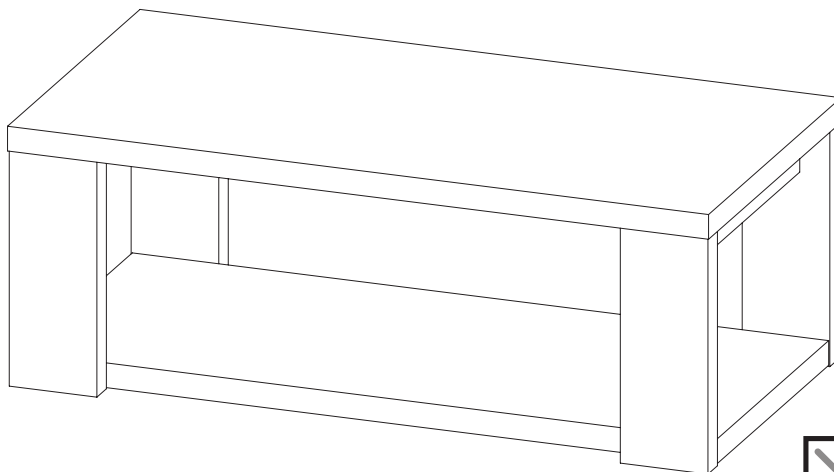

ITEM: 706638

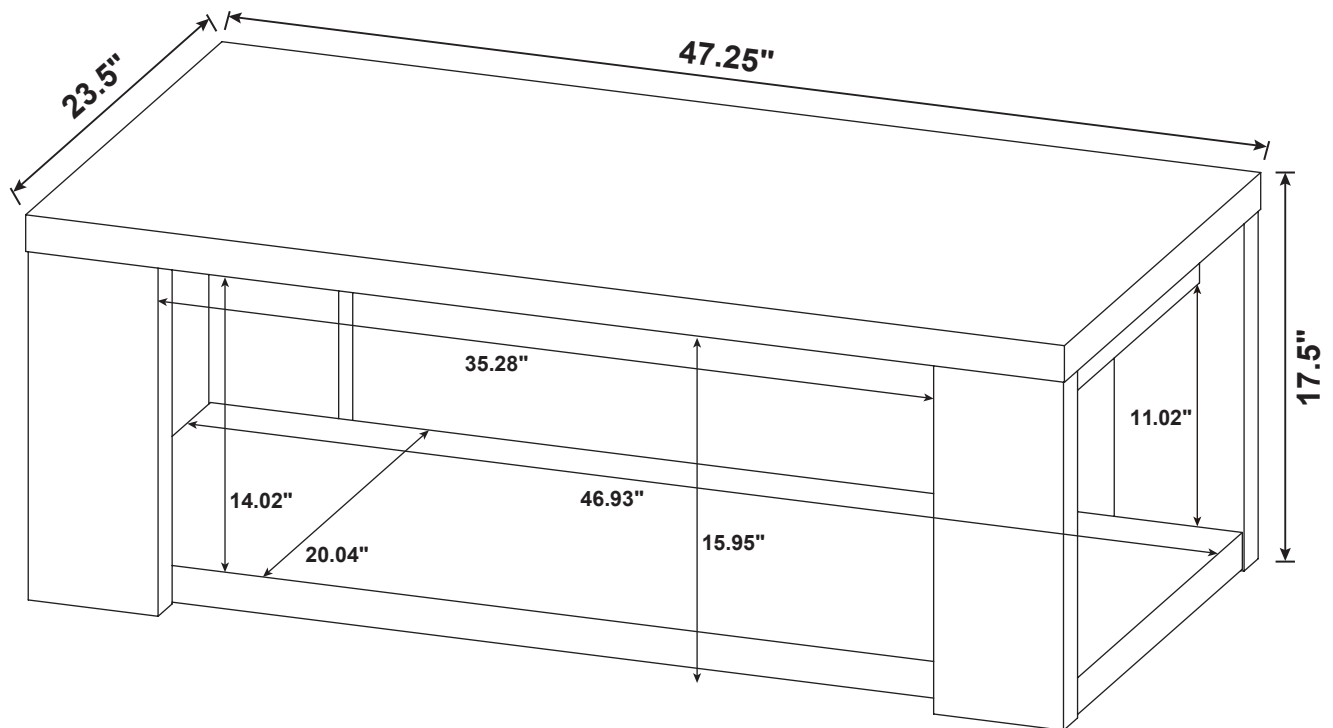 

Note : Dimension tolerance $\pm 5\%$

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

706637
END TABLE

ITEM:706637

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION


A TOP PANEL

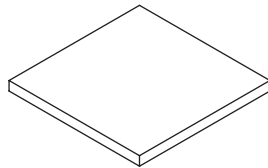

1 PC


D

 RIGHT SIDE
PANEL



2 PCS

 
B BOTTOM PANEL

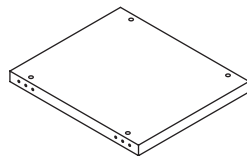

1 PC


E

 DECORATIVE
STRIP



2 PCS




 
C LEFT SIDE
PANEL



2 PCS

HARDWARE IDENTIFICATION

    Z

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm SR		16 PCS
2	WOODEN DOWEL Ø8x30mm		24 PCS	5	PLASTIC FEET Ø15m		4 PCS
3	CAM BOLT Ø7x35.5mm SR		16 PCS	6	STICKER Ø20mm		3 PCS

 
 
 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 706637

STEP 1

COASTER
FINE FURNITURE

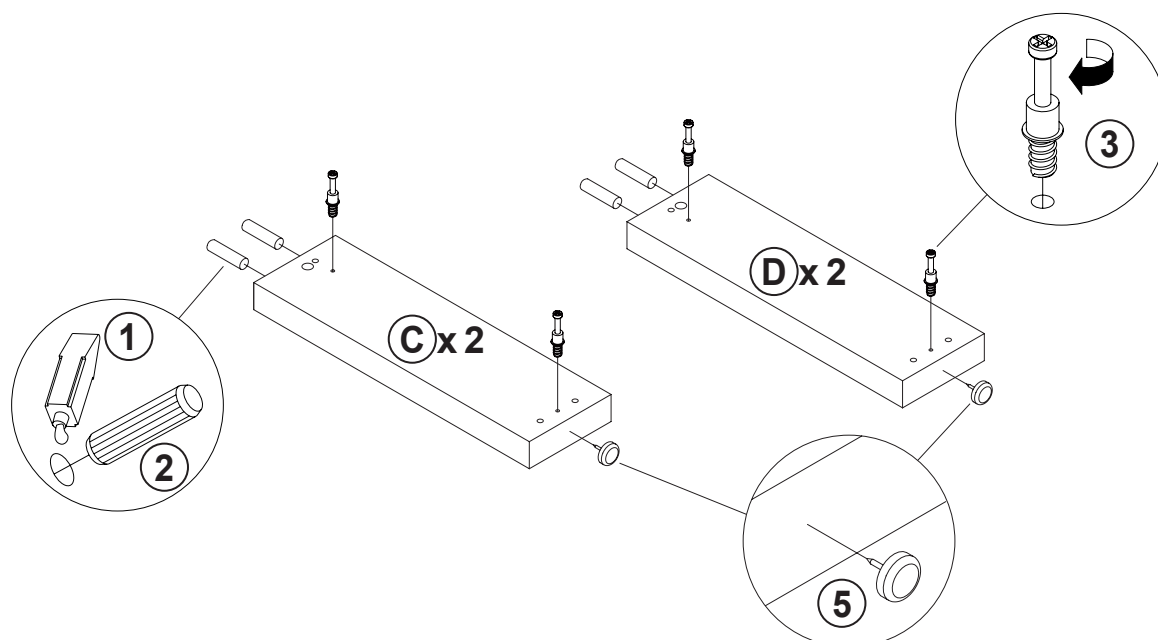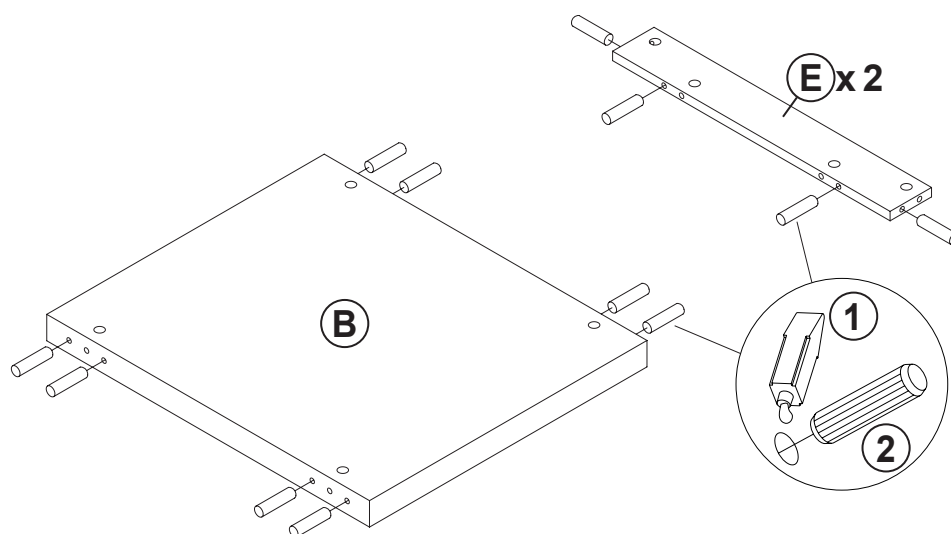




INCORRECT
CORRECT

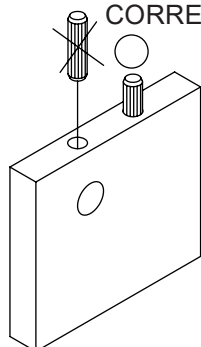 



Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **706637**

   STEP 2

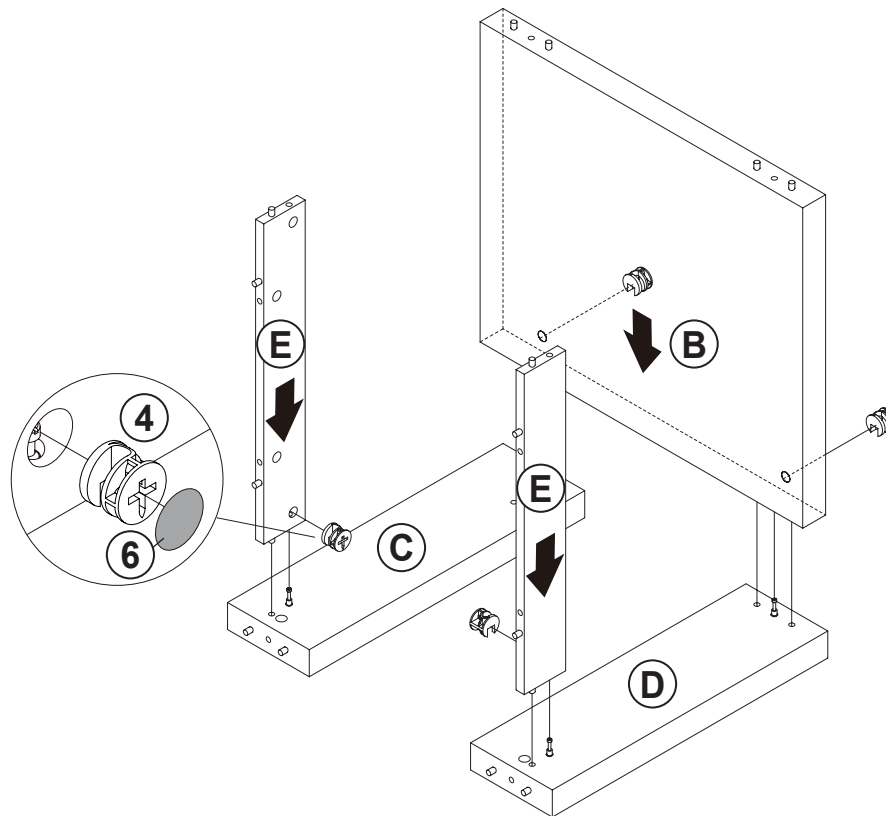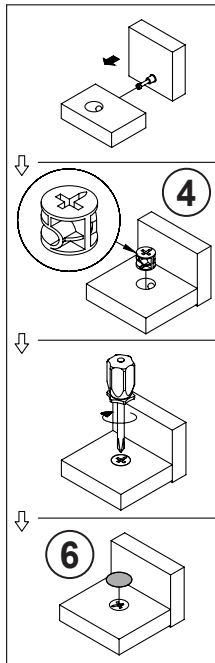


 
 
STEP 3

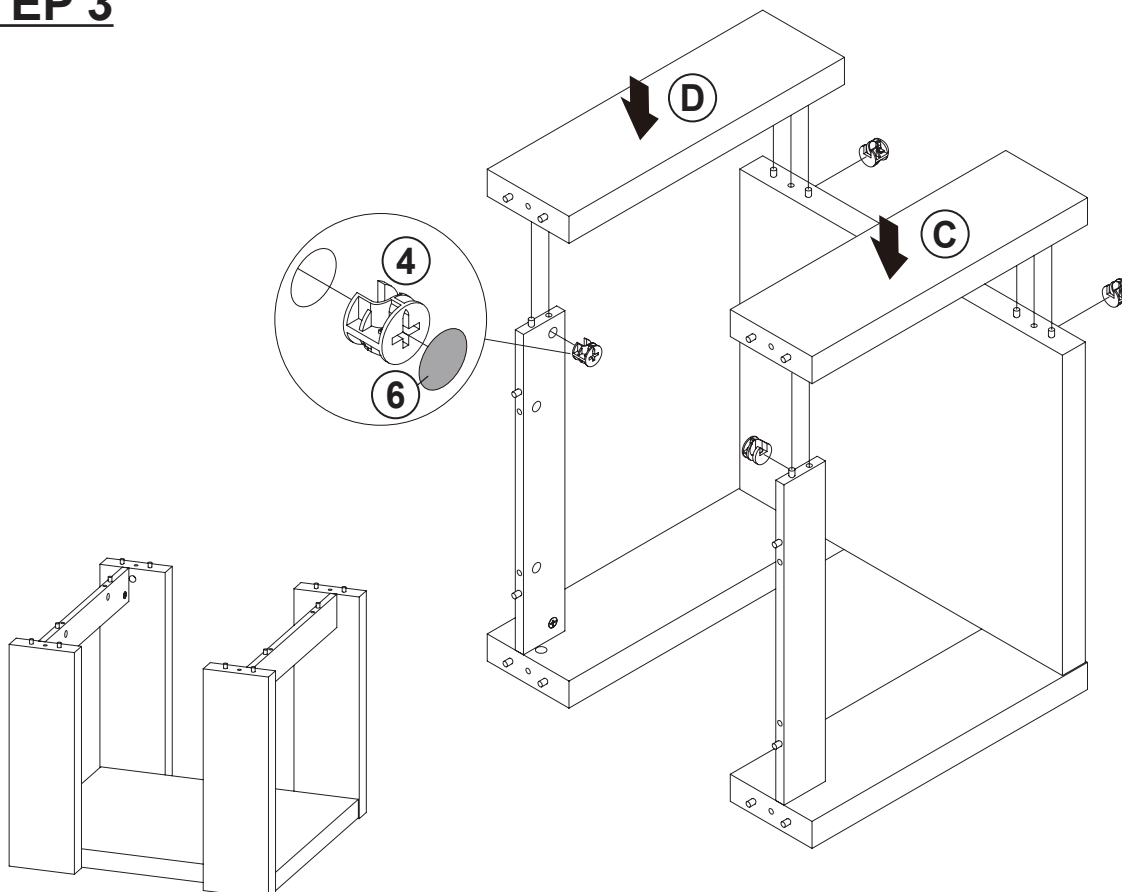

ITEM: **706637**


STEP 4

   COASTER
FINE FURNITURE

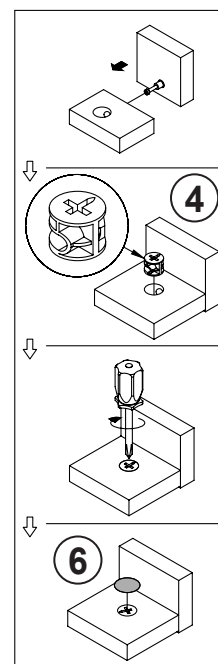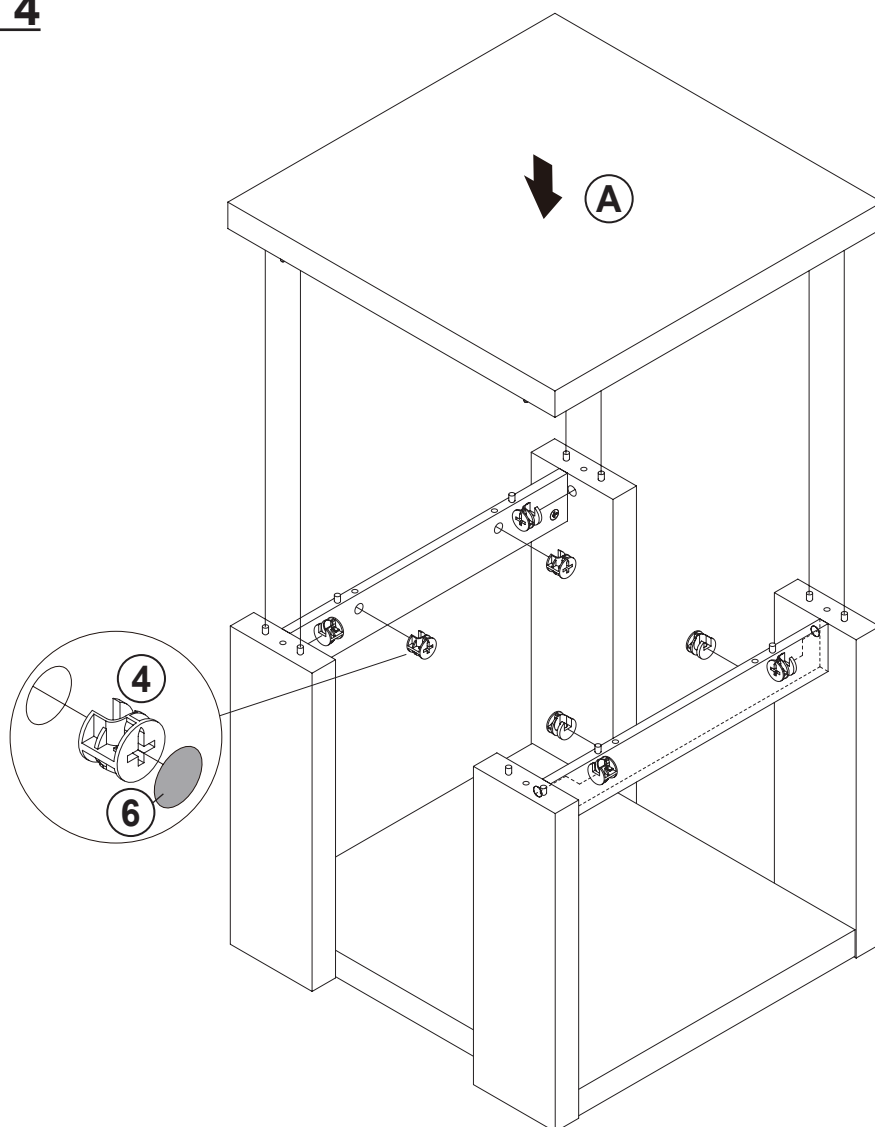


STEP 5

 COMPLETE

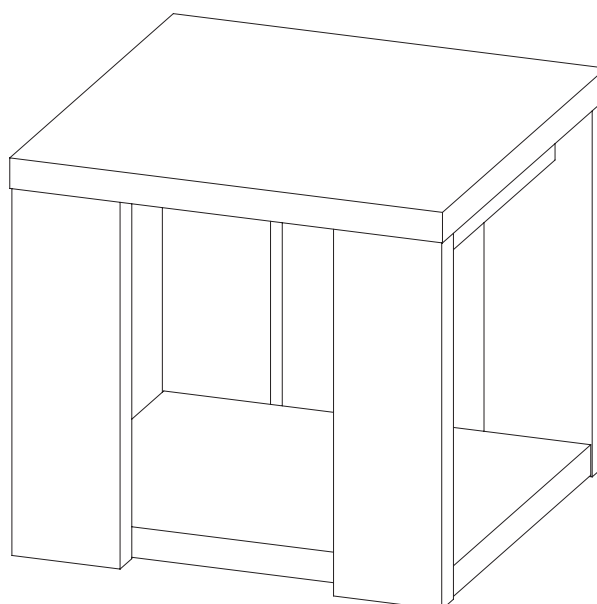

ITEM: 706637

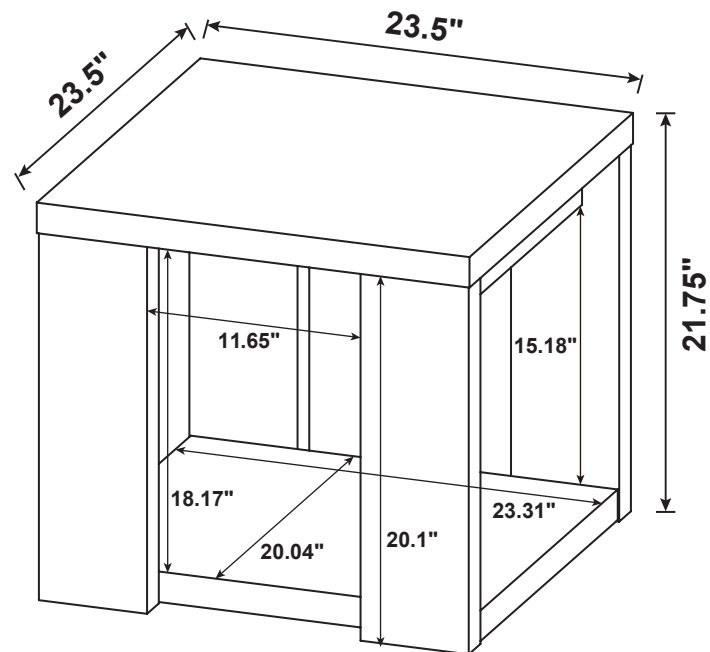 

Note : Dimension tolerance $\pm 5\%$