


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

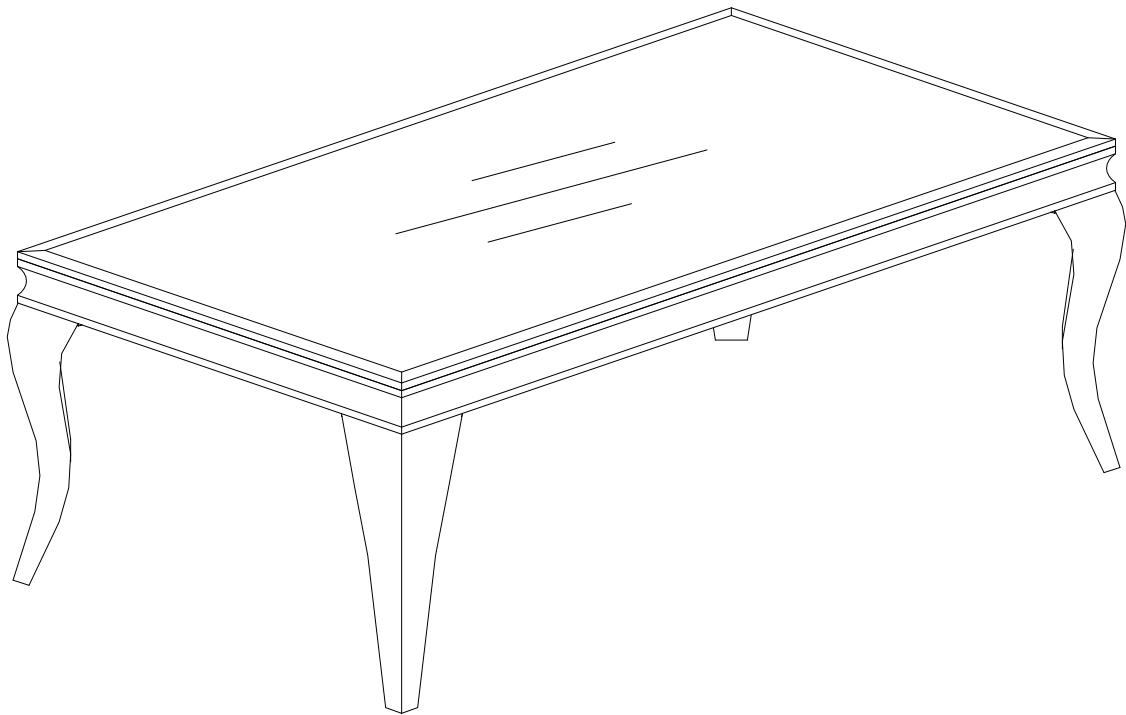

Fine Furniture for every stage of life

707768(B1-B3)
Coffee Table

ITEM: **707768(B1-B3)**

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

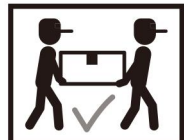


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION


B1(BOX 1)

A GLASS

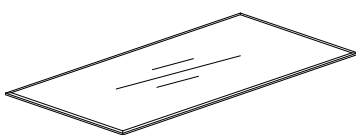

1PC

B TOP FRAME

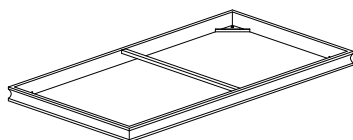

1PC

C LEG

 


4PCS

Z HARDWARE IDENTIFICATION

B3(BOX 3)-HARDWARE PACK IS LOCATED IN 707768(B3)

1 BOLTS M8*12




12PCS

2 FLAT WASHER Ø8*20




12PCS

3 ALLEN WRENCH 6MM

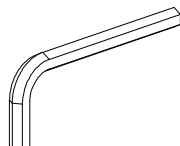

1PC

4 GLASS REST

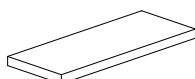


6PCS

ITEM: **707768(B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP1

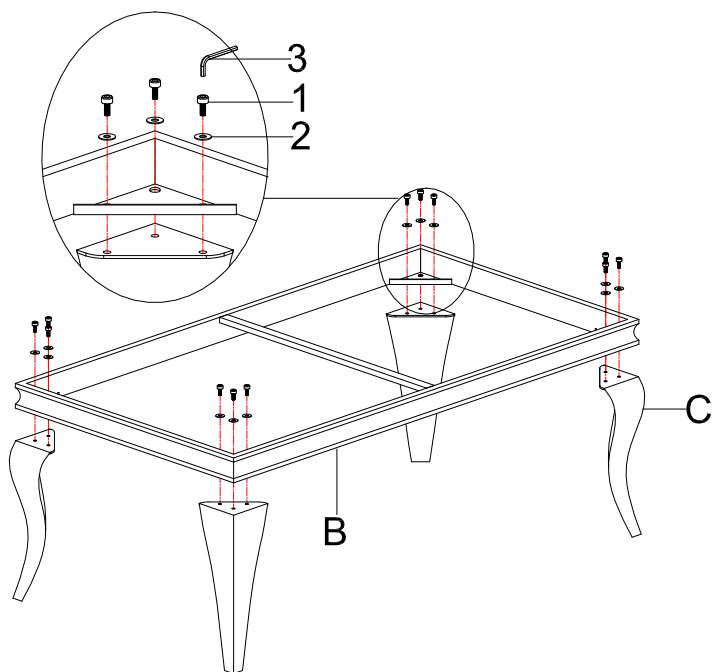

STEP2

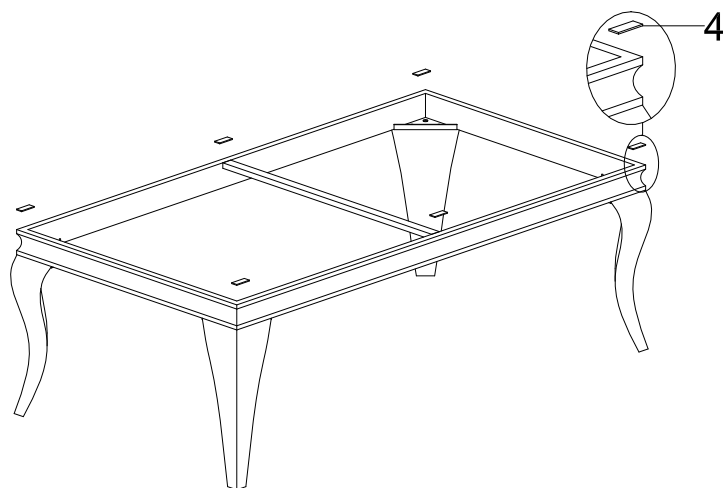

STEP3

