 


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

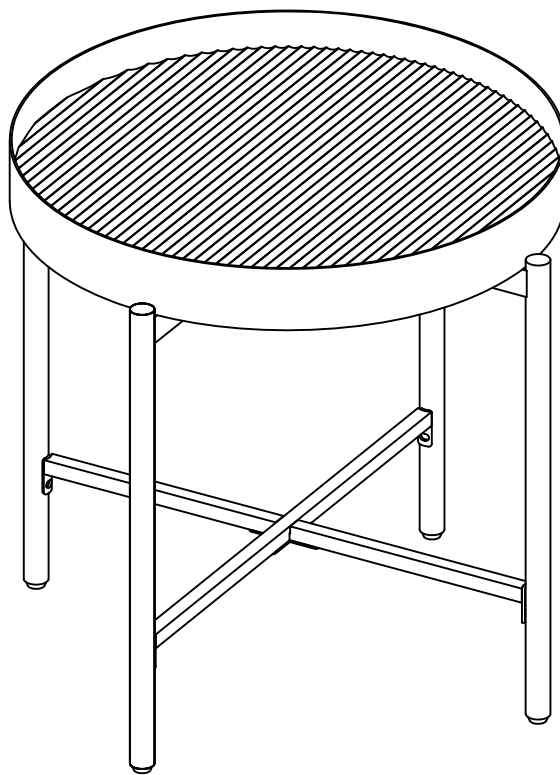

Fine Furniture for every stage of life

707897
END TABLE

ITEM: **707897**



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !








1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

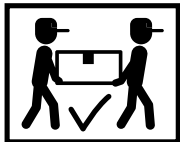



ASSEMBLY TIME

10 MINUTE

       PARTS IDENTIFICATION

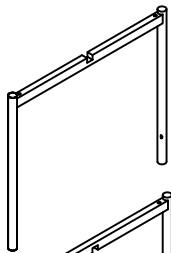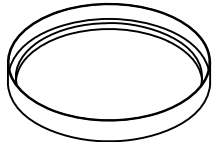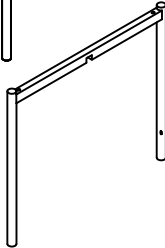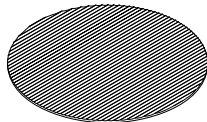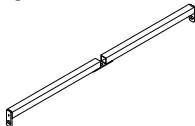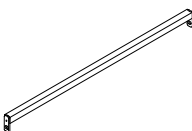A	LOWER LEG FRAME		1PC	E	UPPER FRAME		1PC
B	UPPER LEG FRAME		1PC	F	GLASS TOP		1PC
C	LOWER CROSSBAR		1PC	G	METAL PLATE		1PC
D	UPPER CROSSBAR		1PC				

  HARDWARE IDENTIFICATION

1	BOLT (1/4"x5/8")		9PCS	4	GLASS PAD (Ø12mm)		4PCS
2	BOLT (1/4"x1-3/4")		4PCS	5	ALLEN KEY (4x22x60mm)		1PC
3	WASHER (Ø16mm)		13PCS				

ITEM: **707897**

 


ASSEMBLY INSTRUCTIONS

STEP 1:


ASSEMBLY

Do not fully tighten all bolts until assembly is complete.
This will help all parts to assemble properly.

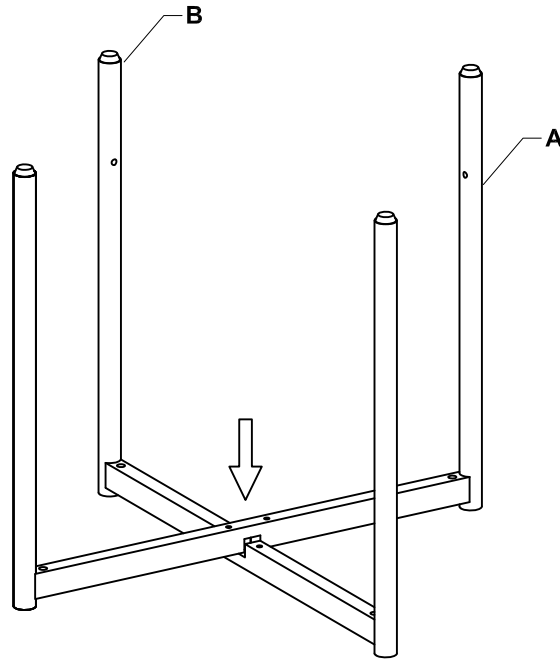

STEP 2:

1		4PCS
3		4PCS
5		

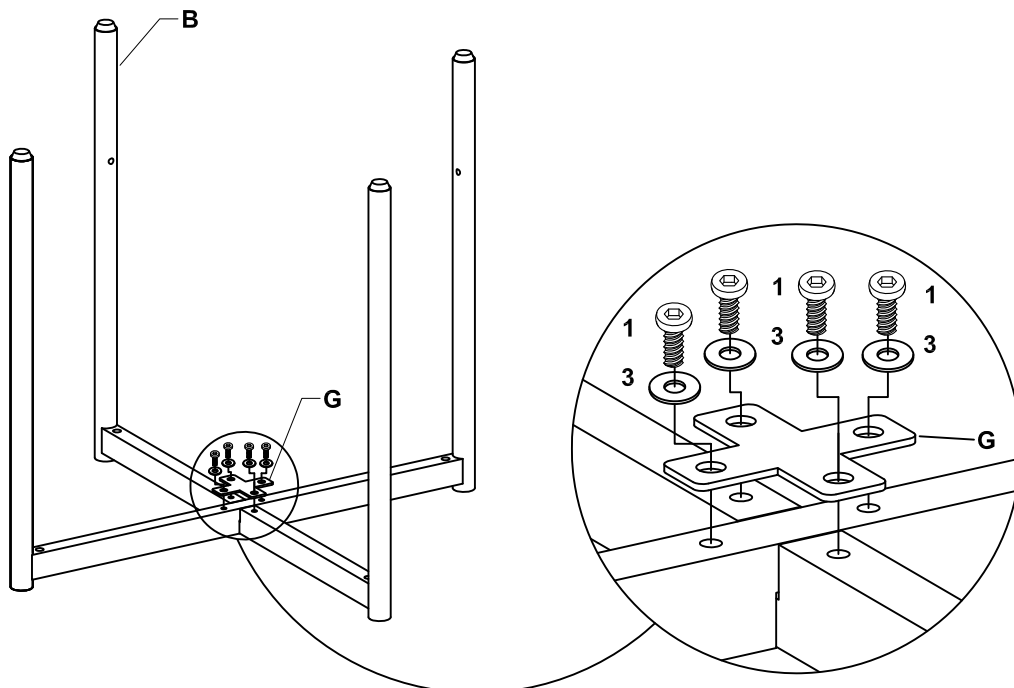 


ITEM: **707897**

ASSEMBLY INSTRUCTIONS

STEP 3:




2		4PCS
3		4PCS
5		

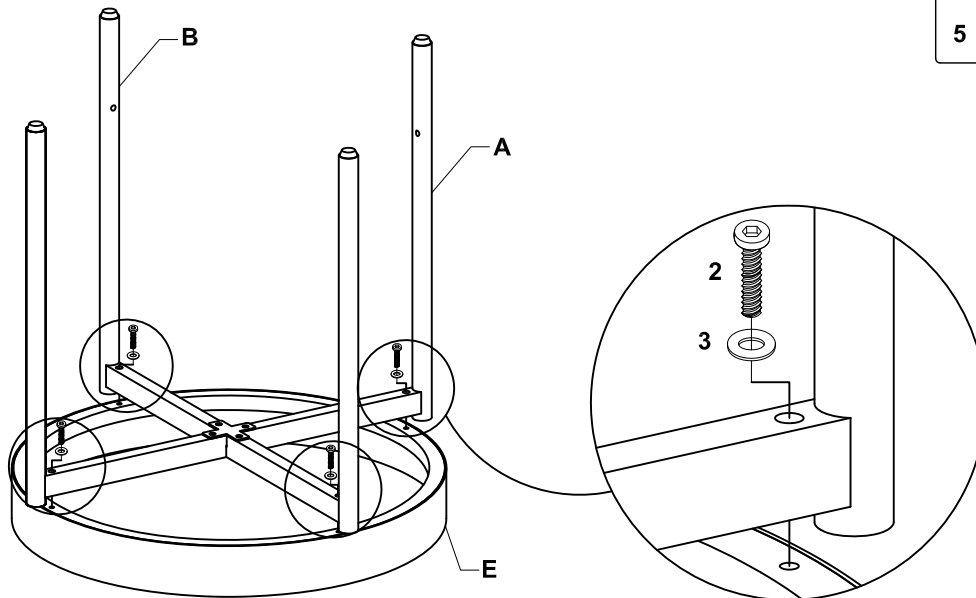 

STEP 4:

1		1PC
3		1PC
5		

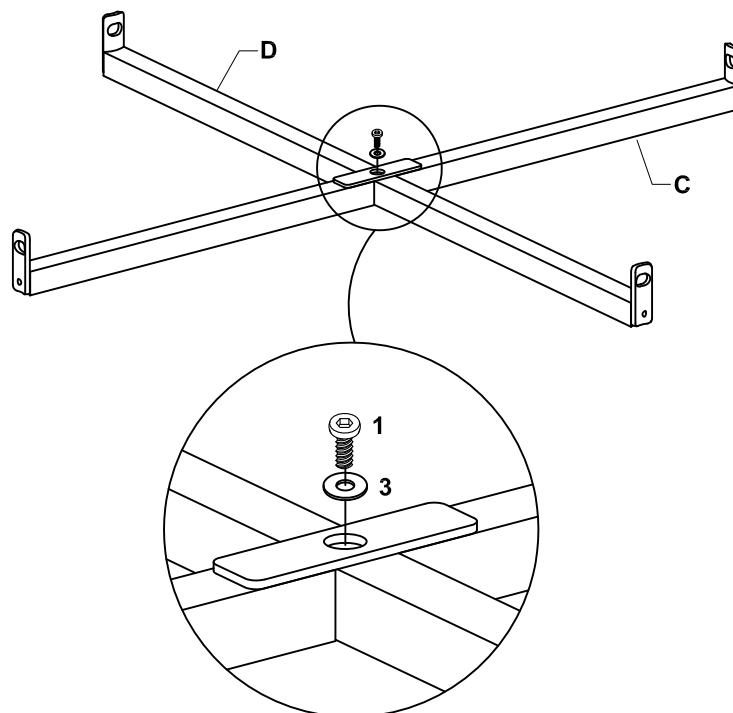 


ITEM: **707897**

ASSEMBLY INSTRUCTIONS

STEP 5:




1		4PCS
3		4PCS
5		

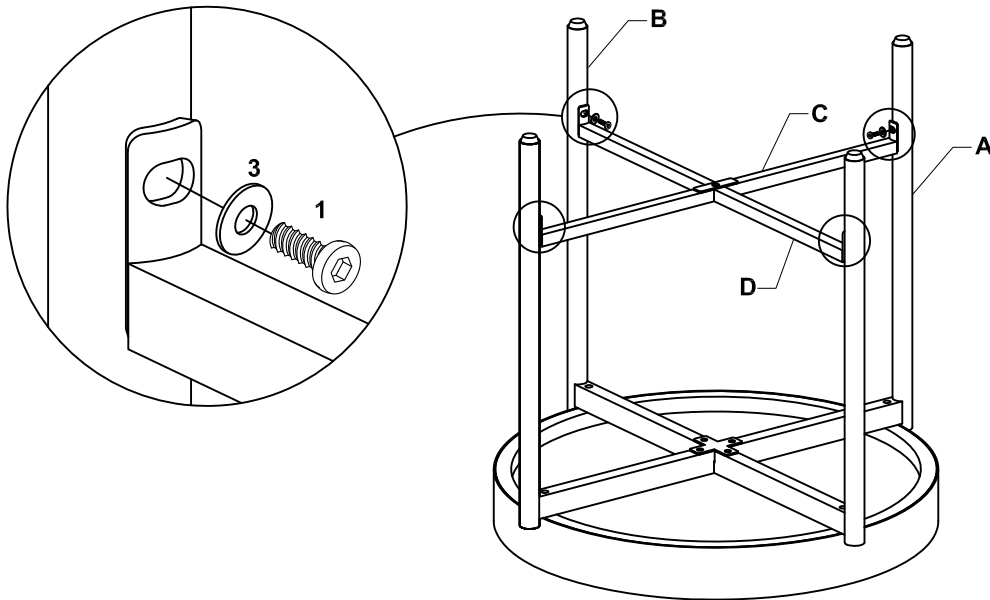 

STEP 6:


4		4PCS
---	---	------

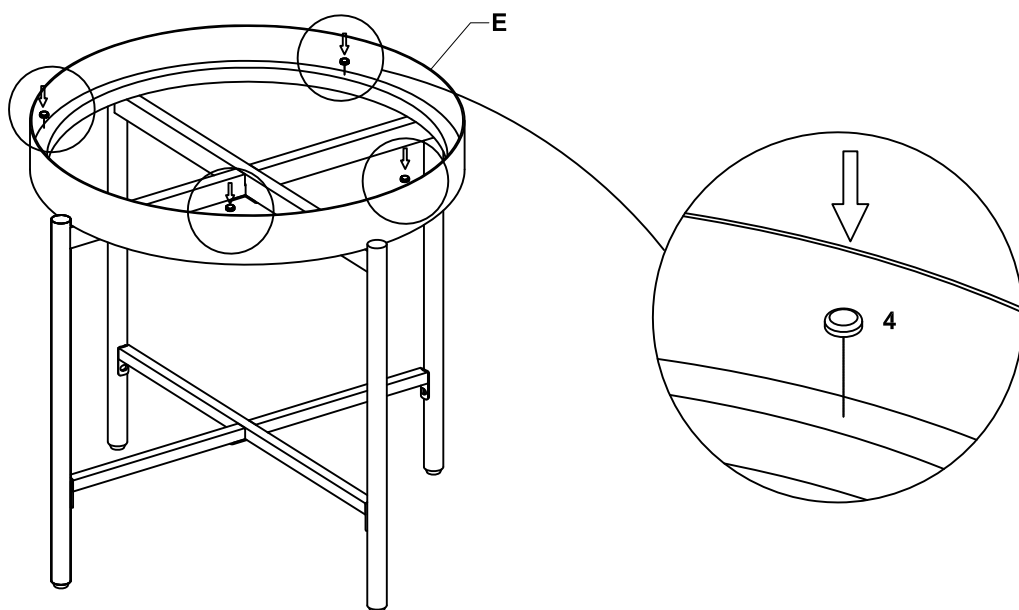 


ITEM: **707897**

ASSEMBLY INSTRUCTIONS

 
STEP 7:

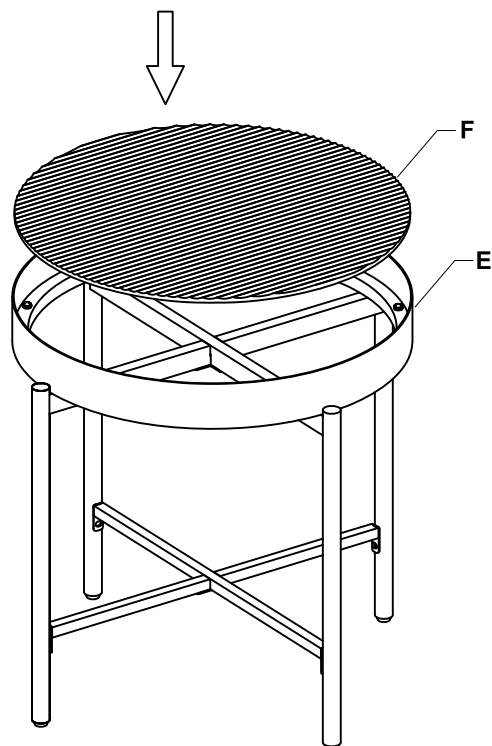

 STEP 8:

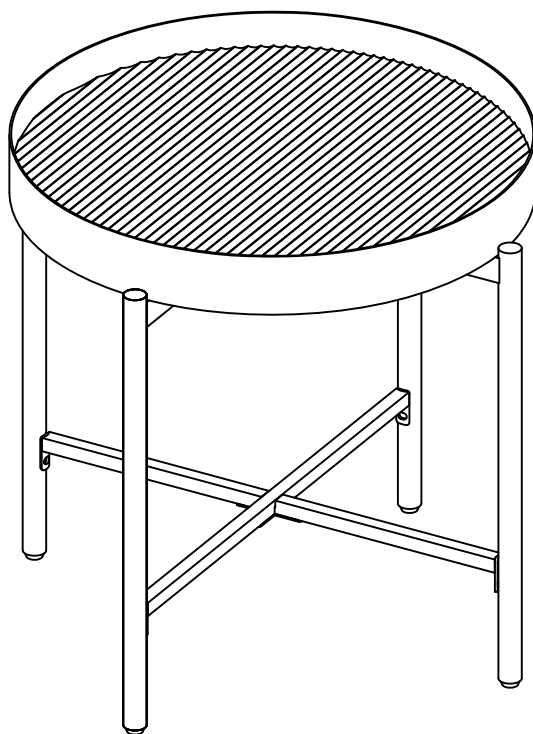


ITEM: **707897**

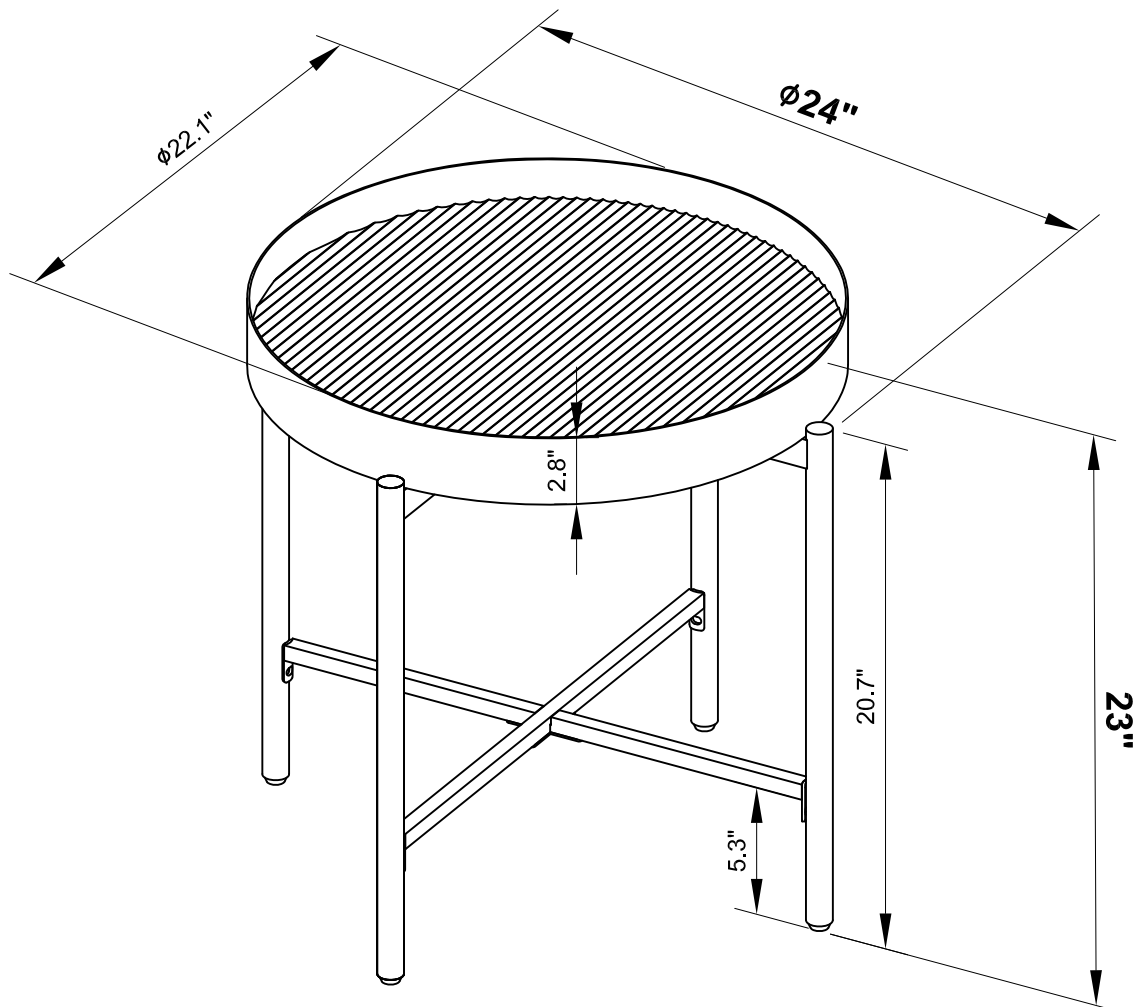 

Note : Dimension tolerance $\pm 5\%$

 ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

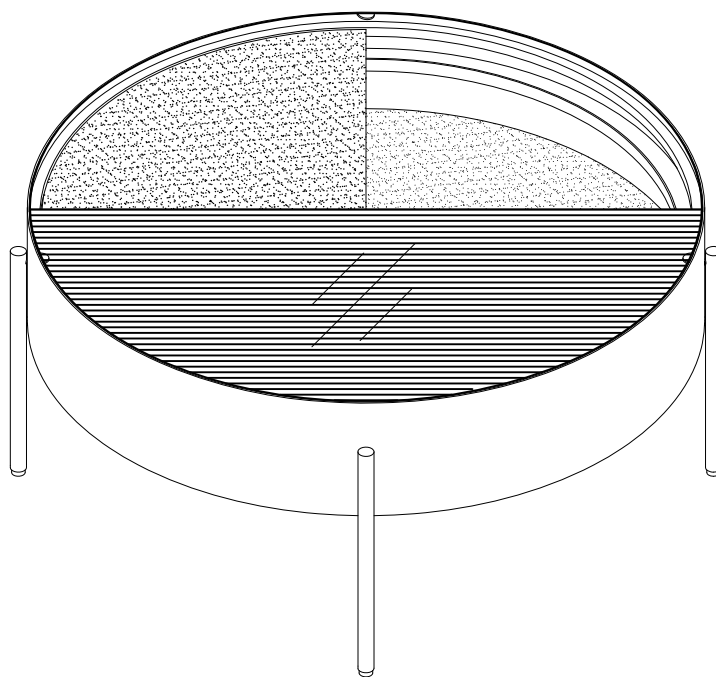

Fine Furniture for every stage of life

707898
COFFEE TABLE

ITEM:707898



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

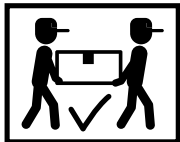


ASSEMBLY TIME

15 MINUTE


PARTS IDENTIFICATION

 A TOP FRAME

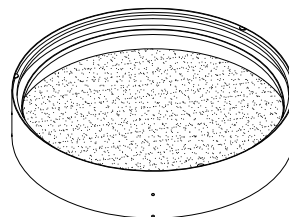


1PC

 B GLASS TOP

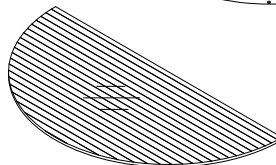

1PC

 C ROTATING BOARD

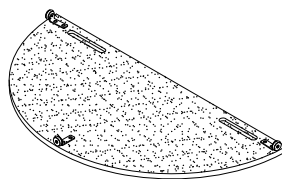

1PC

D LEG



4PCS

HARDWARE IDENTIFICATION

1

BOLT
(1/4"x1/2")



8PCS

2

SCREW
(M4x22mm)



4PCS

3

WASHER
(Ø12mm)



4PCS

4

GLASS PAD
(Ø12mm)



3PCS

5

ALLEN KEY
(4x22x60mm)



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:707898

 


ASSEMBLY INSTRUCTIONS


STEP 1:

ASSEMBLY

Do not fully tighten all bolts until assembly is complete.
This will help all parts to assemble properly.

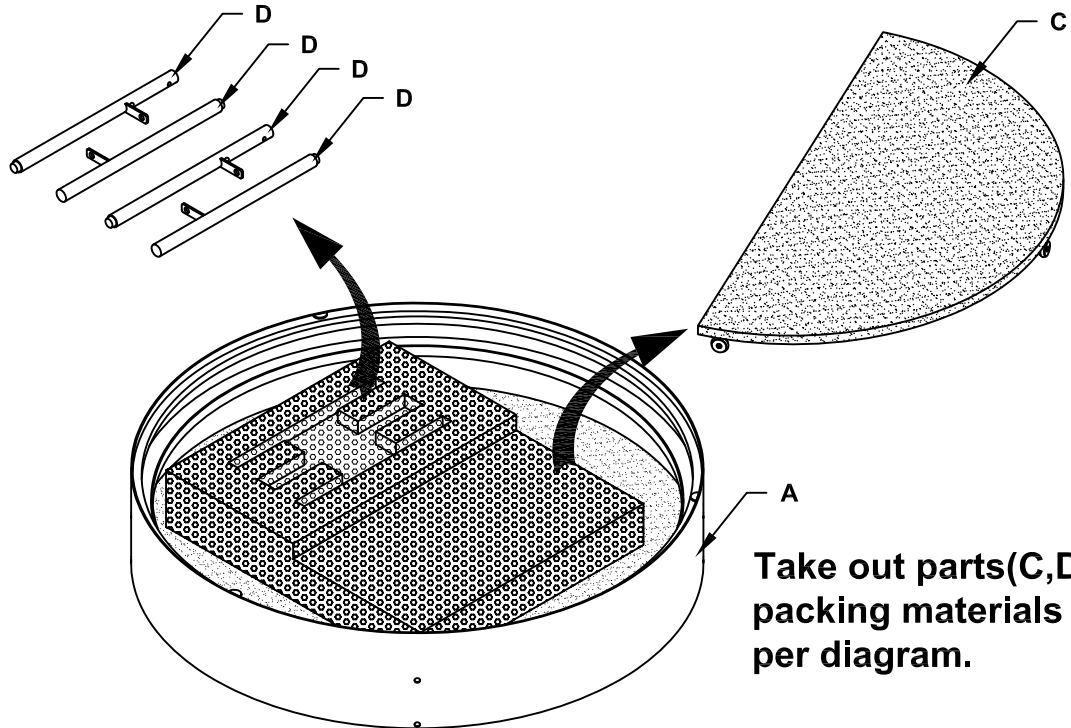

 
STEP 2:

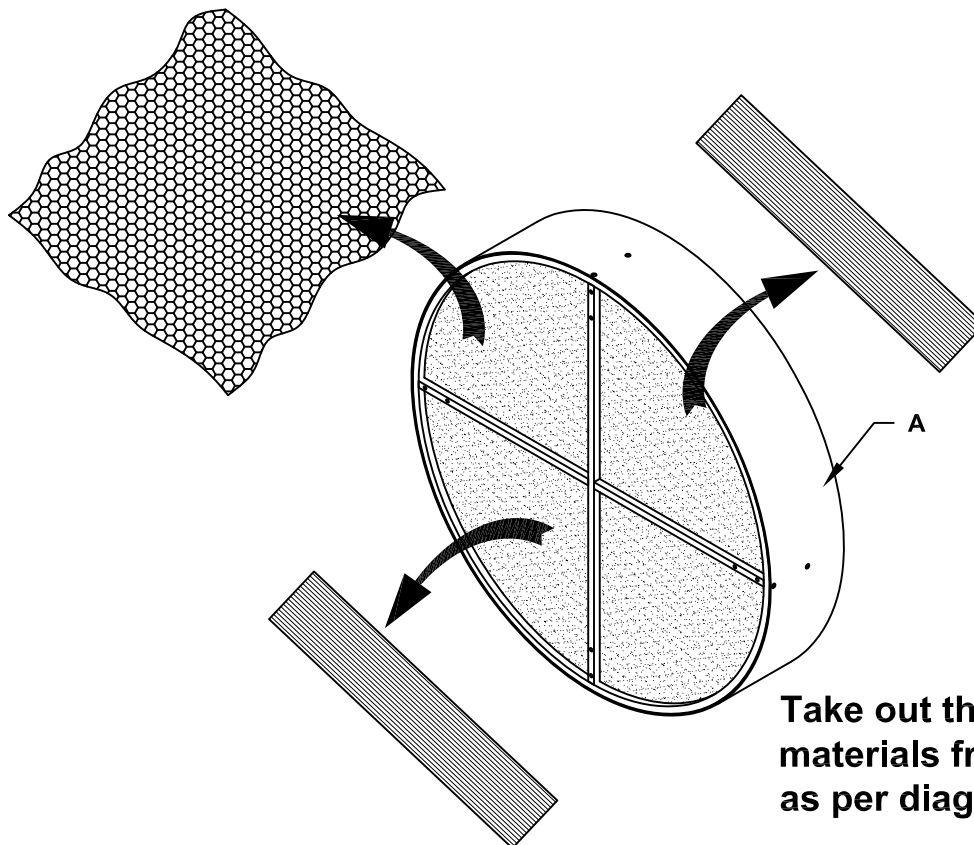


ITEM: 707898

ASSEMBLY INSTRUCTIONS

 STEP 3:

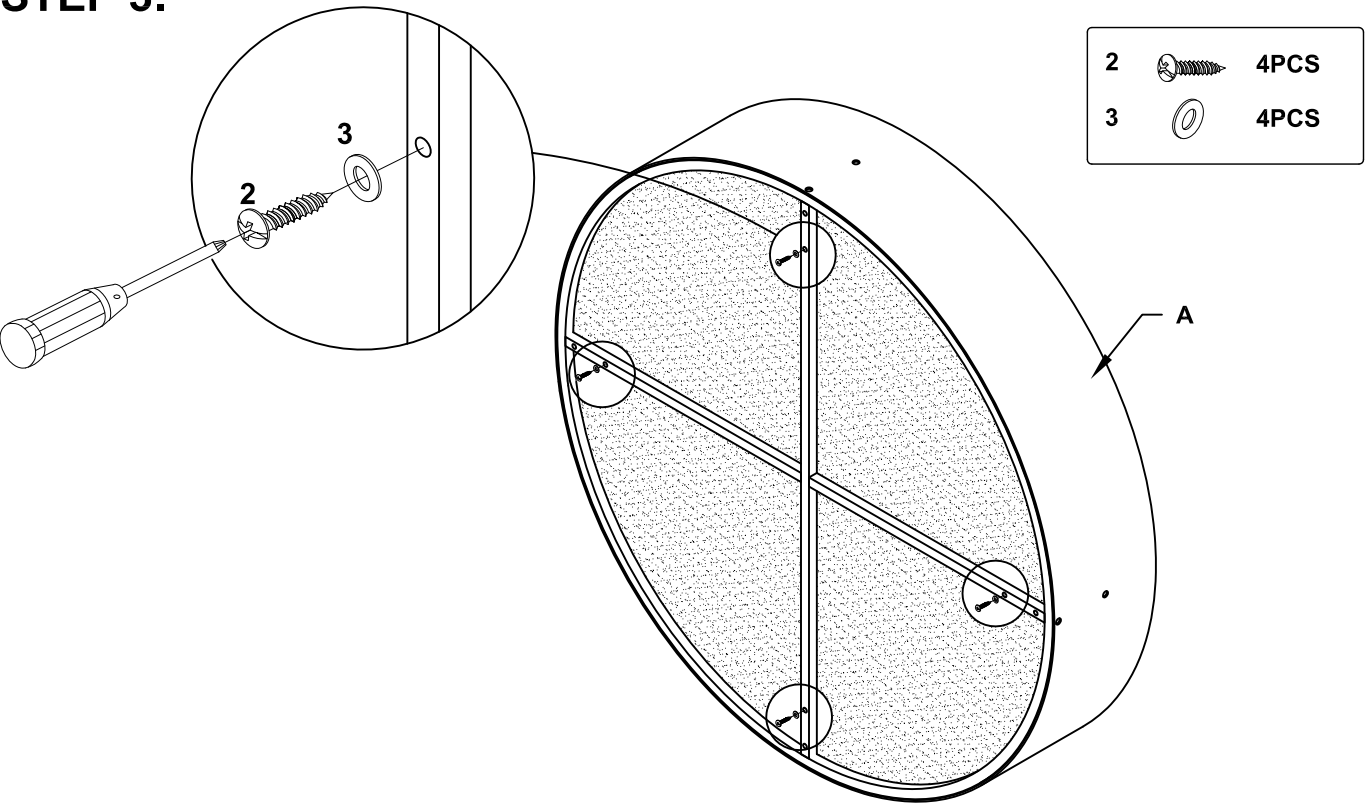

 
STEP 4:

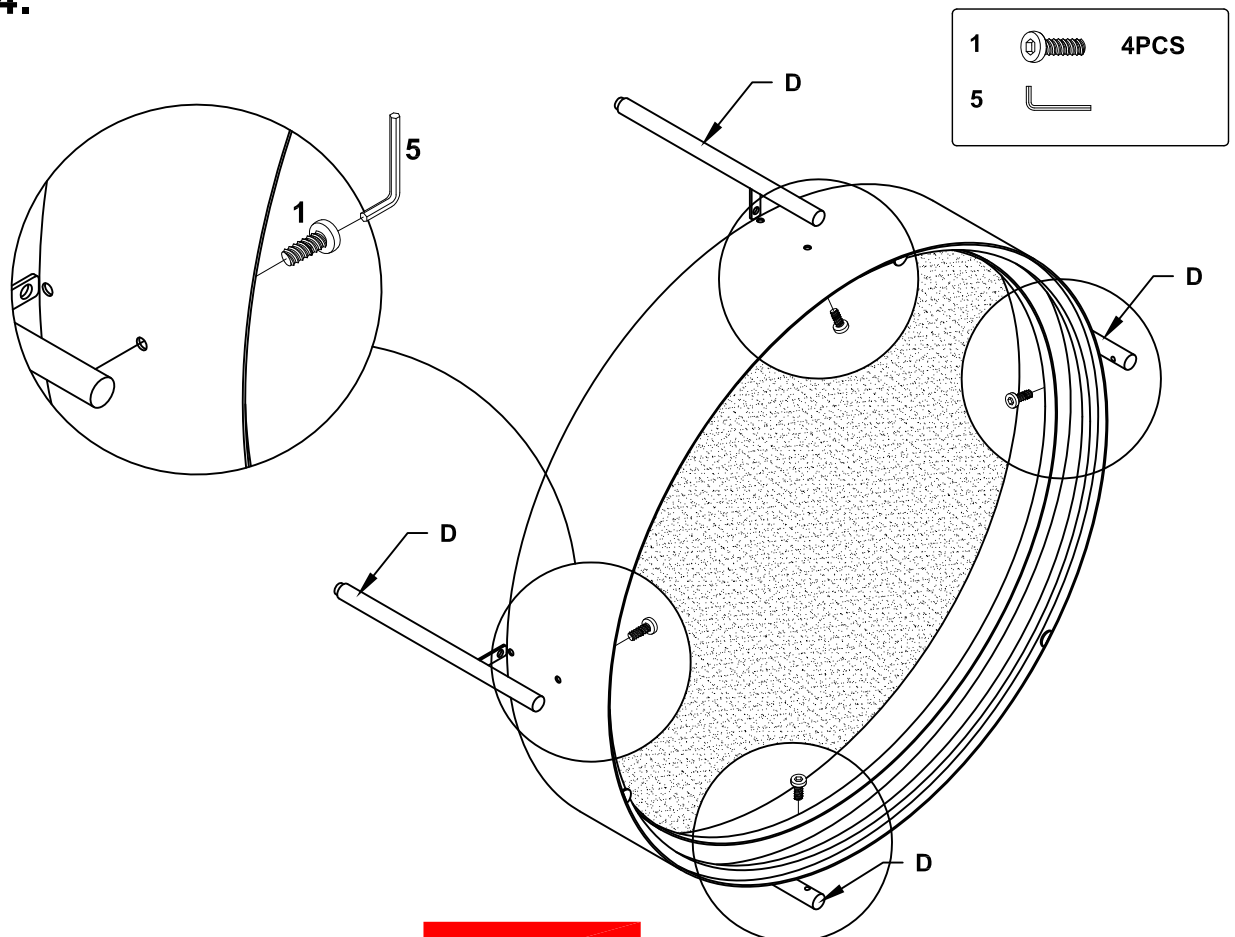


ITEM: 707898

ASSEMBLY INSTRUCTIONS

 STEP 5:

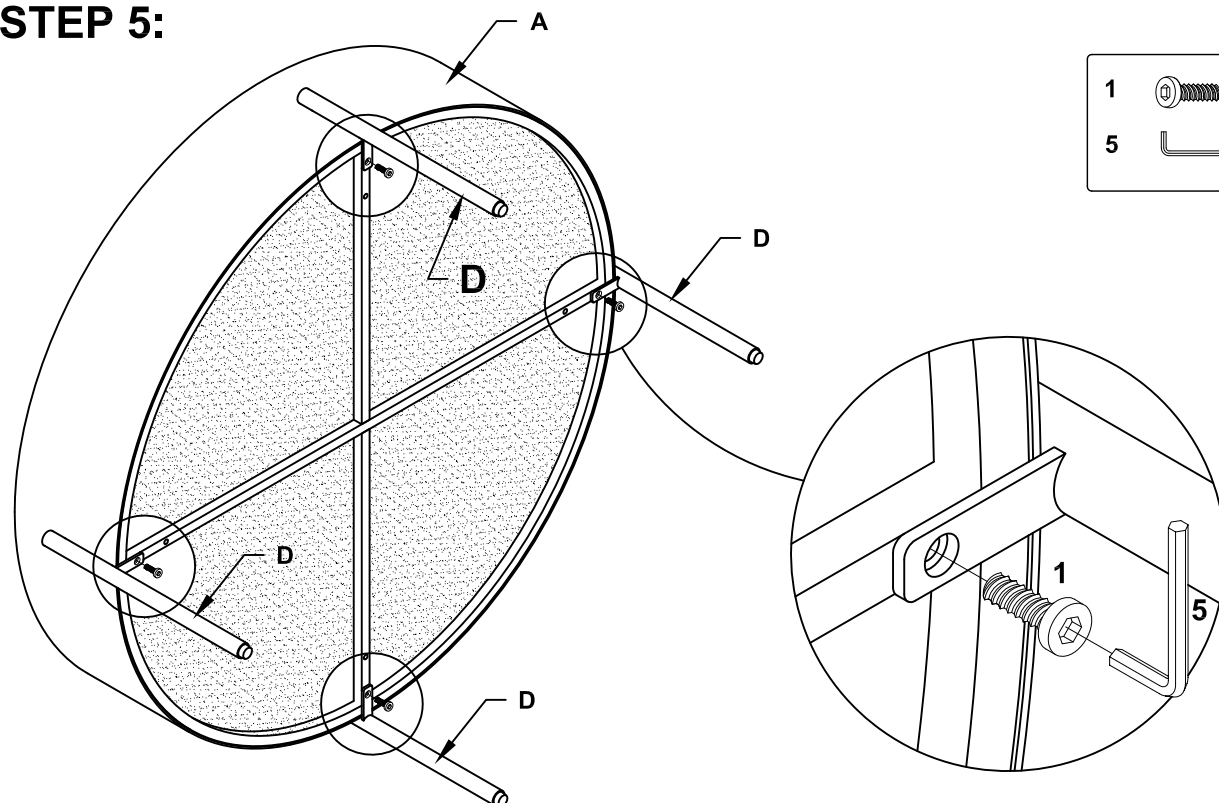

 STEP 6:

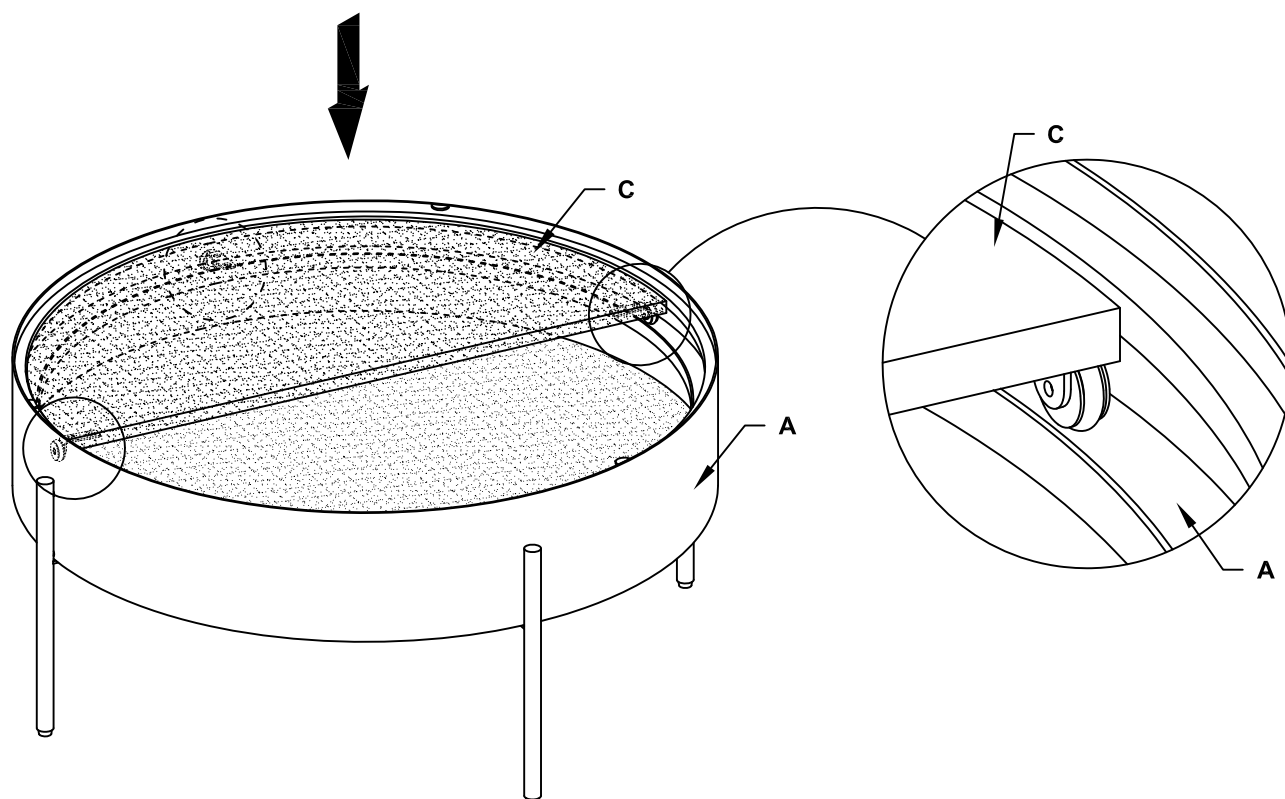


ITEM: 707898


ASSEMBLY INSTRUCTIONS

STEP 7:

 COASTER
FINE FURNITURE

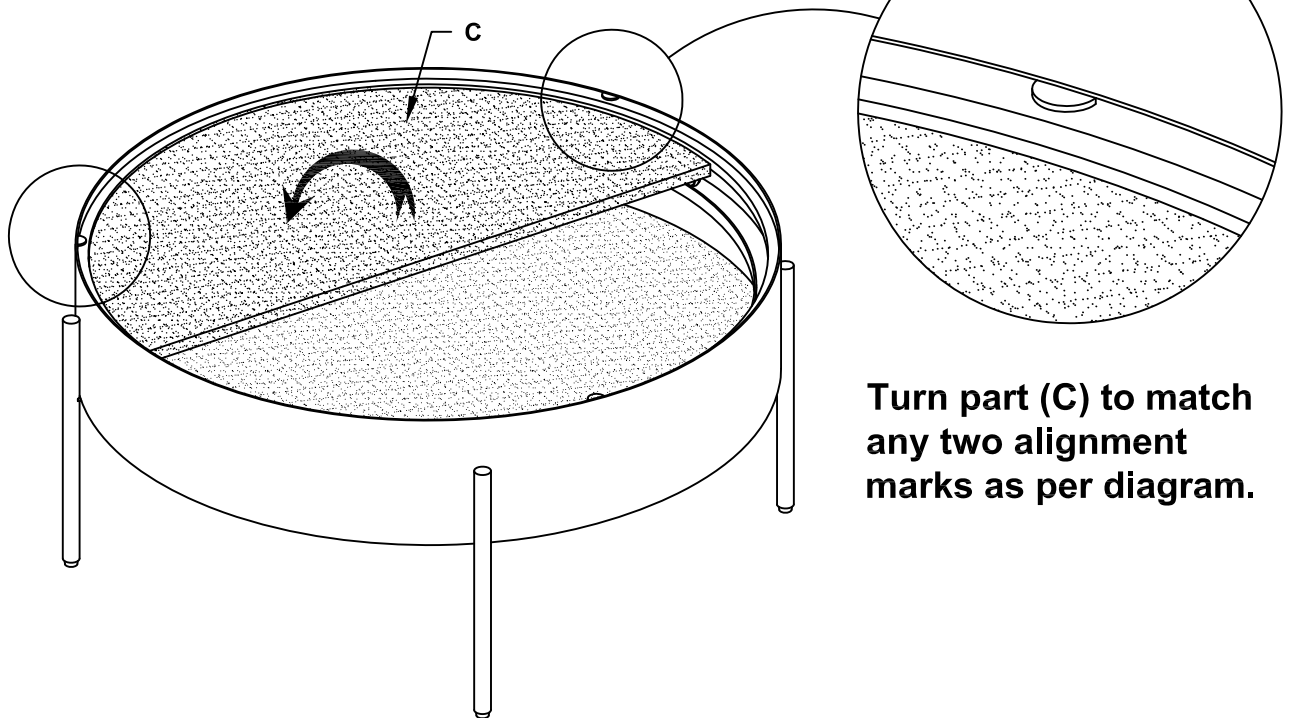

 
STEP 8:

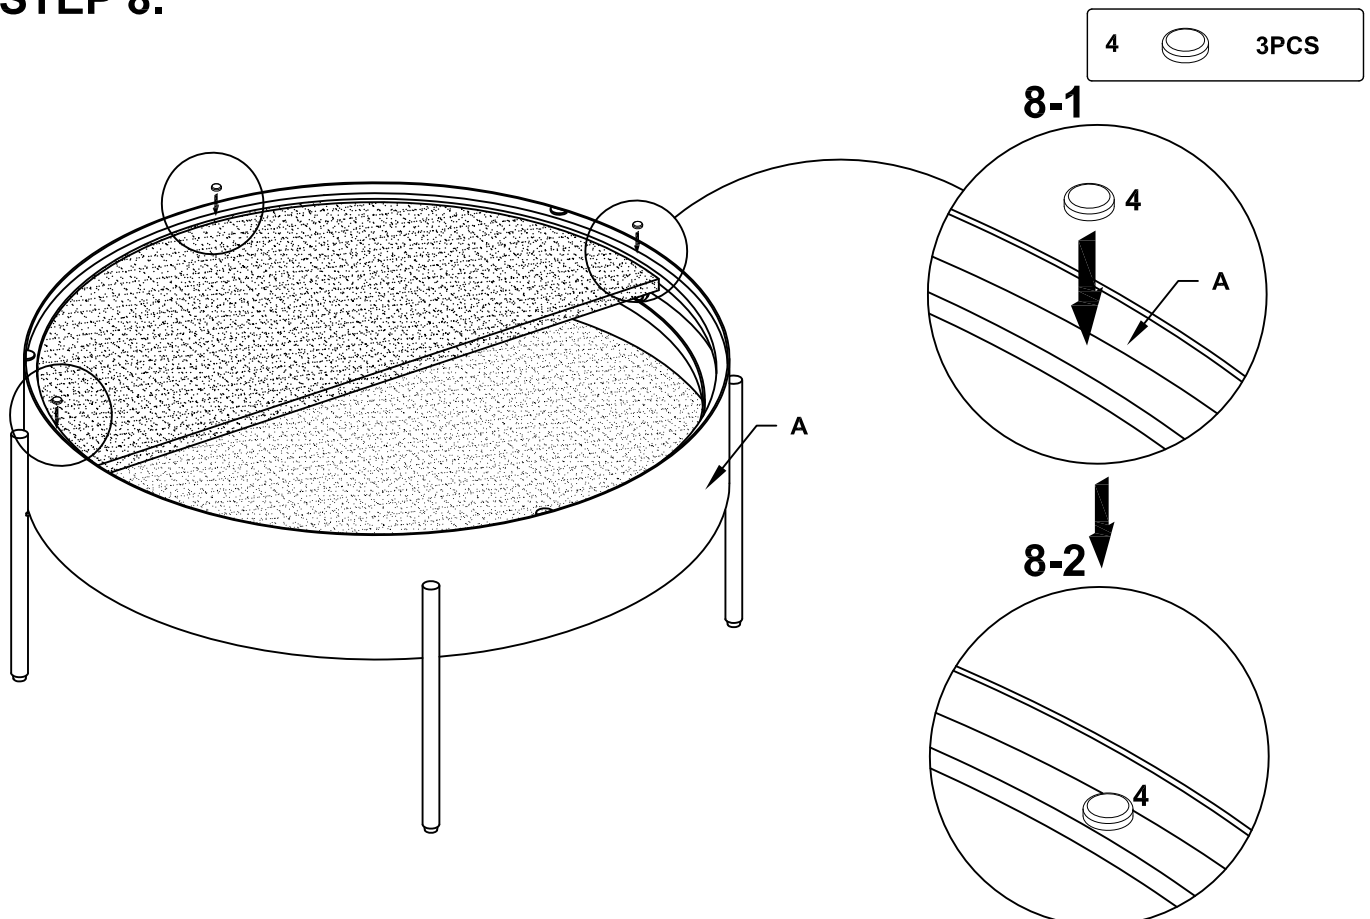


ITEM:707898

ASSEMBLY INSTRUCTIONS

 STEP 9:

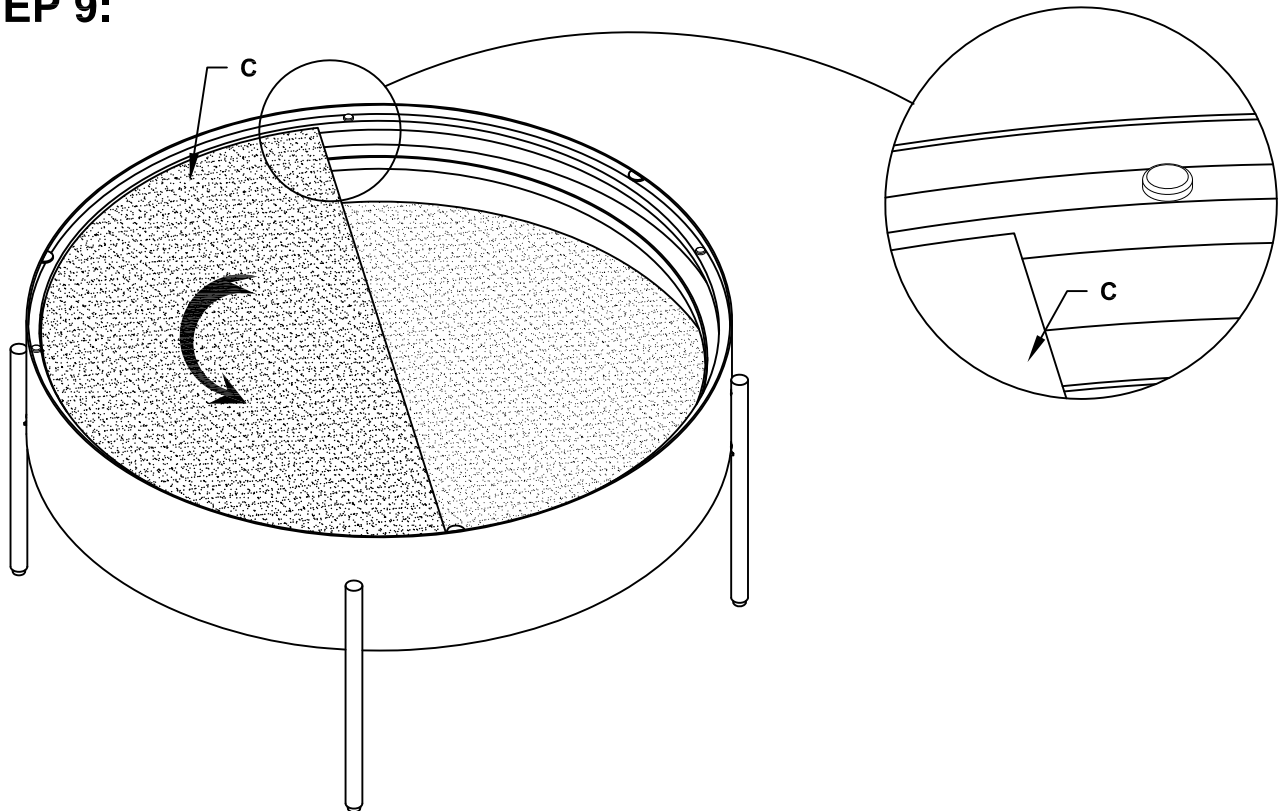

 
STEP 10:

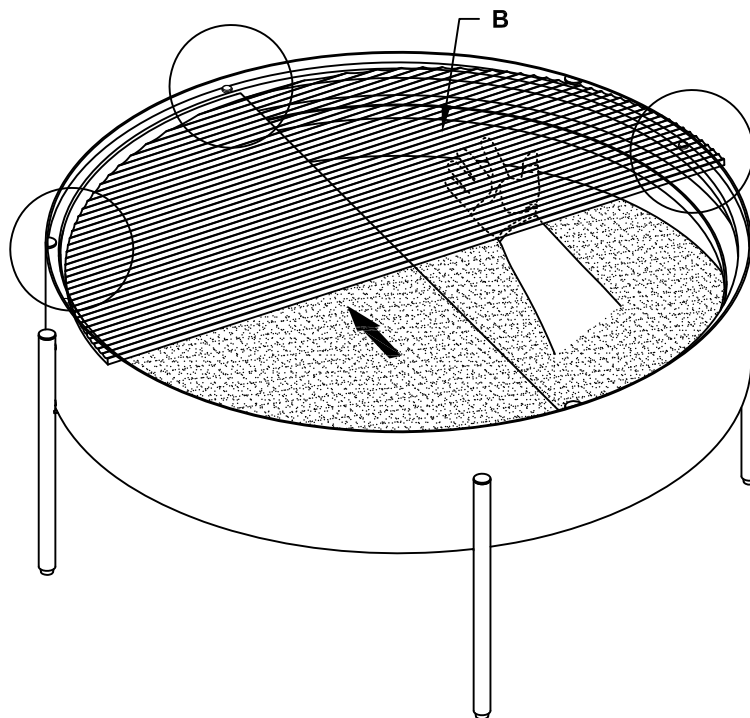


ITEM:707898

ASSEMBLY INSTRUCTIONS

 
STEP 11:

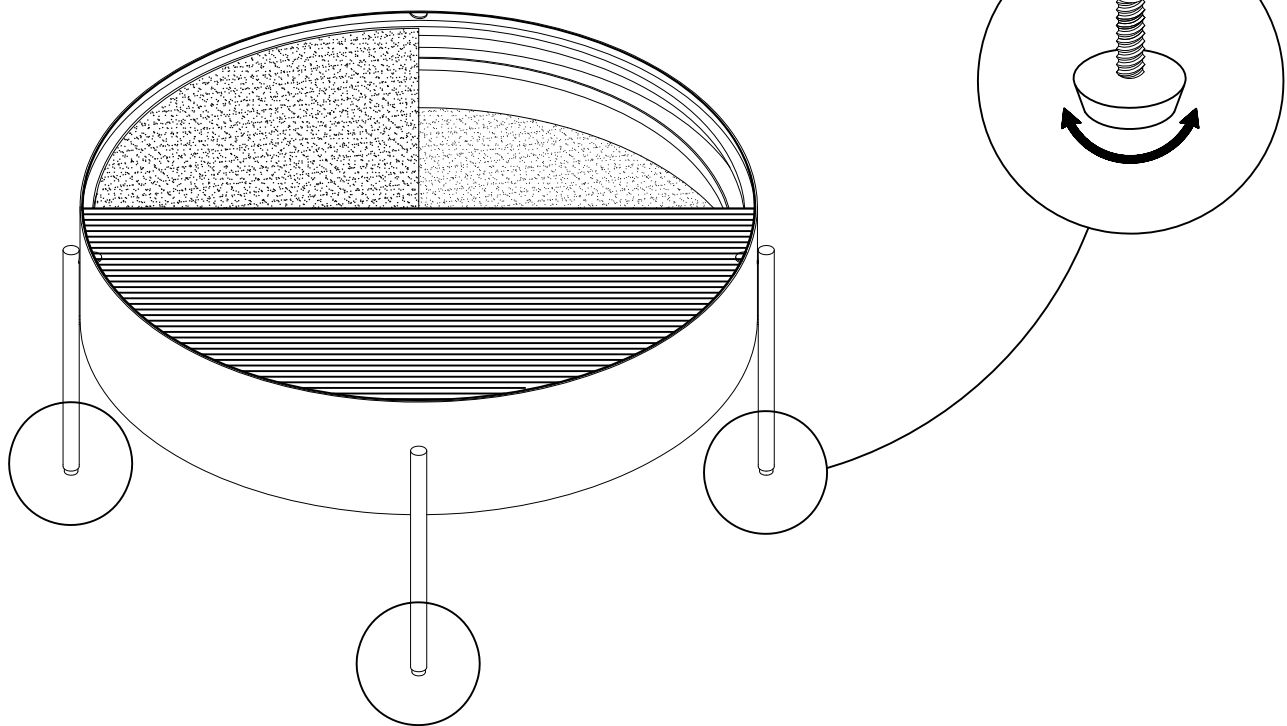

 STEP 12:

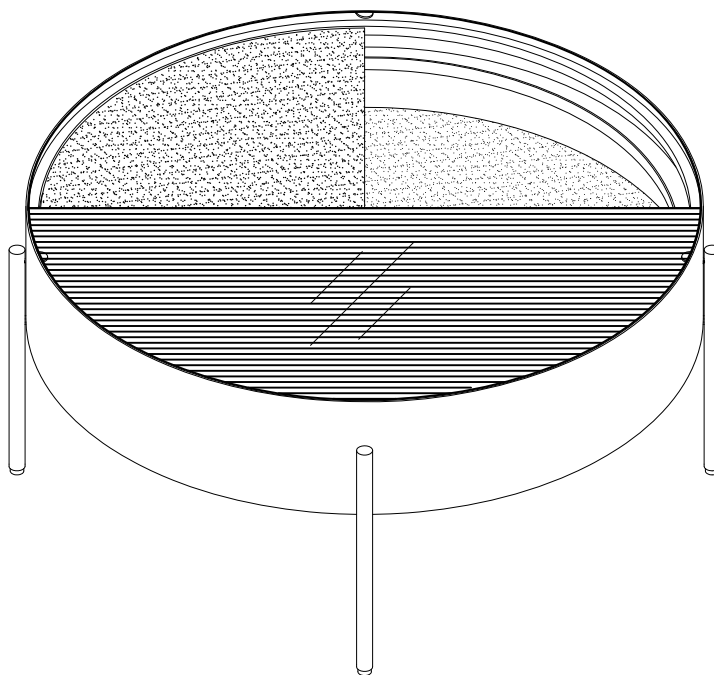

ITEM:707898

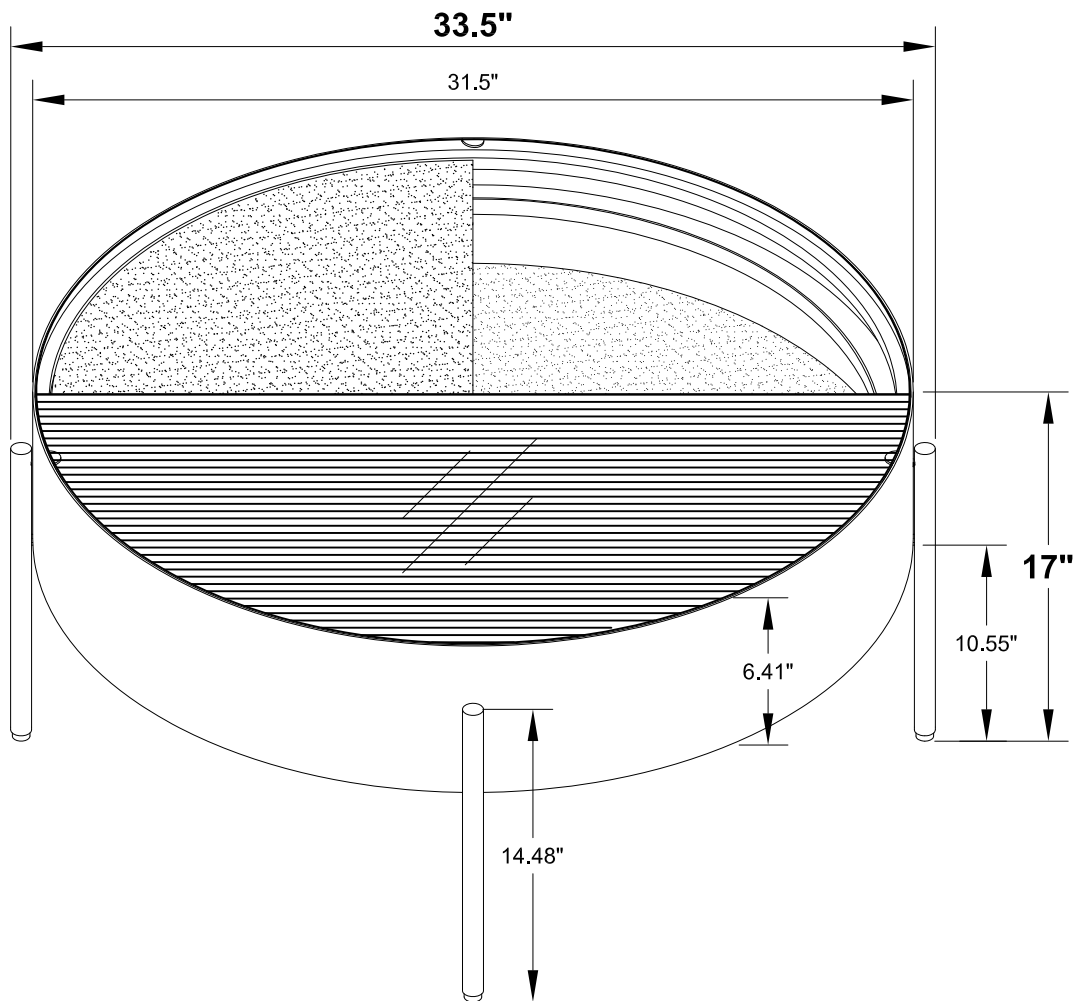 

Note : Dimension tolerance $\pm 5\%$