


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

ITEM: 710338

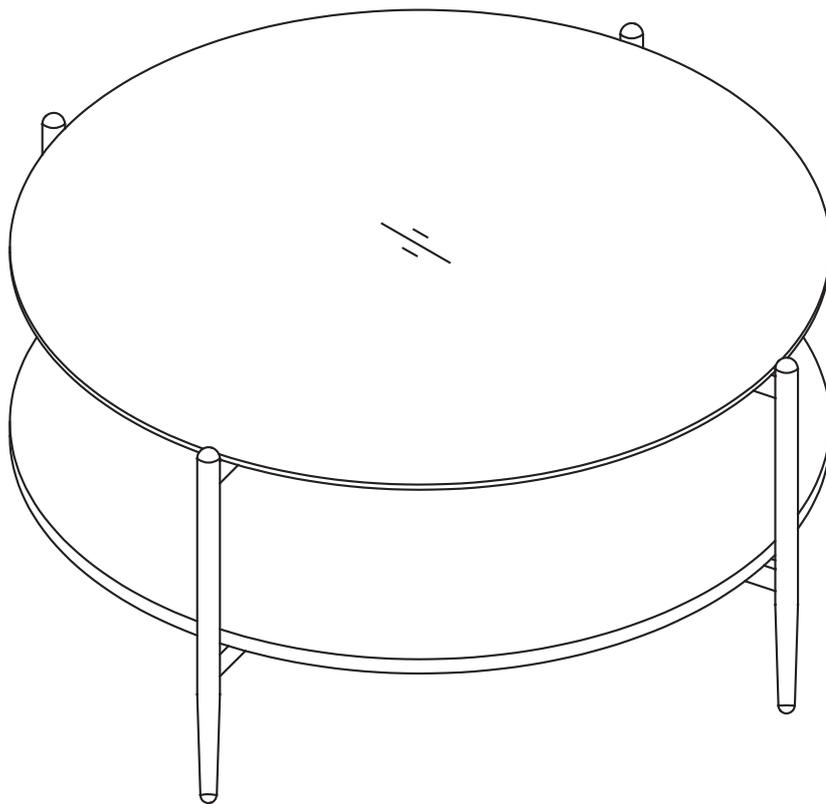

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

A GLASS		1PC	E LOWER TOP CROSSBAR		1PC
B MARBLE		1PC	F UPPER BOTTOM CROSSBAR		1PC
C LEG		4PCS	G LOWER BOTTOM CROSSBAR		1PC
D UPPER TOP CROSSBAR		1PC			


HARDWARE IDENTIFICATION

Z	HARDWARE PACK		
1	BOLT M6×25MM-RBW		2 PCS
2	BOLT M6×12MM-RBW		16 PCS
3	BOLT M6×35MM-RBW		4 PCS
4	SUCTION CUP Ø20MM		4 PCS
5	ALLEN WRENCH M4-SR		1 PC


ITEM: 710338
ASSEMBLY INSTRUCTIONS
STEP 1

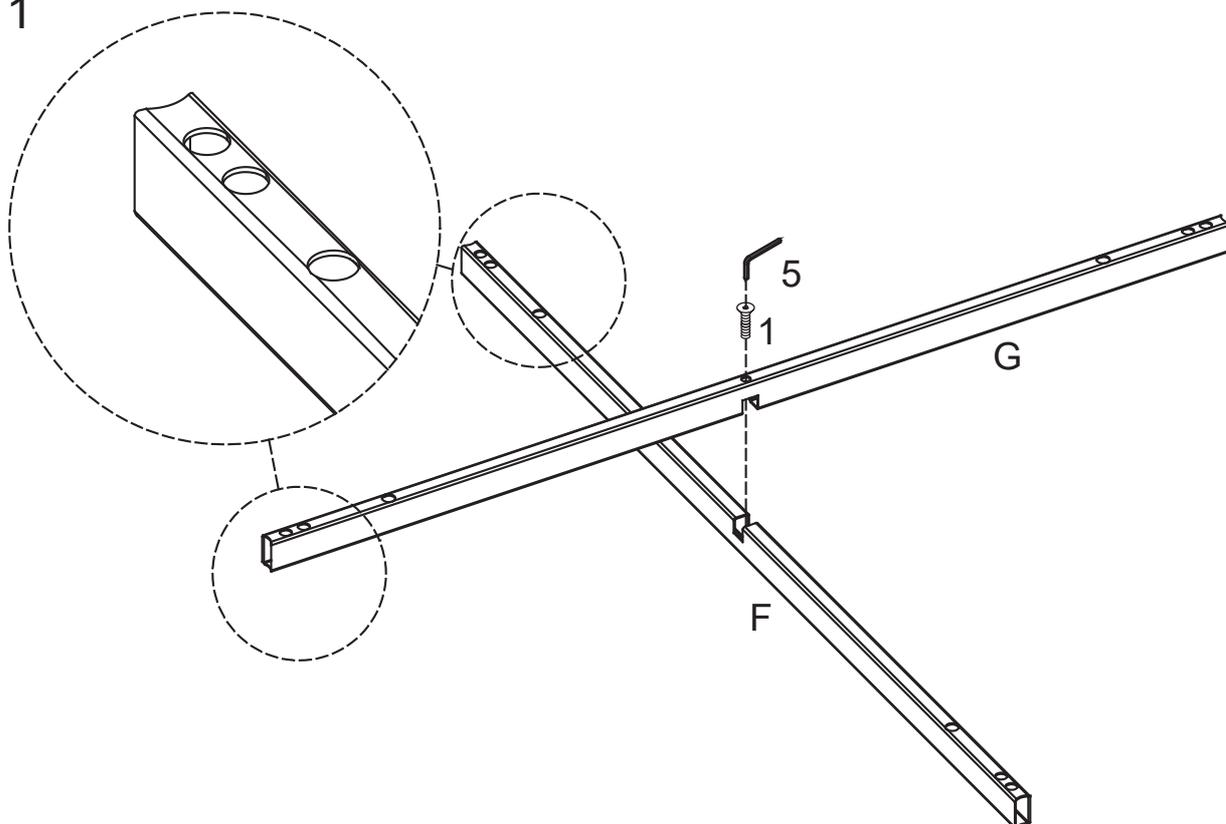


STEP 2

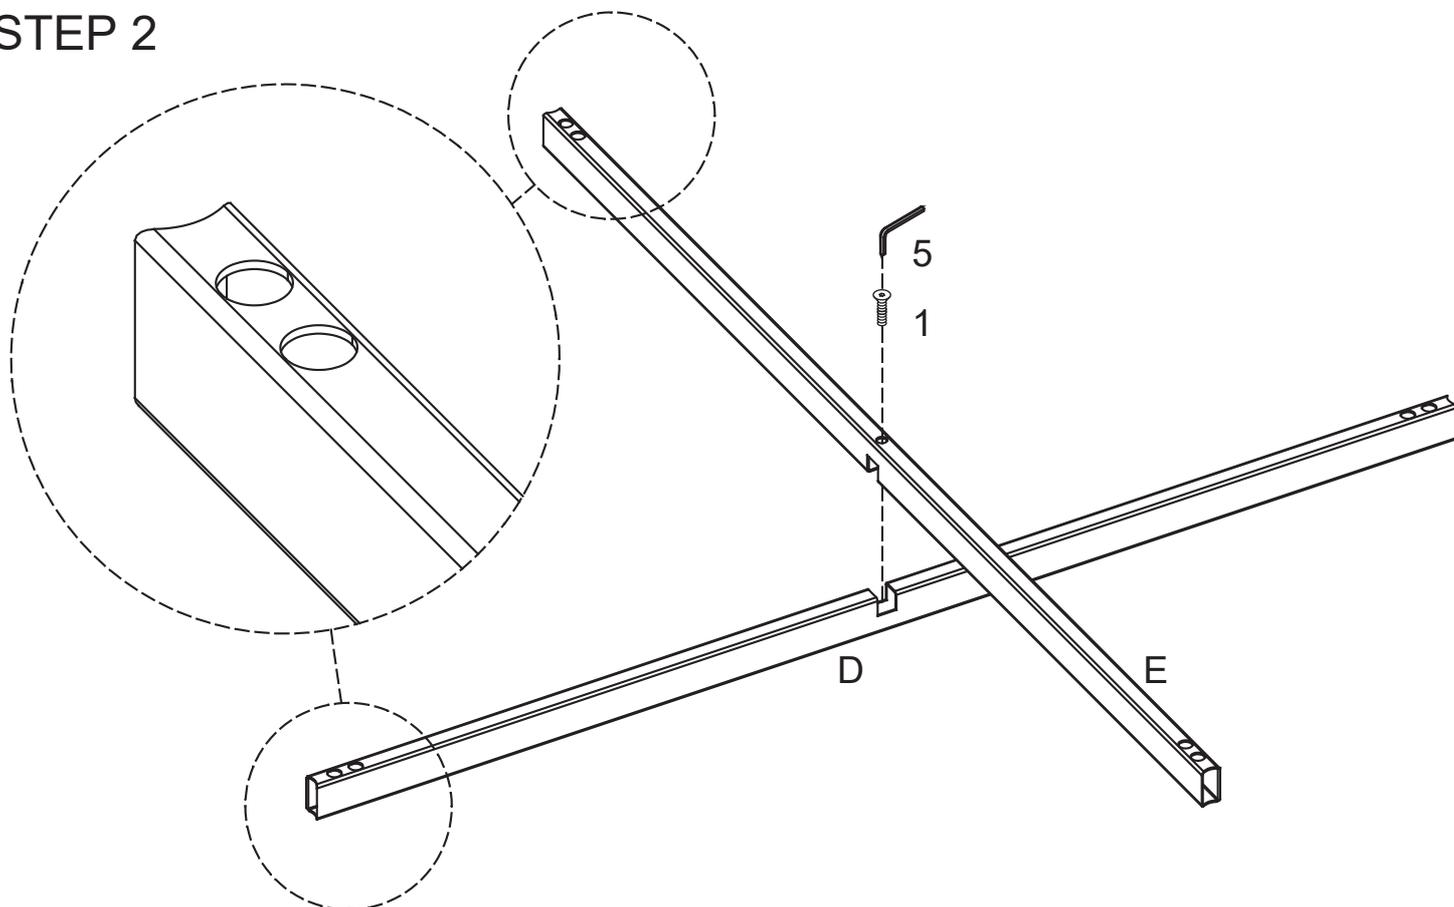


ITEM: 710338
ASSEMBLY INSTRUCTIONS
STEP 3

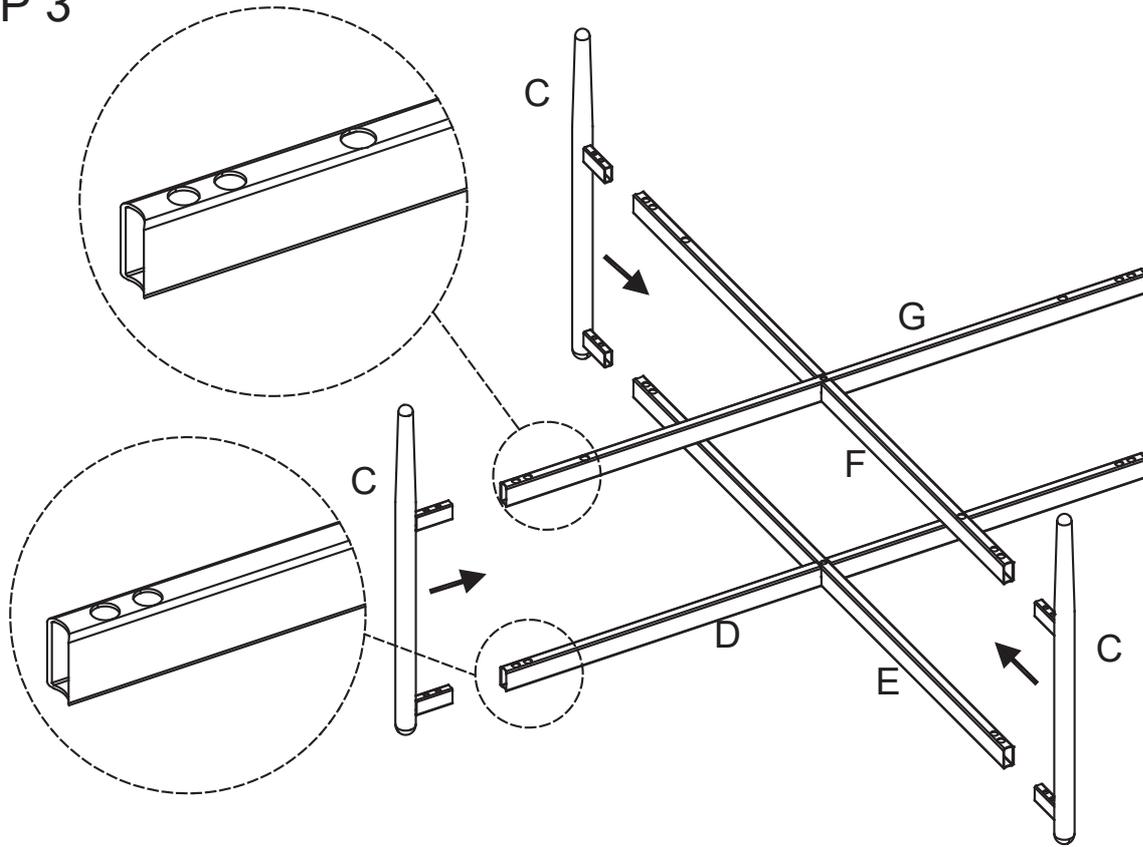


STEP 4

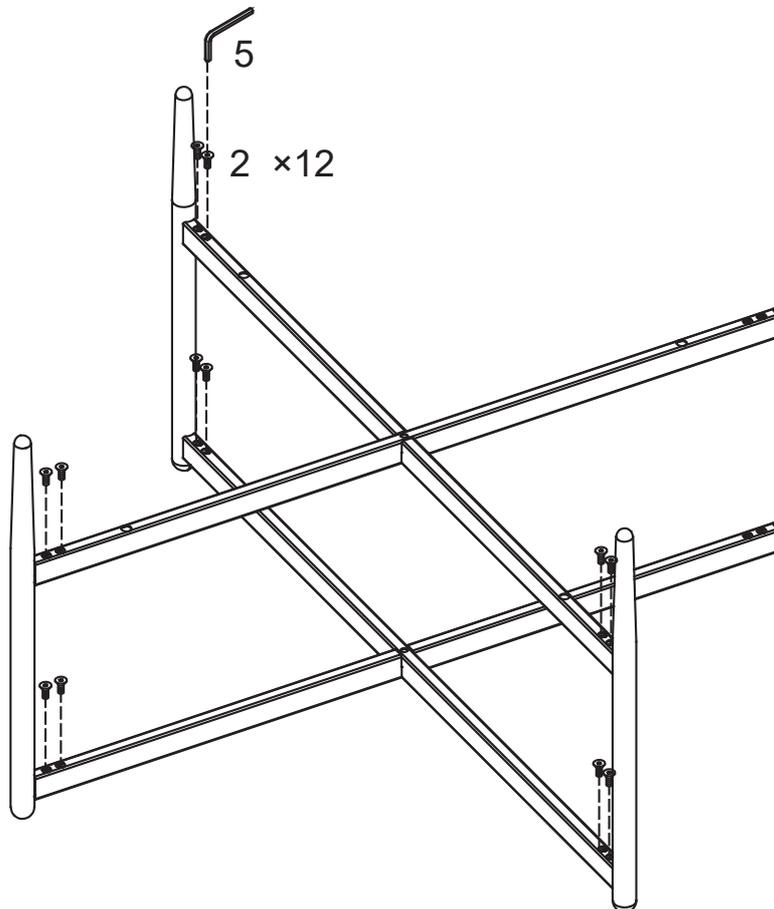


ITEM: 710338
ASSEMBLY INSTRUCTIONS
STEP 5

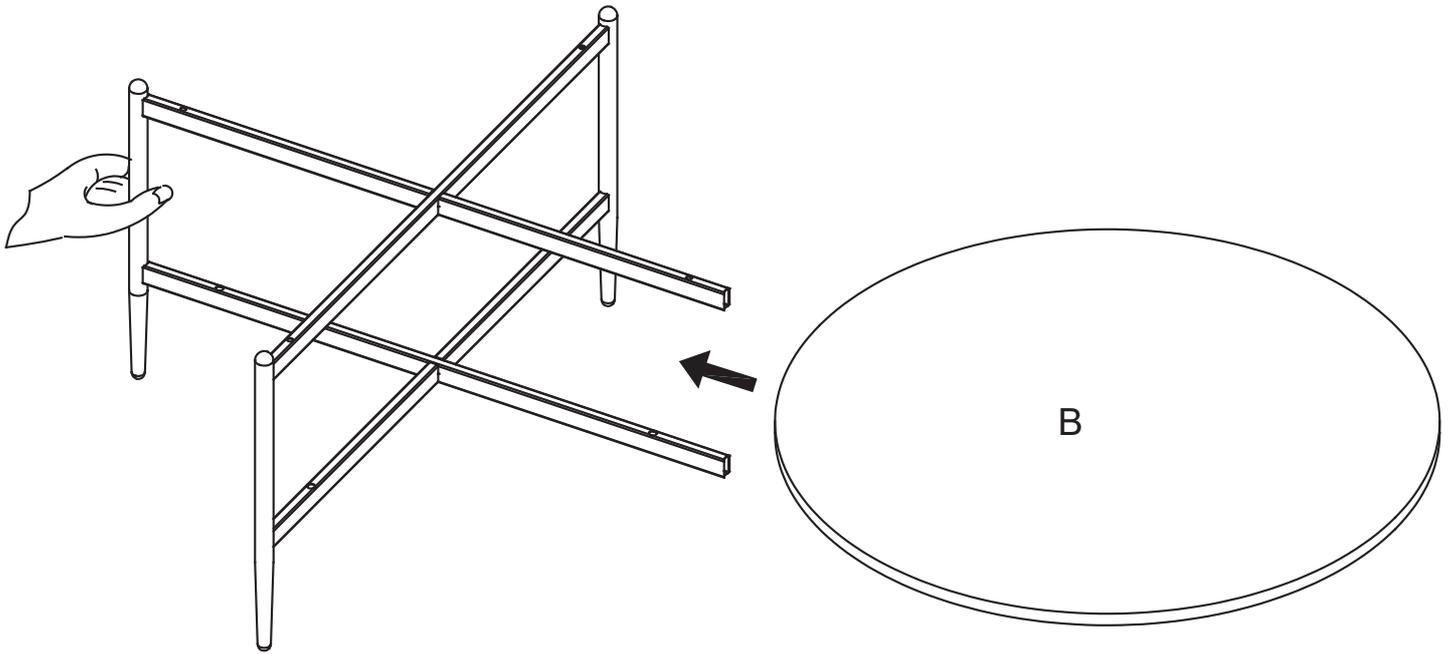


STEP 6

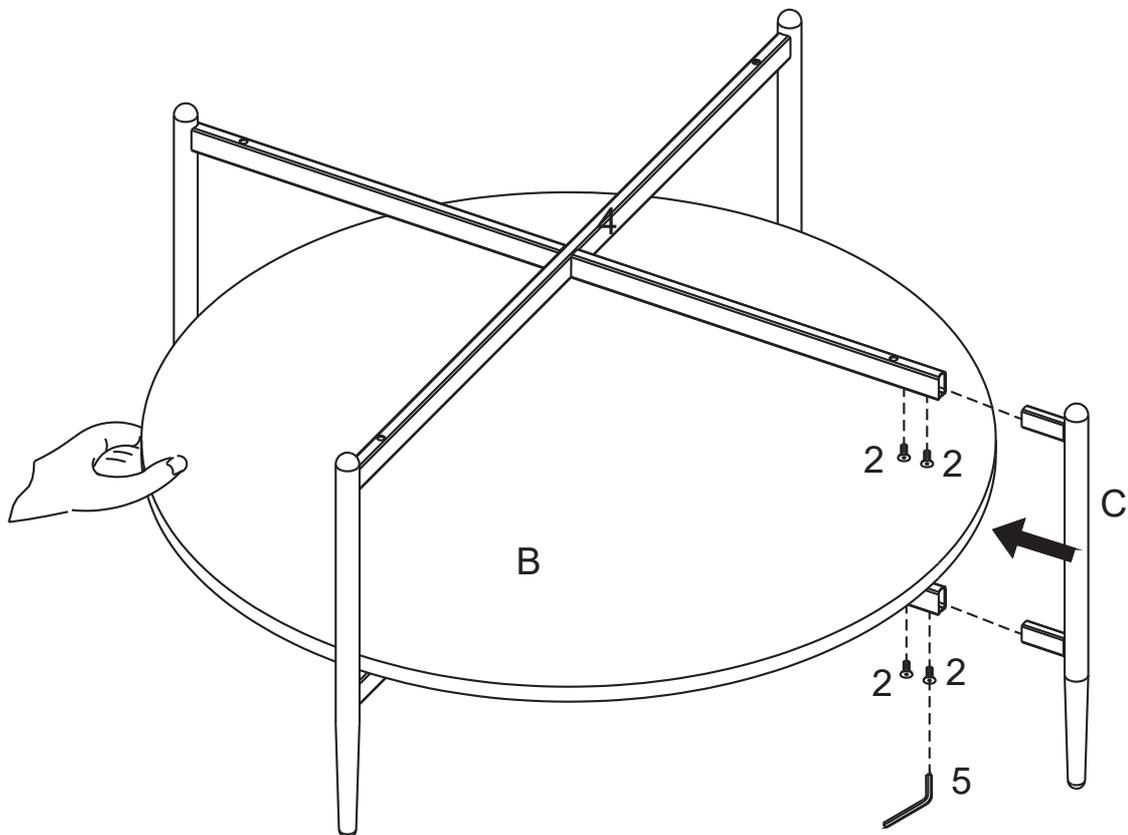


ITEM: 710338
ASSEMBLY INSTRUCTIONS
STEP 7

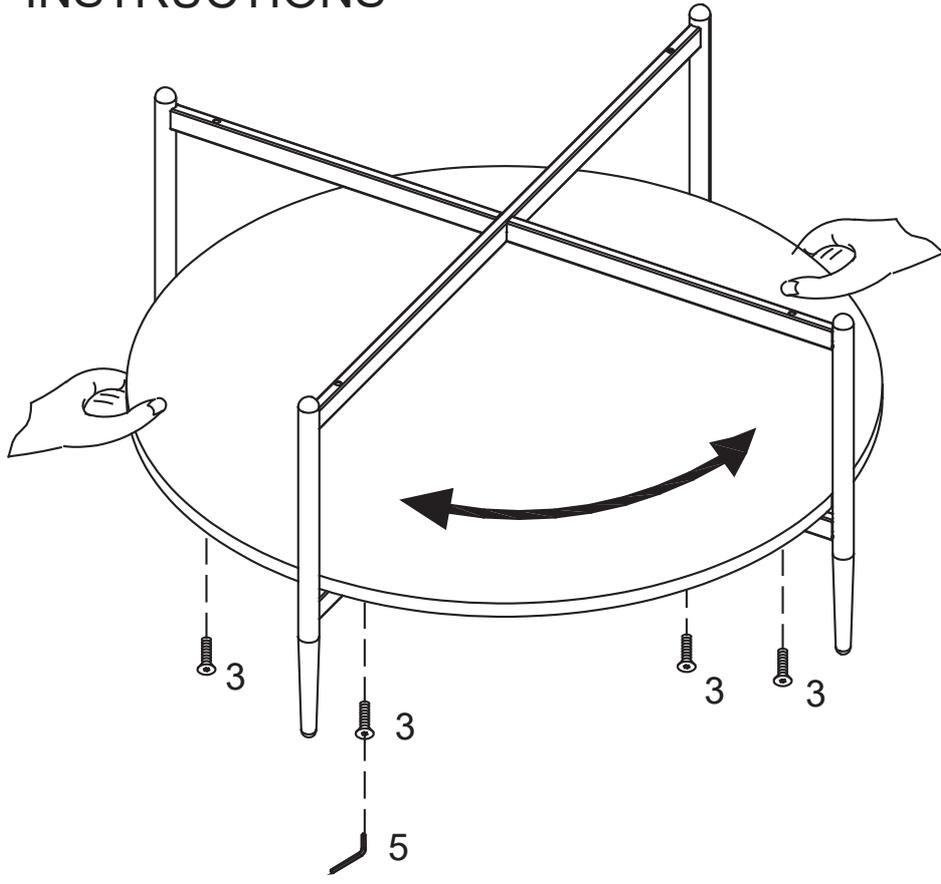

STEP 8

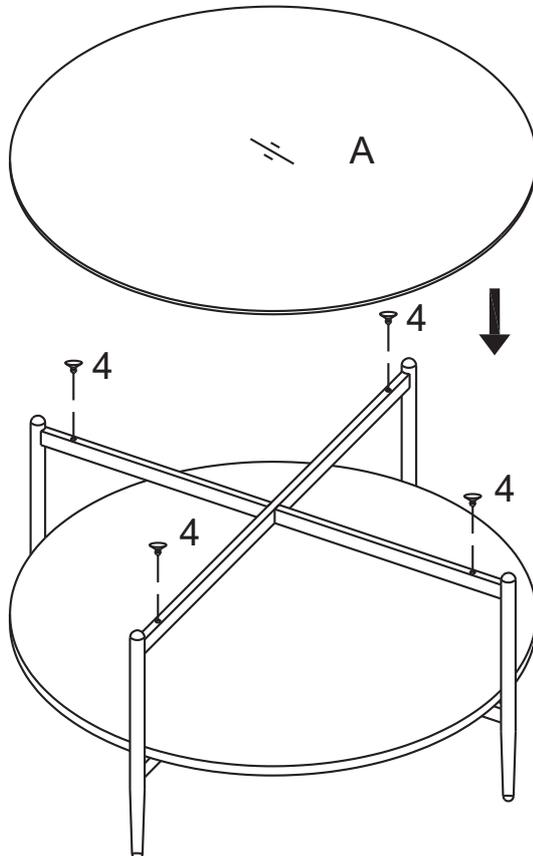

ITEM: 710338
ASSEMBLY INSTRUCTIONS

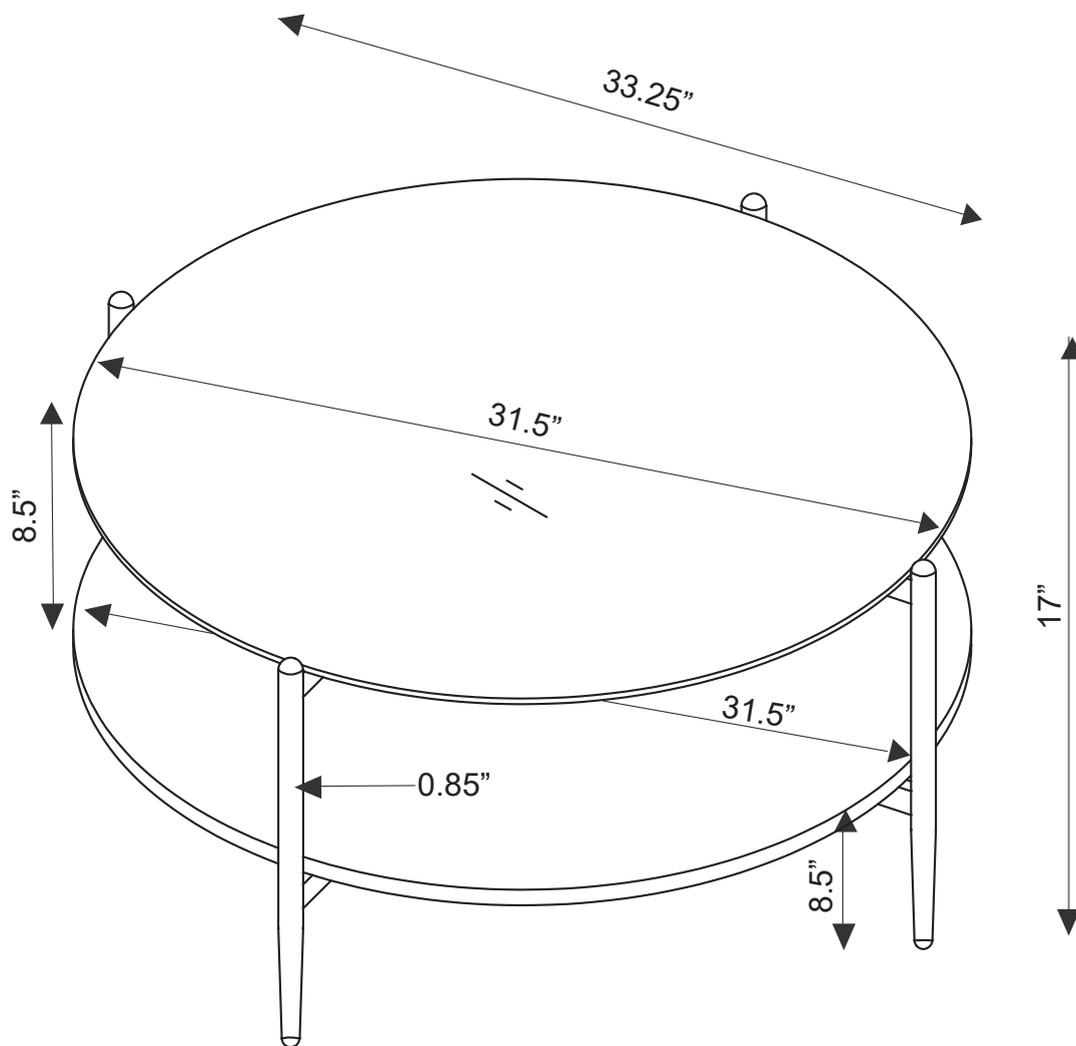

Note :Dimension tolerance $\pm 5\%$

