



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

711007
END TABLE

REVISION 0 : 08/19/2026

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM: 711007



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 25 MINUTES

PARTS IDENTIFICATION

A


TOP

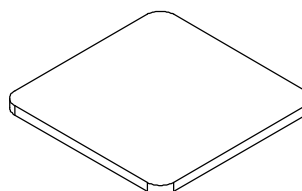

1PC

B


LEG FRAME 1

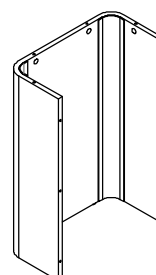

1PC

C

LEG FRAME 2

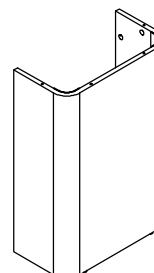

1PC

ITEM: 711007

ASSEMBLY INSTRUCTIONS




Z


HARDWARE IDENTIFICATION

1	CAM-BOLT (38mm)		14PCS	3	ALLEN WRENCH (4mm)		1PC
2	CAM-LOCK ($\phi 15\text{mm}$)		14PCS				

STEP 1

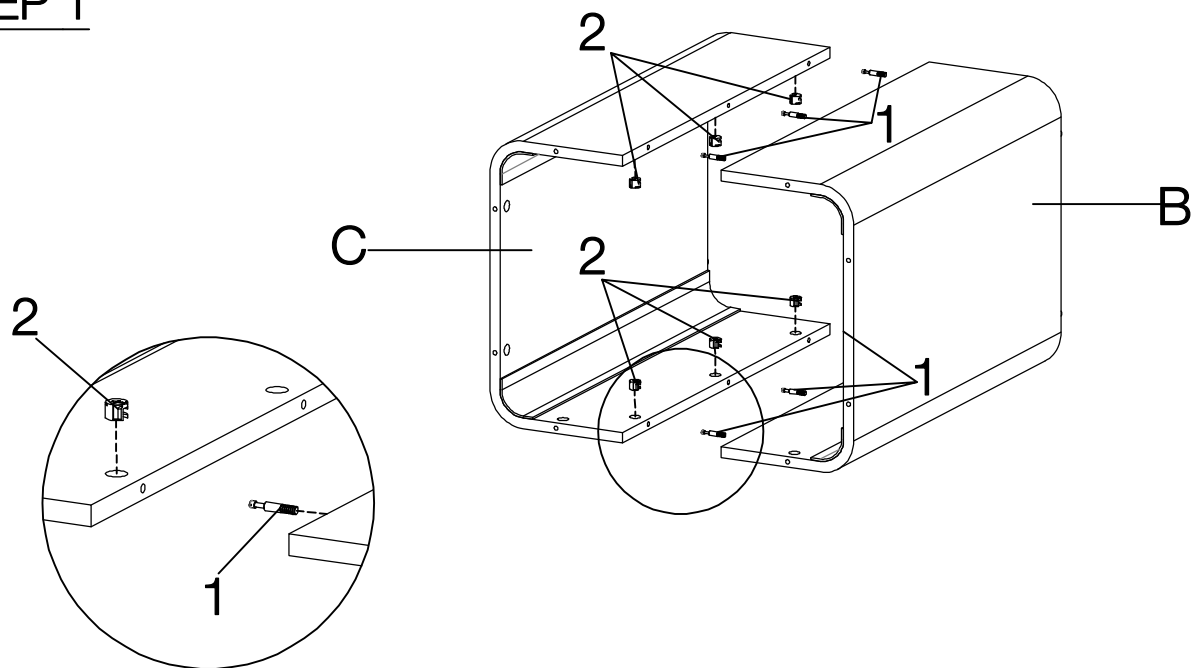


STEP 2

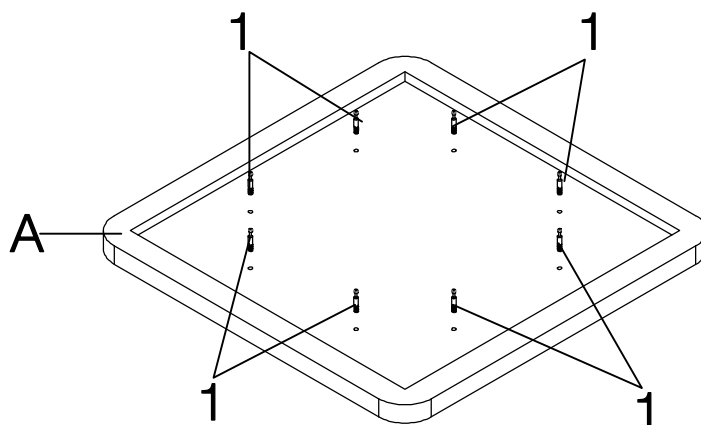

ITEM: 711007


ASSEMBLY INSTRUCTIONS

STEP 3

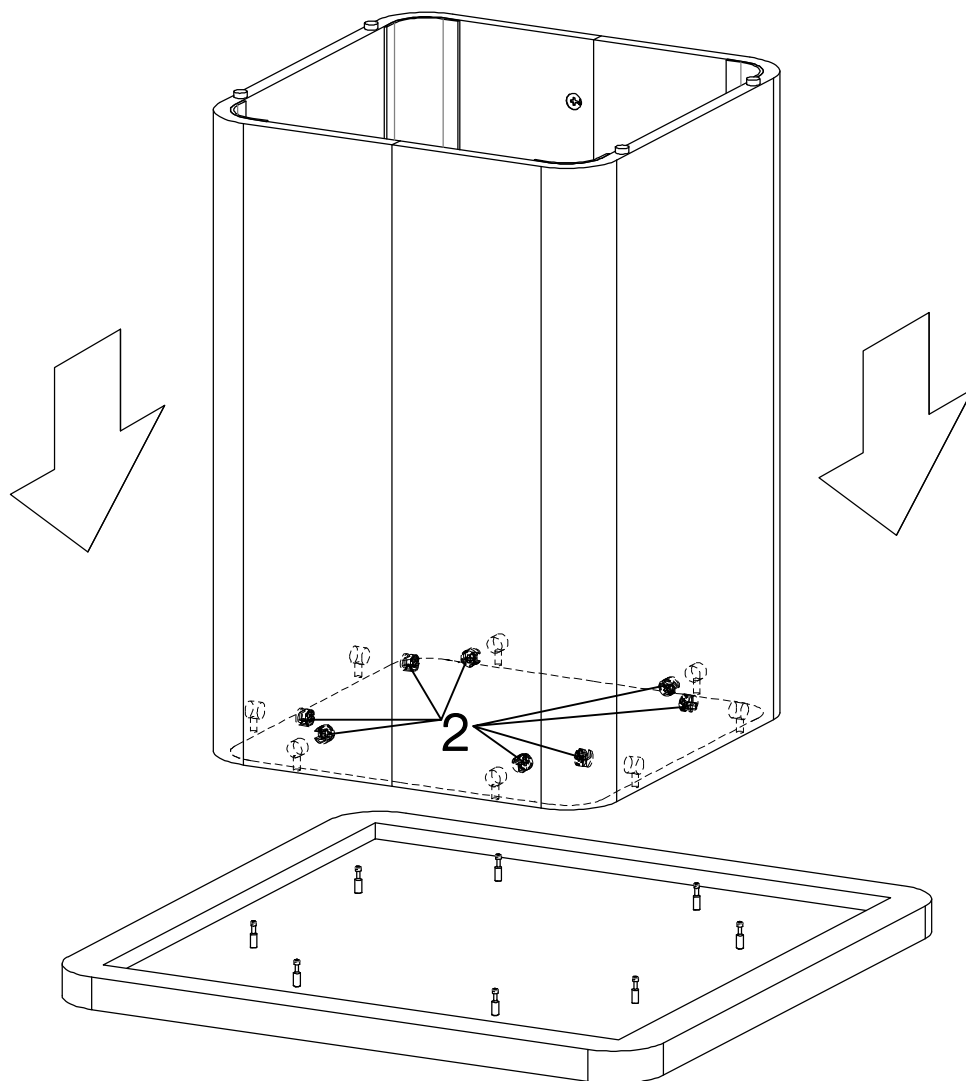


STEP 4

COMPLETE

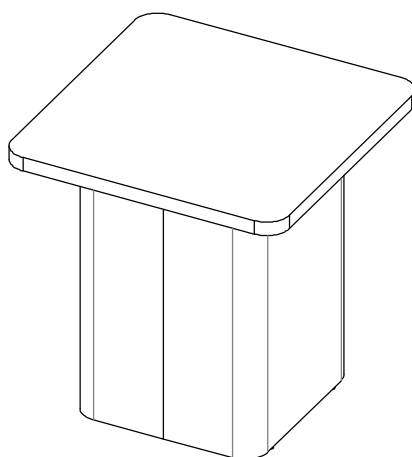

ITEM: 711007

ASSEMBLY INSTRUCTIONS

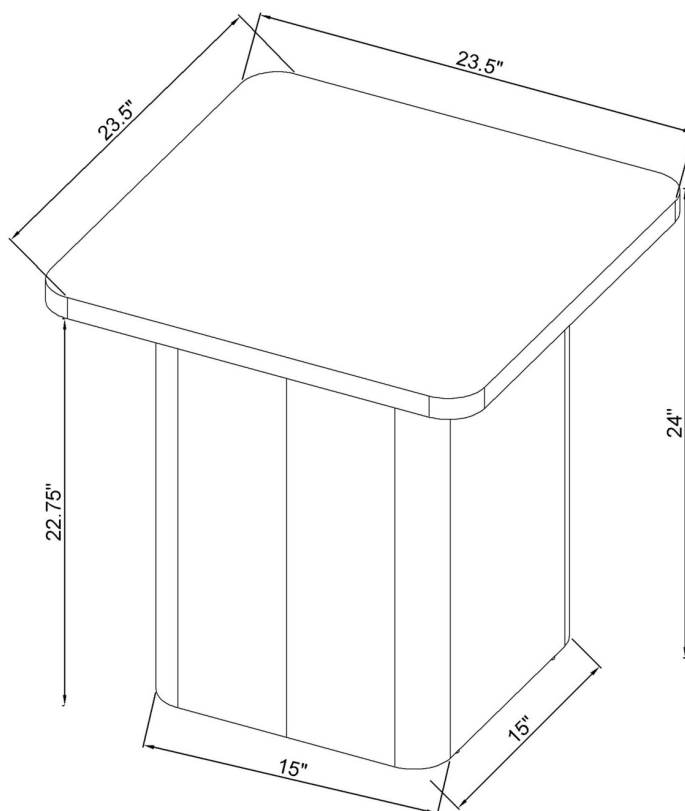

Note : Dimension tolerance $\pm 5\%$