



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

711017
END TABLE

REVISION 0 : 08/19/2026

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM:711017



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

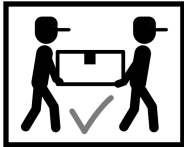


ASSEMBLY TIME 25 MINUTES

PARTS IDENTIFICATION

A

 
TOP PANEL

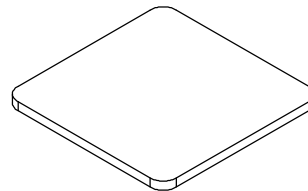

1PC

B

 
SIDE PANEL

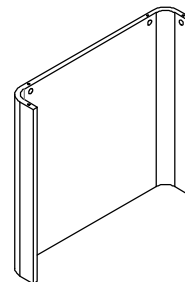

2PCS

C

 BOTTOM PANEL

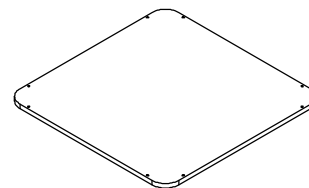

1PC

 
ITEM:711017




ASSEMBLY INSTRUCTIONS

Z

HARDWARE IDENTIFICATION

1	CAM-BOLT (38mm)		8PCS	4	LARGE LEVELER (1/4" x 12mm)		4PCS
2	CAM-LOCK (ϕ 15mm)		8PCS	5	ALLEN WRENCH (4mm)		1PC
3	BOLT (1/4" x 28mm)		8PCS				

 STEP 1

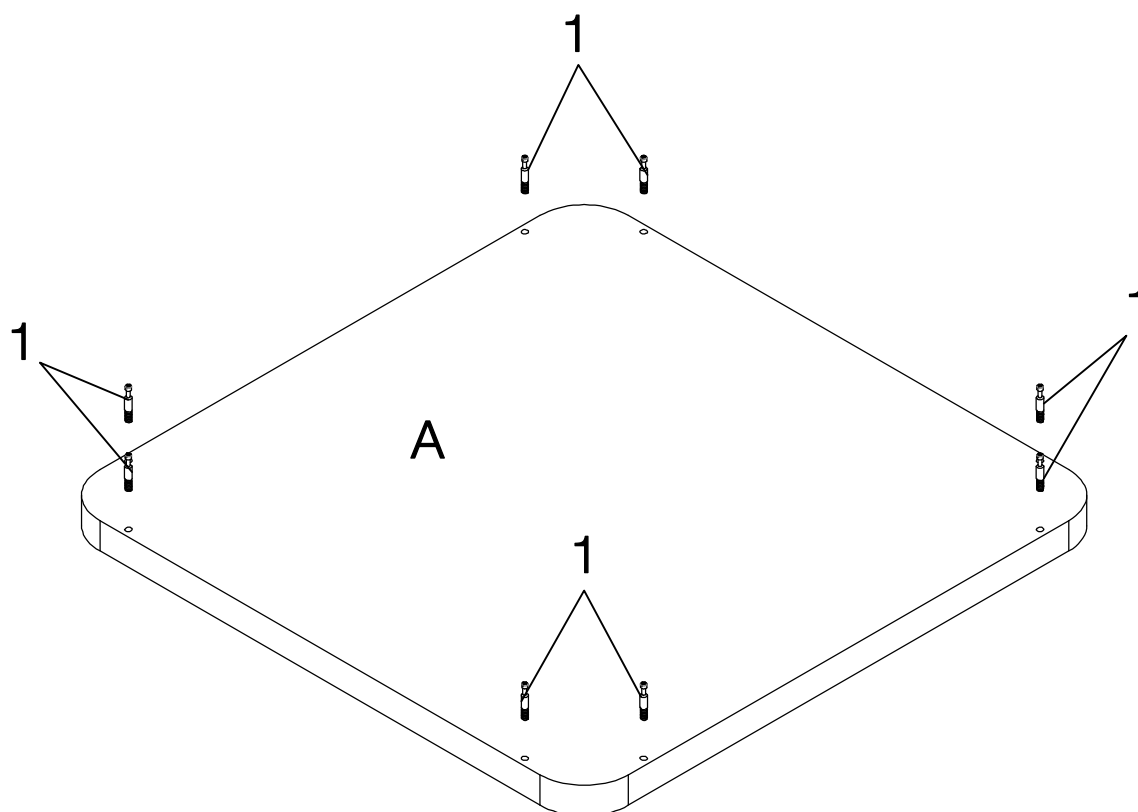


ITEM: 711017




ASSEMBLY INSTRUCTIONS

 STEP 2

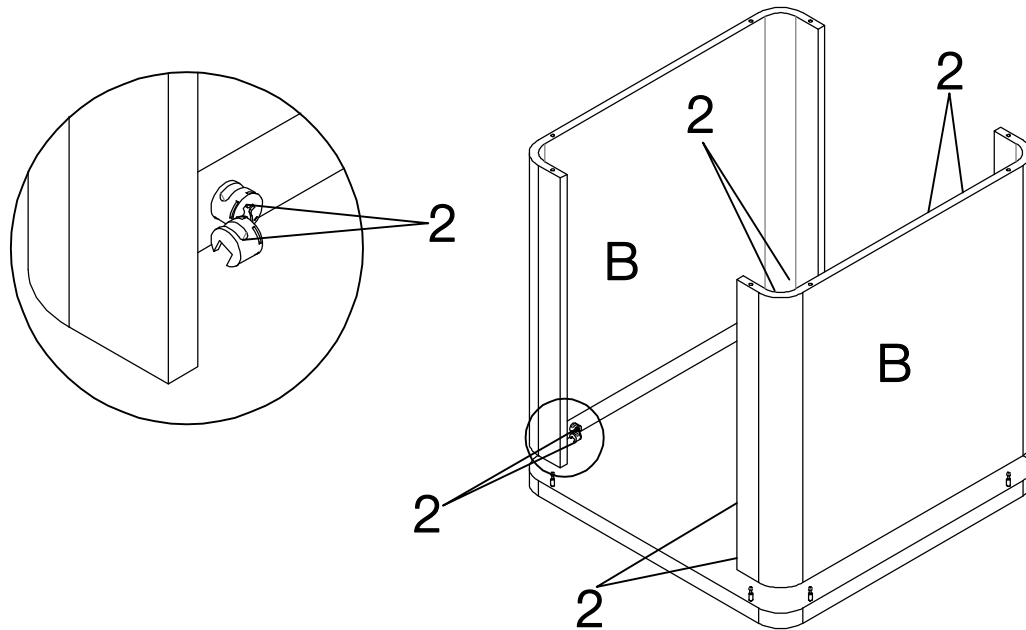

 STEP 3

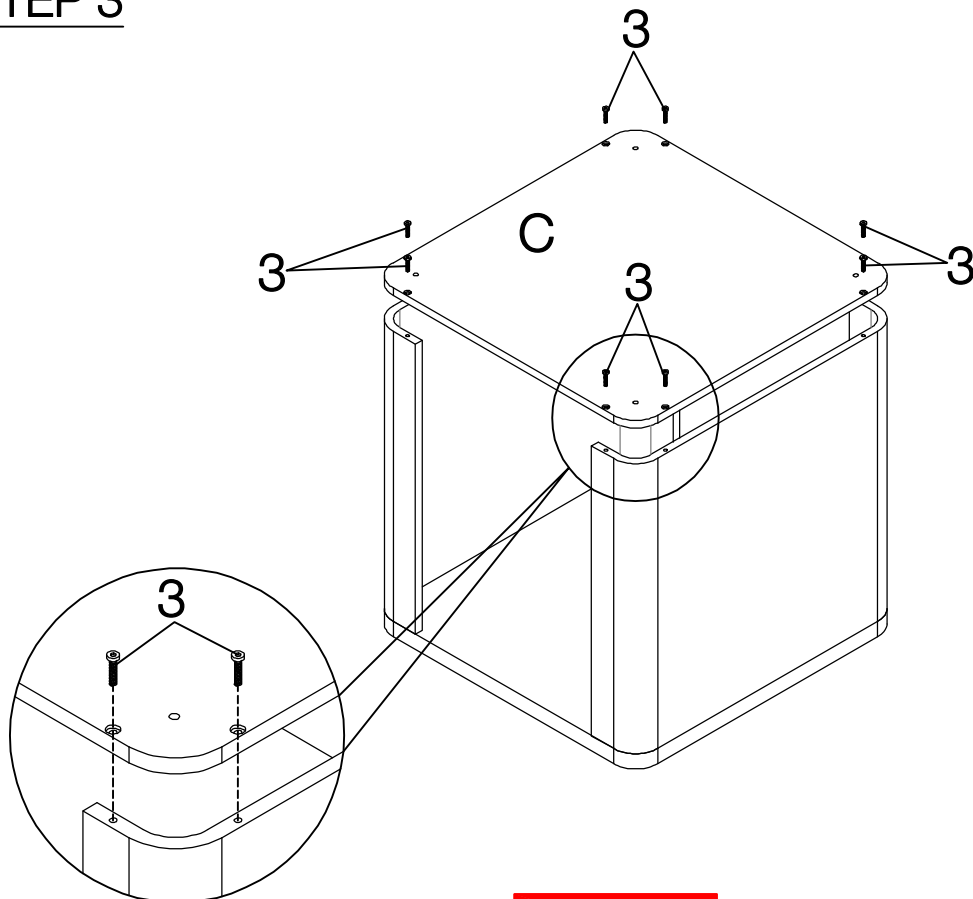


ITEM: 711017





ASSEMBLY INSTRUCTIONS

 STEP 4

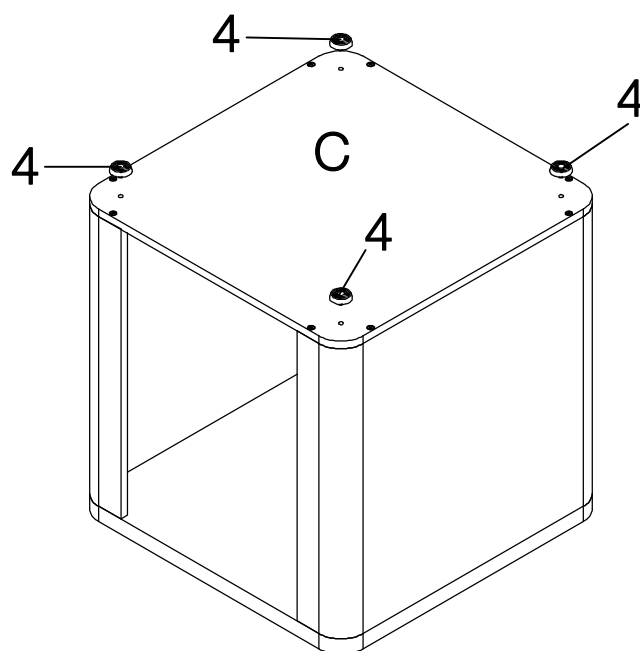


STEP 5

  COMPLETE

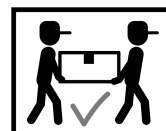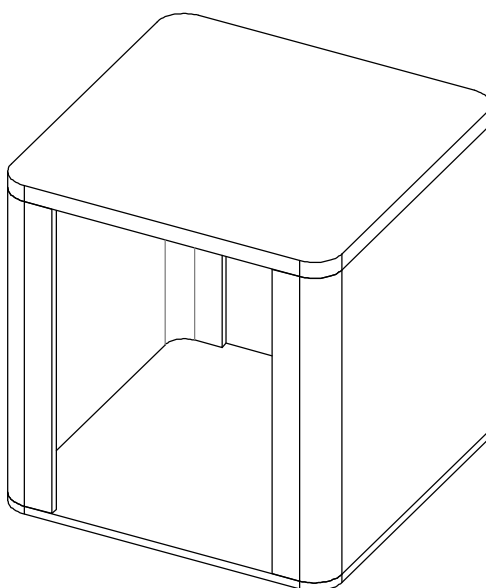

ITEM:711017

 ASSEMBLY INSTRUCTIONS

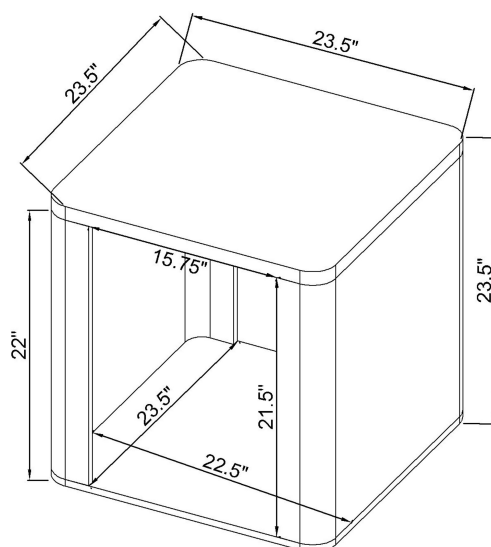

Note : Dimension tolerance $\pm 5\%$