

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

720457 <u>3pc Occasional Set</u>

REVISION 0: 05/07/2019 REVISION 1: 02/15/2022 REVISION2: 11/08/2022

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

Α	Coffee table top	1 PC
В	Coffee table long leg	2 PCS
С	Coffee table short leg	2 PCS
D	End table tops	2 PCS
E	End table long leg	4 PCS
F	End table short leg	4 PCS



HARDWARE IDENTIFICATION

DESCRIPTION FIGURE Q'TY


1 Bolt (M6x32MM) 24 PCS

3 Allen wrench 1 PC




STEP 1



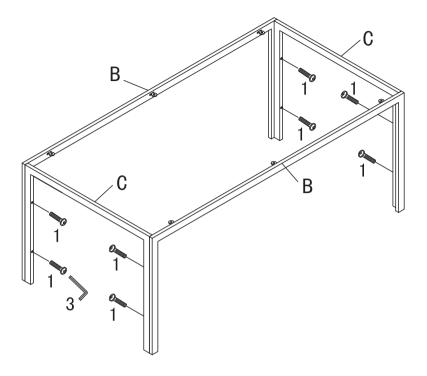


STEP 2

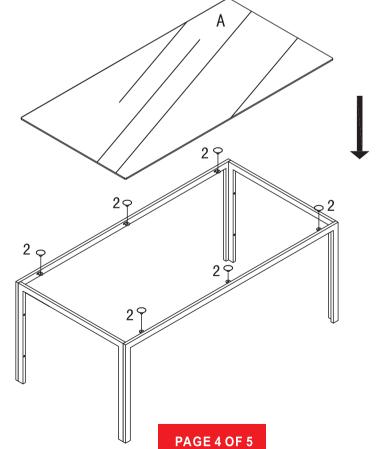


COASTERFURNITURE.COM

COASTER

ASSEMBLY INSTRUCTIONS STEP 1

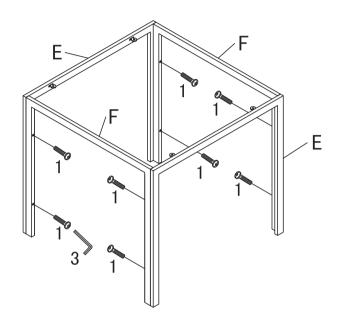


STEP 2

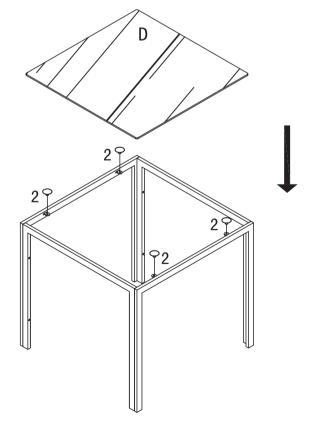

PAGE 5 OF 5

COASTERFURNITURE.COM



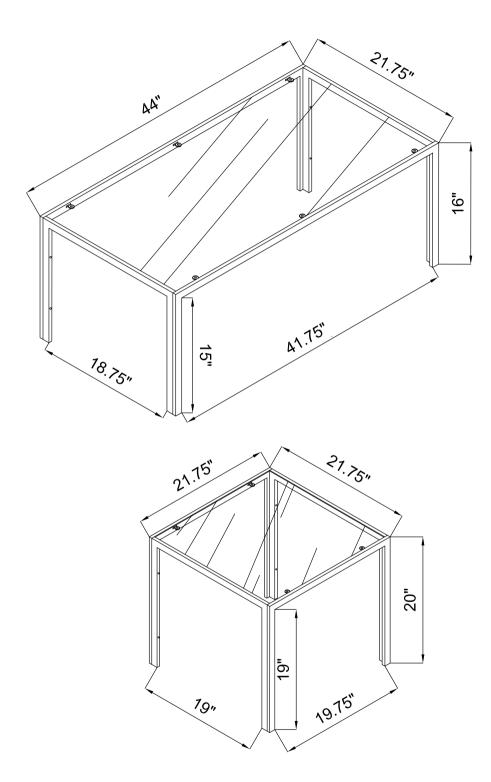

Note: Dimension tolerance ±5%