 


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

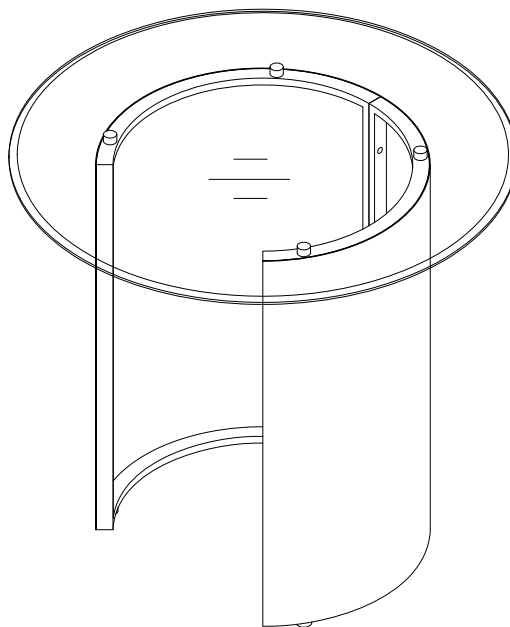

Fine Furniture for every stage of life

721597
End Table

ITEM: **721597**



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

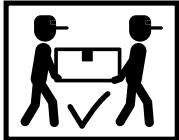


ASSEMBLY TIME

15 MINUTE

PARTS IDENTIFICATION

 A LEFT PANEL

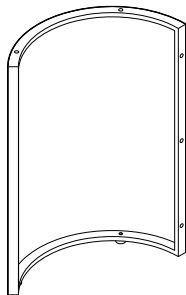


1PC

B RIGHT PANEL



1PC

 C GLASS TOP

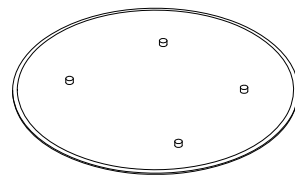

1PC

HARDWARE IDENTIFICATION

1 BOLT
(1/4"x1/2" - BLK)



3PCS

2 BOLT
(1/4"x5/8" - BLK)



4PCS

3 WASHER
(ϕ 16mm - BLK)



4PCS

4 NUT
(1/4" - BLK)



3PCS

5 ALLEN KEY
(4x22X60mm - BLK)



2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **721597**


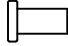

ASSEMBLY INSTRUCTIONS



STEP 1:

Note:



  
Do not fully tighten all bolts until assembly is complete.
This will help all parts to assemble properly.

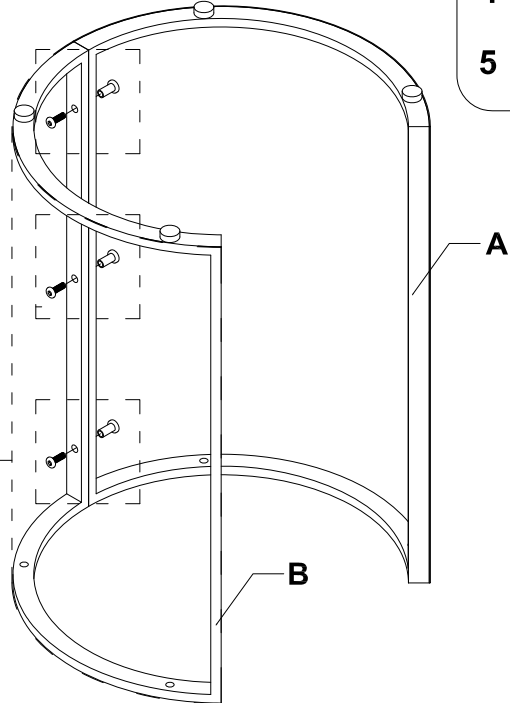
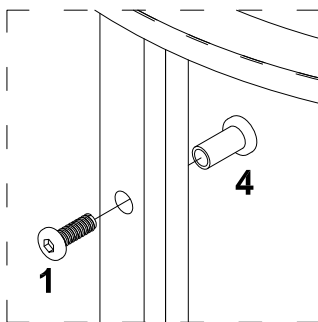


1		3PCS
4		3PCS
5		2PCS




STEP 2:

2		4PCS
3		4PCS
5		1PC

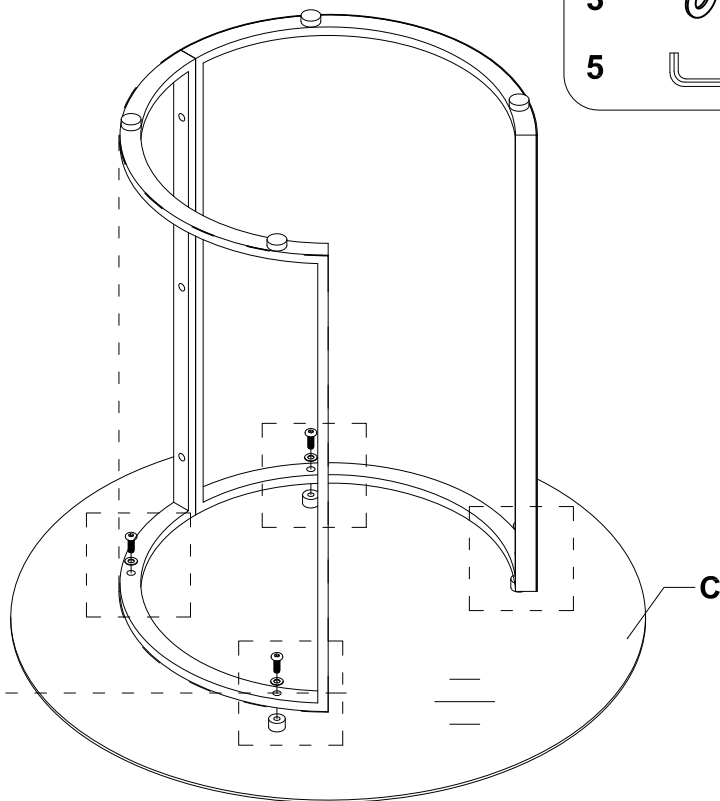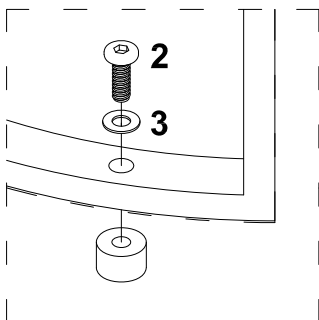  


ITEM: **721597**

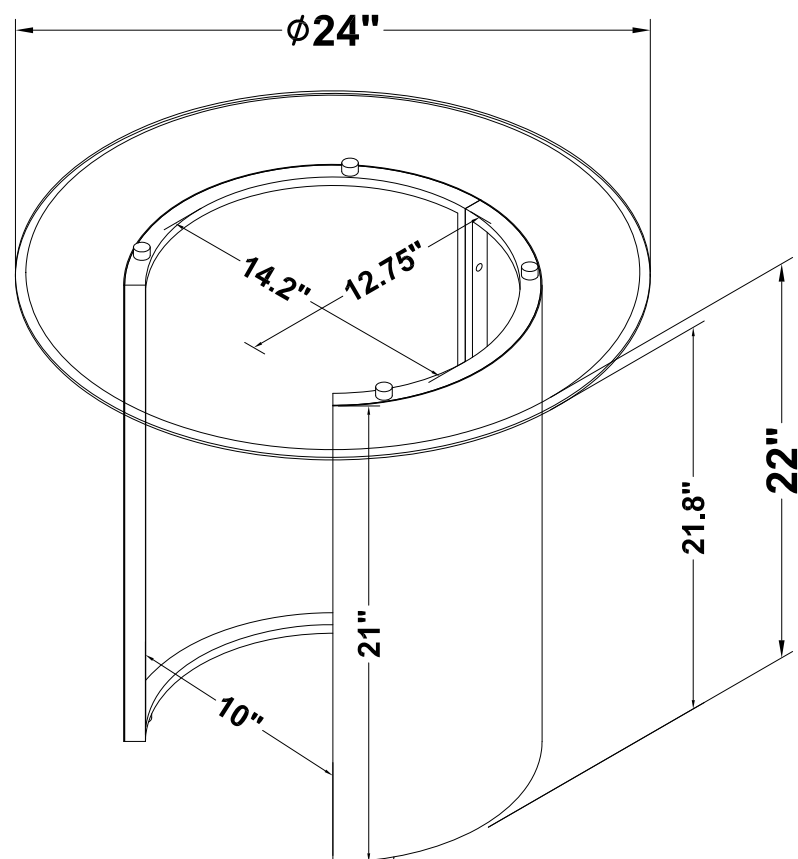 

Note : Dimension tolerance $\pm 5\%$

 ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

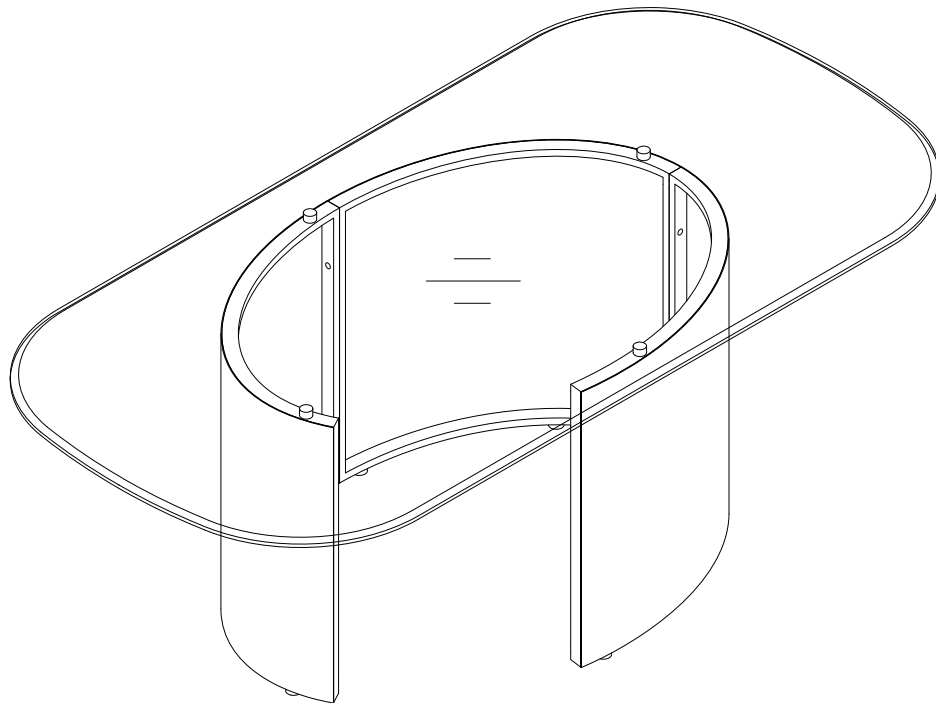

Fine Furniture for every stage of life

721598(B1-B2)
Coffee Table

ITEM: 721598(B1-B2)



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

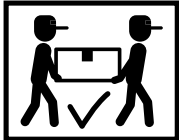


ASSEMBLY TIME

15 MINUTE

PARTS IDENTIFICATION

B1 (BOX 1)

 
A GLASS TOP

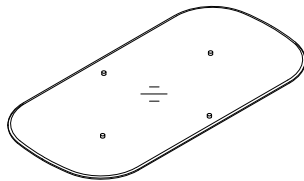

1PC


B2 (BOX 2)

 B LEFT PANEL




1PC

 D RIGHT PANEL



1PC

 C MIDDLE PANEL

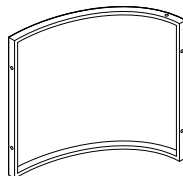

1PC

HARDWARE IDENTIFICATION

 
Z-B2 (BOX 2) - HARDWARE PACK IS LOATED IN 721597 (B2)

1 BOLT
(1/4"x1/2" - BLK)



4PCS

2 BOLT
(1/4"x5/8" - BLK)




4PCS

3 WASHER
(ϕ 16mm - BLK)



4PCS

 4 NUT
(ϕ 1/4" - BLK)



4PCS

5 ALLEN KEY
(4x22X60mm - BLK)



2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **721598(B1-B2)**




ASSEMBLY INSTRUCTIONS

 
STEP 1:

Note:




Do not fully tighten all bolts until assembly is complete.
This will help all parts to assemble properly.


COASTER
FINE FURNITURE

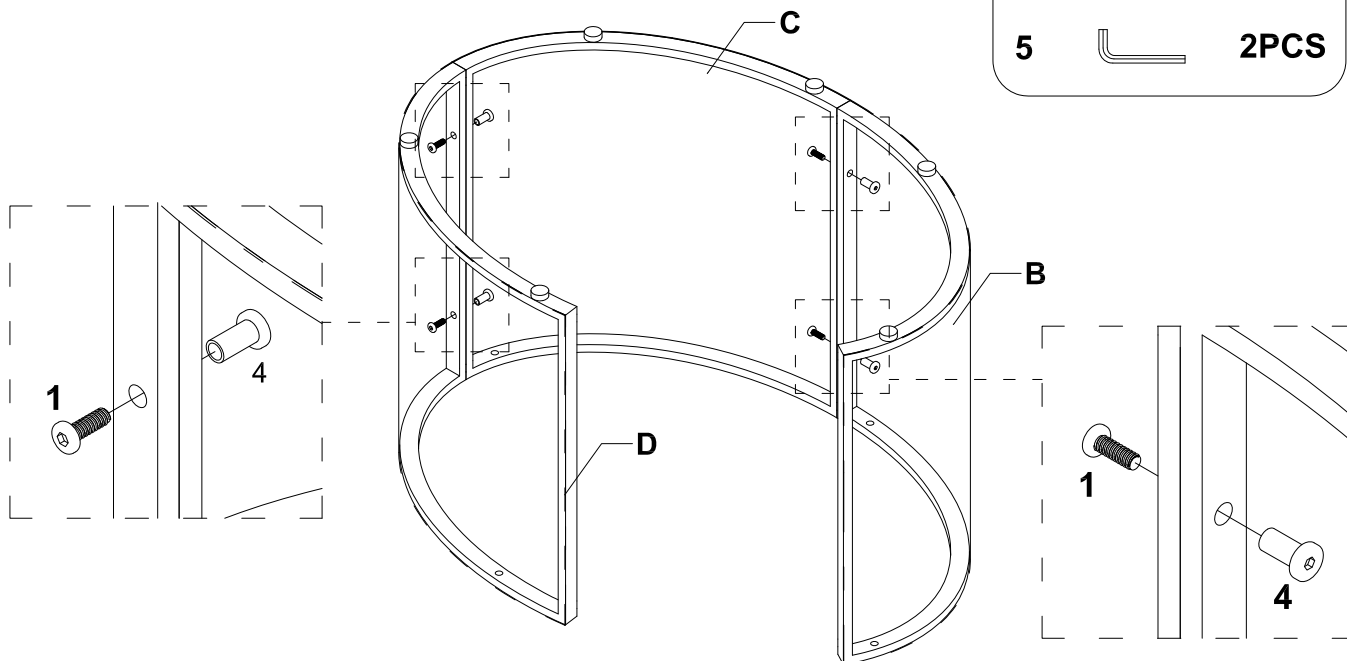1		4PCS
4		4PCS
5		2PCS




STEP 2:

2		4PCS
3		4PCS
5		1PC

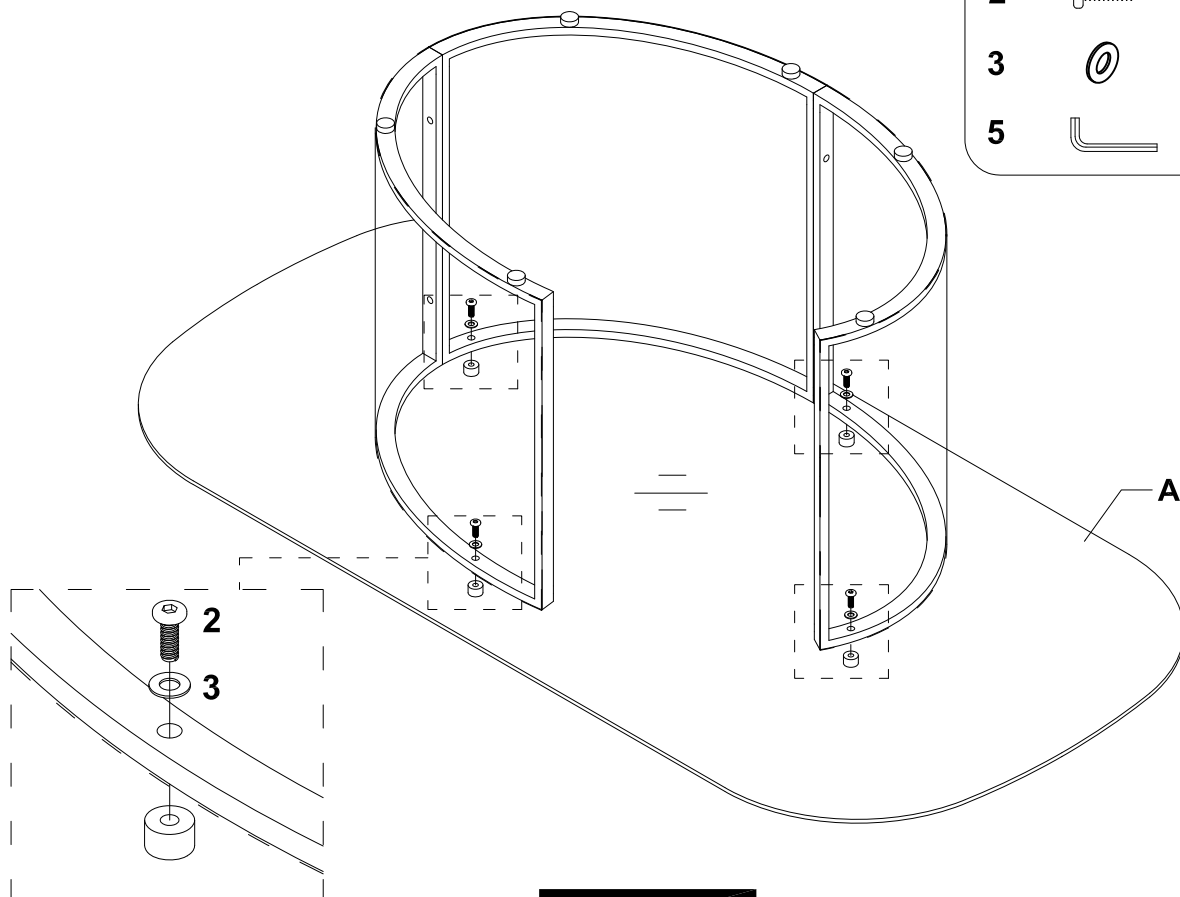 

ITEM: **721598(B1-B2)**

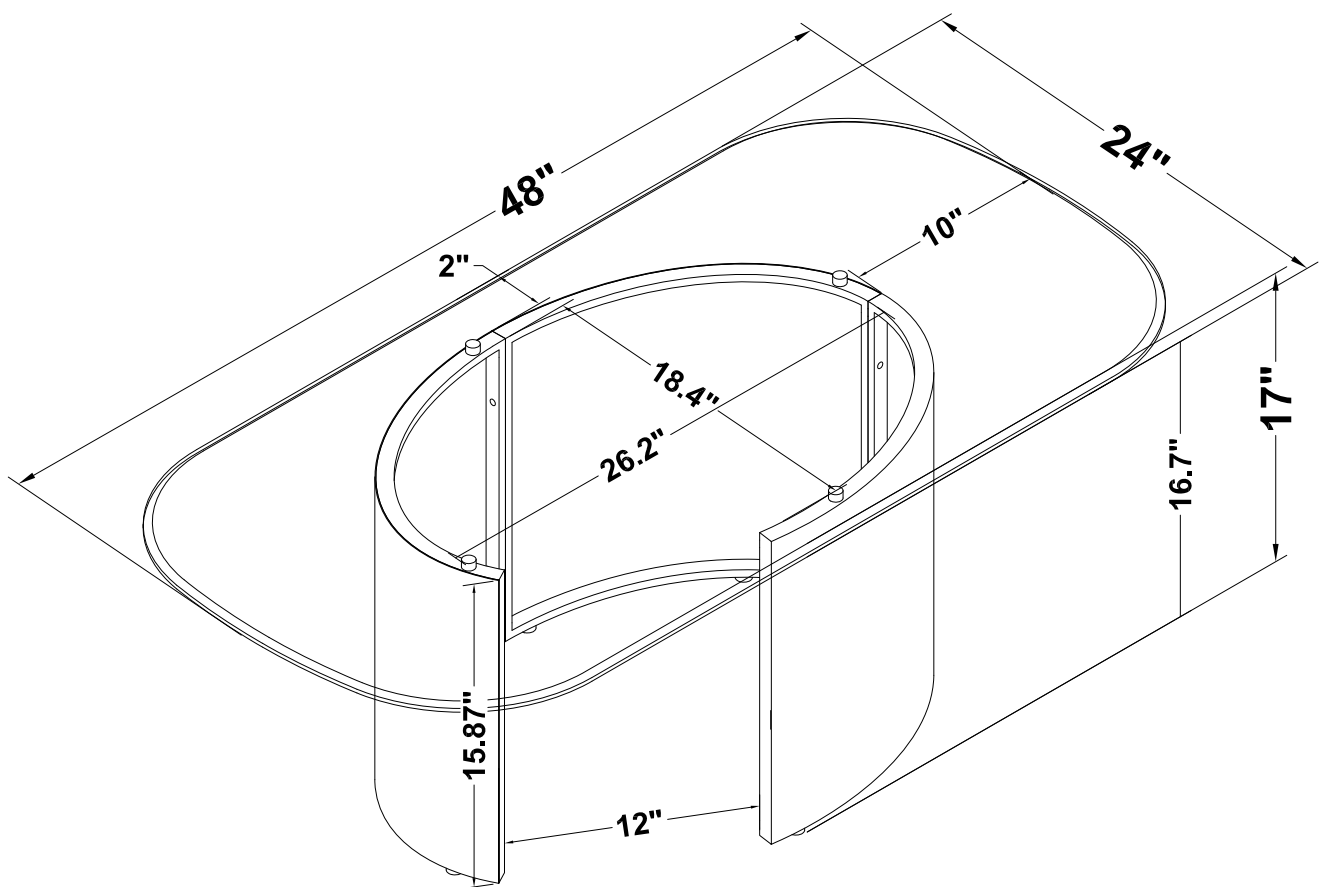 

Note : Dimension tolerance $\pm 5\%$