



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

722088

Lift Top Coffee Table

ITEM: 722088



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A TOP

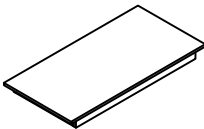


1PC

 B LEG FRAME



2PCS

C SHELF

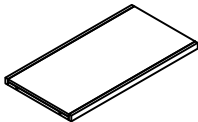

1PC

HARDWARE IDENTIFICATION

1

BOLT
(1/4" x 35mm - RBW)



8PCS

2

LOCK WASHER
(1/4" x 14mm - RBW)



8PCS

3

FLAT WASHER
(1/4" x 19mm - RBW)



8PCS

4

ALLEN WRENCH
(4mm - RBW)



1PC

5

WOOD DOWEL
(Ø10 x 30mm)




4PCS

ITEM: **722088**




ASSEMBLY INSTRUCTIONS

STEP 1

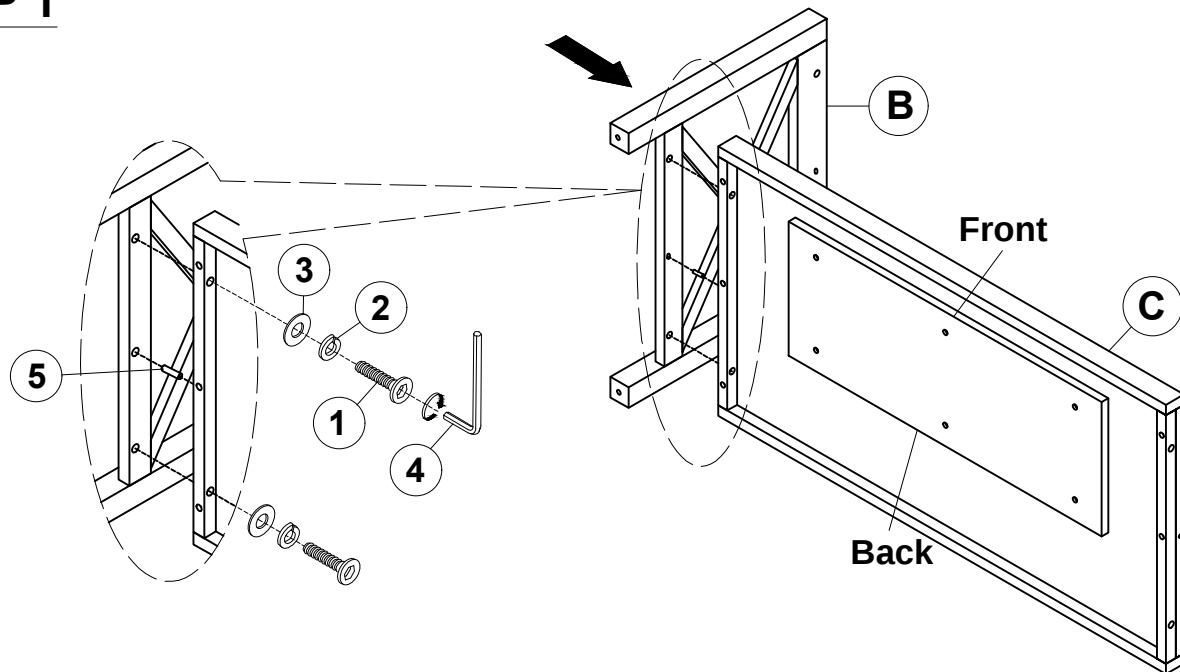


STEP 2

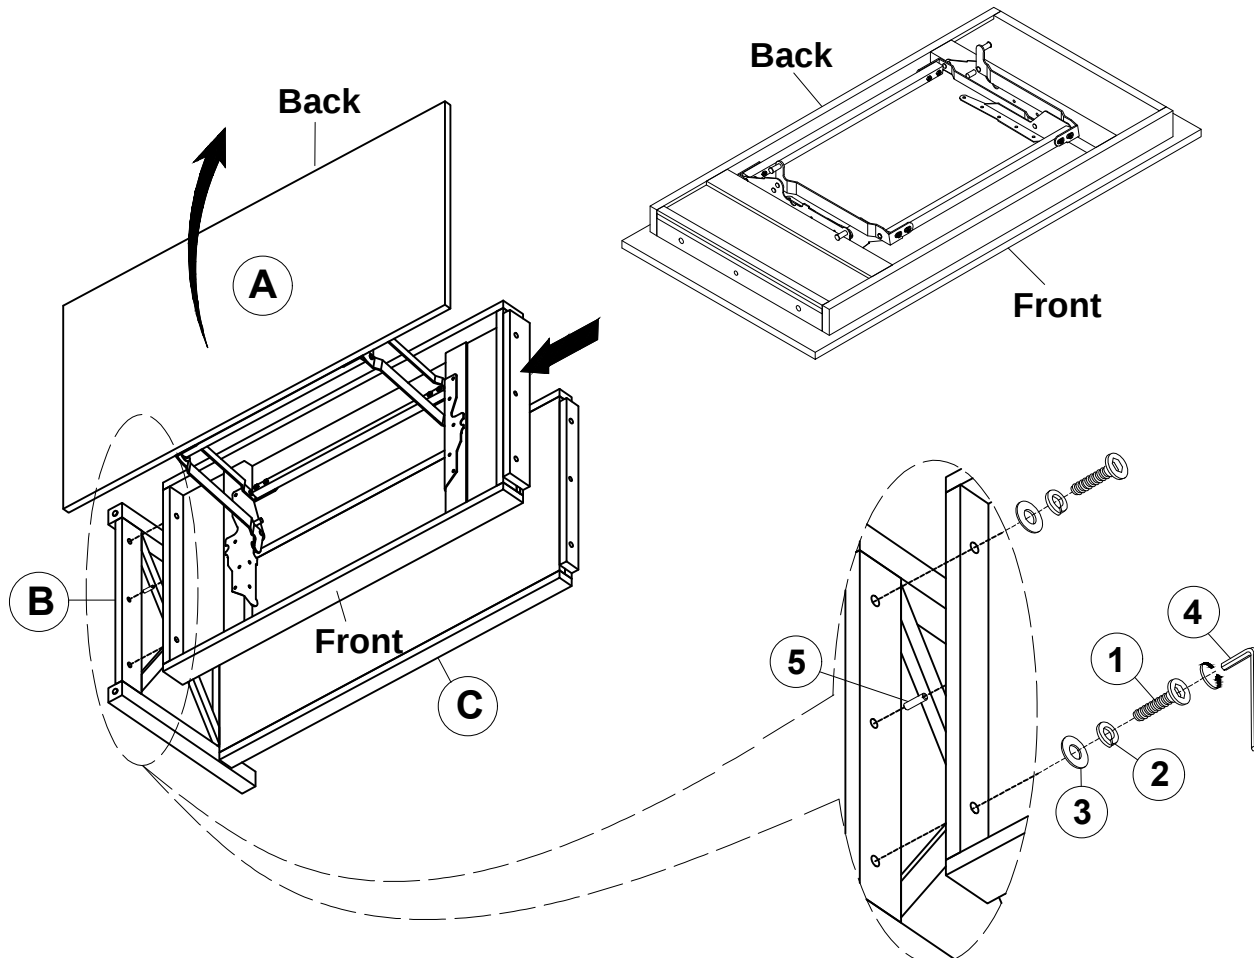

ITEM: **722088**


ASSEMBLY INSTRUCTIONS

STEP 3

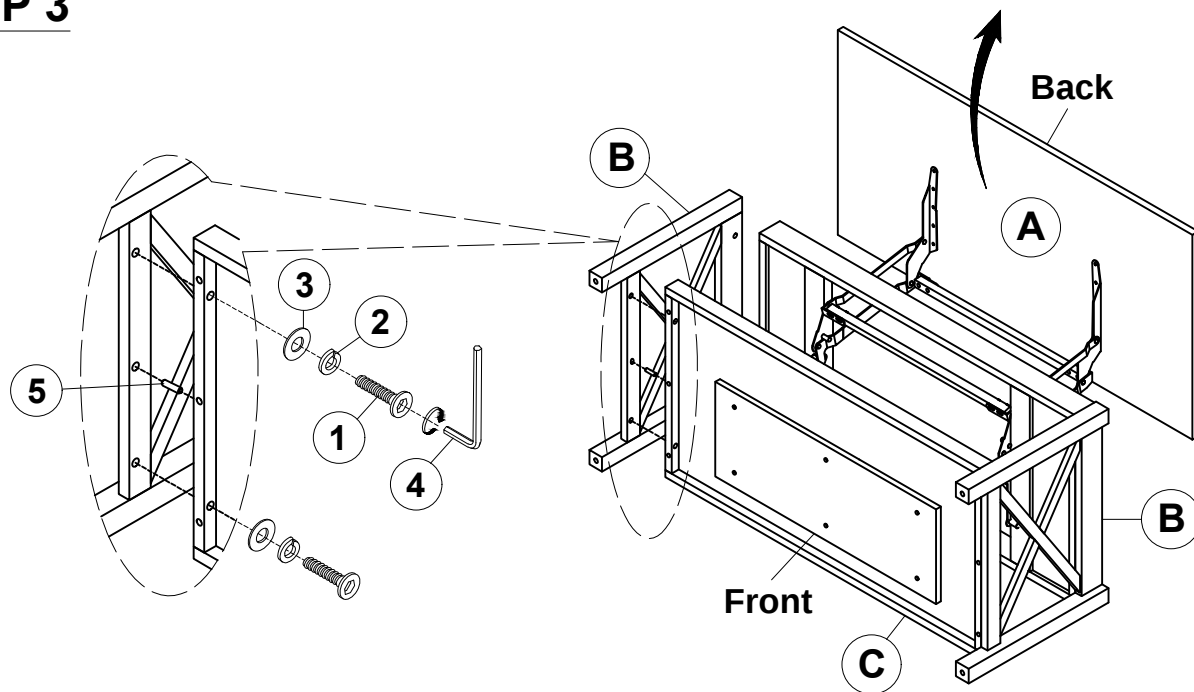

STEP 4

Note: Lowering belt, need to be cut out before installing shelf


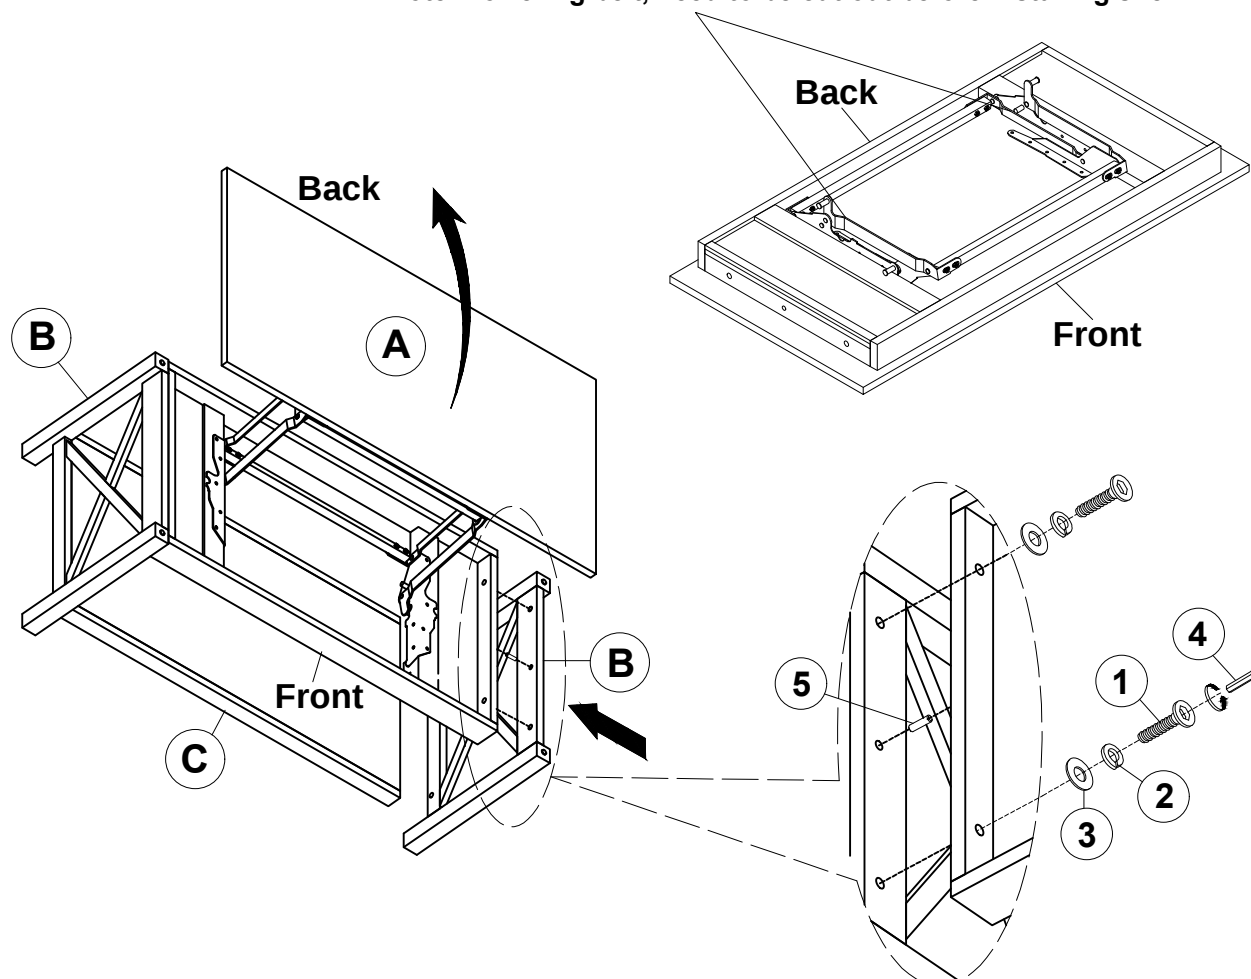


ITEM: **722088**



ASSEMBLY INSTRUCTIONS

STEP 5

COMPLETE

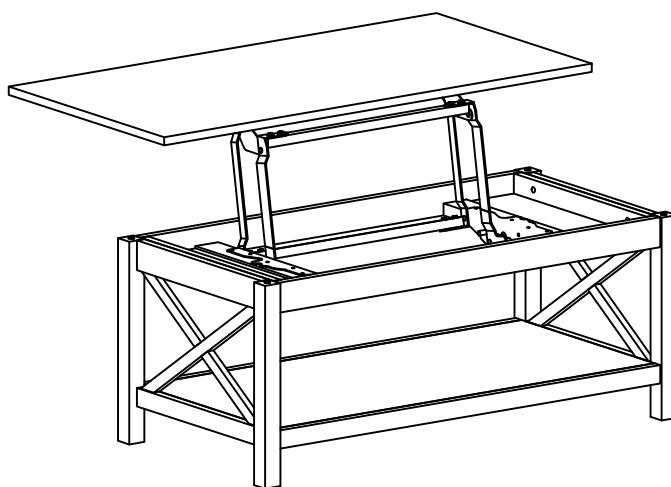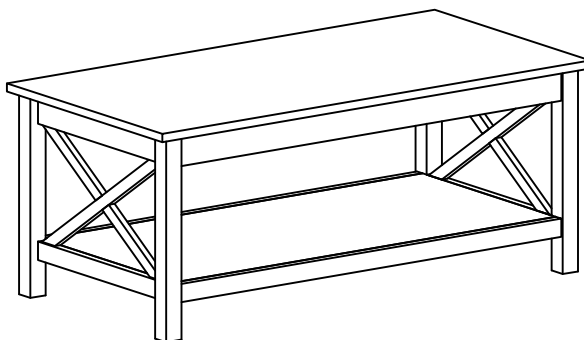

ITEM: **722088**

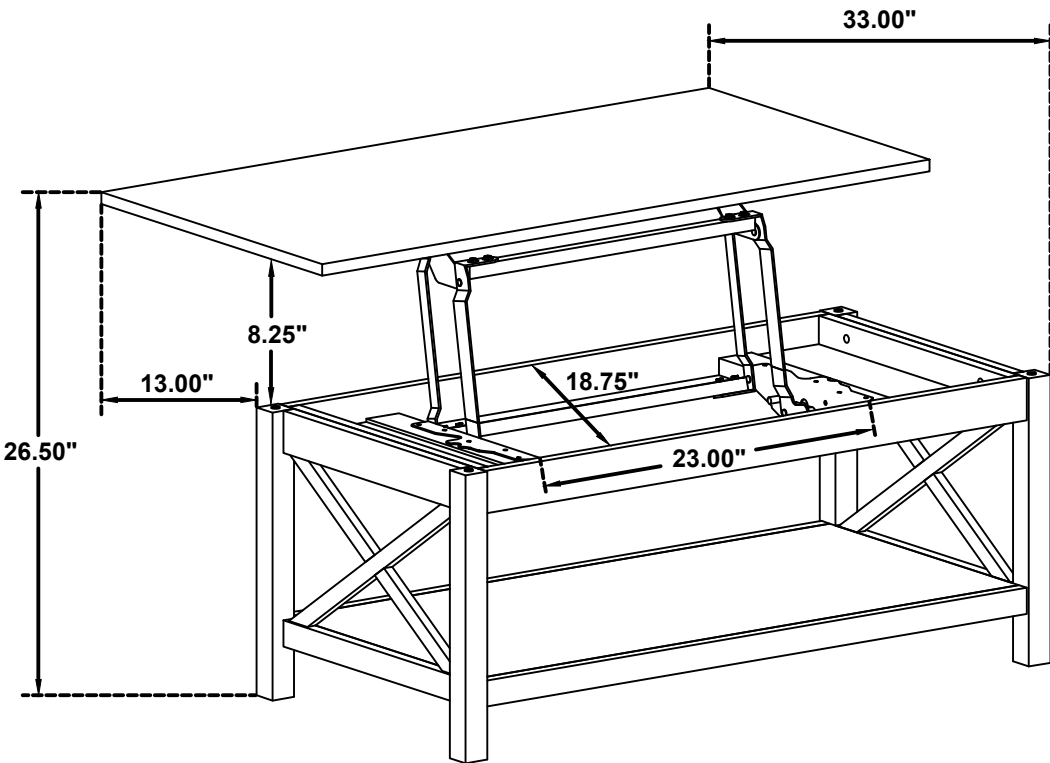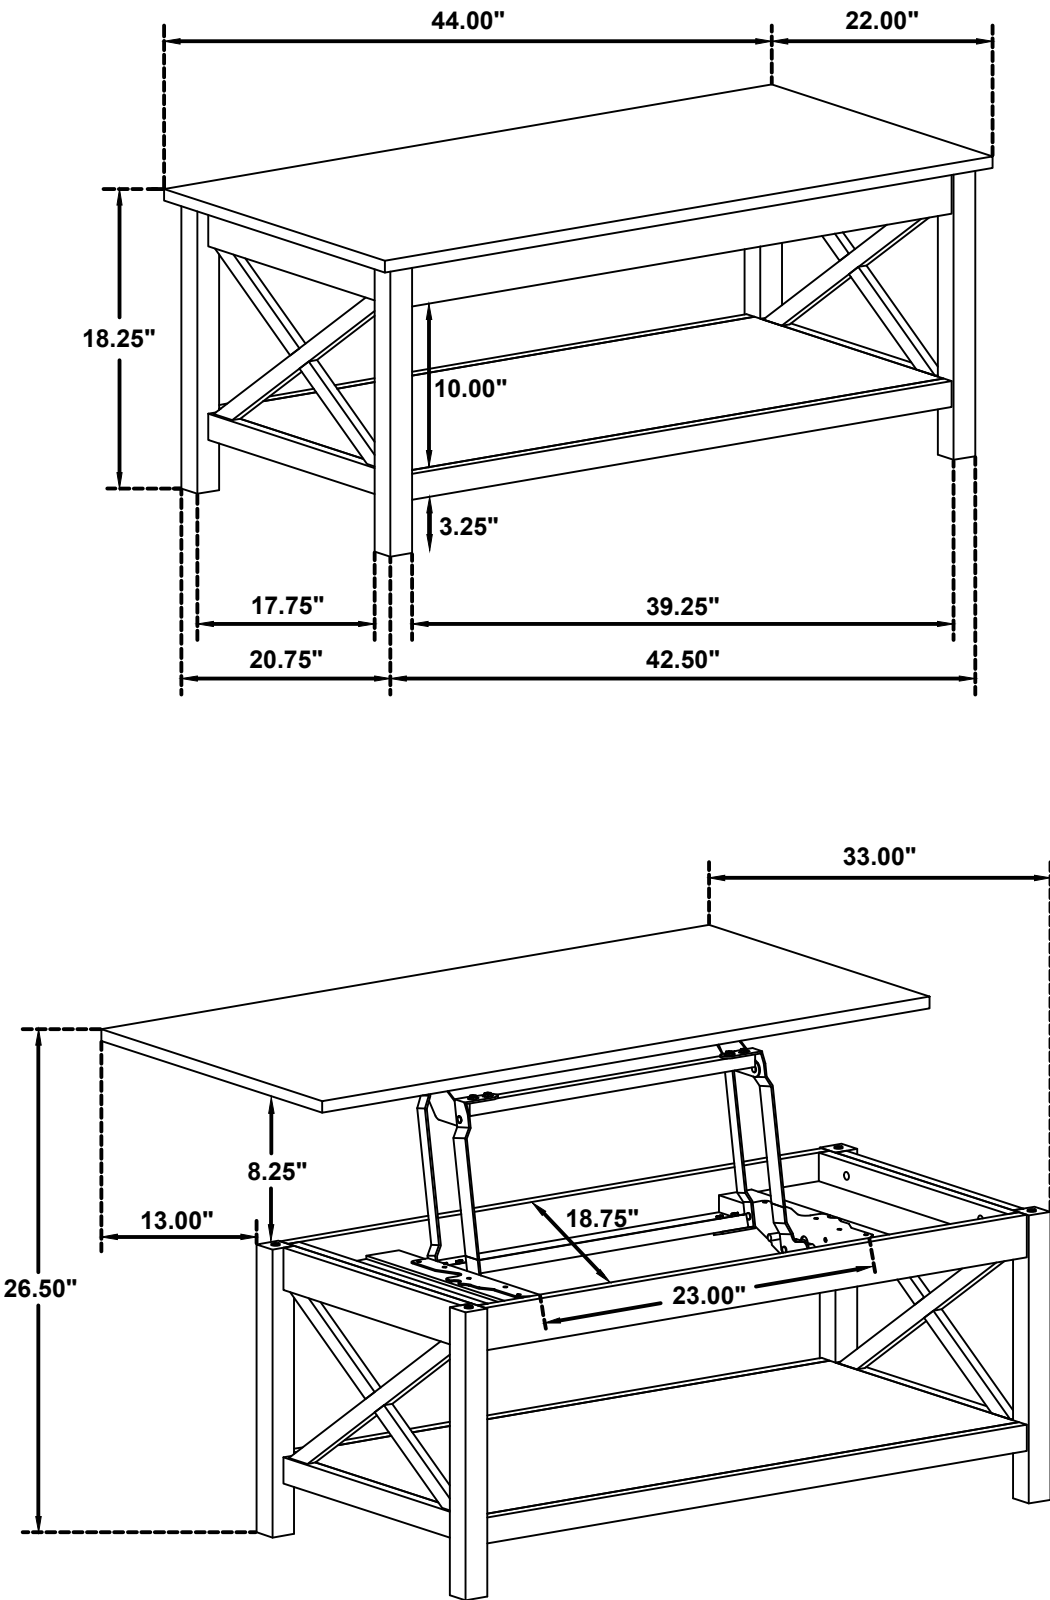

Note: Dimension tolerance $\pm 5\%$