

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

722547
End Table

ITEM: **722547**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A TOP

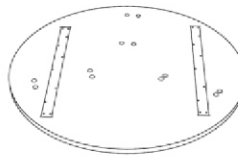

1PC

B LEG

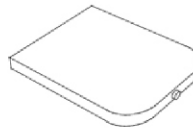

3PCS

C MOUNTING PLATE



3PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 X 20mm - BLK)



18PCS

2 FLAT WASHER
(M10 X 25mm - BLK)



12PCS

3 ALLEN WRENCH
(4mm - BLK)




1PC


ITEM: **722547**

ASSEMBLY INSTRUCTIONS

STEP 1


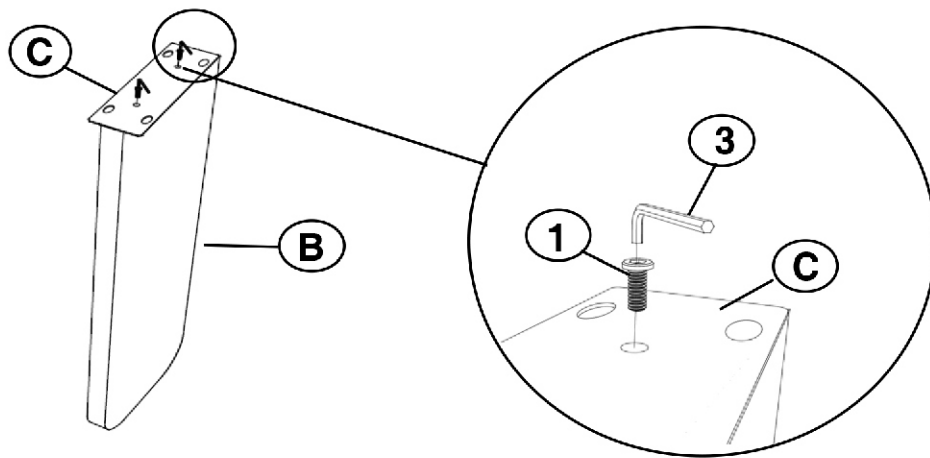


STEP 2

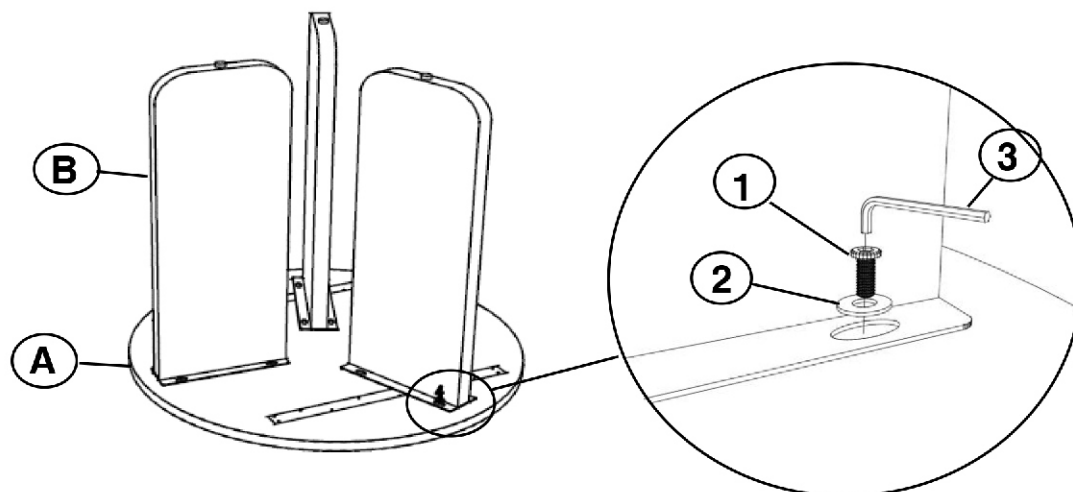


BOTTOM VIEW

STEP 3 **COMPLETE**

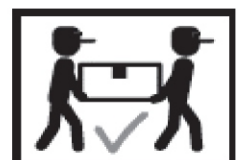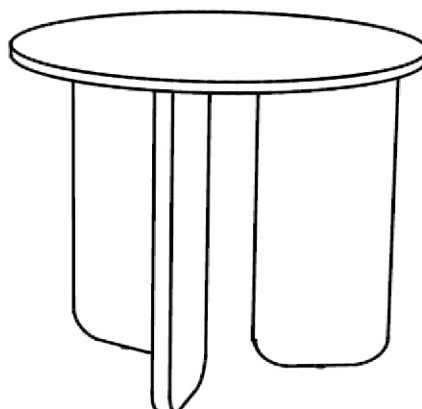

ITEM: **722547**

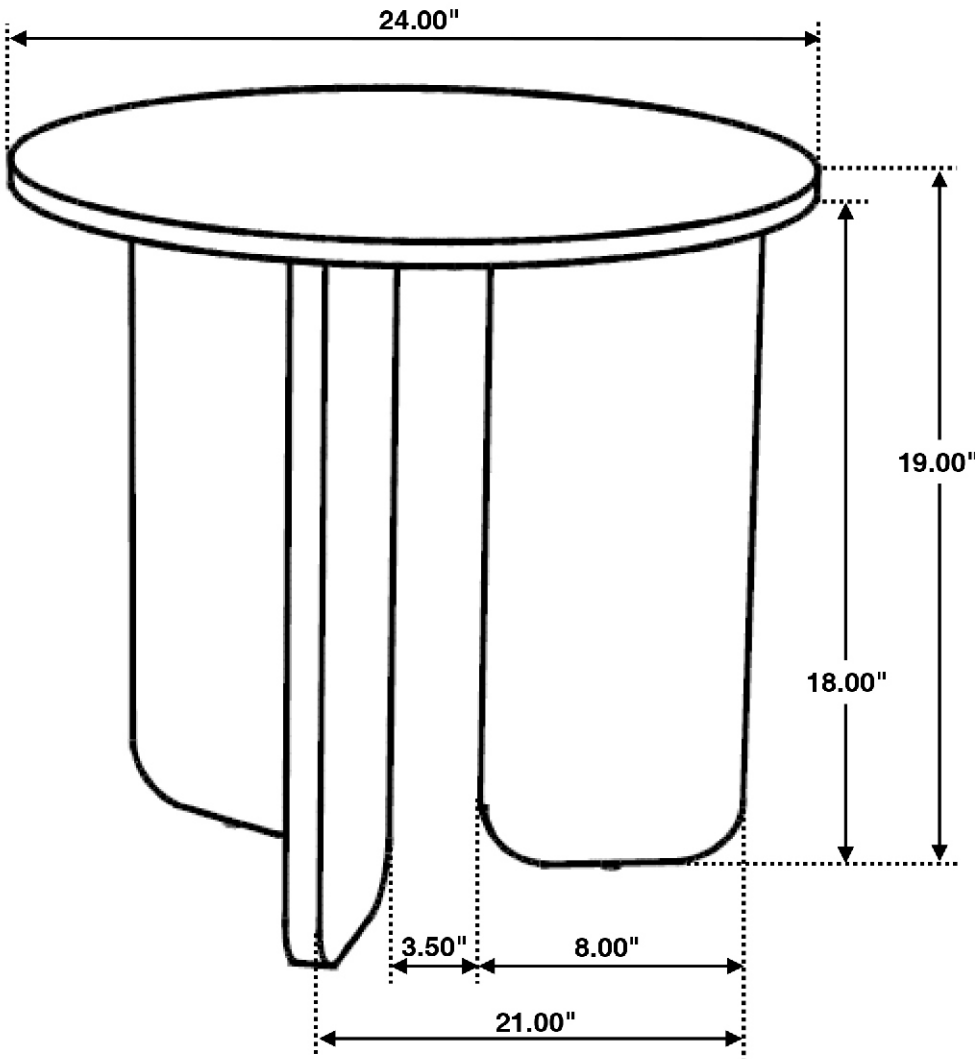

Note : Dimension tolerance $\pm 5\%$