

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

724123
TV STAND

ITEM:724123



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

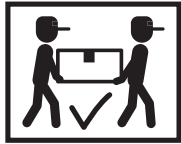

ASSEMBLY TIME

 
60 MINUTES

MAX TV SIZE: 85"

PARTS IDENTIFICATION

A


LEFT SIDE
PANEL

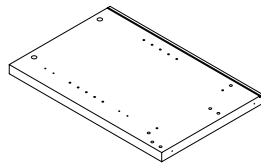

1 PC

B

 
RIGHT SIDE
PANEL

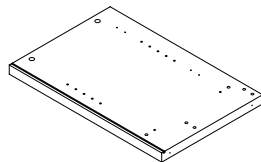

1 PC

C

 
MIDDLE DIVIDER
PANEL

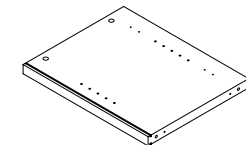

1 PC

D

 
DIVIDER PANEL

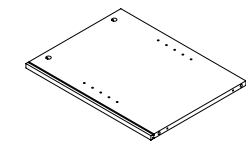

2 PCS

E

 
FRONT CROSS
BRACE

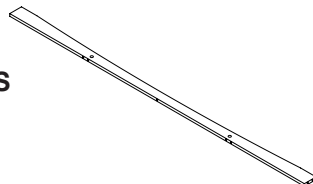

1 PC

F

 
BACK CROSS
BRACE

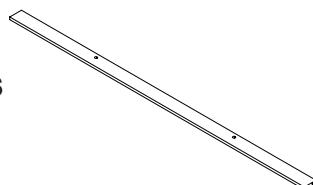

1 PC

G

 
BOTTOM PANEL

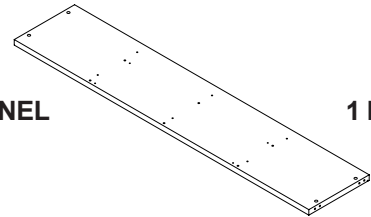

1 PC

H

 
ADJUSTABLE
SHELF

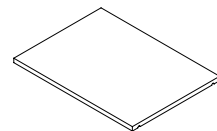

4 PCS

I

 
TOP PANEL

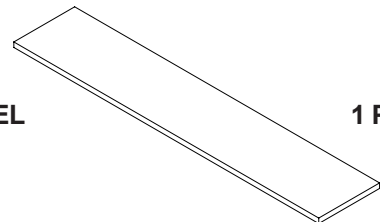

1 PC

J

 
BACK PANEL

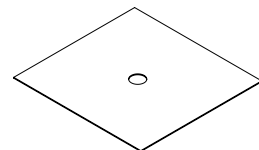

4 PCS

K

 DOOR

 
 
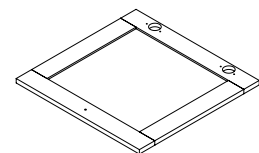 

 
 


 
 
 

 
 
 


4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **724123****HARDWARE IDENTIFICATION**

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HANDLE BLK		4 PCS
2	WOODEN DOWEL Ø8x30mm		34 PCS	10	HANDLE BOLT BLK		4 PCS
3	CAM BOLT Ø7x35.5mm SR		18 PCS	11	HINGE Ø35mm SR		8 PCS
4	CAM LOCK Ø15x12mm SR		18 PCS	12	HINGE SCREW Ø4x15mm SR		32 PCS
5	BOLT Ø9.5x55mm SR		6 PCS	13	FIXER		6 PCS
6	DOOR CATCH		4 PCS	14	FIXER SCREW Ø3x19mm SR		6 PCS
7	PLASTIC FEET Ø15mm		6 PCS	15	STICKER Ø20mm		3 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS				

 
 
 
Z11 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **724123**

STEP 1

COASTER
FINE FURNITURE

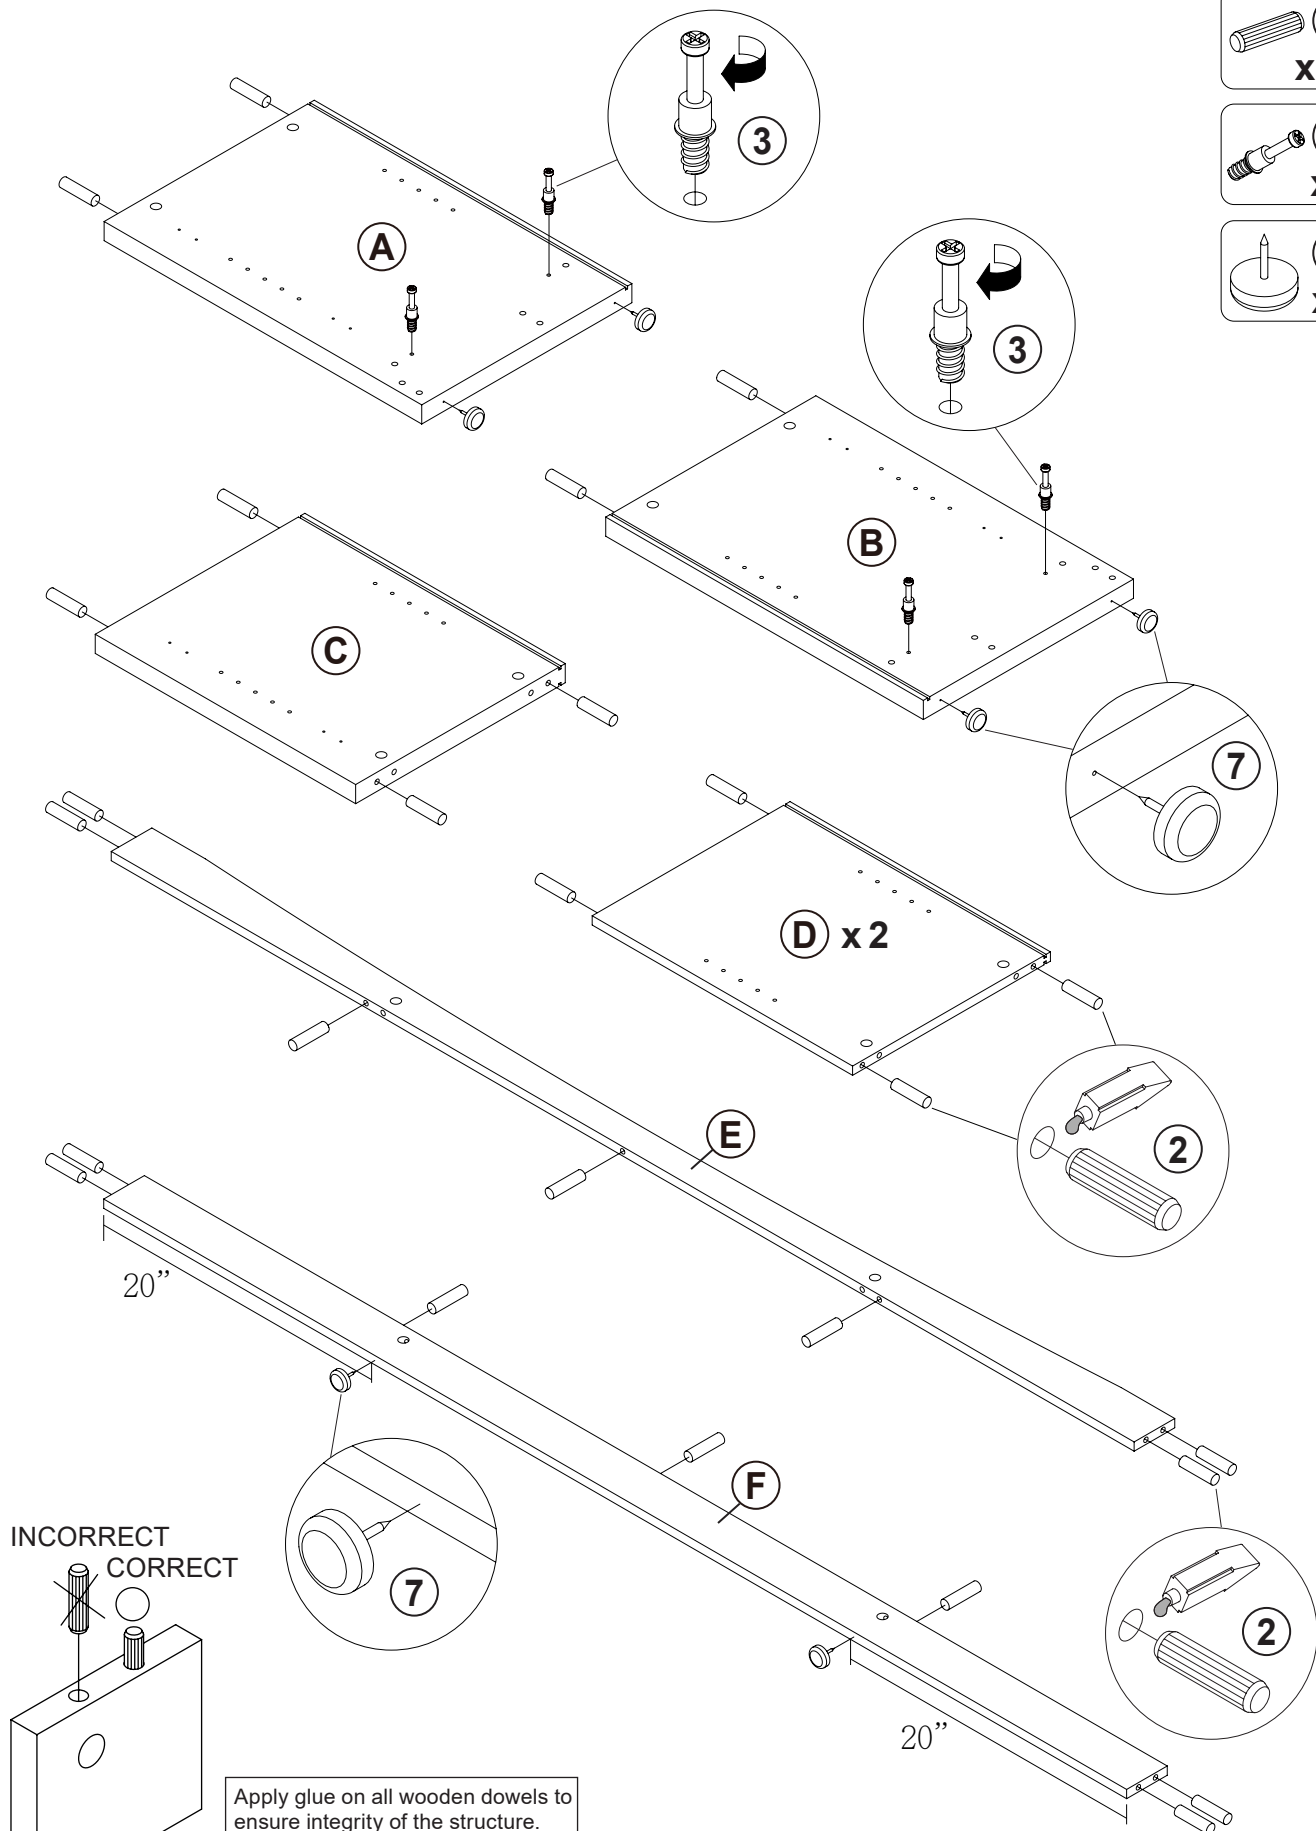


INCORRECT
CORRECT


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **724123**

 STEP 2

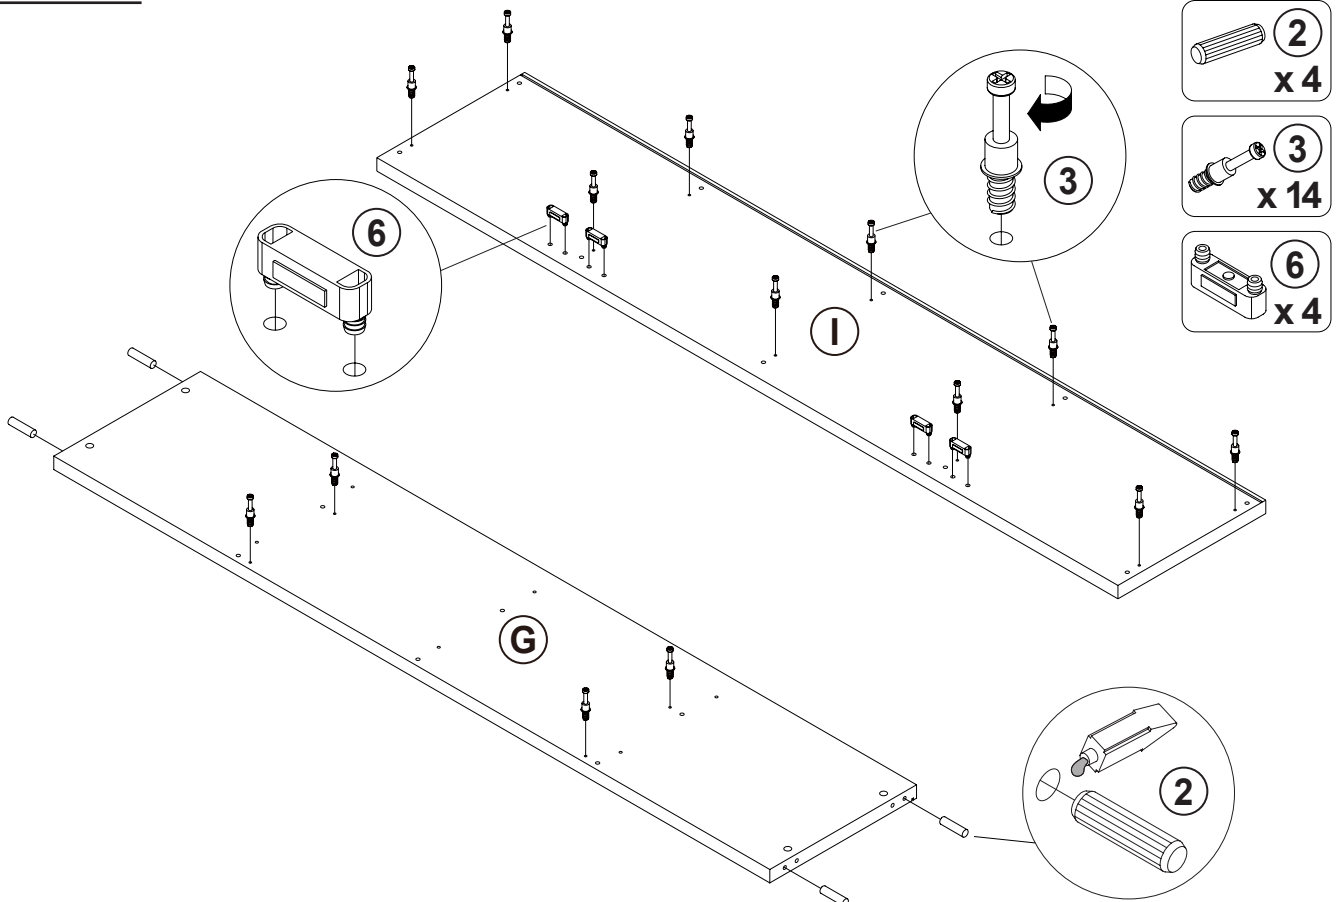


 
STEP 3

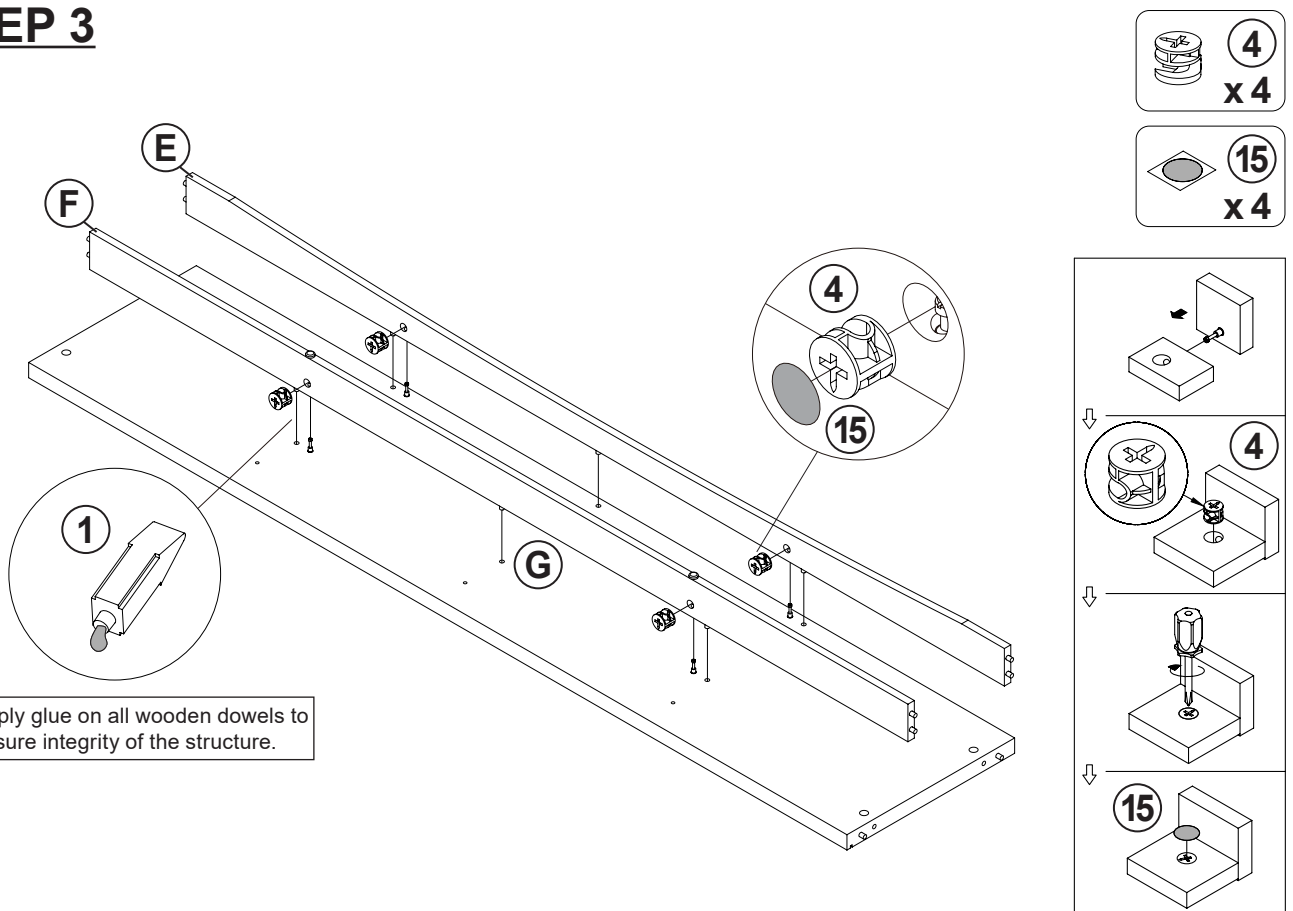



ITEM: **724123**

STEP 4

  COASTER
FINE FURNITURE

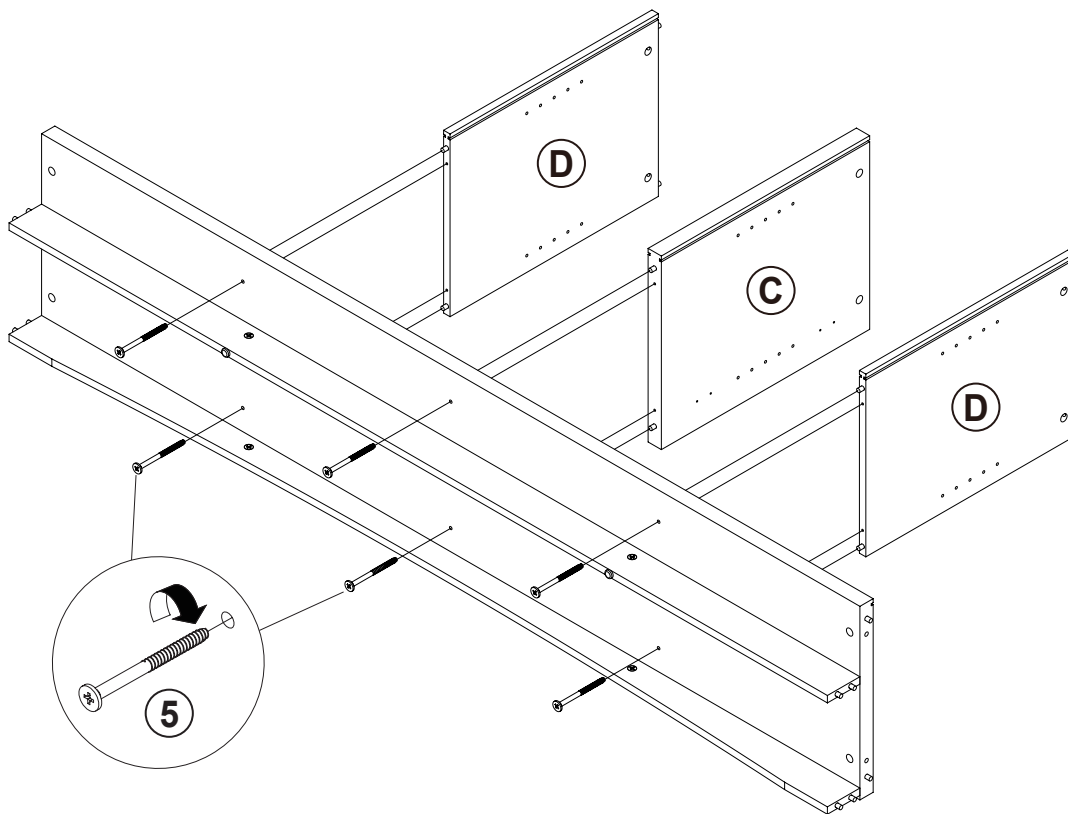


  STEP 5

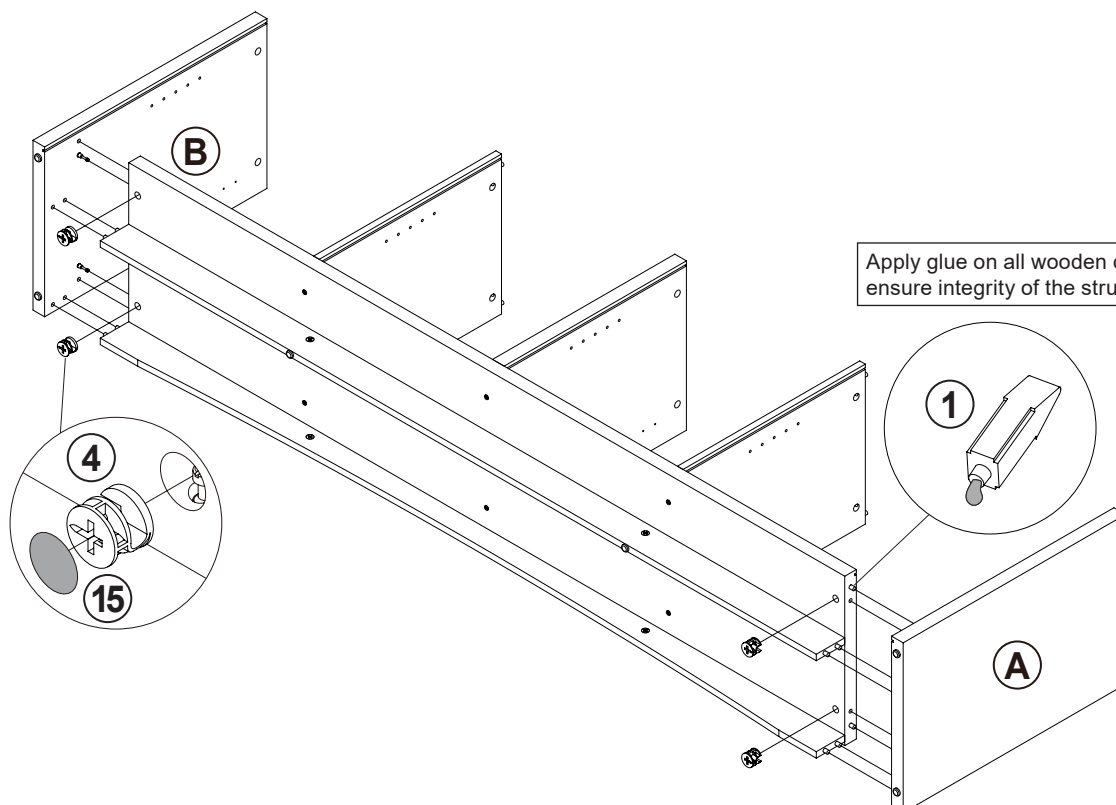




ITEM: **724123**

 STEP 6

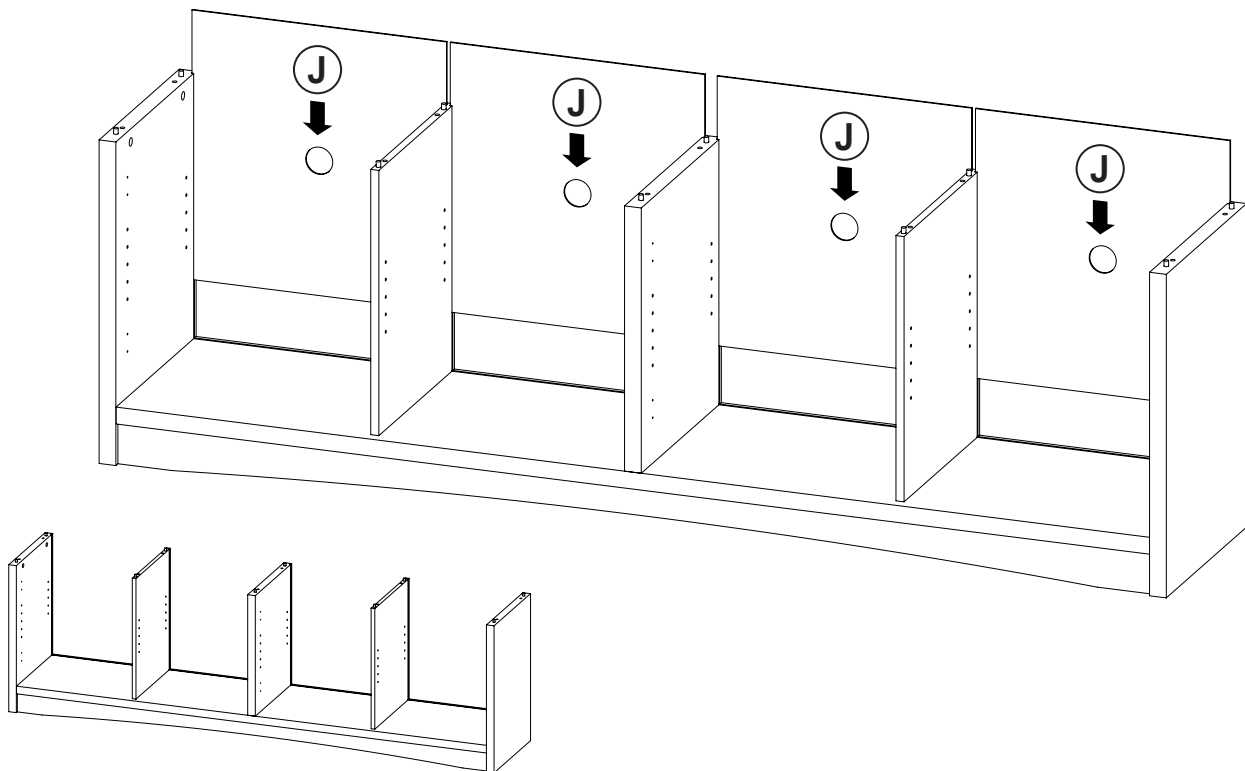

STEP 7

  
 
Apply glue on all wooden dowels to ensure integrity of the structure.

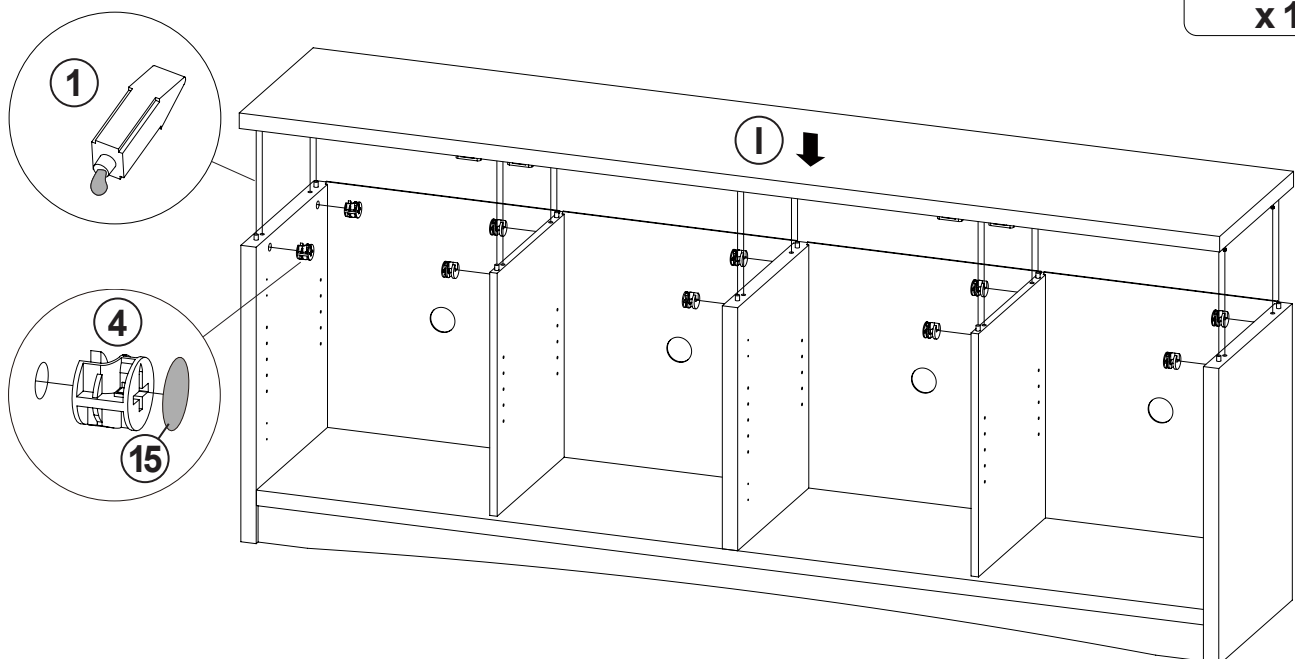




ITEM: **724123**

STEP 8

  COASTER
FINE FURNITURE

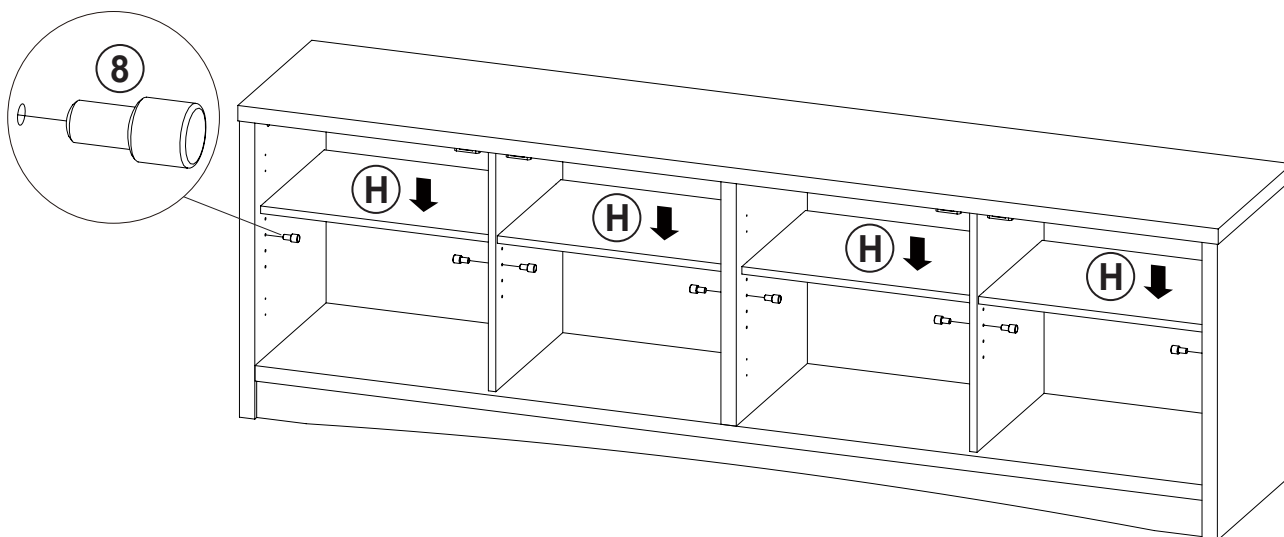

  
 
STEP 9

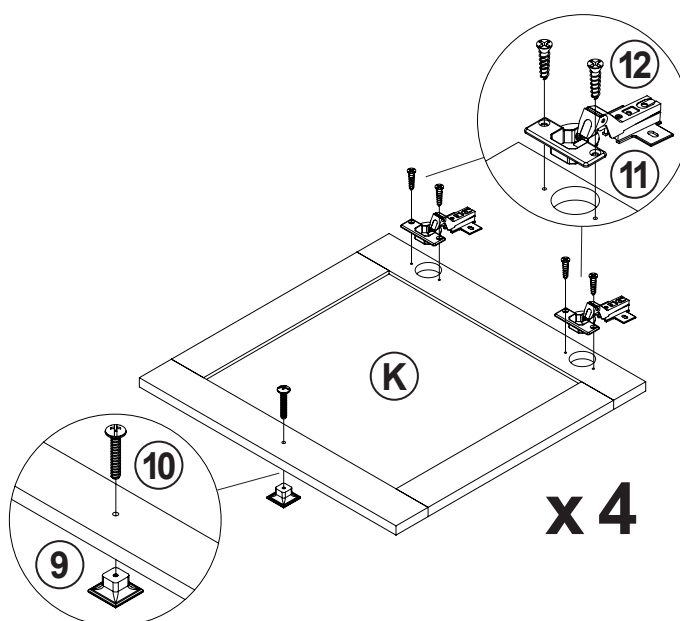



ITEM: **724123**

STEP 10

  COASTER
FINE FURNITURE

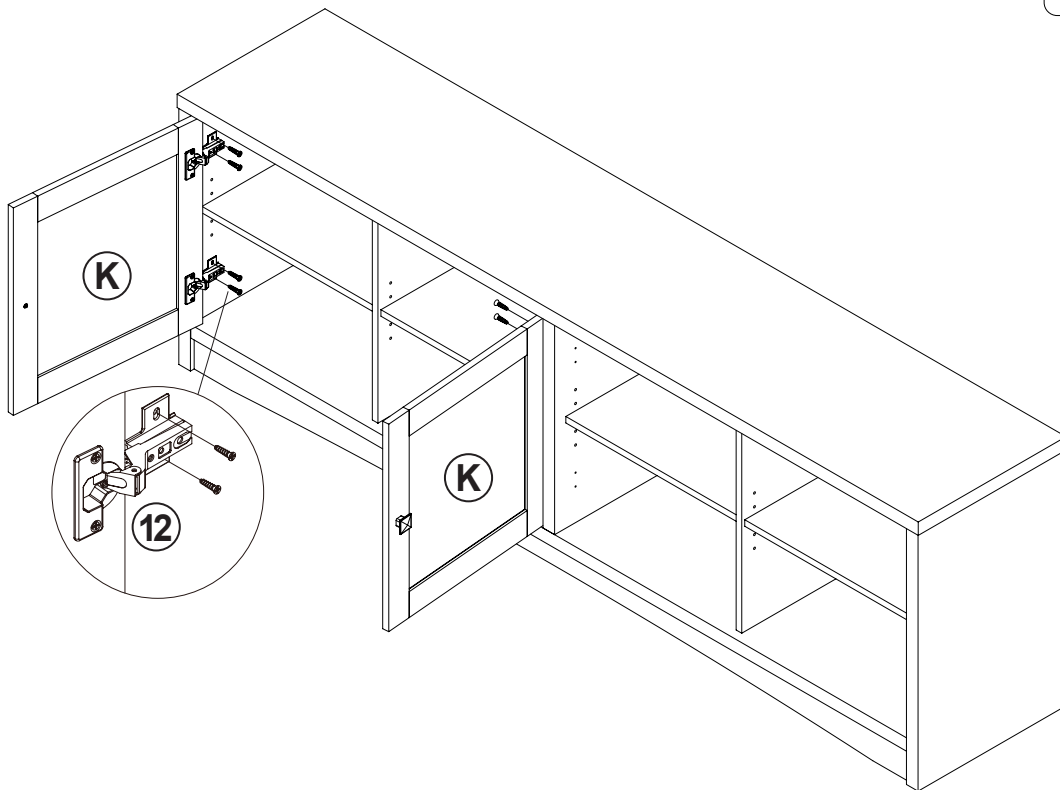




 
 
STEP 11

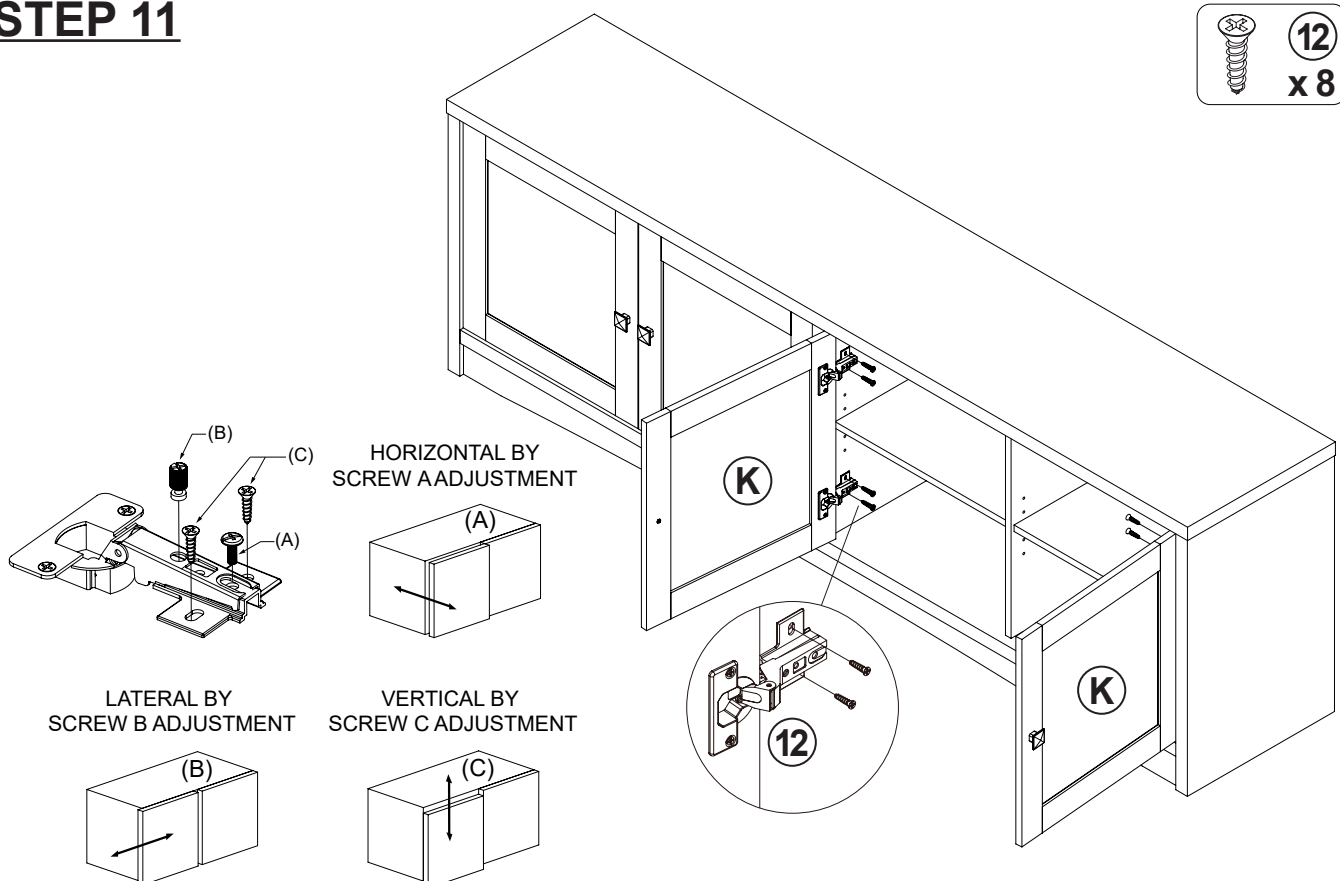

ITEM: **724123**



STEP 12

     COASTER
FINE FURNITURE

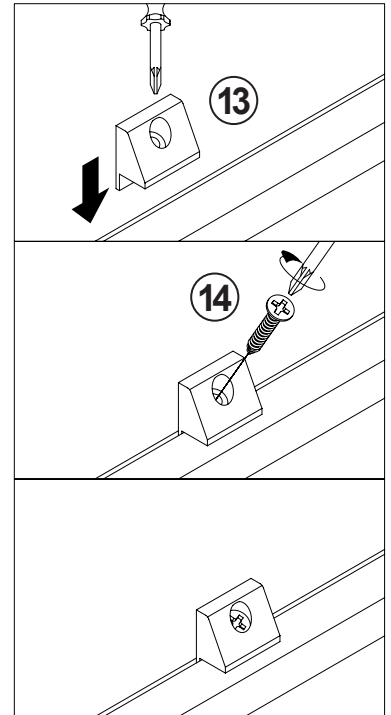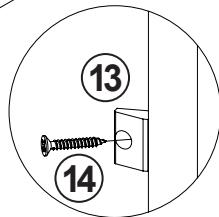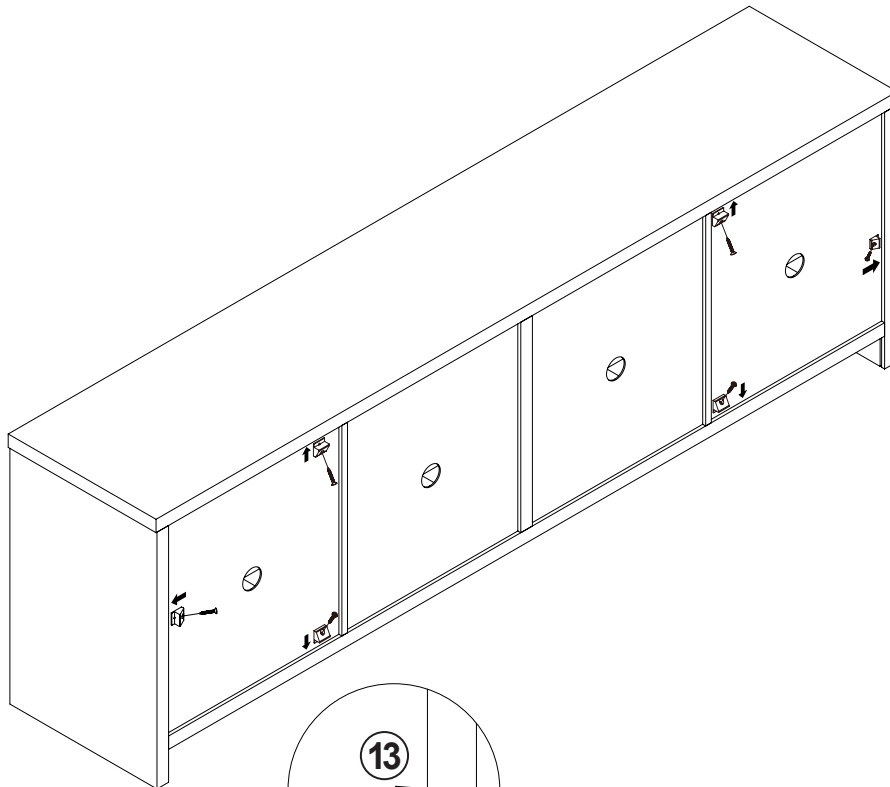



STEP 13

  COMPLETE

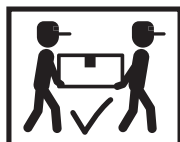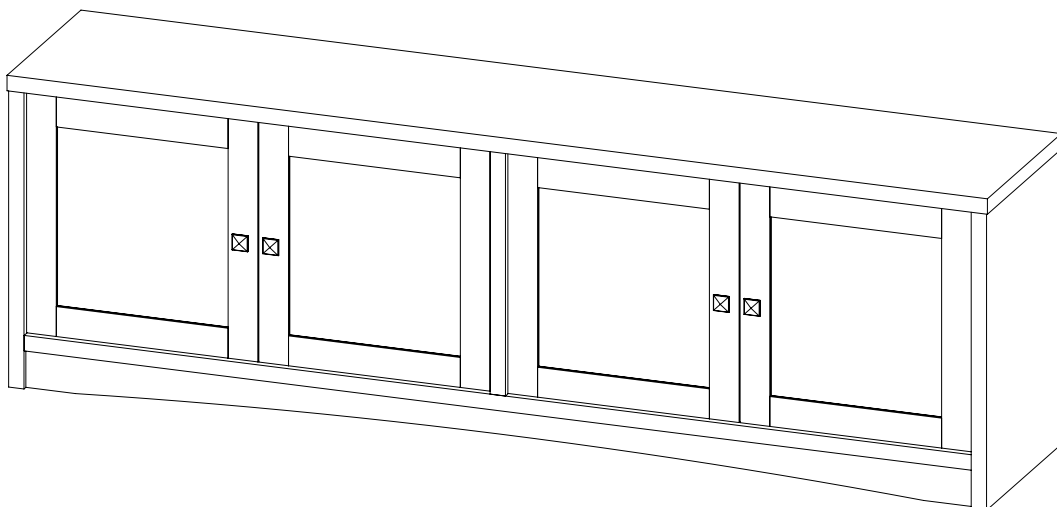

ITEM: 724123

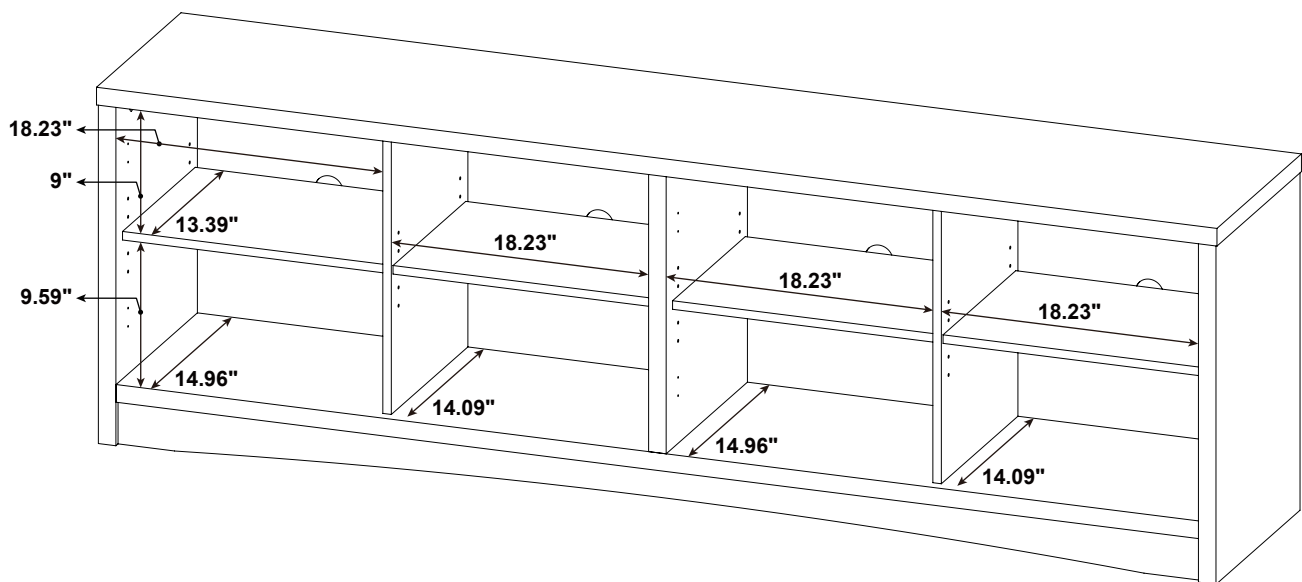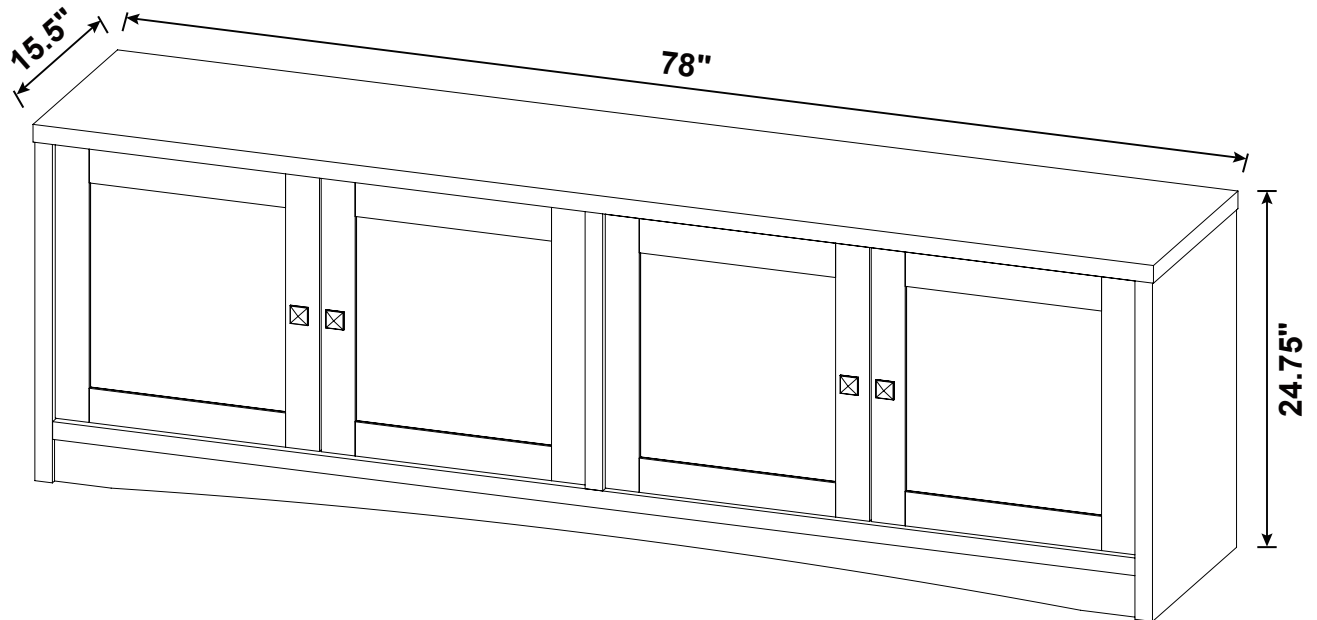  

Note : Dimension tolerance $\pm 5\%$

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

724123
TV STAND

ITEM:724123



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

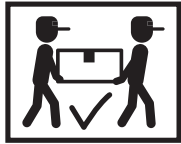

ASSEMBLY TIME

 
60 MINUTES

MAX TV SIZE: 85"

PARTS IDENTIFICATION

A


LEFT SIDE
PANEL

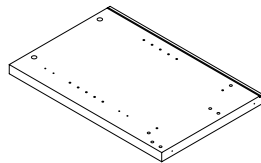

1 PC

B

 
RIGHT SIDE
PANEL

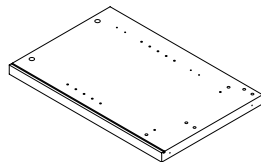

1 PC

C

 
MIDDLE DIVIDER
PANEL

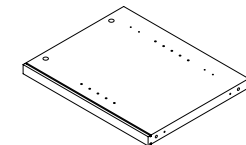

1 PC

D

 
DIVIDER PANEL

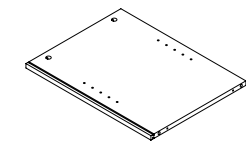

2 PCS

E

 
FRONT CROSS
BRACE

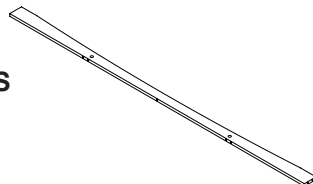

1 PC

F

 
BACK CROSS
BRACE

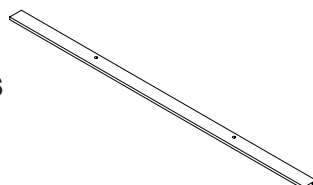

1 PC

G

 
BOTTOM PANEL

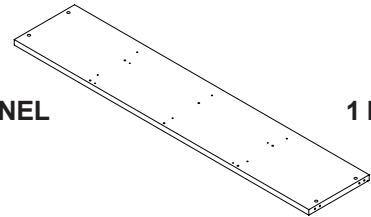

1 PC

H

 
ADJUSTABLE
SHELF

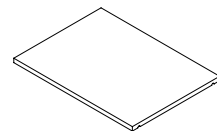

4 PCS

I

 
TOP PANEL

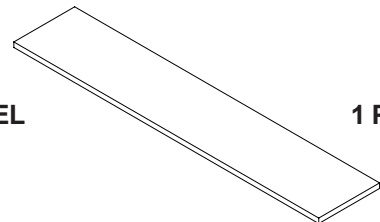

1 PC

J

 
BACK PANEL

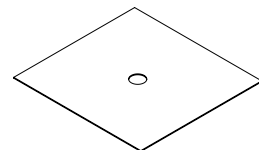

4 PCS

K

 DOOR

 
 
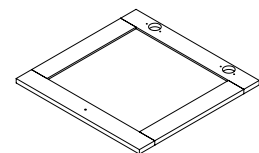 

 
 


 
 
 

 
 
 


4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **724123****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HANDLE BLK		4 PCS
2	WOODEN DOWEL Ø8x30mm		34 PCS	10	HANDLE BOLT BLK		4 PCS
3	CAM BOLT Ø7x35.5mm SR		18 PCS	11	HINGE Ø35mm SR		8 PCS
4	CAM LOCK Ø15x12mm SR		18 PCS	12	HINGE SCREW Ø4x15mm SR		32 PCS
5	BOLT Ø9.5x55mm SR		6 PCS	13	FIXER		6 PCS
6	DOOR CATCH		4 PCS	14	FIXER SCREW Ø3x19mm SR		6 PCS
7	PLASTIC FEET Ø15mm		6 PCS	15	STICKER Ø20mm		3 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS				

 
 
 
Z11 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **724123**

STEP 1

COASTER
FINE FURNITURE

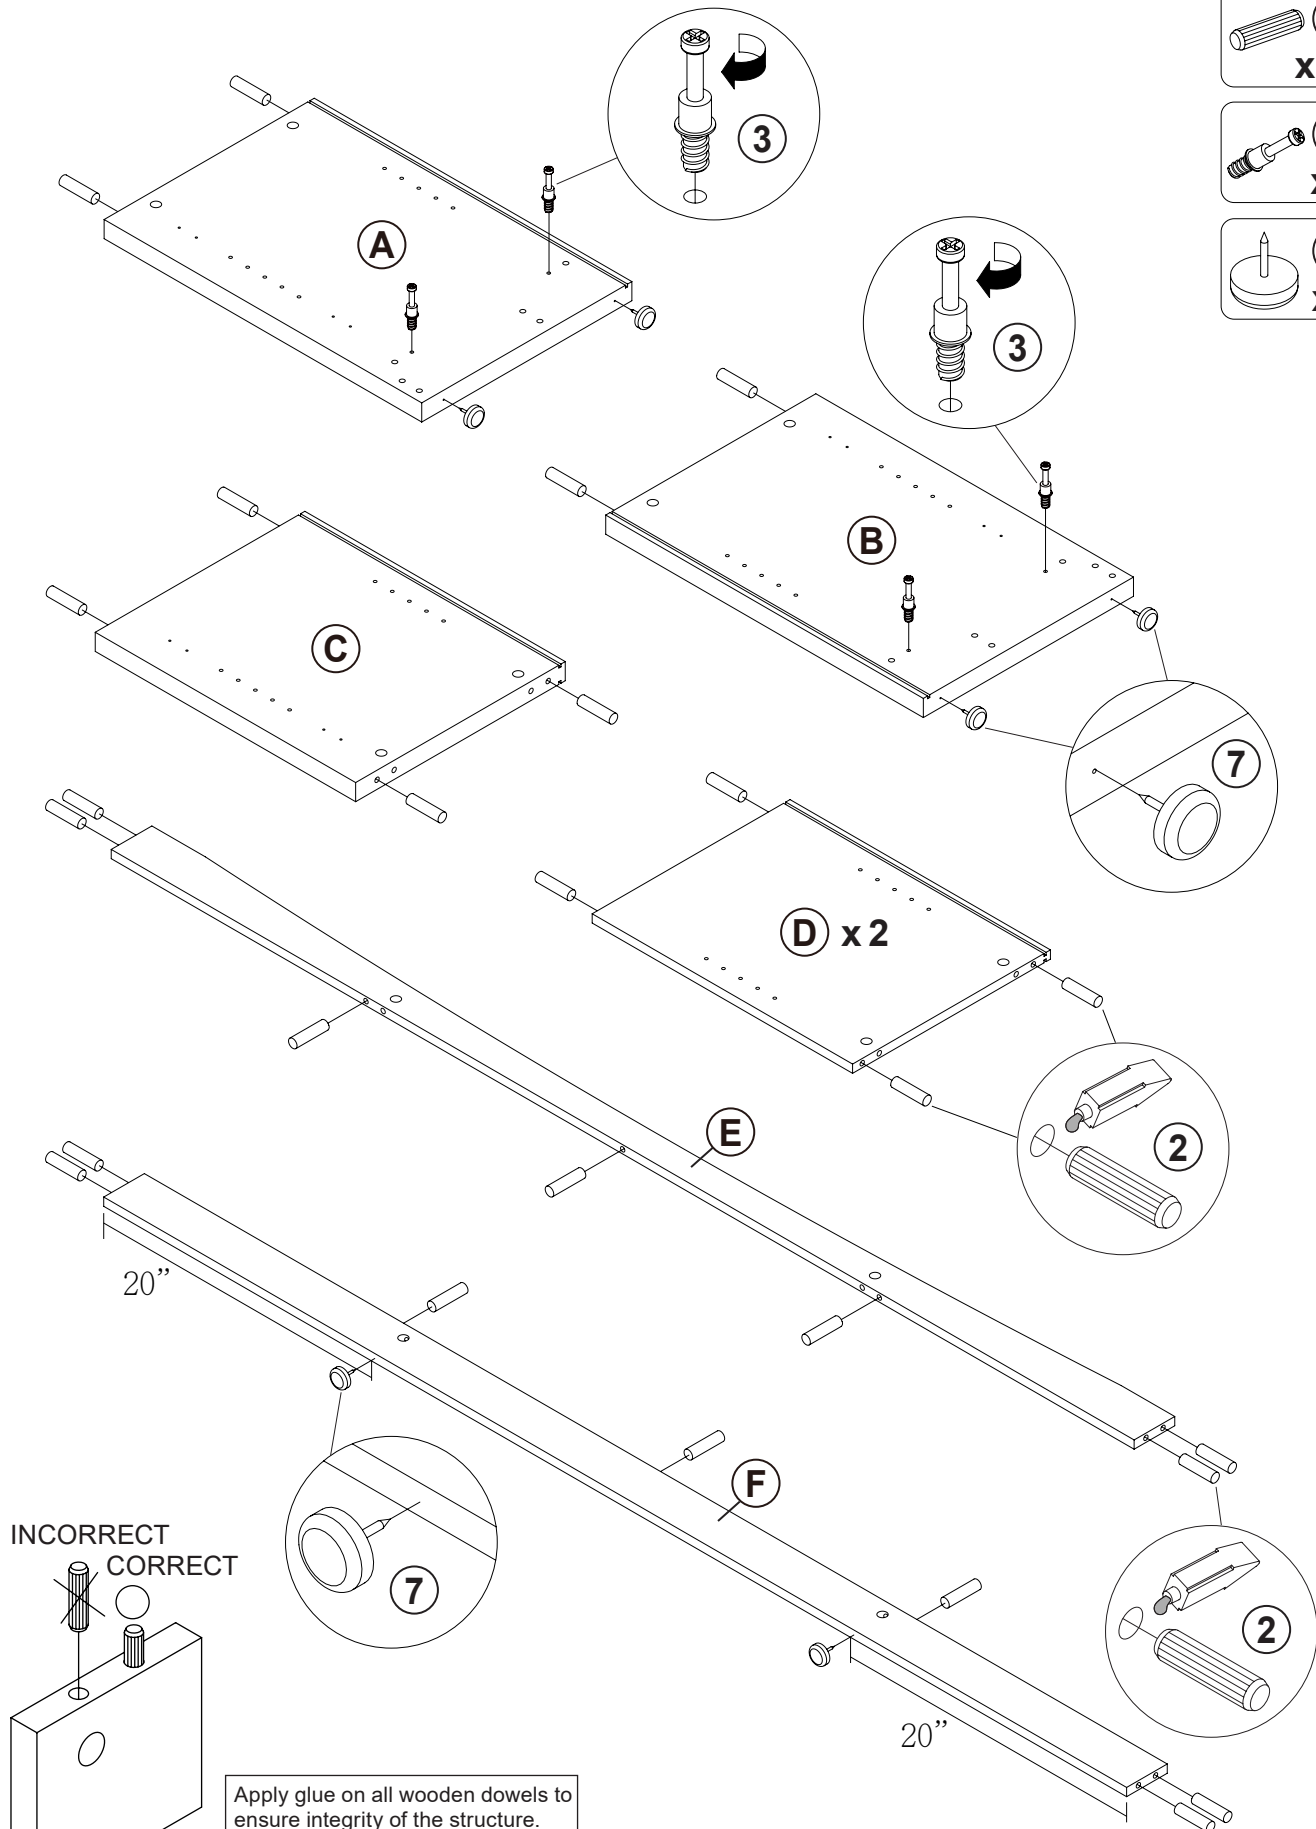


INCORRECT
CORRECT


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **724123**

 STEP 2

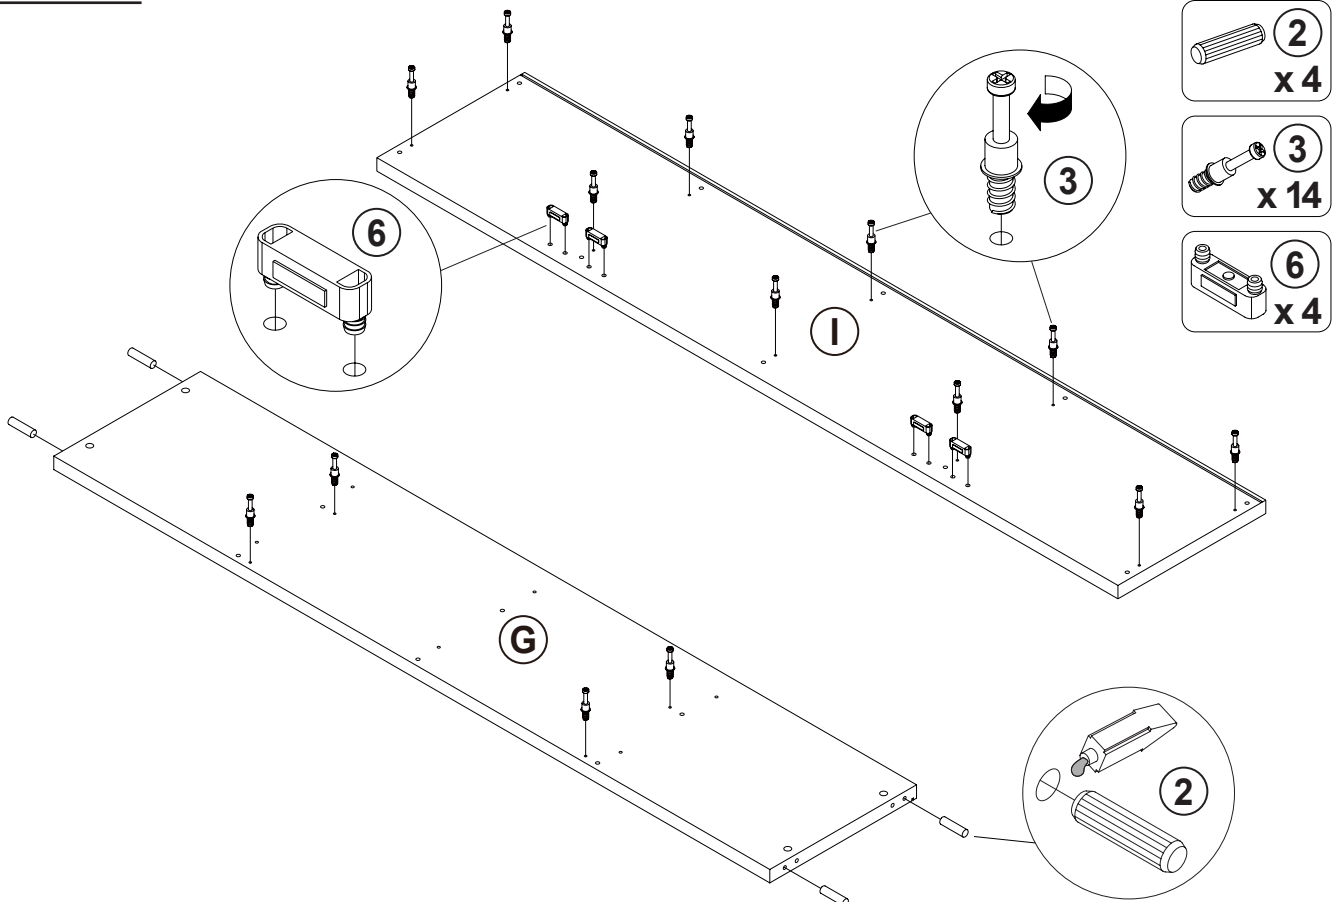


 
STEP 3

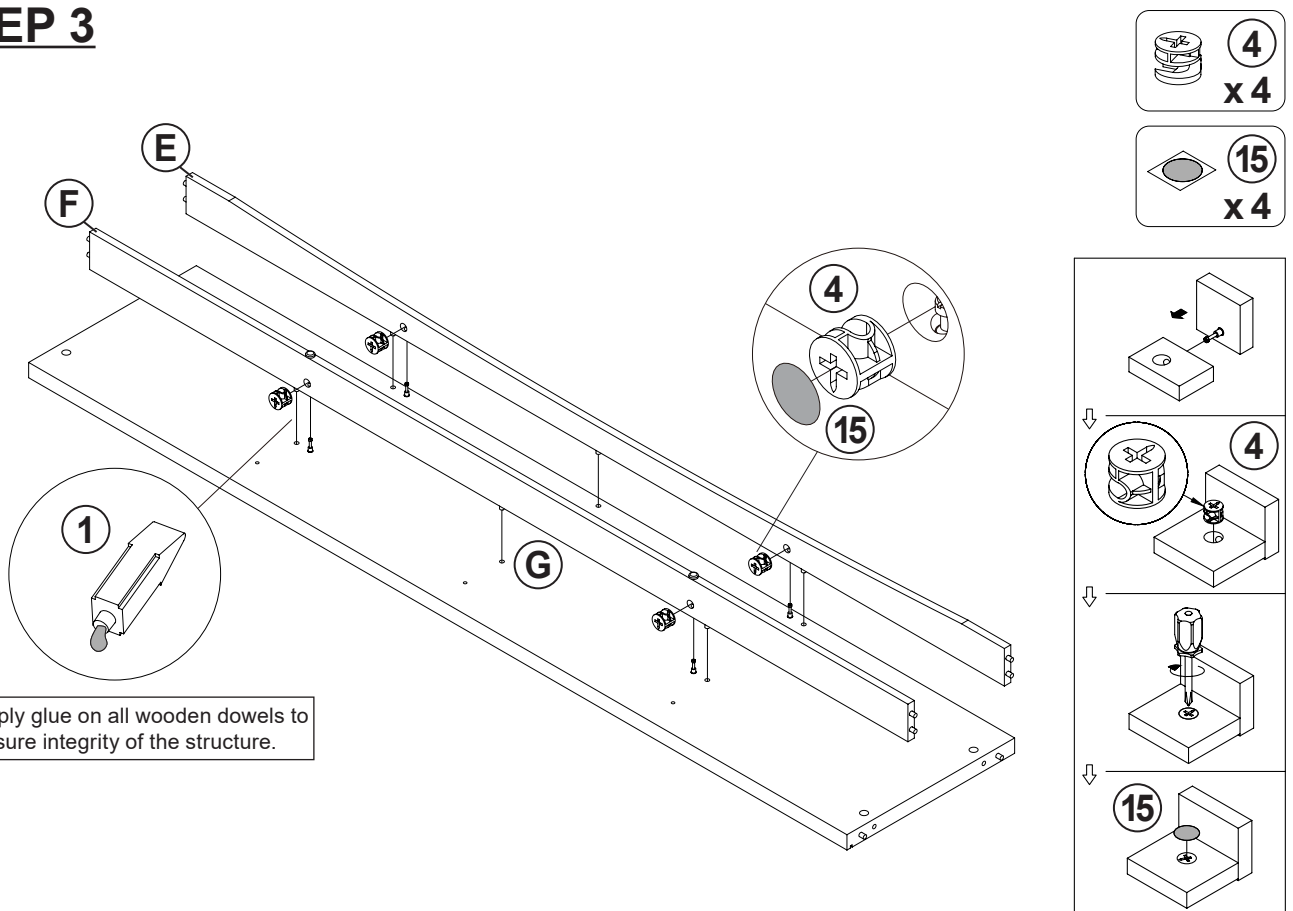



ITEM: **724123**

STEP 4

  COASTER
FINE FURNITURE

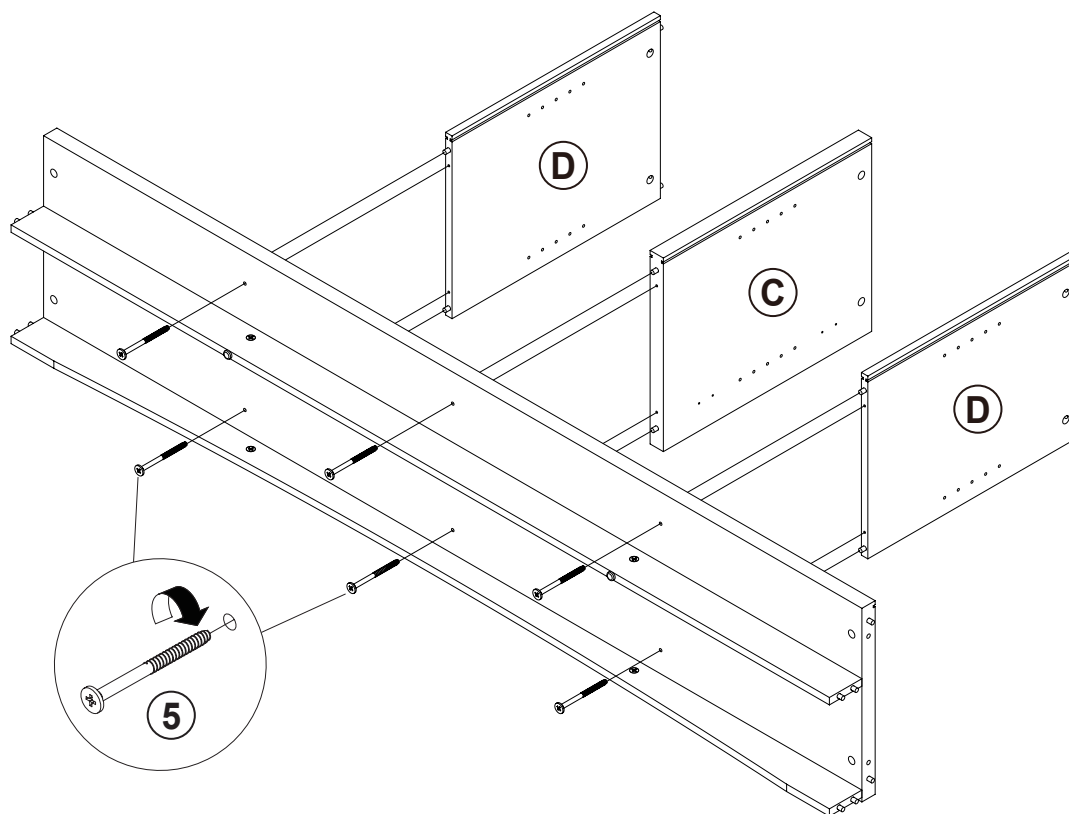

  
STEP 5

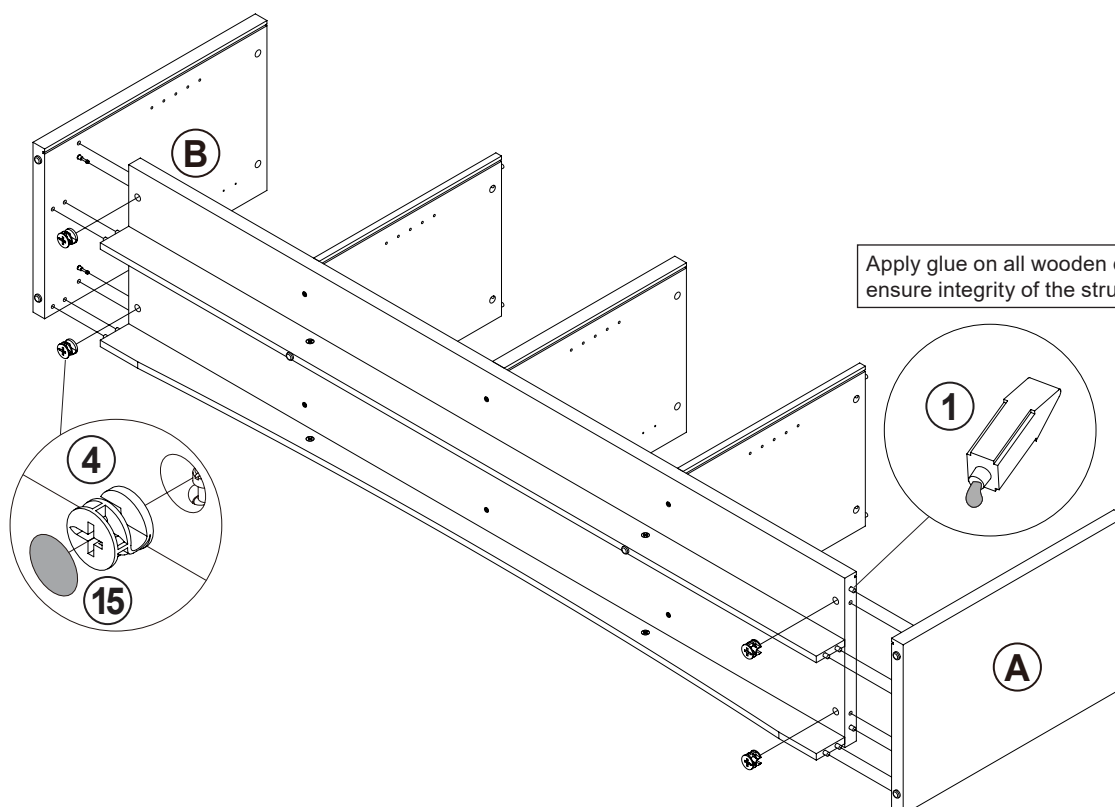

Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: **724123**

 STEP 6

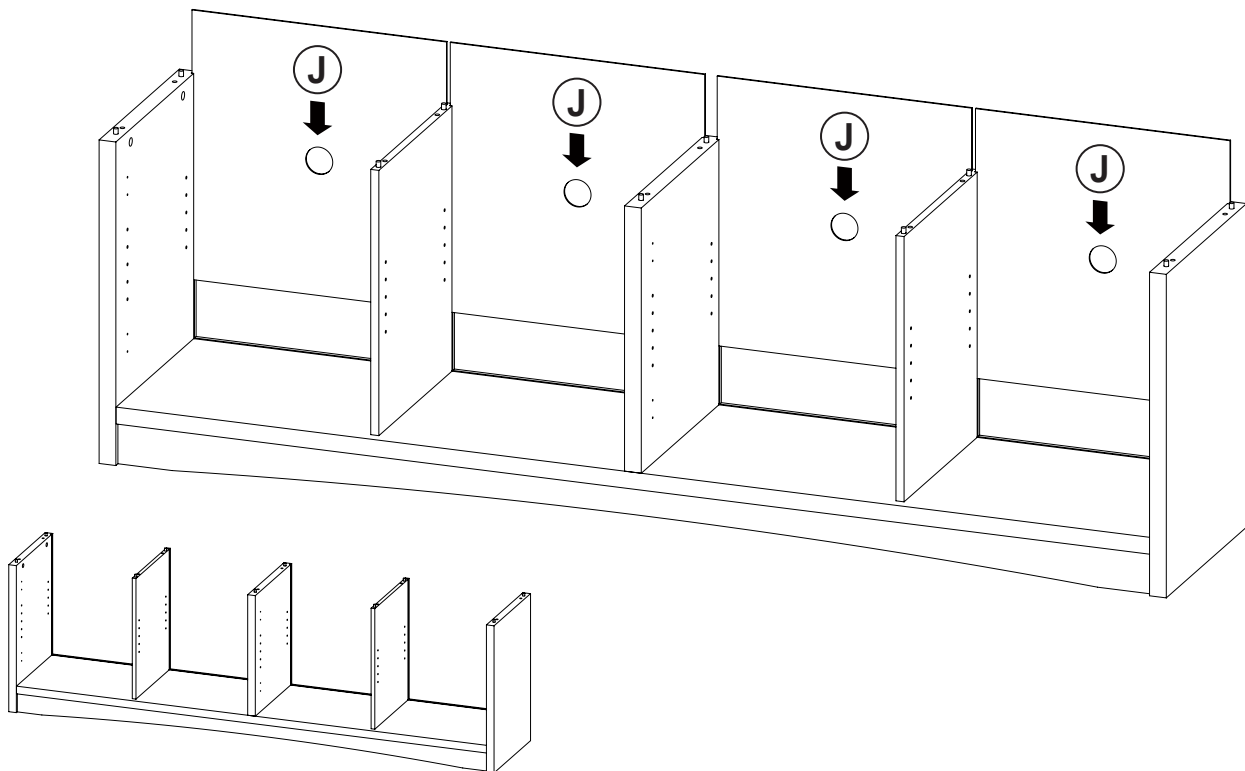

STEP 7

  
 
Apply glue on all wooden dowels to ensure integrity of the structure.

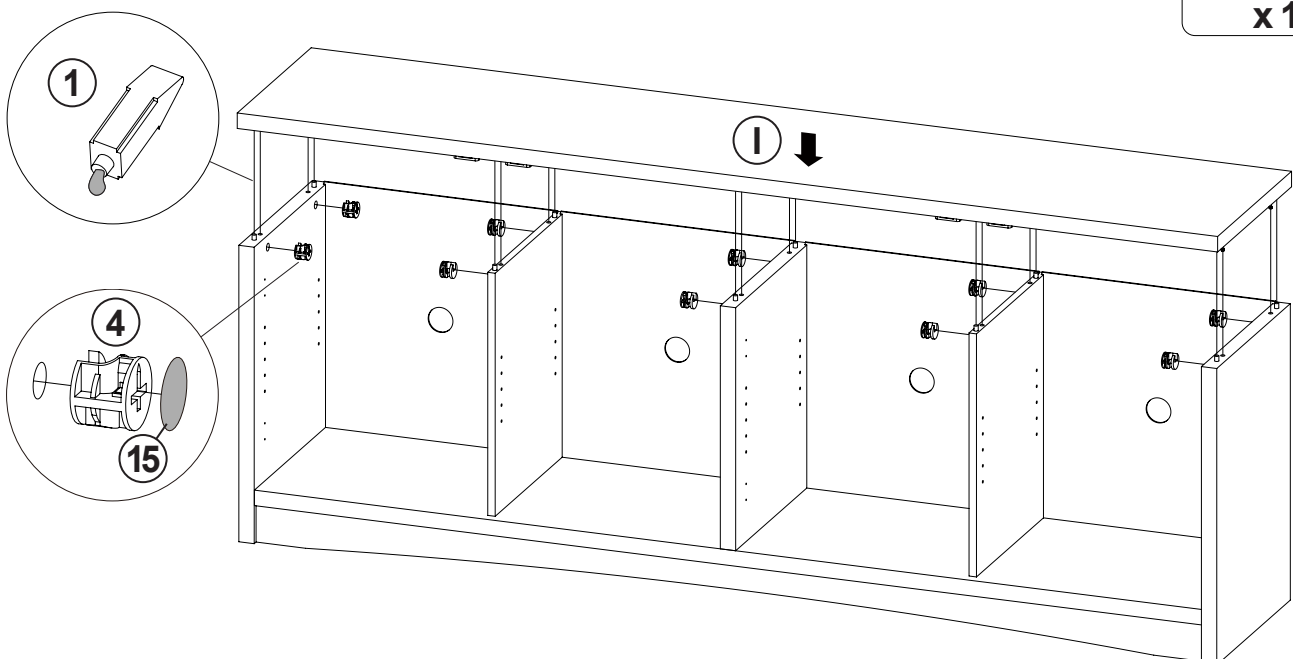



ITEM: **724123**

STEP 8

  COASTER
FINE FURNITURE

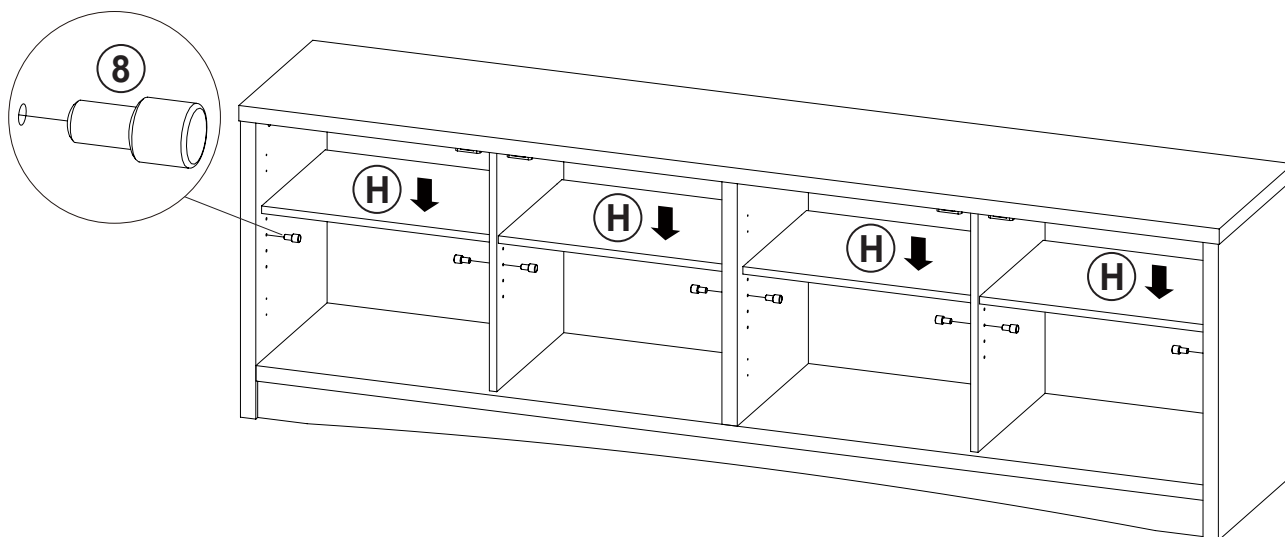

 
 
STEP 9

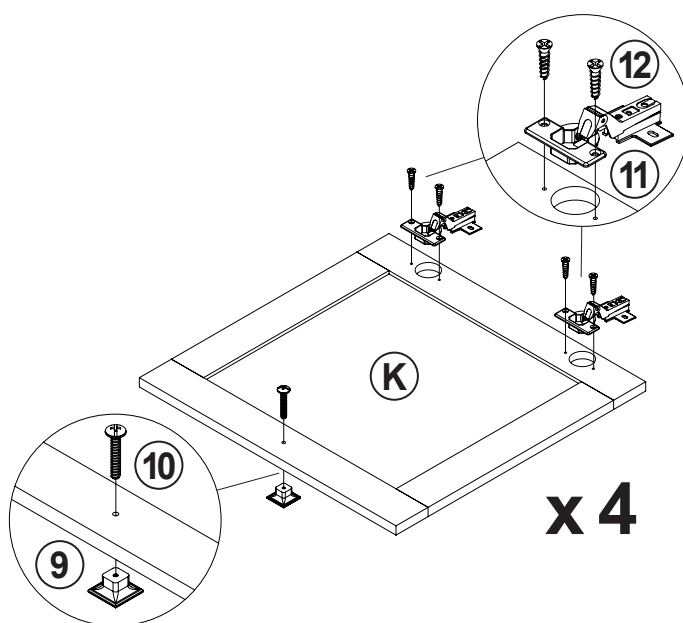


ITEM: **724123**

STEP 10

  COASTER
FINE FURNITURE

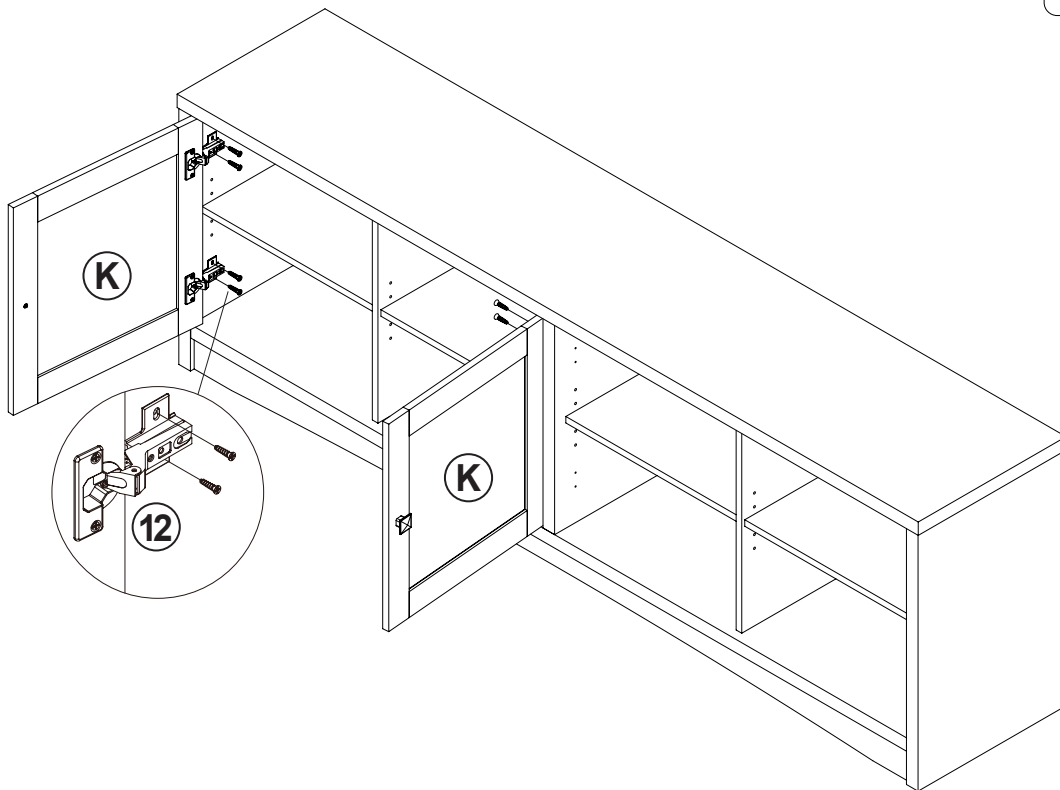





 
STEP 11

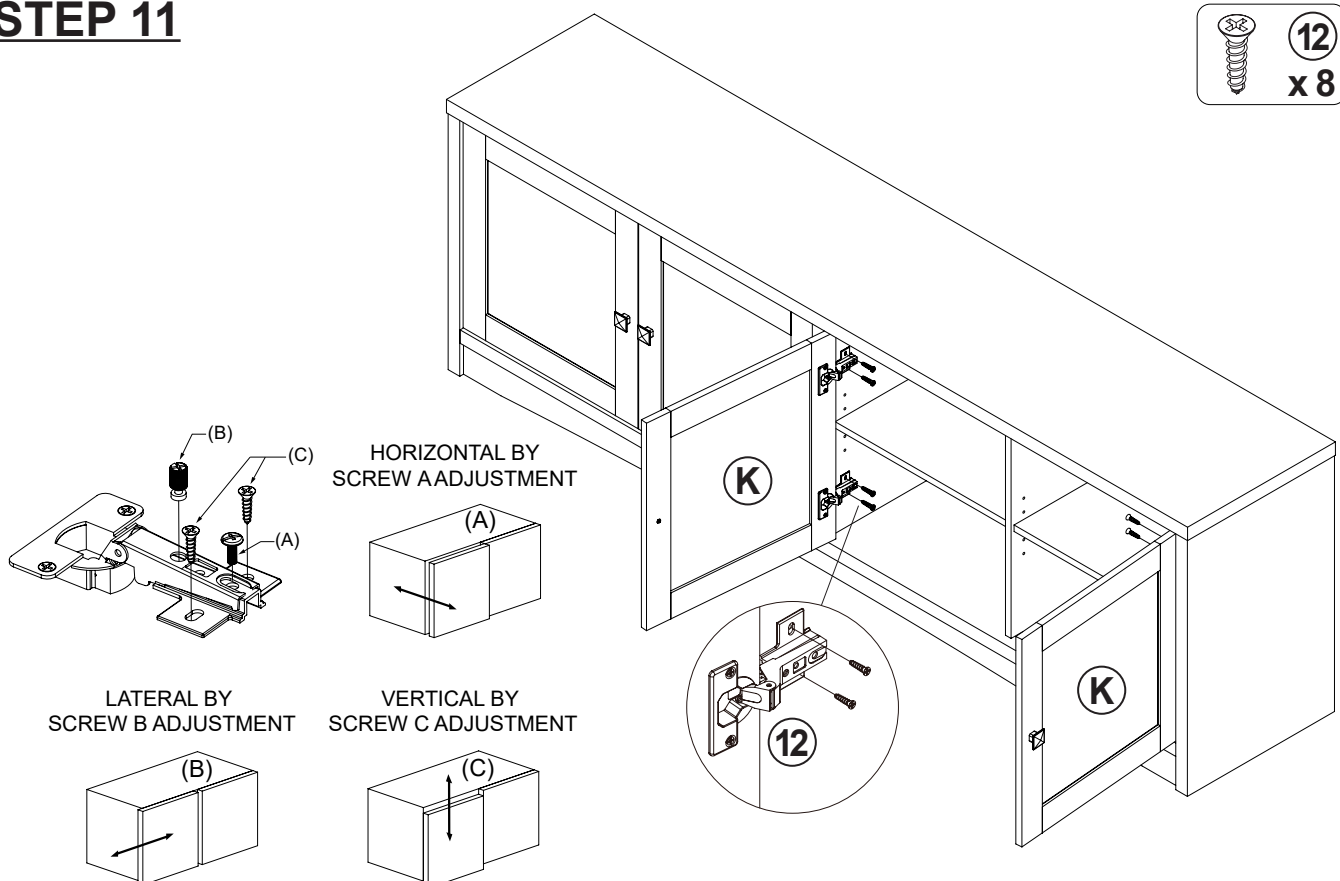

ITEM: **724123**



STEP 12

     COASTER
FINE FURNITURE

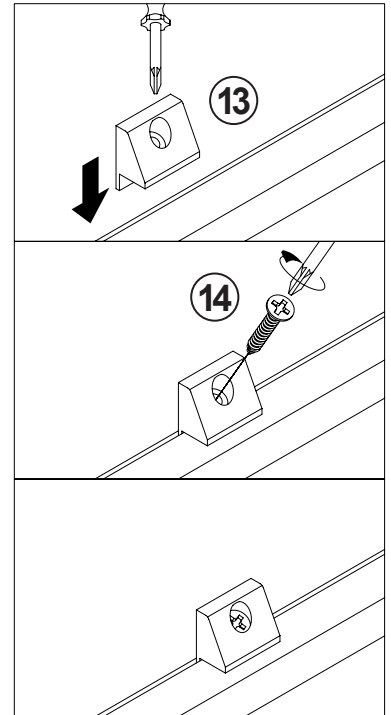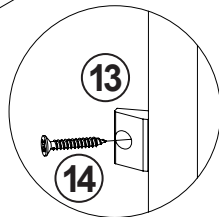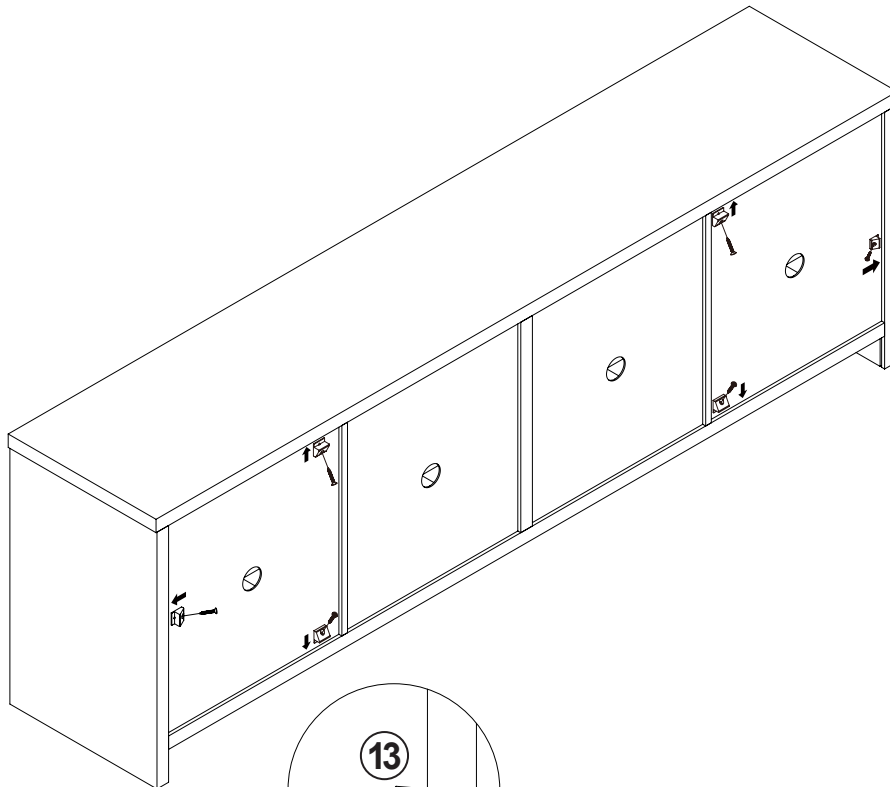



STEP 13

  COMPLETE

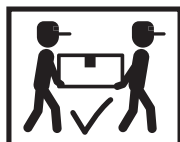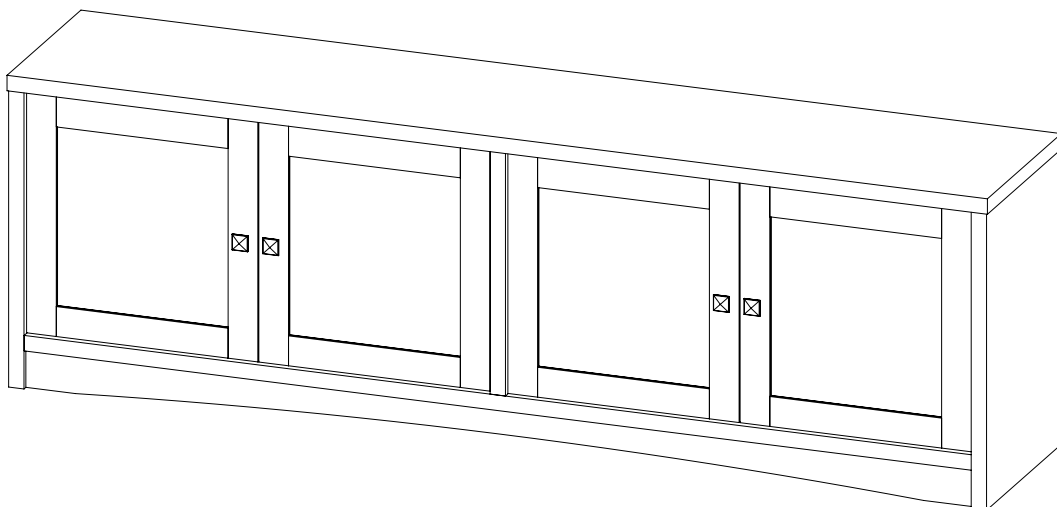

ITEM: 724123

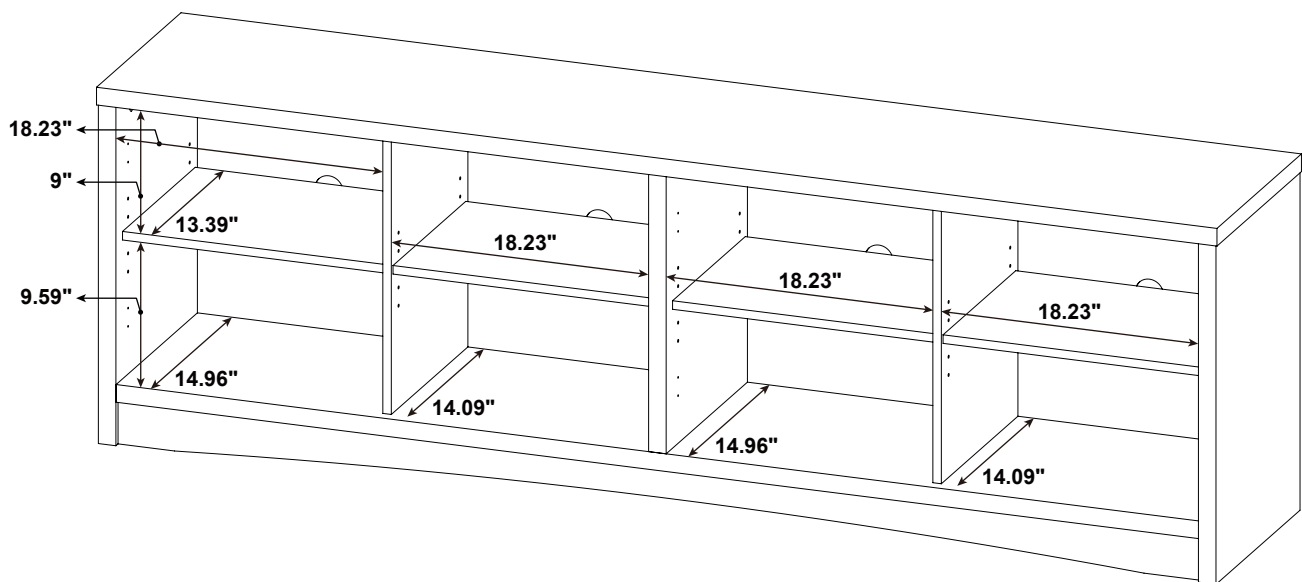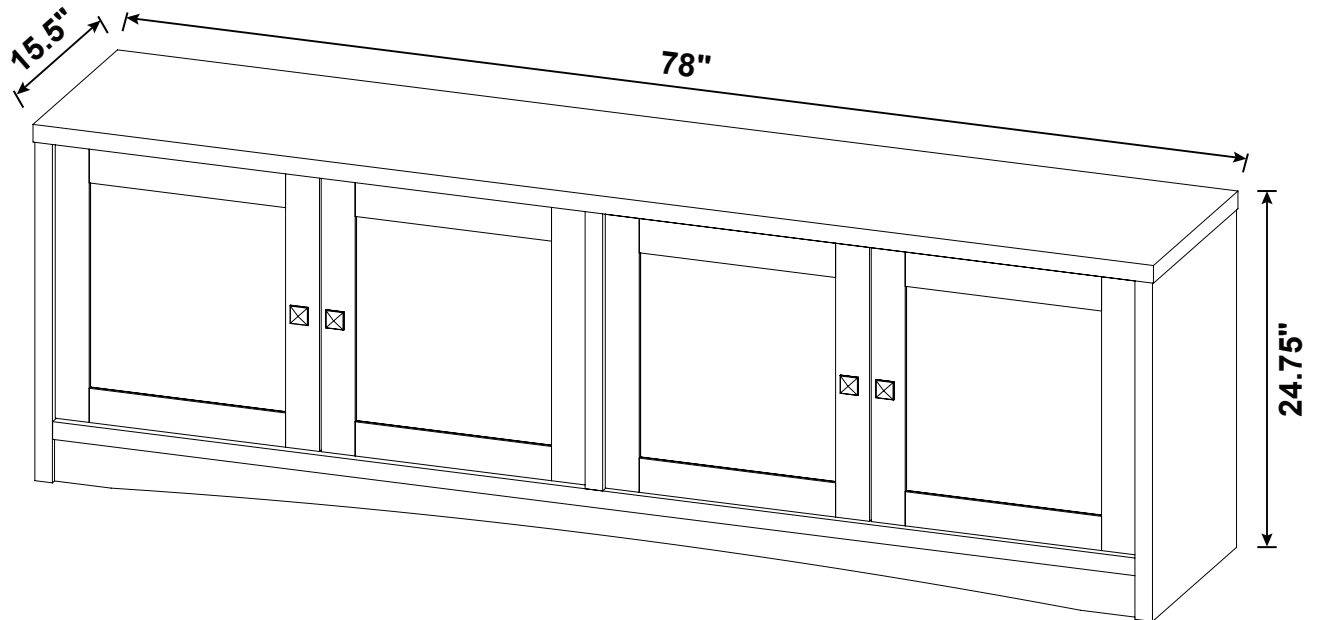  

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

724124
MEDIA TOWER

ITEM:724124

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

60 MINUTES


PARTS IDENTIFICATION

A LEFT SIDE
PANEL

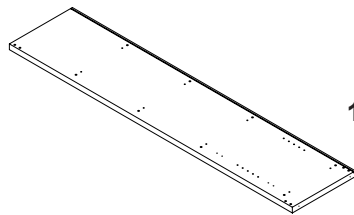


1 PC

 B RIGHT SIDE
PANEL

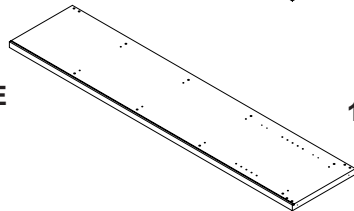


1 PC

 C BOTTOM PANEL

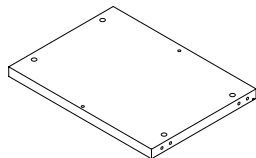


1 PC

 D LOWER CROSS
PANEL

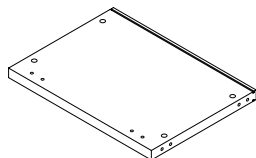


1 PC

 E UPPER CROSS
PANEL

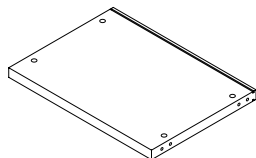


2 PCS

 F TOP PANEL

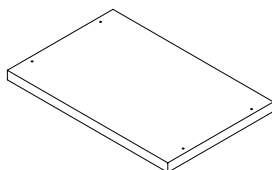


1 PC

 G ADJUSTABLE
SHELF

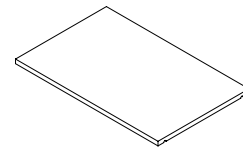


1 PC

 H FRONT TOP
AND BOTTOM
CROSSBAR




2 PCS

 I BACK CROSS
BRACE




1 PC

 J LOWER BACK
PANEL

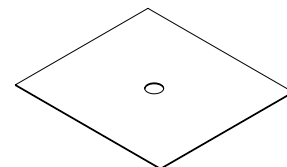


1 PC

 K UPPER BACK
PANEL

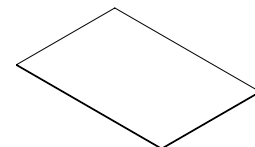

3 PCS

 L DOOR

 
 
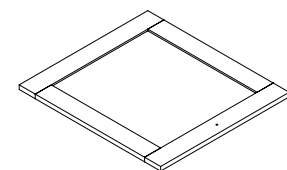 

 
 


 

 

 
 
 


1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **724124****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HANDLE BLK		1 PC
2	WOODEN DOWEL Ø8x30mm		35 PCS	10	HANDLE BOLT BLK		1 PC
3	CAM BOLT Ø7x35.5mm SR		16 PCS	11	HINGE Ø35mm SR		2 PCS
4	CAM LOCK Ø15x12mm SR		16 PCS	12	HINGE SCREW Ø4x15mm SR		8 PCS
5	BOLT Ø9.5x55mm SR		4 PCS	13	FIXER		6 PCS
6	DOOR CATCH		1 PC	14	FIXER SCREW Ø3x19mm SR		6 PCS
7	PLASTIC FEET Ø15mm		4 PCS	15	STICKER Ø20mm		3 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		4 PCS				

 
 
 
Z11 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **724124**

STEP 1

COASTER
FINE FURNITURE

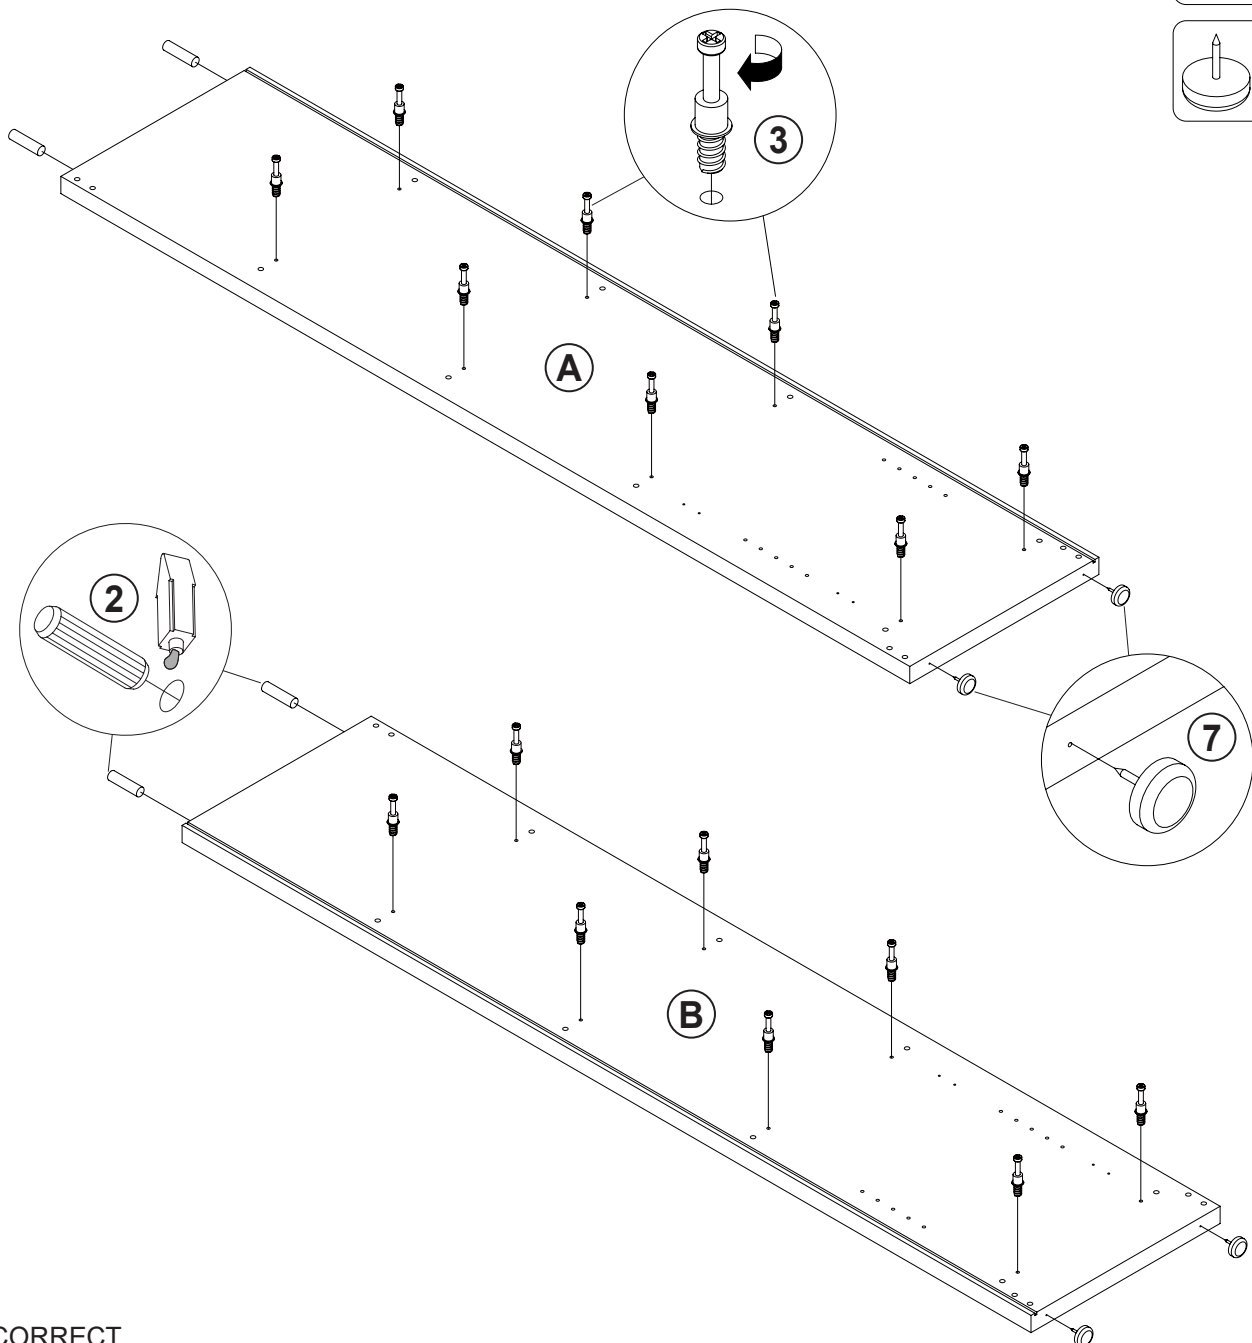

INCORRECT
CORRECT


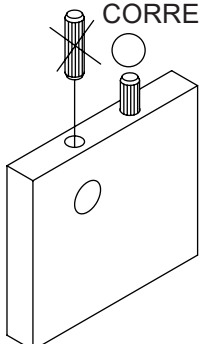 


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **724124**

STEP 2

  
COASTER
FINE FURNITURE

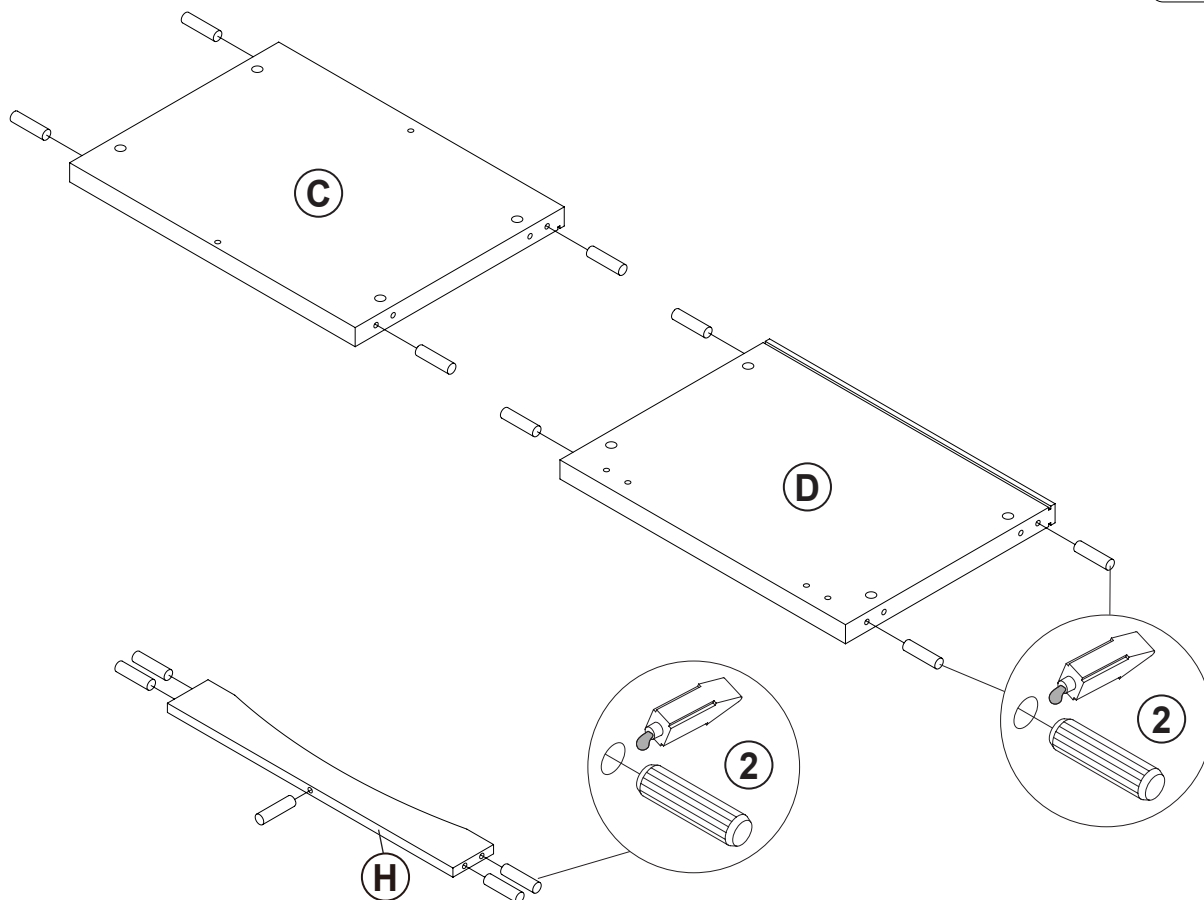

x 2

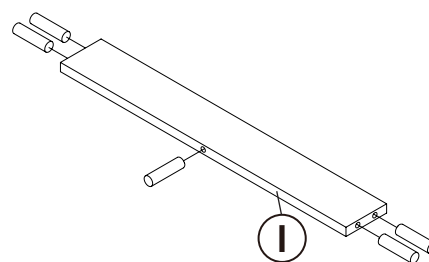 


I

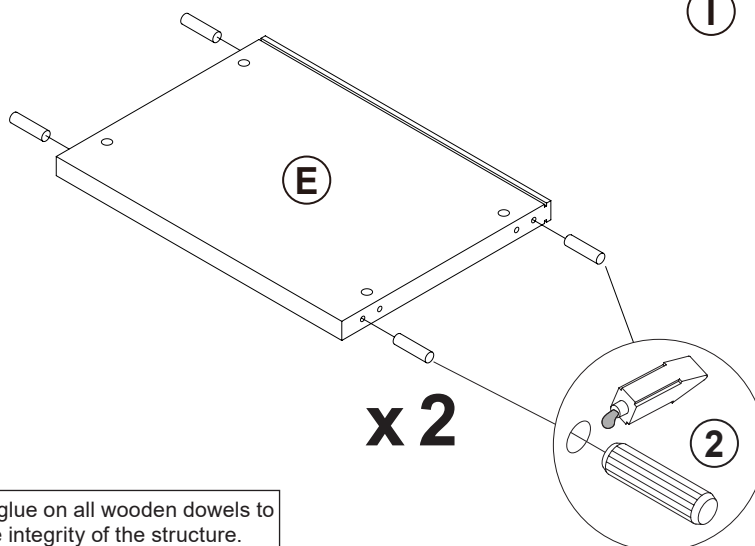 

x 2

 
INCORRECT
CORRECT

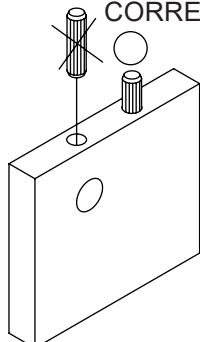

Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: **724124**

 STEP 3

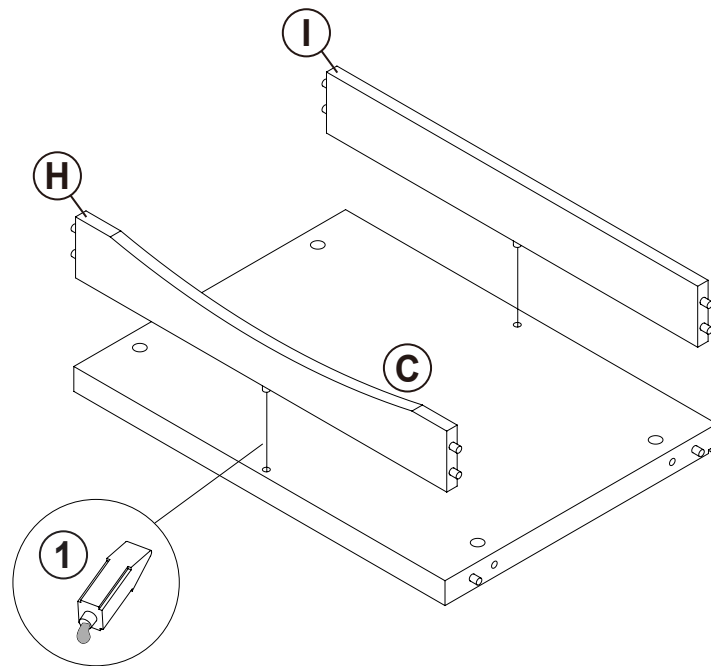

Apply glue on all wooden dowels to ensure integrity of the structure.

   STEP 4

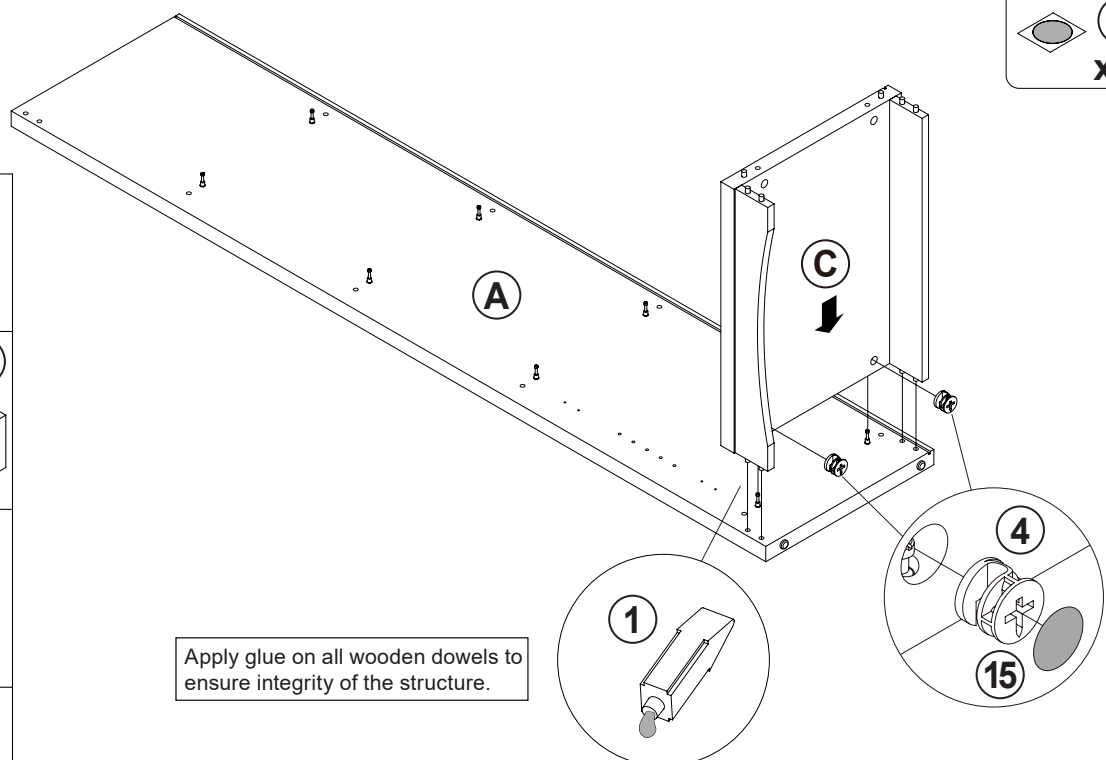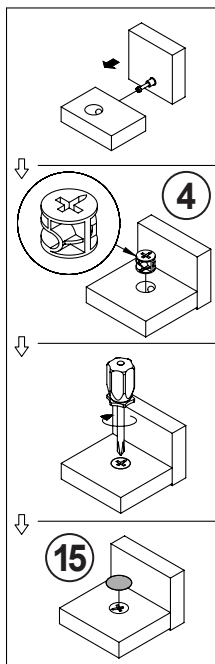



Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **724124**


STEP 5

  COASTER
FINE FURNITURE

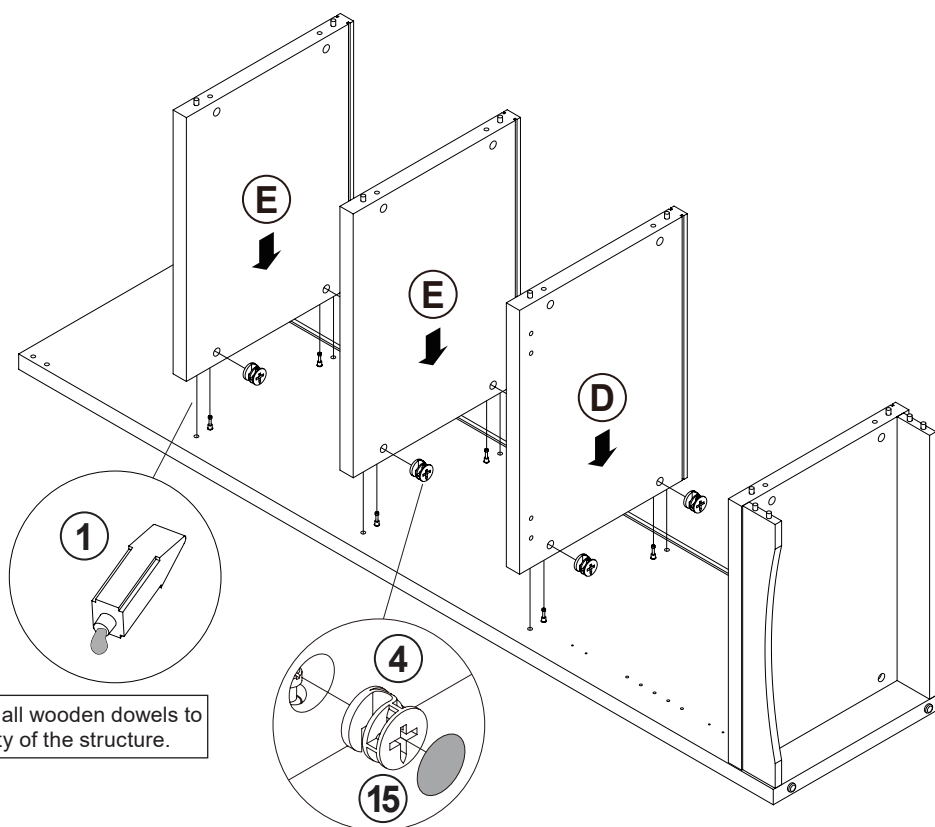

Apply glue on all wooden dowels to ensure integrity of the structure.


 
STEP 6

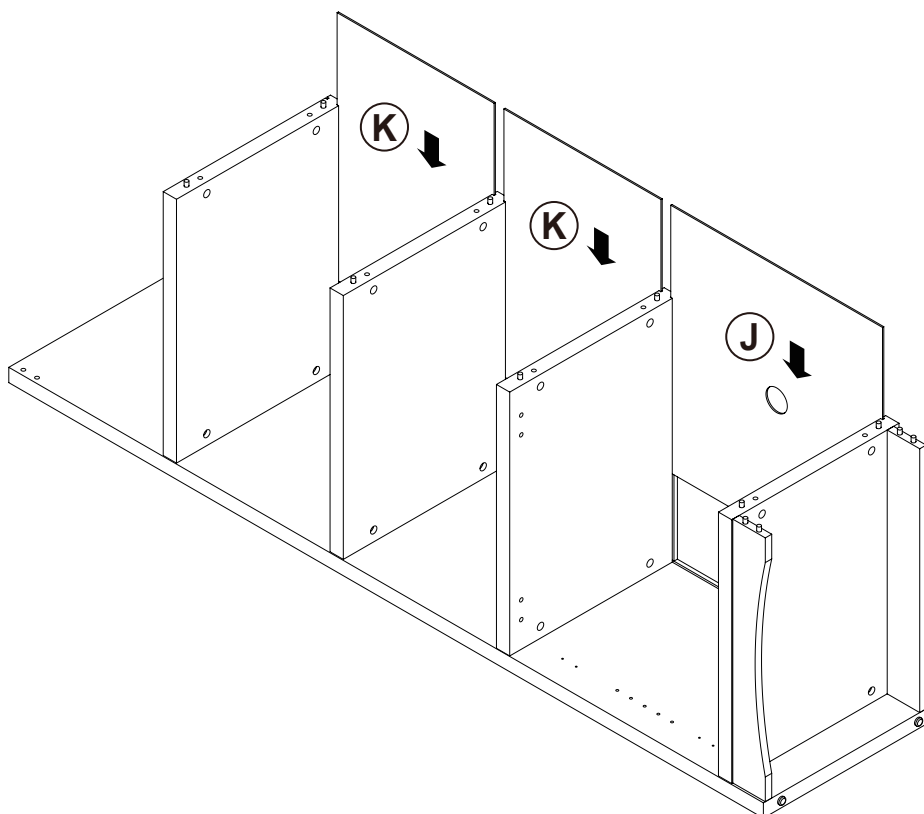



ITEM: **724124**

STEP 7

  COASTER
FINE FURNITURE

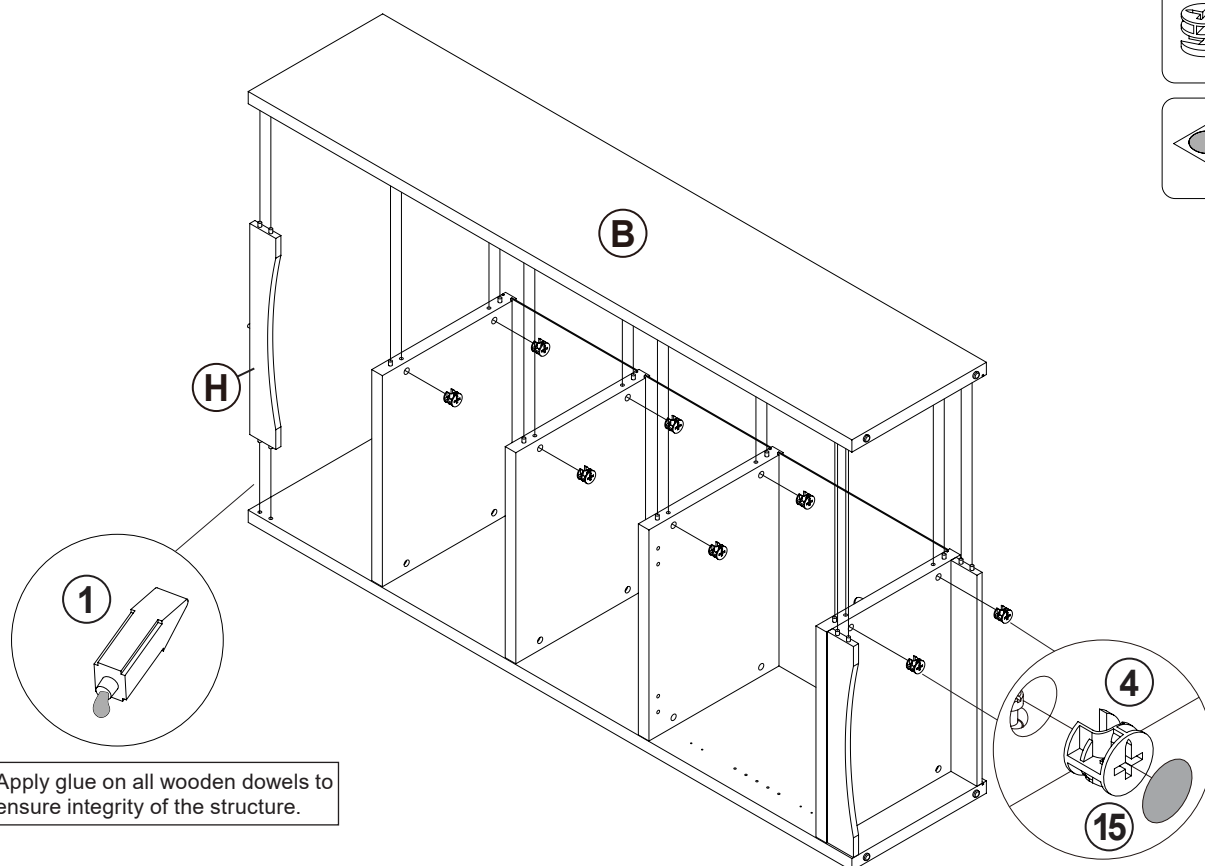

 
 
STEP 8

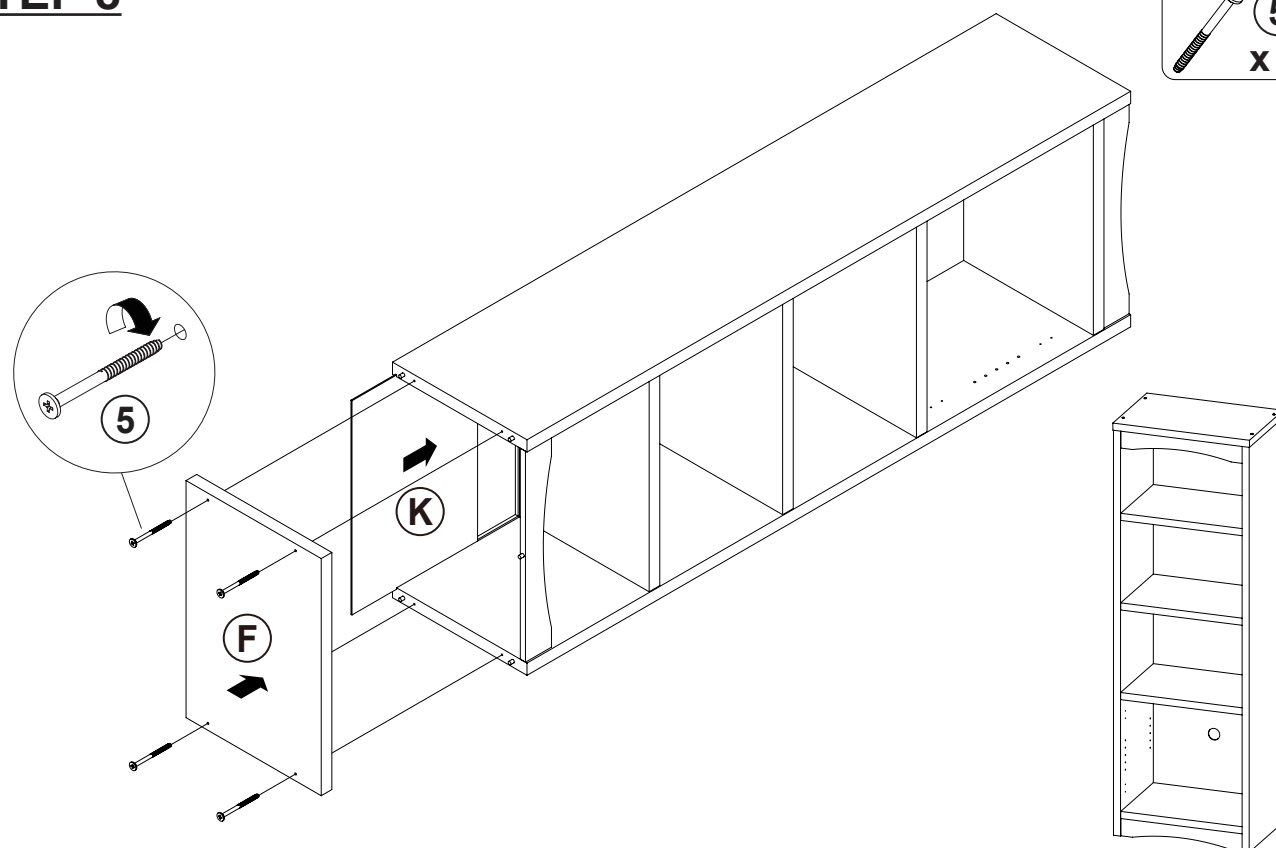






ITEM: **724124**

STEP 9

  COASTER
FINE FURNITURE

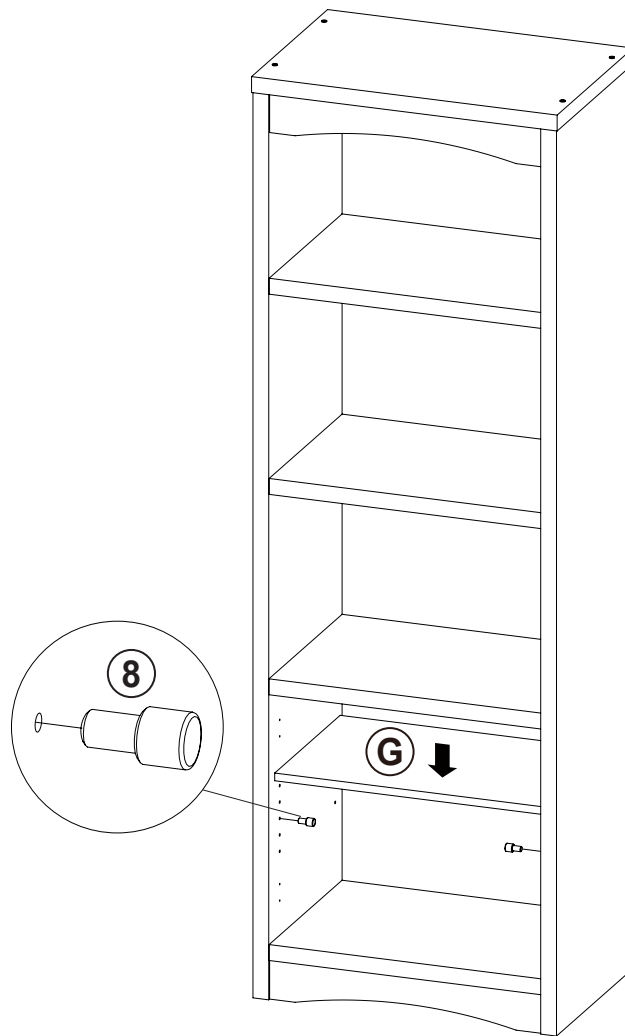

     STEP 10


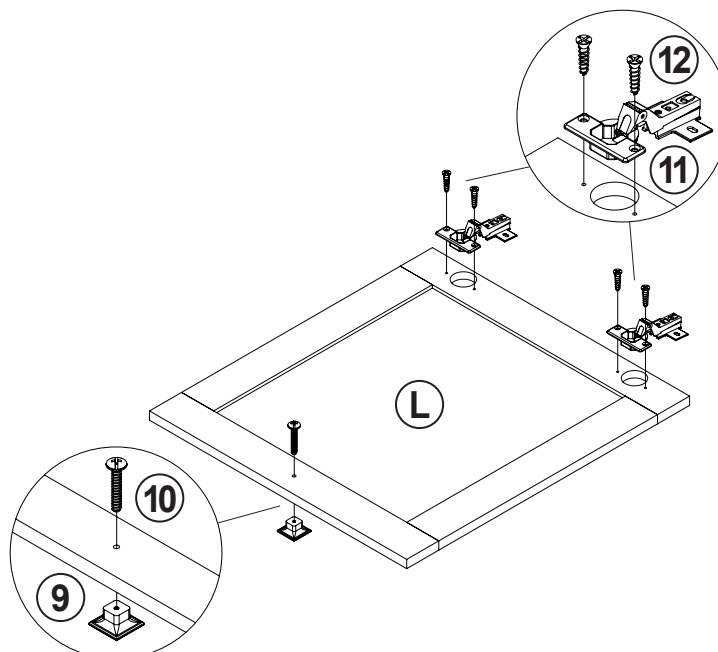


ITEM: **724124**


STEP 11

LEFT

  COASTER
FINE FURNITURE

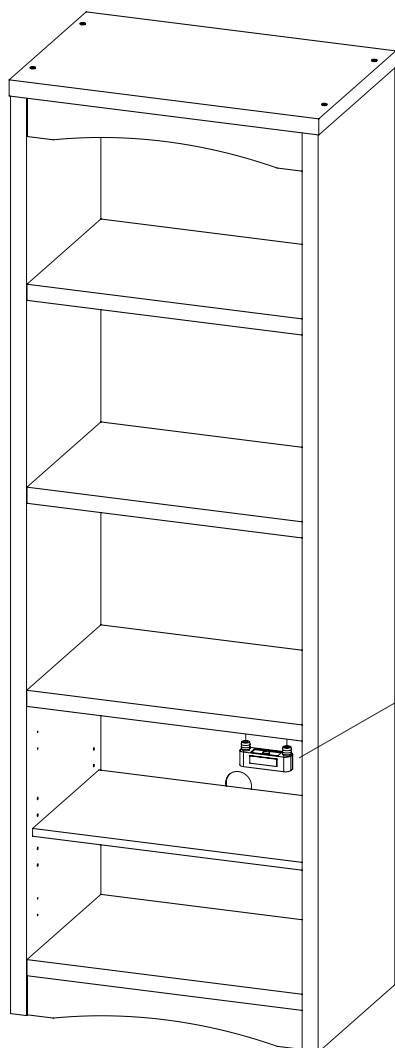

RIGHT

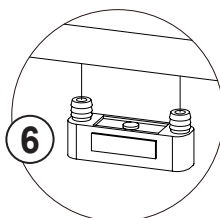 


ITEM: **724124**


COASTER
FINE FURNITURE

STEP 12

 
LEFT

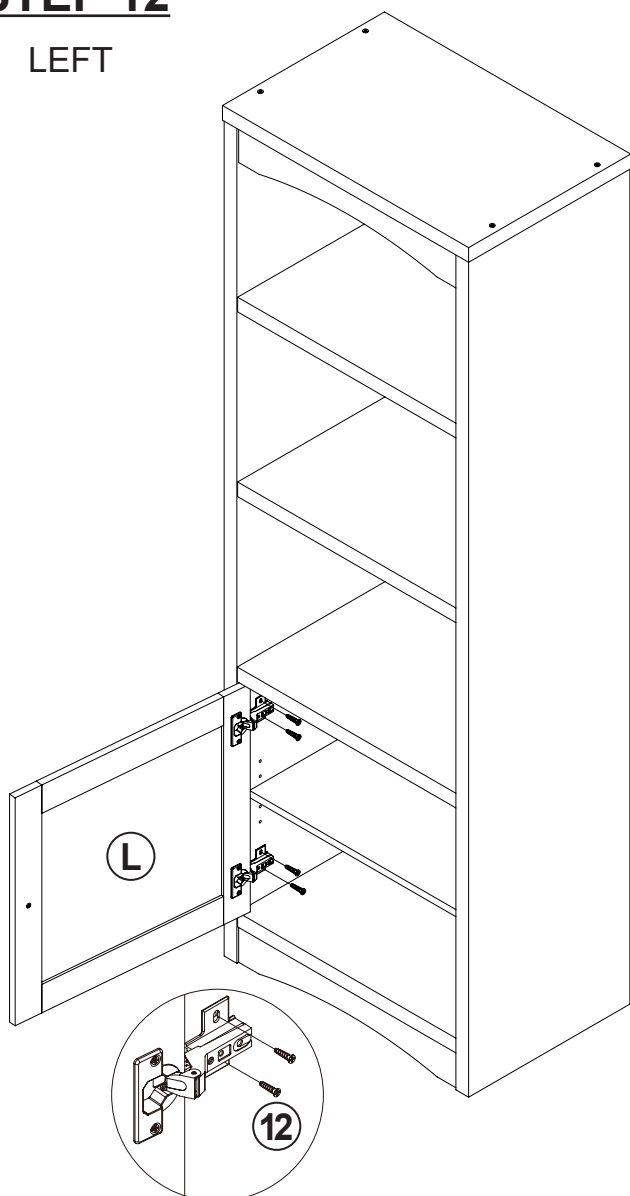


RIGHT

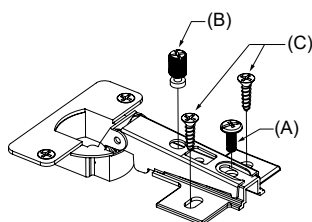 



HORIZONTAL BY
SCREW A ADJUSTMENT

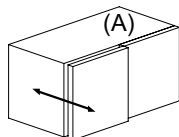 

LATERAL BY
SCREW B ADJUSTMENT

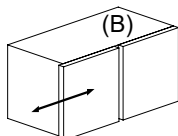 






VERTICAL BY
SCREW C ADJUSTMENT

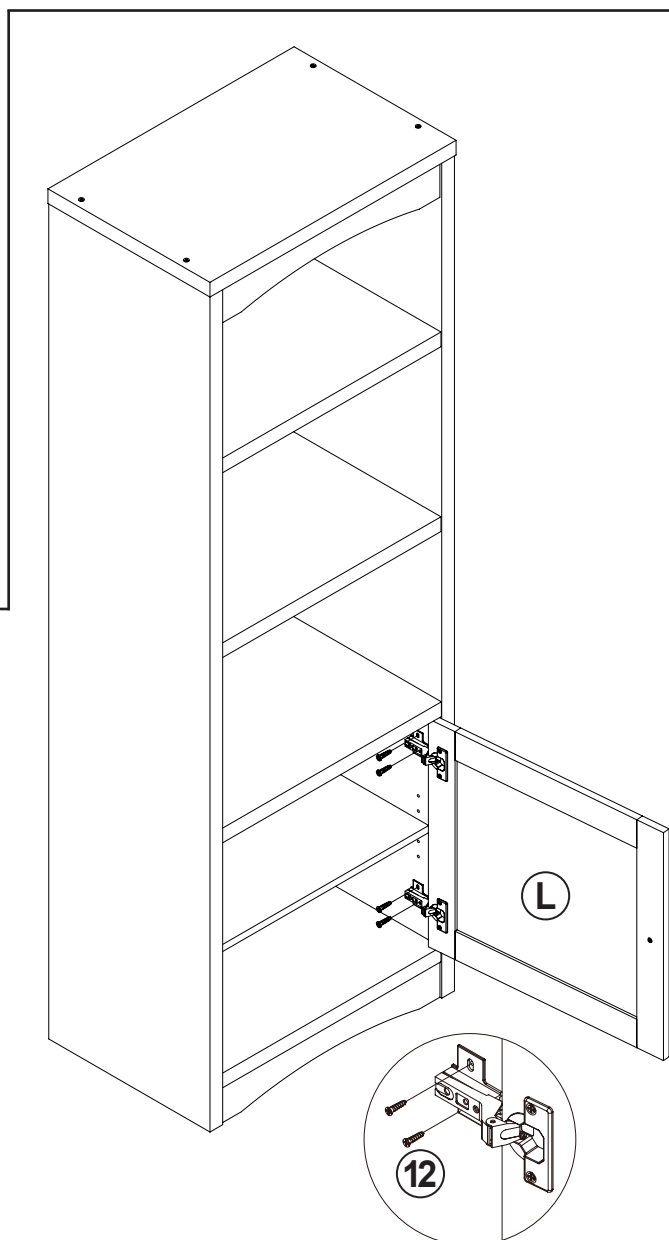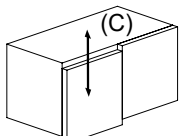  

ITEM: **724124**


STEP 13

     COASTER
FINE FURNITURE

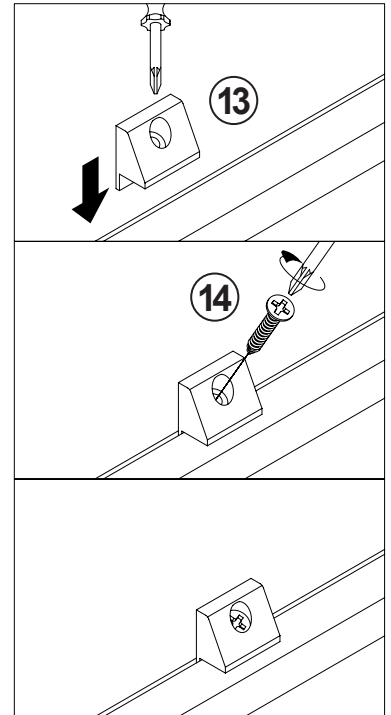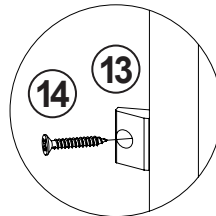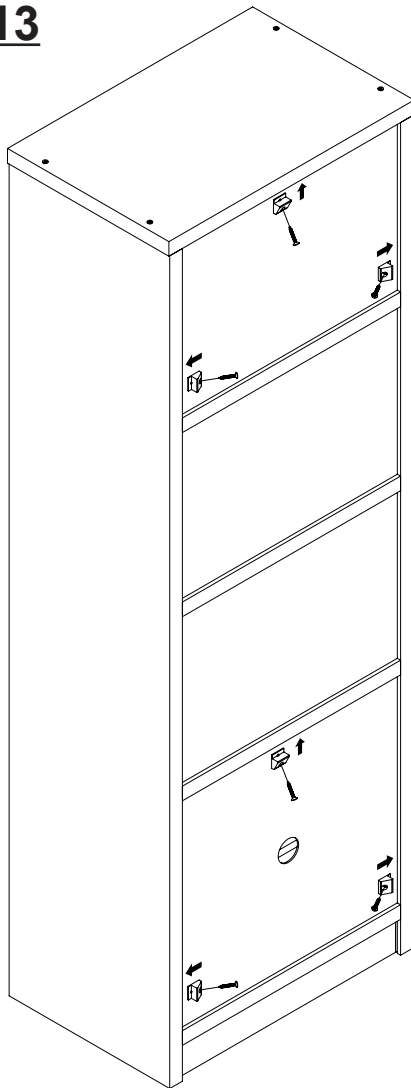


STEP 14

 COMPLETE

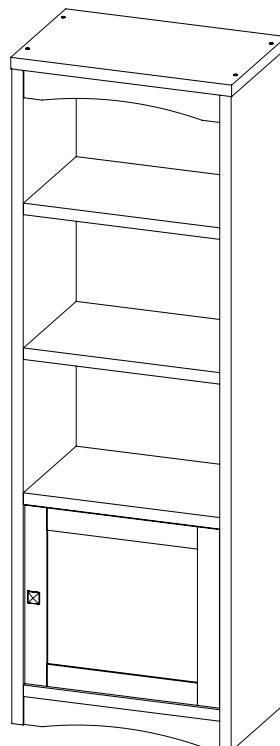

ITEM: 724124

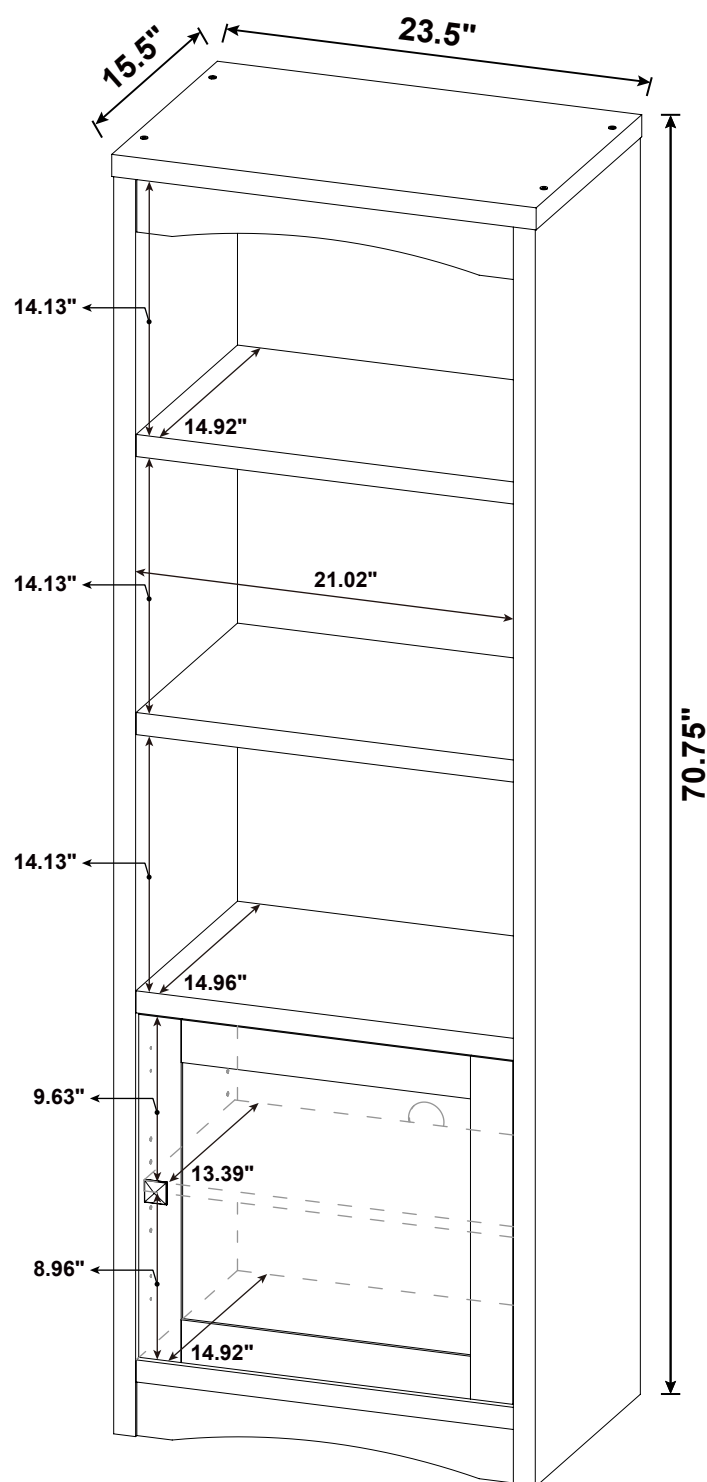 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

 
FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

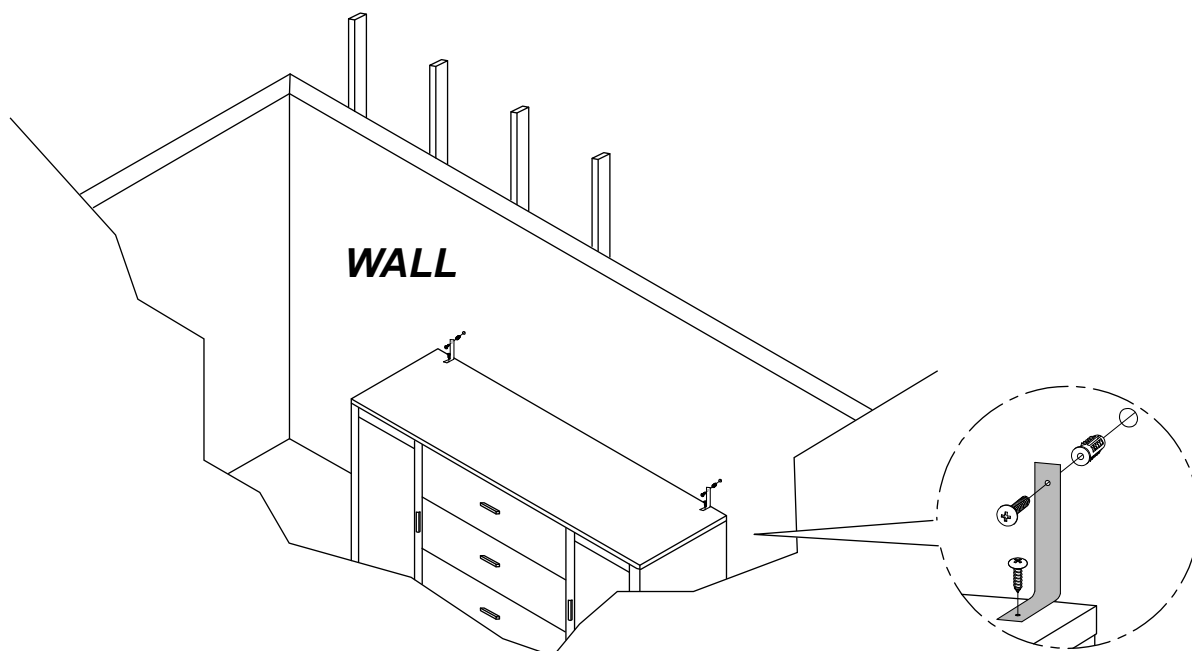

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

724124
MEDIA TOWER

ITEM:724124

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

 
 
 

 
 


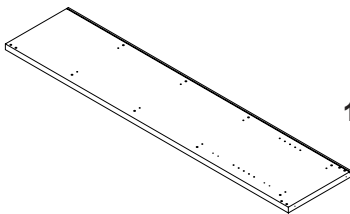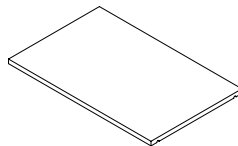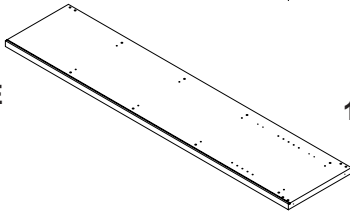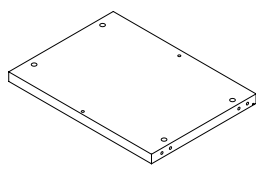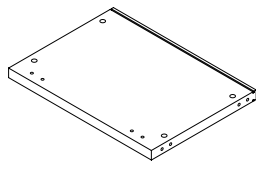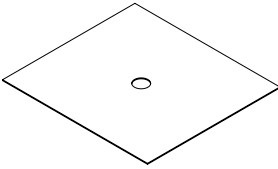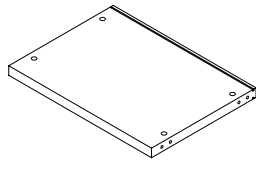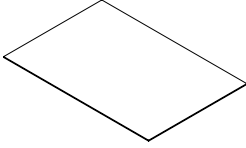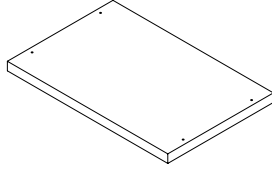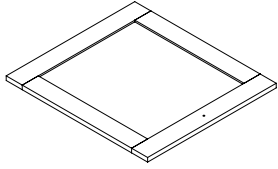 

 





PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	G	ADJUSTABLE SHELF		1 PC
B	RIGHT SIDE PANEL		1 PC	H	FRONT TOP AND BOTTOM CROSSBAR		2 PCS
C	BOTTOM PANEL		1 PC	I	BACK CROSS BRACE		1 PC
D	LOWER CROSS PANEL		1 PC	JN	LOWER BACK PANEL		1 PC
E	UPPER CROSS PANEL		2 PCS	K	UPPER BACK PANEL		3 PCS
F	TOP PANEL		1 PC	L	DOOR		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

  ITEM: **724124****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HANDLE BLK		1 PC
2	WOODEN DOWEL Ø8x30mm		35 PCS	10	HANDLE BOLT BLK		1 PC
3	CAM BOLT Ø7x35.5mm SR		16 PCS	11	HINGE Ø35mm SR		2 PCS
4	CAM LOCK Ø15x12mm SR		16 PCS	12	HINGE SCREW Ø4x15mm SR		8 PCS
5	BOLT Ø9.5x55mm SR		4 PCS	13	FIXER		6 PCS
6	DOOR CATCH		1 PC	14	FIXER SCREW Ø3x19mm SR		6 PCS
7	PLASTIC FEET Ø15mm		4 PCS	15	STICKER Ø20mm		3 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		4 PCS	16	PLASTIC COVER Ø 52mm		1 PC

 
 
 
Z11 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **724124**

STEP 1

COASTER
FINE FURNITURE

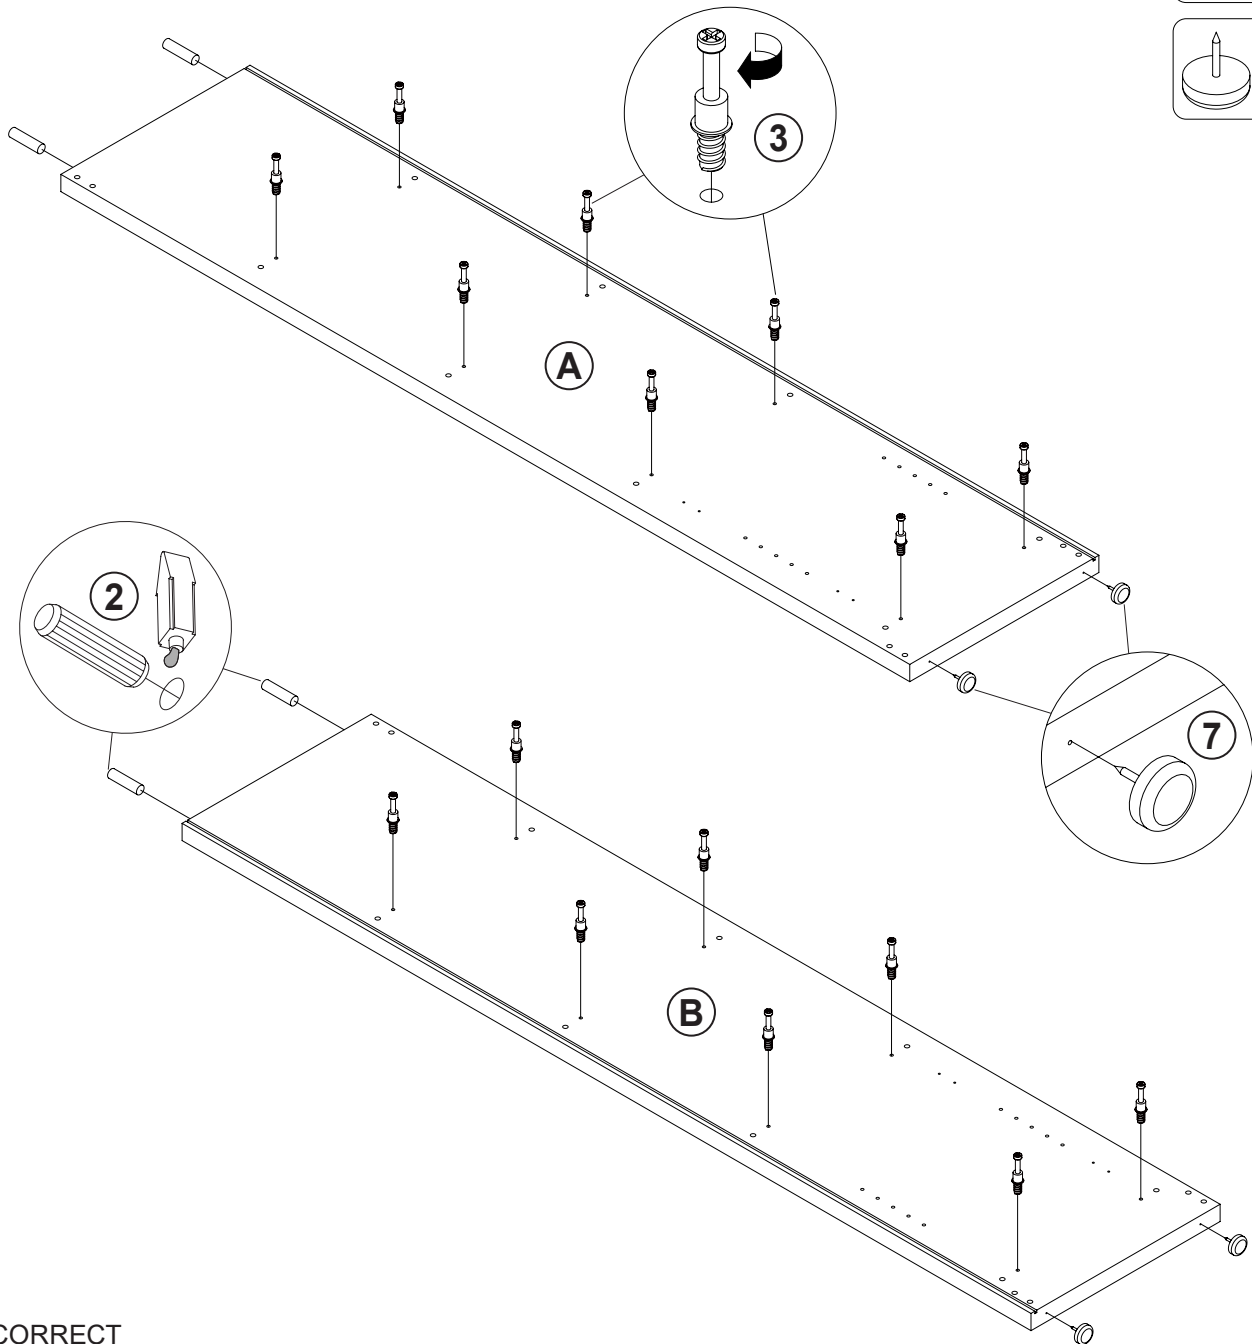

INCORRECT
CORRECT





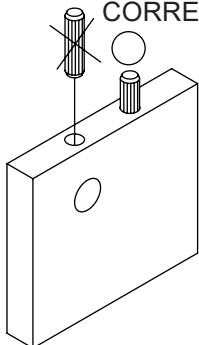 


Apply glue on all wooden dowels to ensure integrity of the structure.



ITEM: **724124**

STEP 2

     
COASTER
FINE FURNITURE

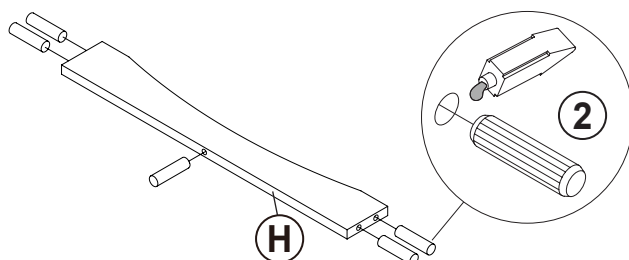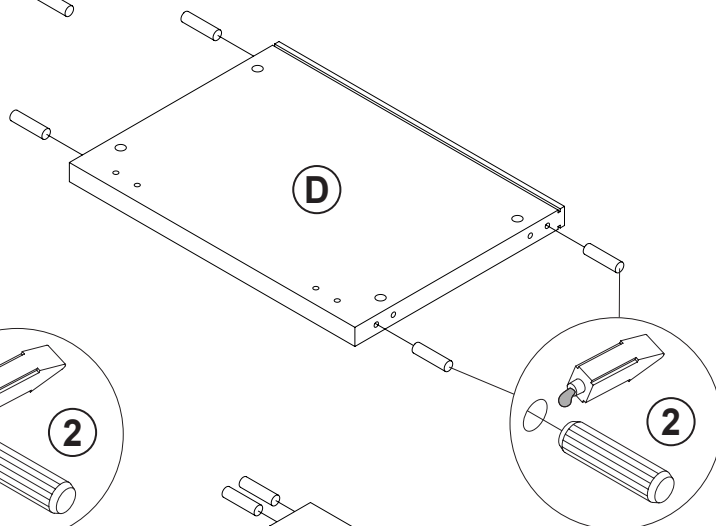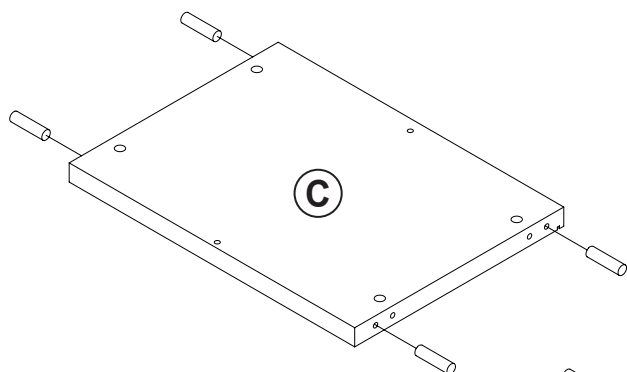


x 2

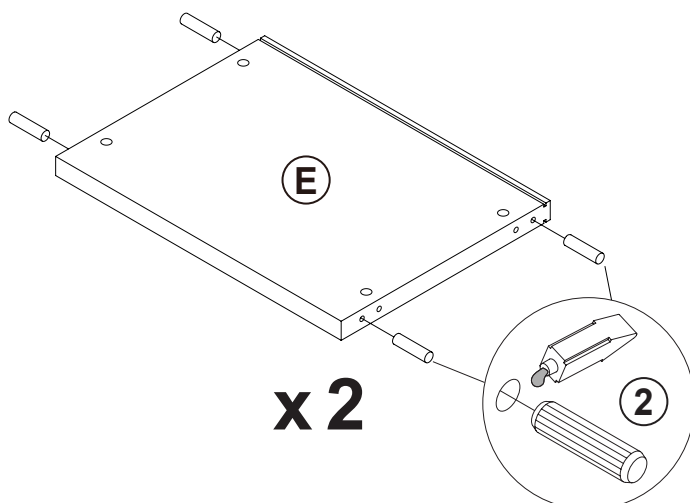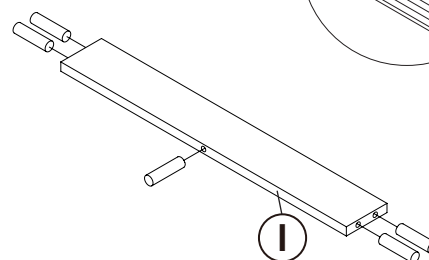  


x 2

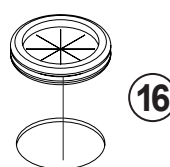 


16

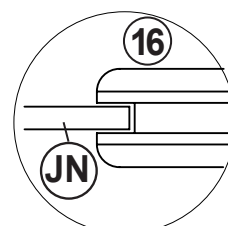 

Section

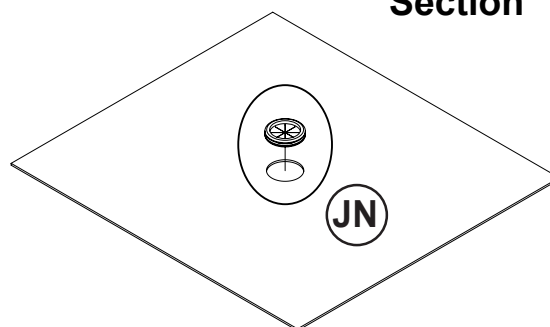 


INCORRECT
CORRECT

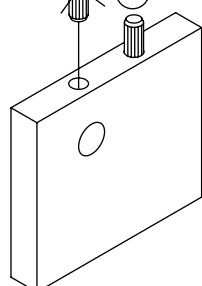 

Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: **724124**

 STEP 3

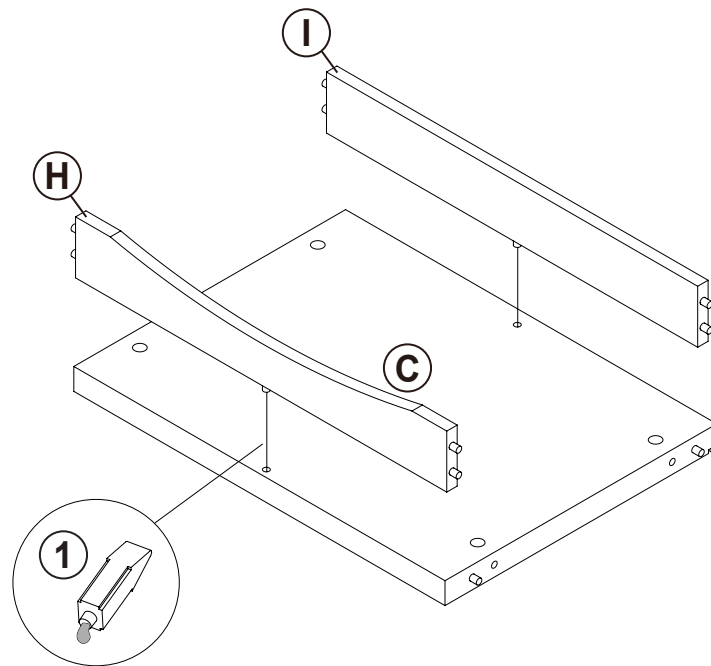

Apply glue on all wooden dowels to ensure integrity of the structure.

   STEP 4

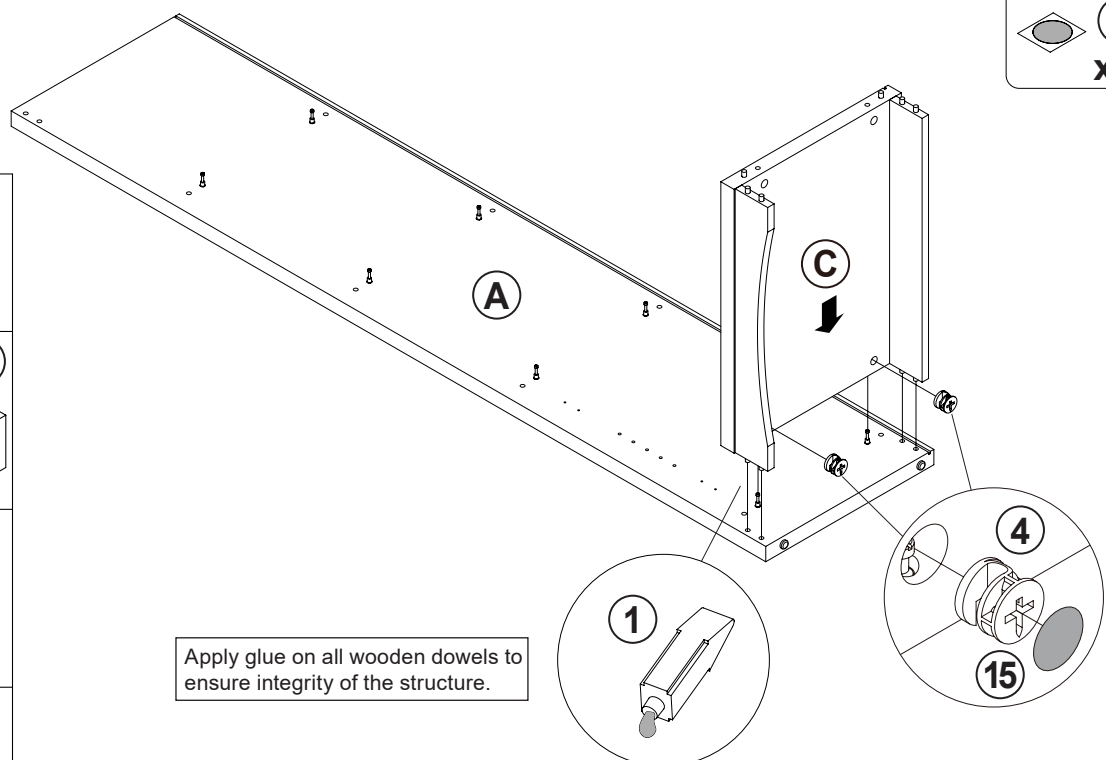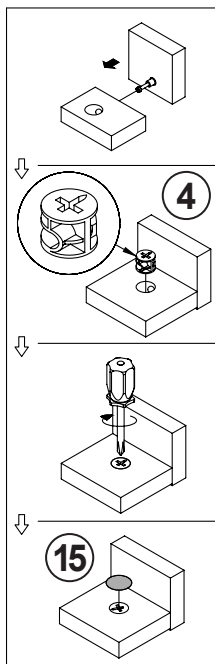



Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **724124**


STEP 5

  COASTER
FINE FURNITURE

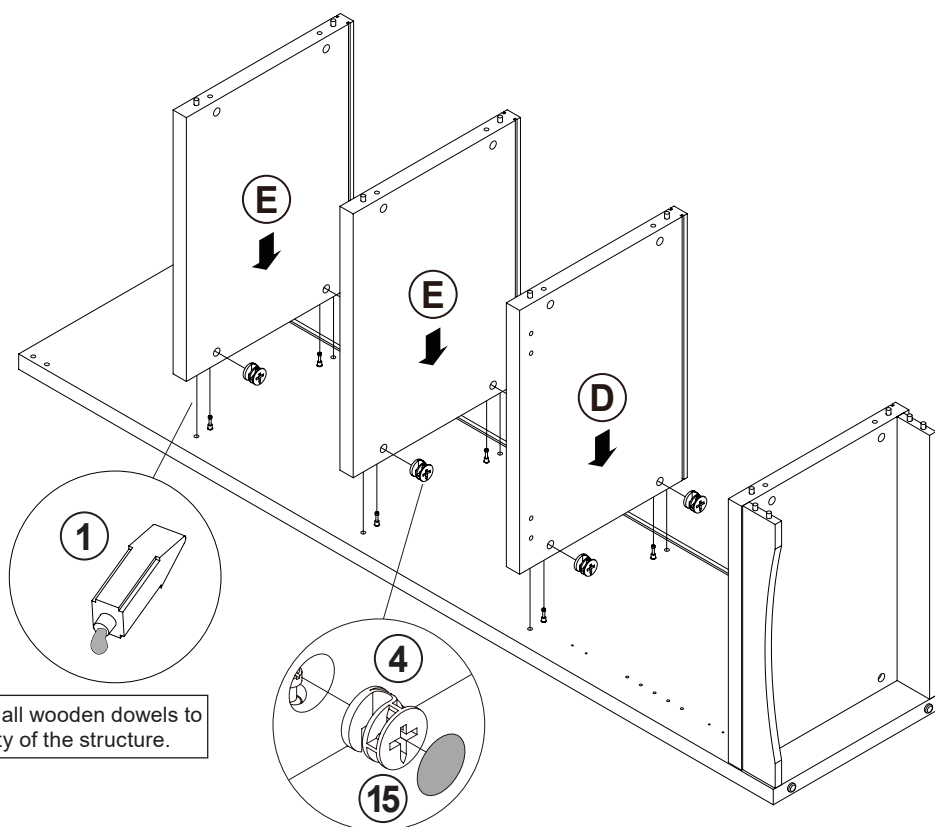

Apply glue on all wooden dowels to ensure integrity of the structure.


 
STEP 6

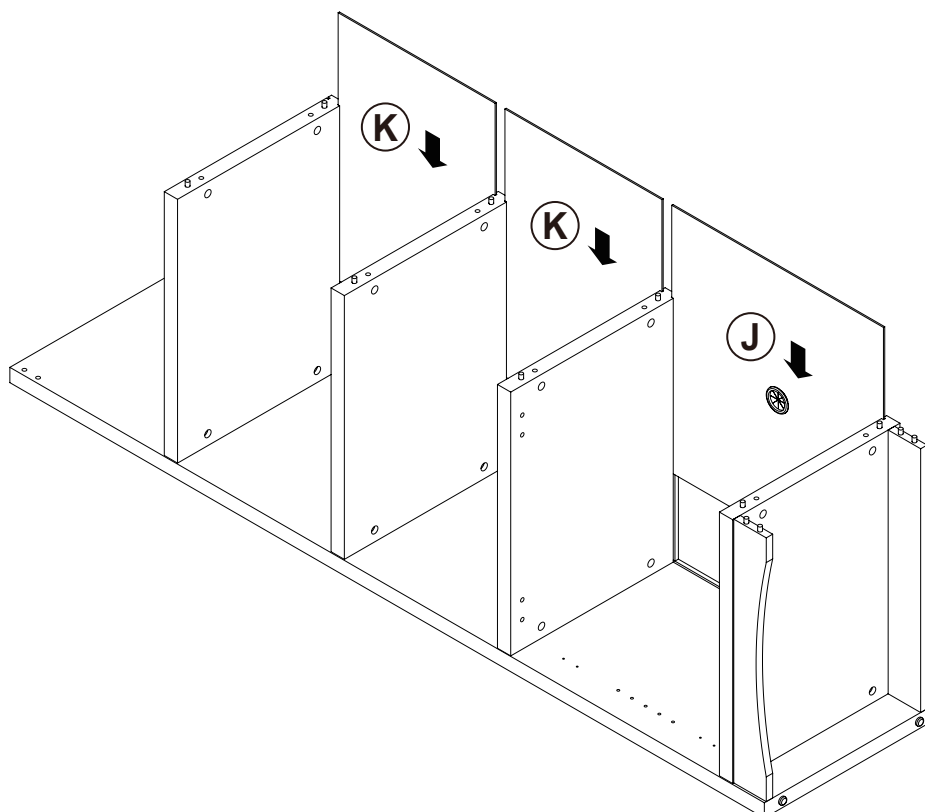


ITEM: **724124**

STEP 7

  COASTER
FINE FURNITURE

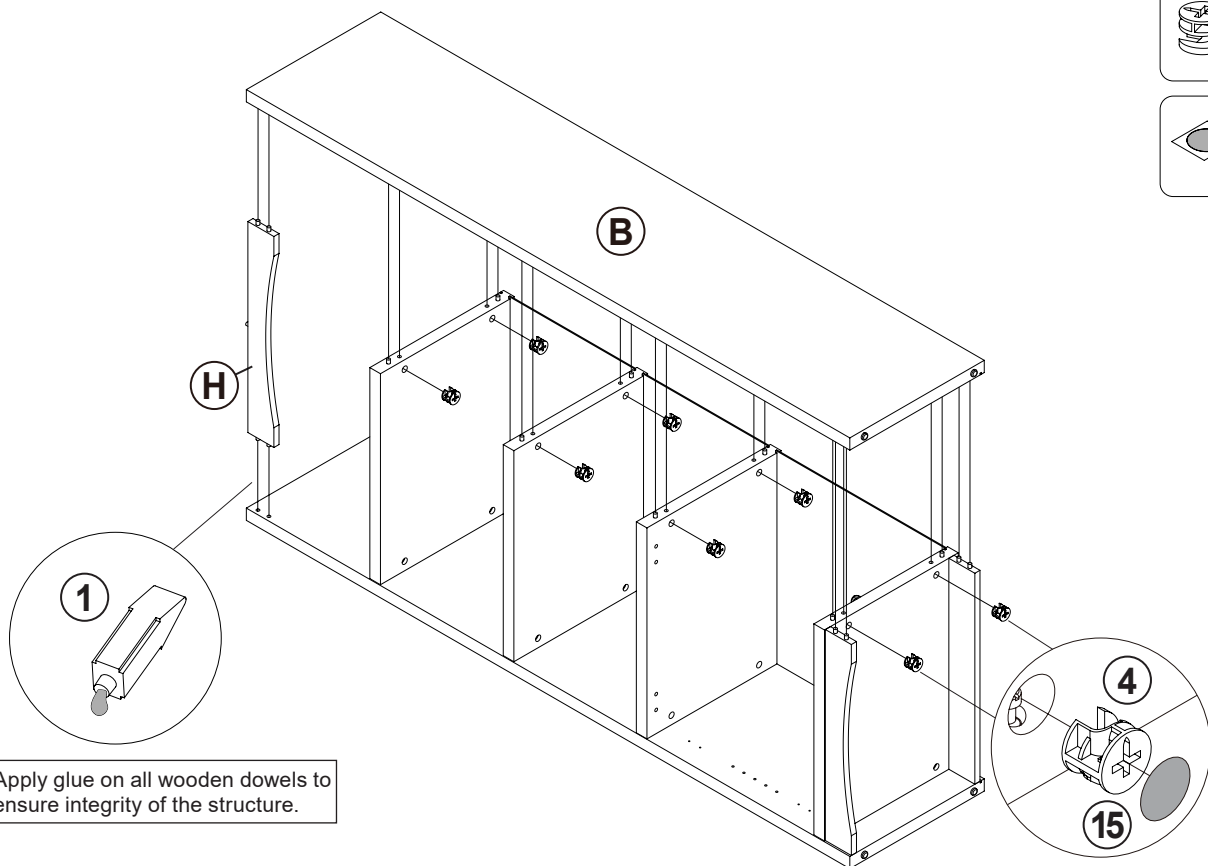


 
STEP 8

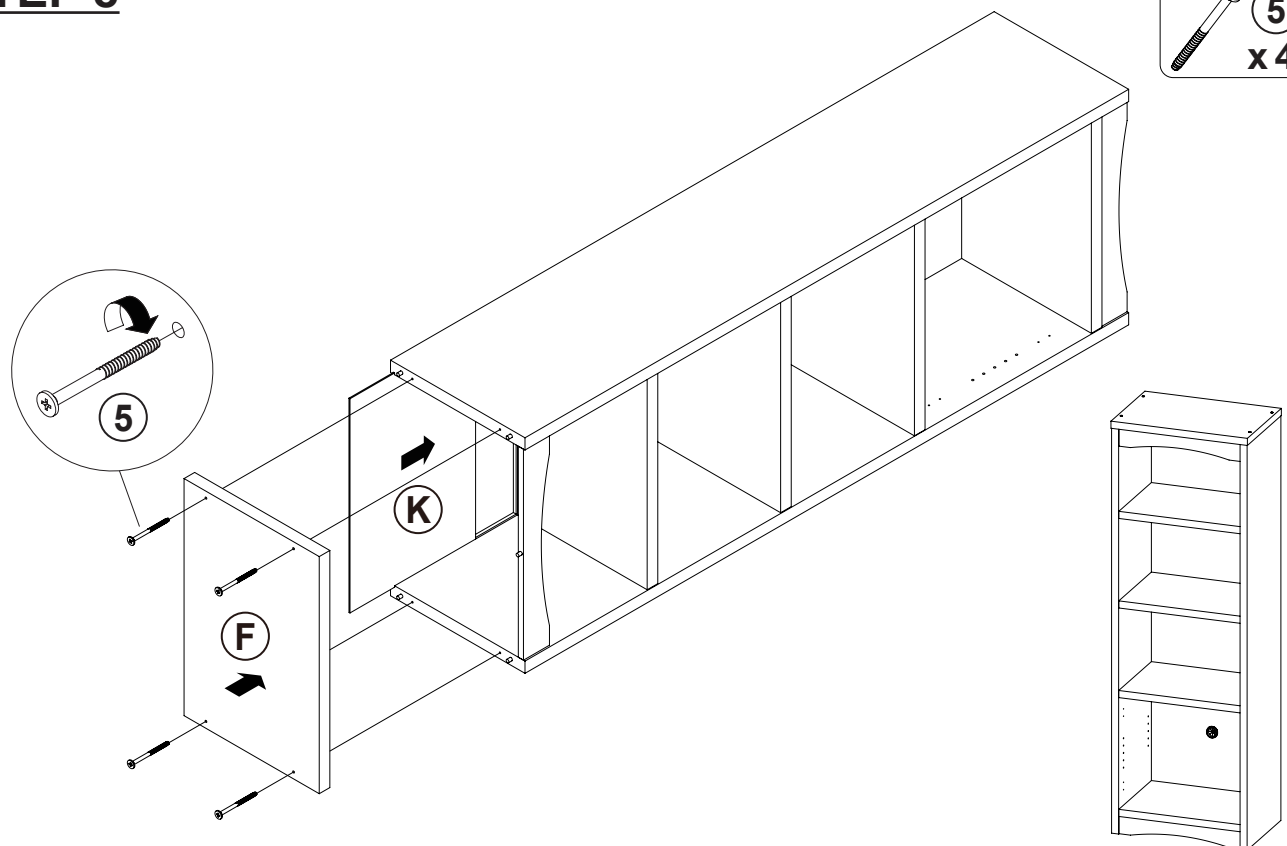






ITEM: **724124**

STEP 9

  COASTER
FINE FURNITURE

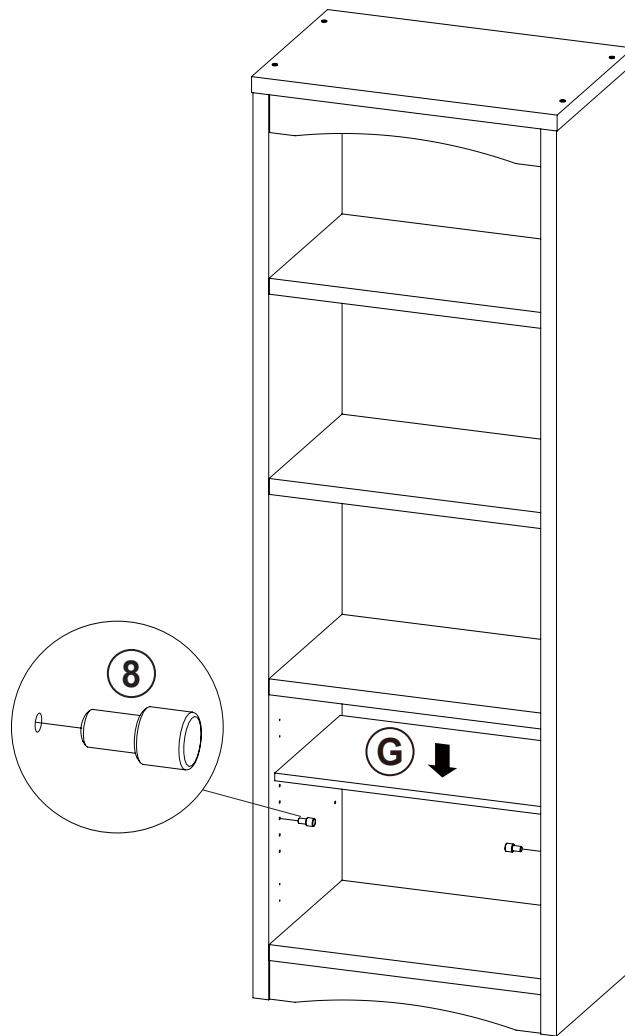

     STEP 10


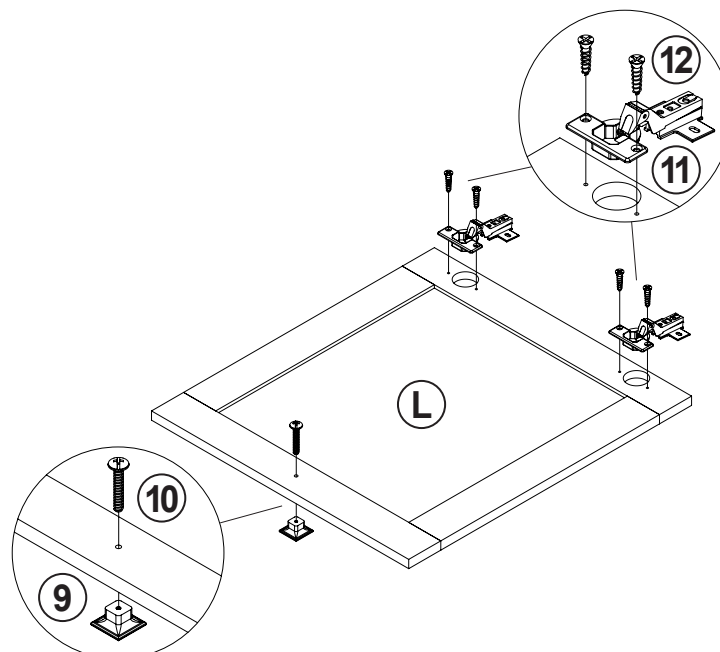


ITEM: **724124**


STEP 11

LEFT

  COASTER
FINE FURNITURE

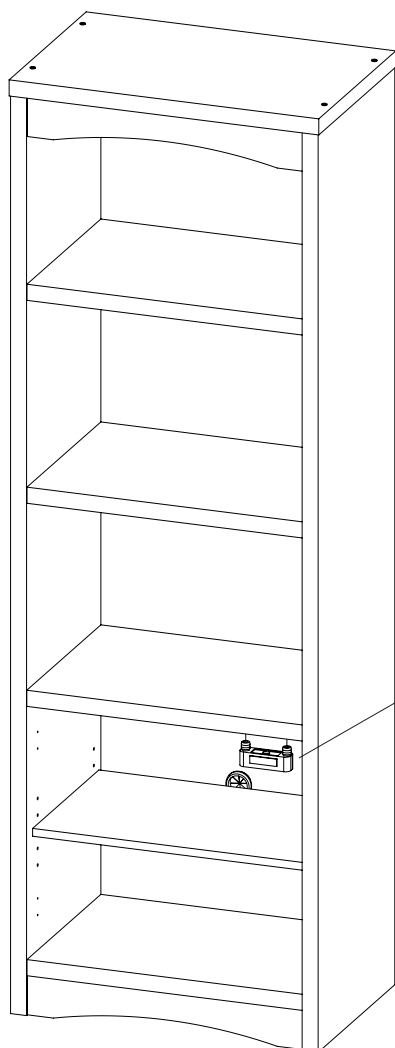

RIGHT


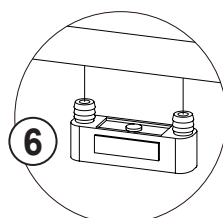 


ITEM: **724124**


STEP 12

LEFT

  
COASTER
FINE FURNITURE

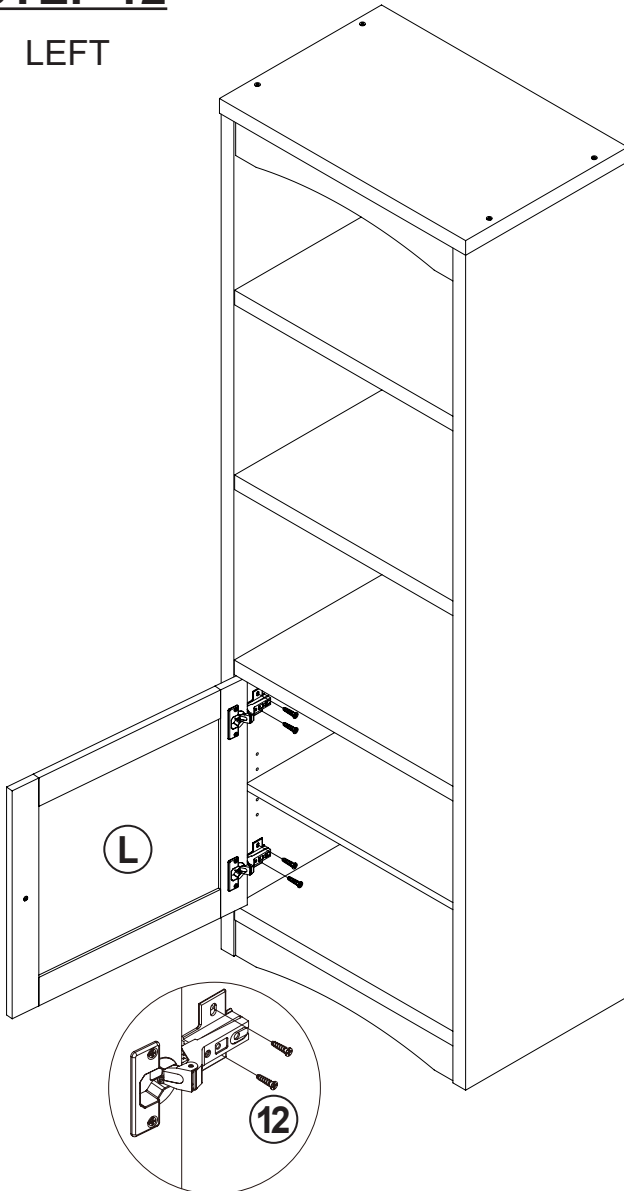


RIGHT

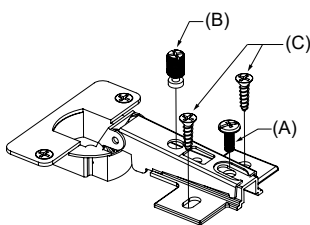 



HORIZONTAL BY
SCREW A ADJUSTMENT

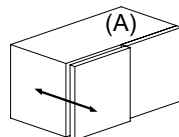 

LATERAL BY
SCREW B ADJUSTMENT

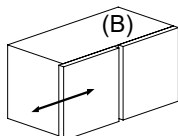 




VERTICAL BY
SCREW C ADJUSTMENT

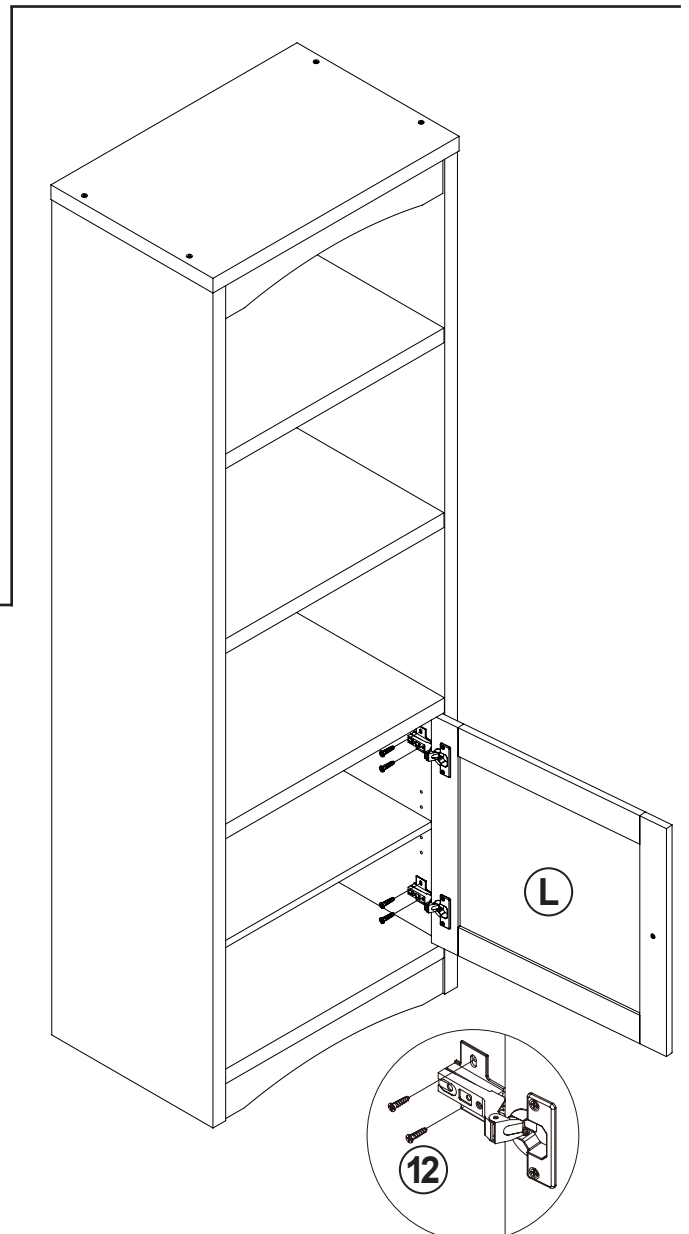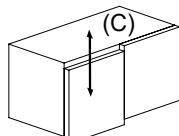  

ITEM: **724124**



STEP 13

   COASTER
FINE FURNITURE

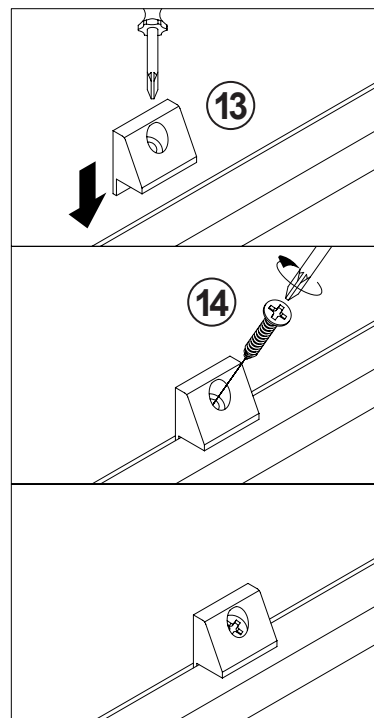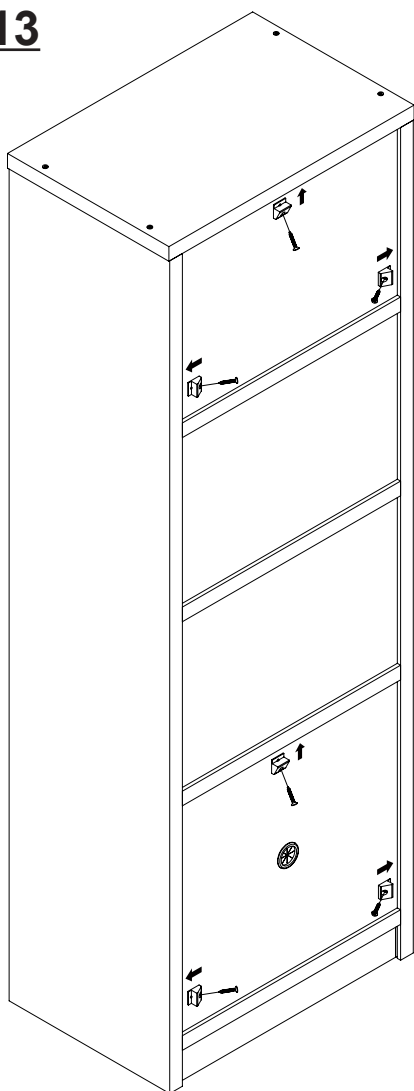


STEP 14

  COMPLETE

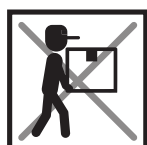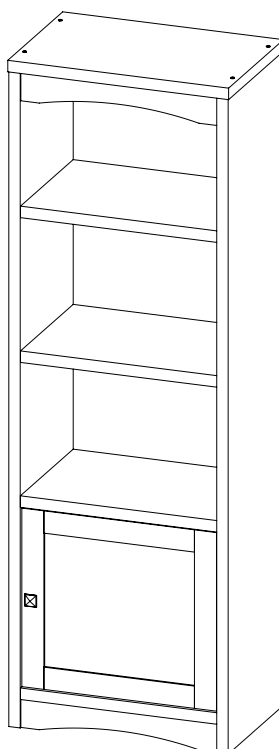

ITEM: 724124

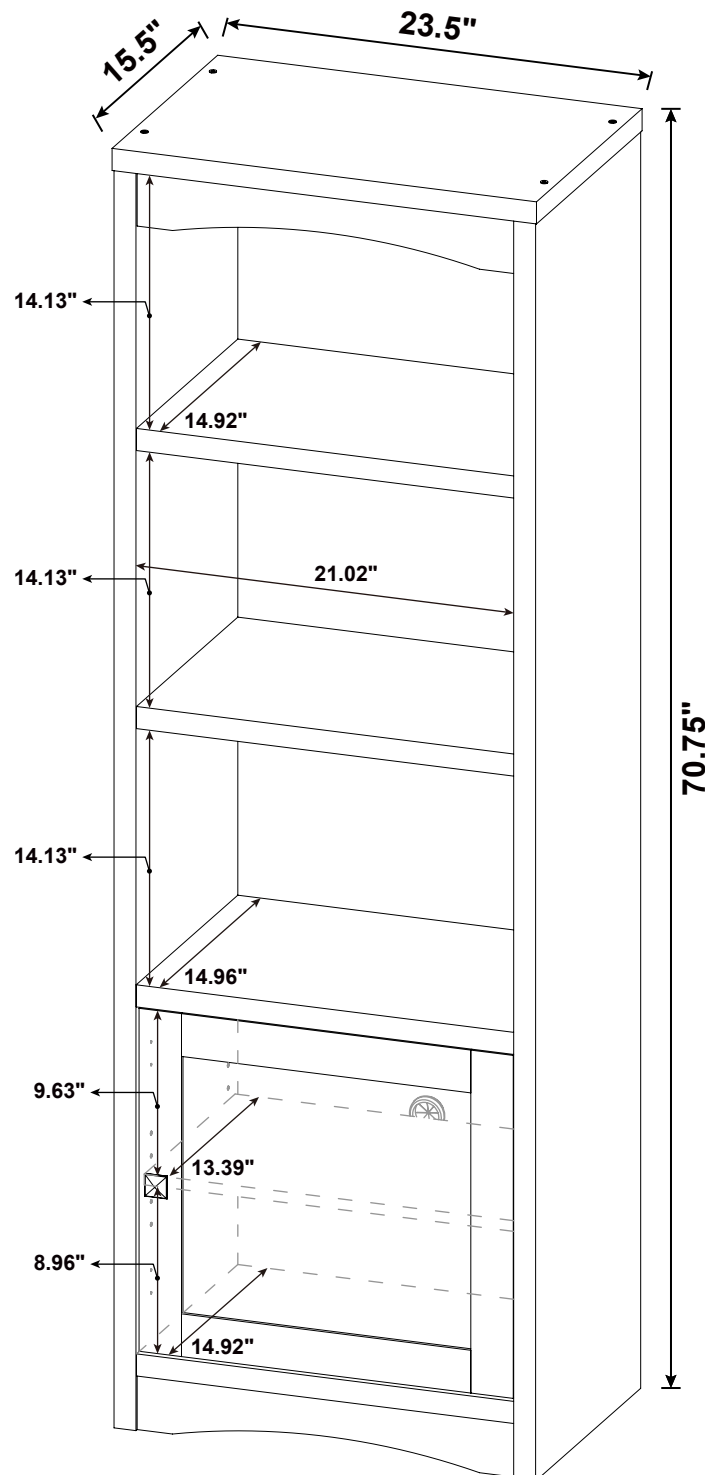 

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

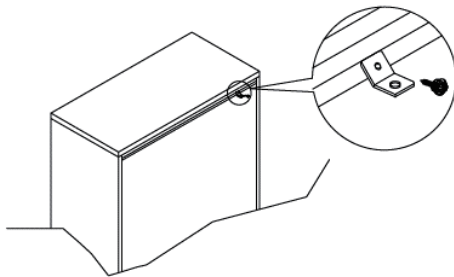**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

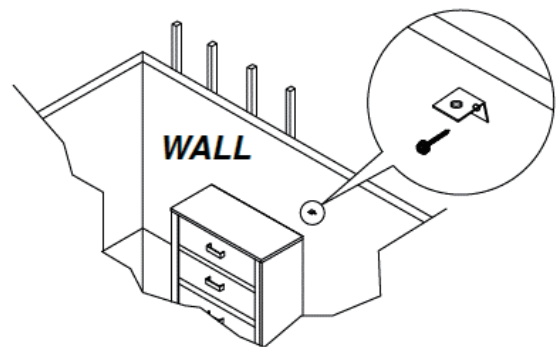**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

