

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 707756 MEDIA TOWER

### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

40 MINUTES

### PARTS IDENTIFICATION

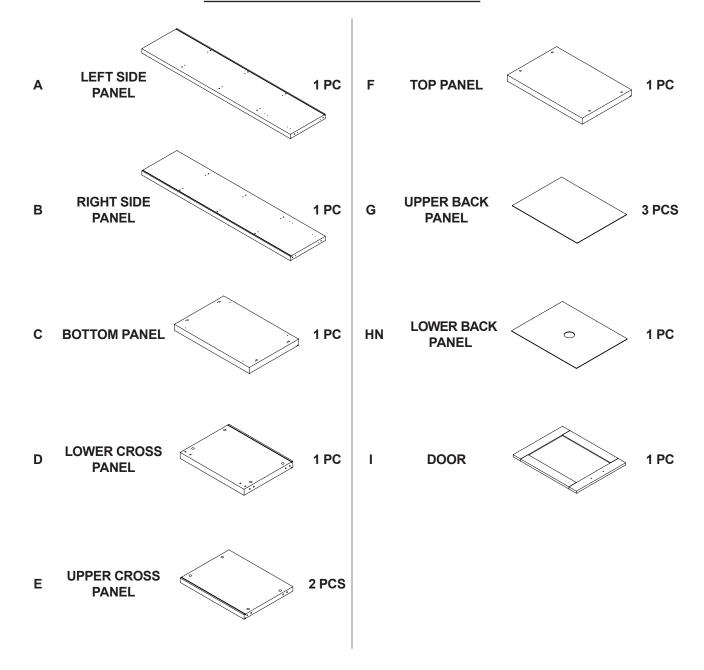

#### NOTE:





## **HARDWARE IDENTIFICATION**


Z	_						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	10	HINGE SCREW	attitu (A)	8 PCS
2	WOODEN DOWEL		20 PCS	11	LEG 47mm BLK	a a	4 PCS
3	CAM BOLT		12 PCS	12	SCREW Ø4x19mm BLK		8 PCS
4	CAM LOCK		12 PCS	13	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
5	BOLT Ø9.5x55mm SR	and the second second	8 PCS	14	FIXER		6 PCS
6	DOOR CATCH		1 PC	15	FIXER SCREW		6 PCS
7	HANDLE L= 120mm BLK		1 PC	16	STICKER ø20mm		2 PCS
8	HANDLE BOLT Ø4x28mm BLK		2 PCS	17	PLASTIC COVER Ø 52mm		1 PC
9	HINGE Ø35mm SR		2 PCS				


Z7,Z8,Z9,Z11 not included in blister packaging.


#### NOTE:

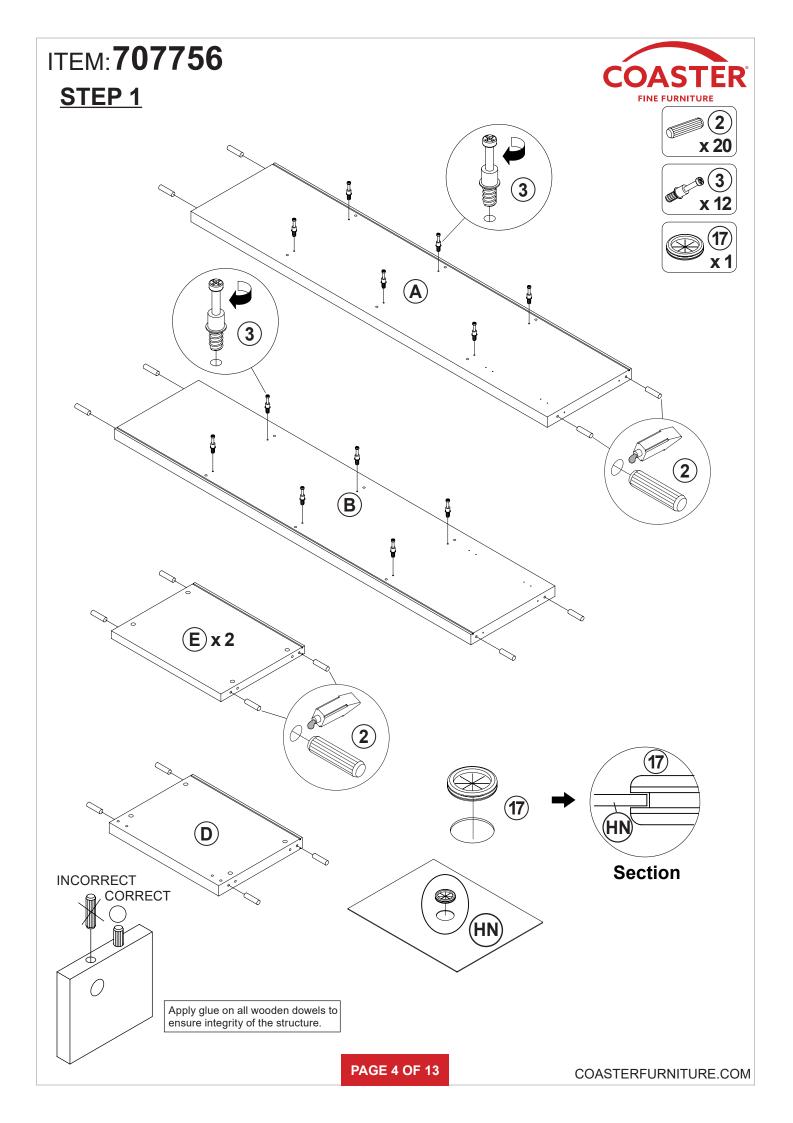


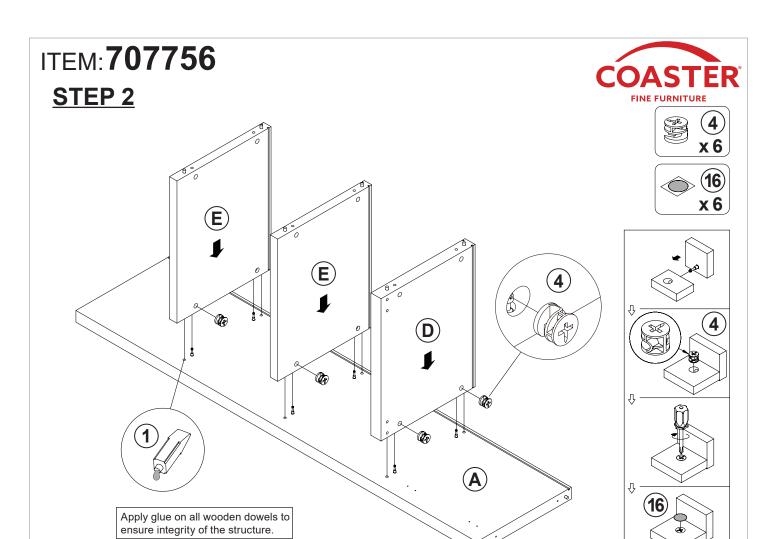

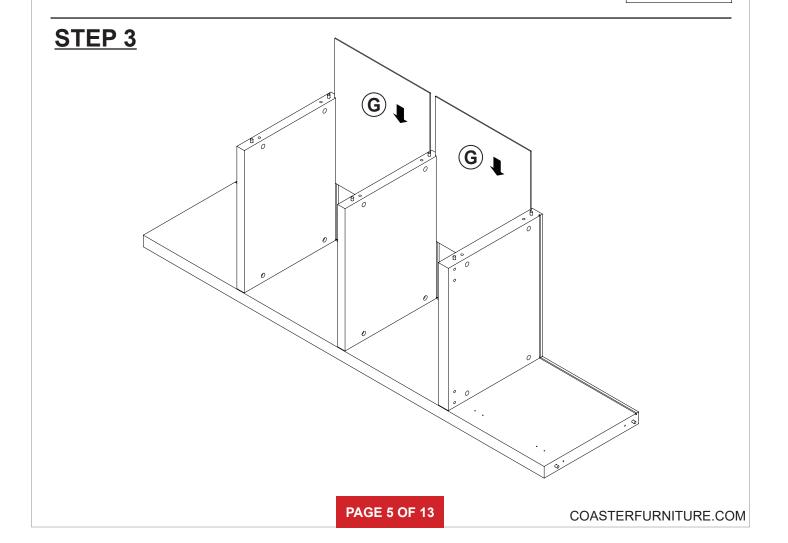


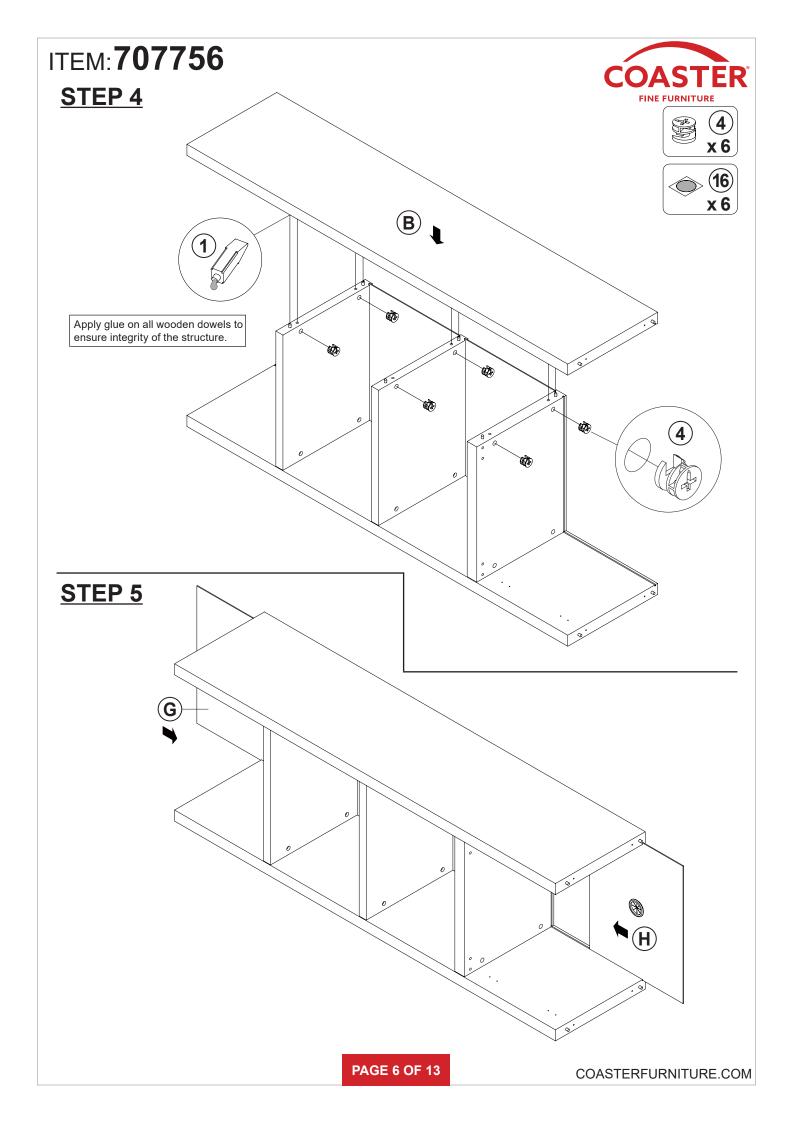

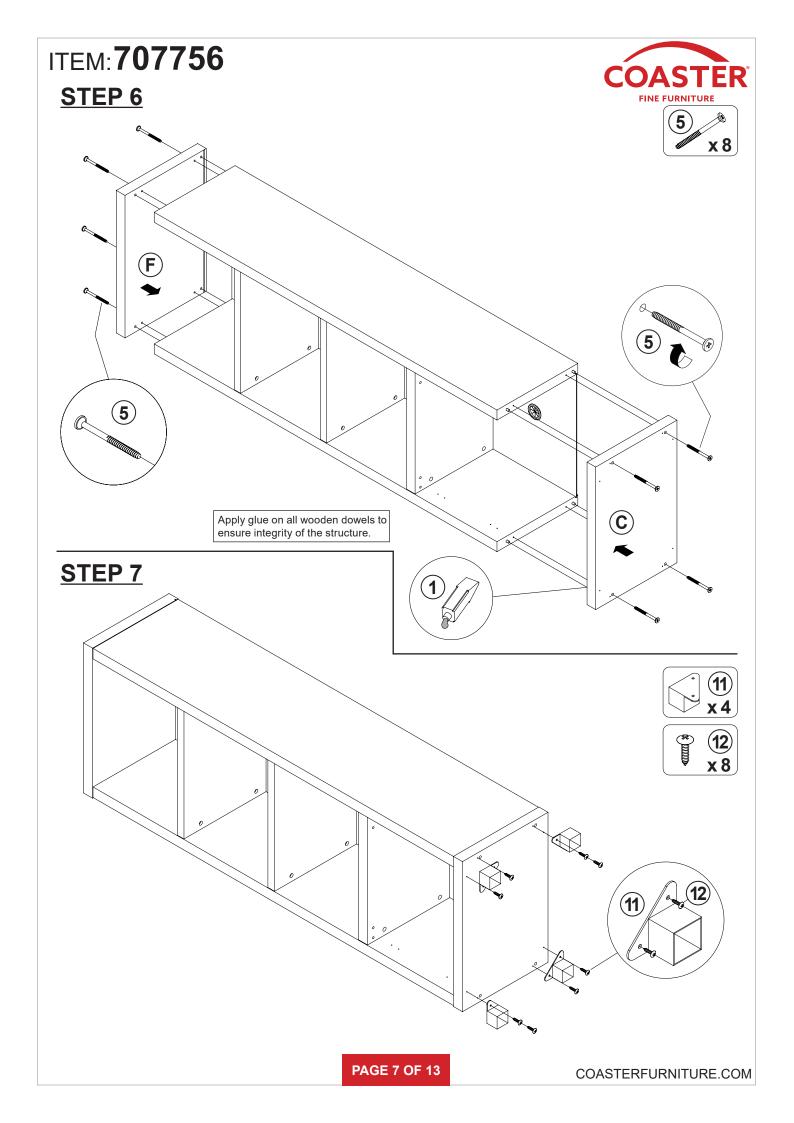


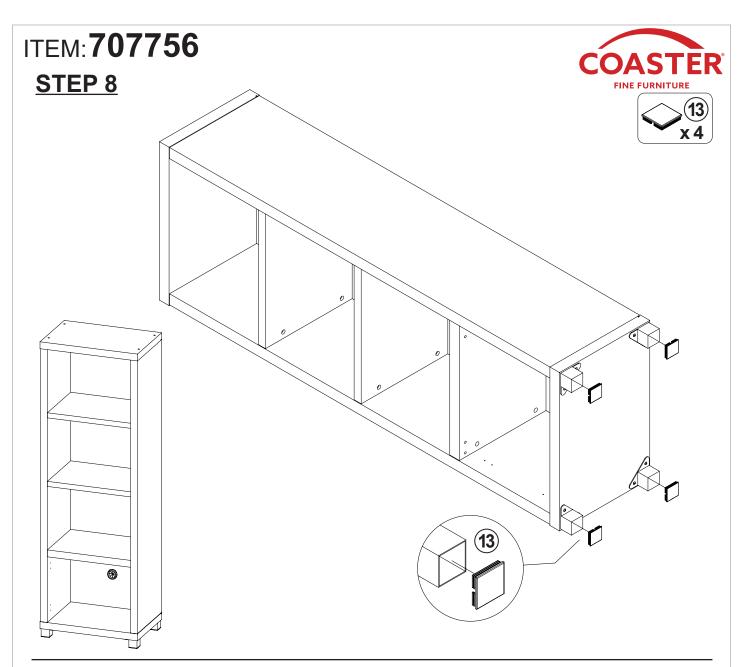



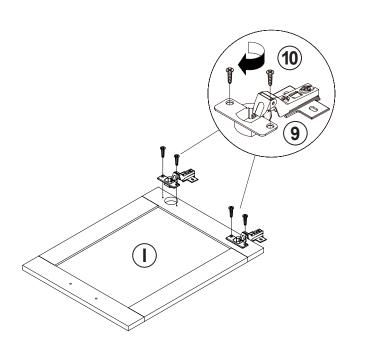

10 x 4

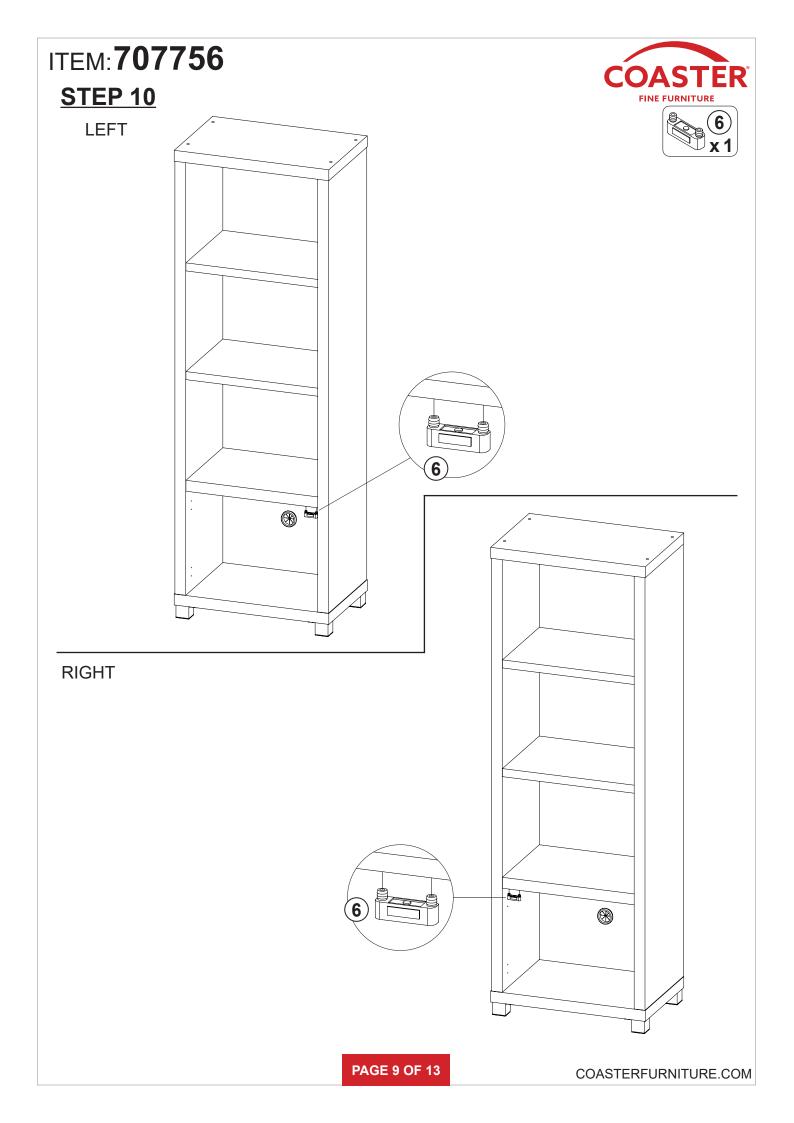














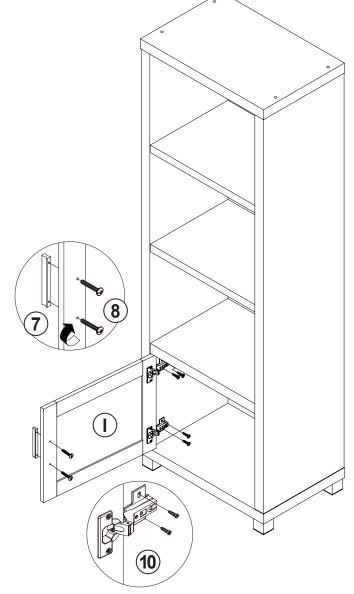


**RIGHT** 

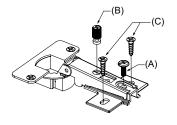


LATERAL BY SCREW B ADJUSTMENT

 


HORIZONTAL BY SCREW AADJUSTMENT

 


VERTICAL BY SCREW C ADJUSTMENT

 

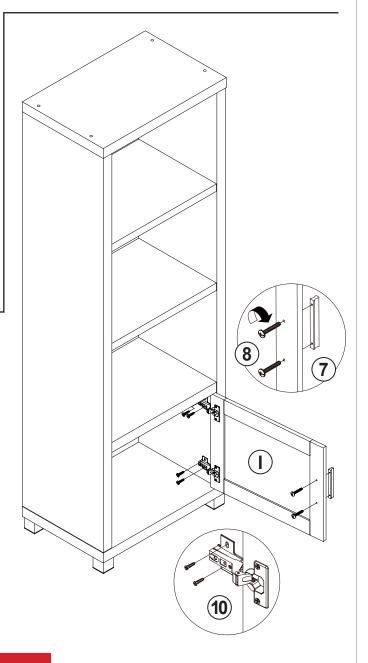







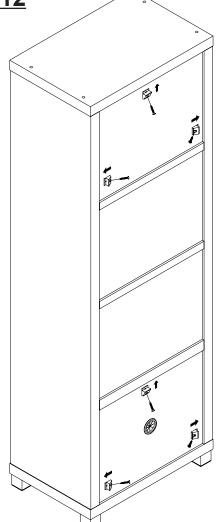



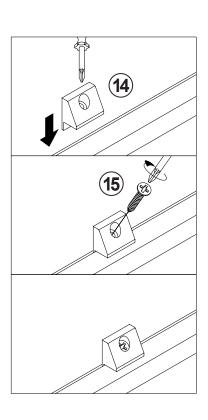


STEP 13
COMPLETE

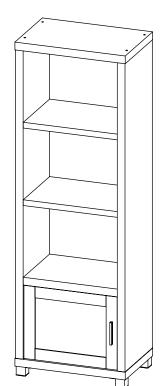







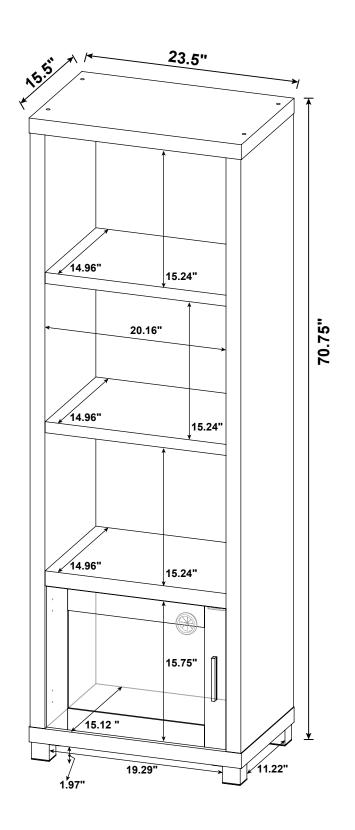

Note: Dimension tolerance ±5%



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

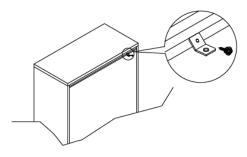


## STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

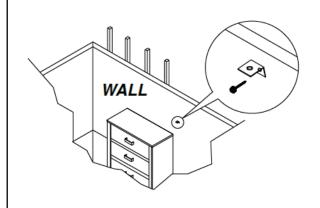


## STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

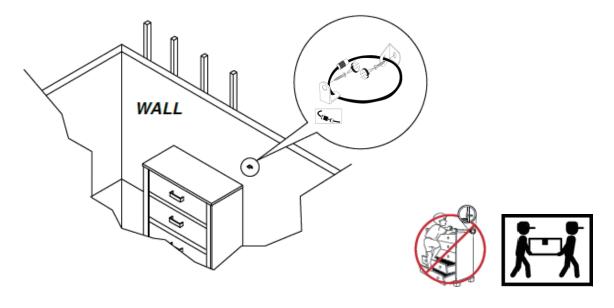



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

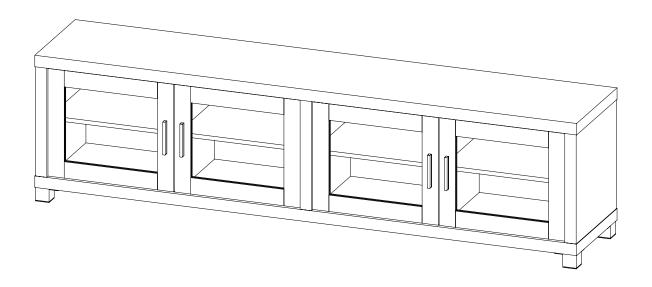

Fine Furniture for every stage of life

736303 *TV STAND* 

### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

#### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.




**ASSEMBLY TIME** 

50 MINUTES

MAX TV SIZE: 85"

### PARTS IDENTIFICATION

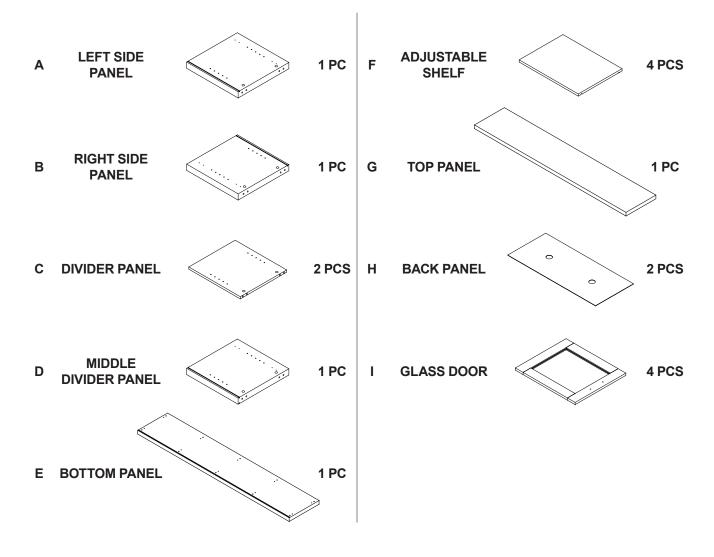

#### NOTE:




## **HARDWARE IDENTIFICATION**


Z					<u>.                                      </u>		
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	10	HINGE SCREW Ø4x15mm SR	ALLILLIA (B)	32 PCS
3	CAM BOLT Ø7x35.5mm SR		10 PCS	11	LEG 47mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		10 PCS	12	SUPORT LEG Ø50mm BLK		1 PC
5	BOLT Ø9.5x55mm SR	additional 18	10 PCS	13	SCREW Ø4x19mm BLK		8 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS	14	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
7	HANDLE L= 120mm BLK		4 PCS	15	ROUND FLOOR PROTECTOR Ø50mm		1 PC
8	HANDLE BOLT Ø4x28mm BLK		8 PCS	16	STICKER Ø20mm		2 PCS

Z7,Z8,Z9,Z11,Z12 not included in blister packaging.

#### NOTE:

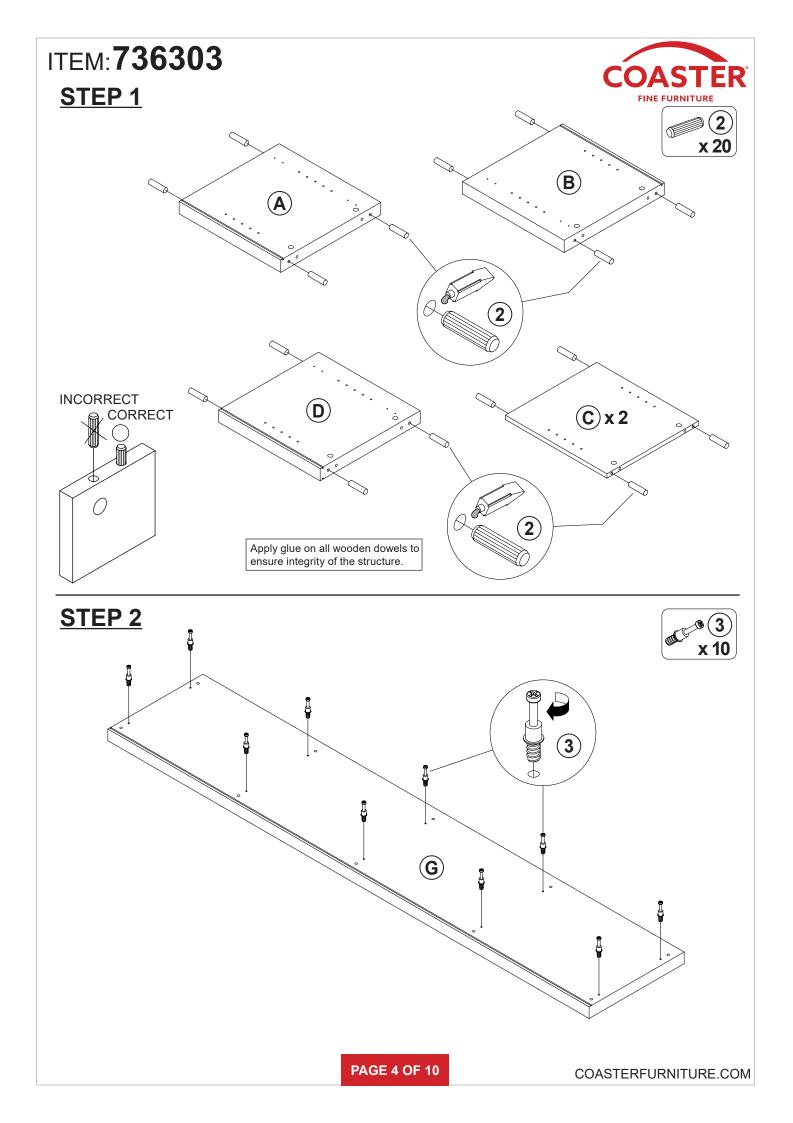


## STEP 3

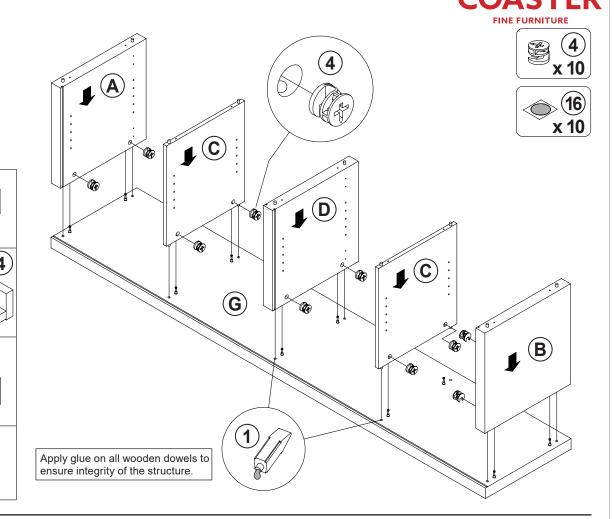


## STEP 4


(16)

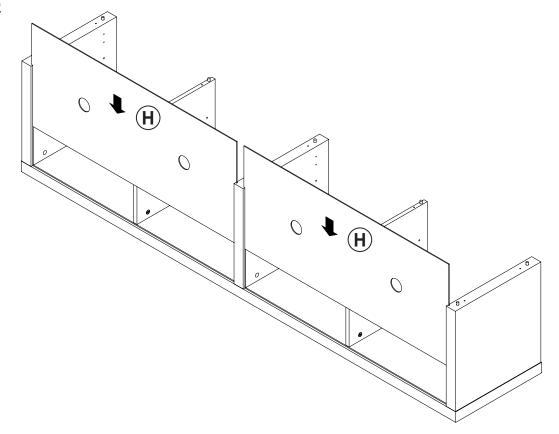

**PAGE 5 OF 10** 


COASTERFURNITURE.COM

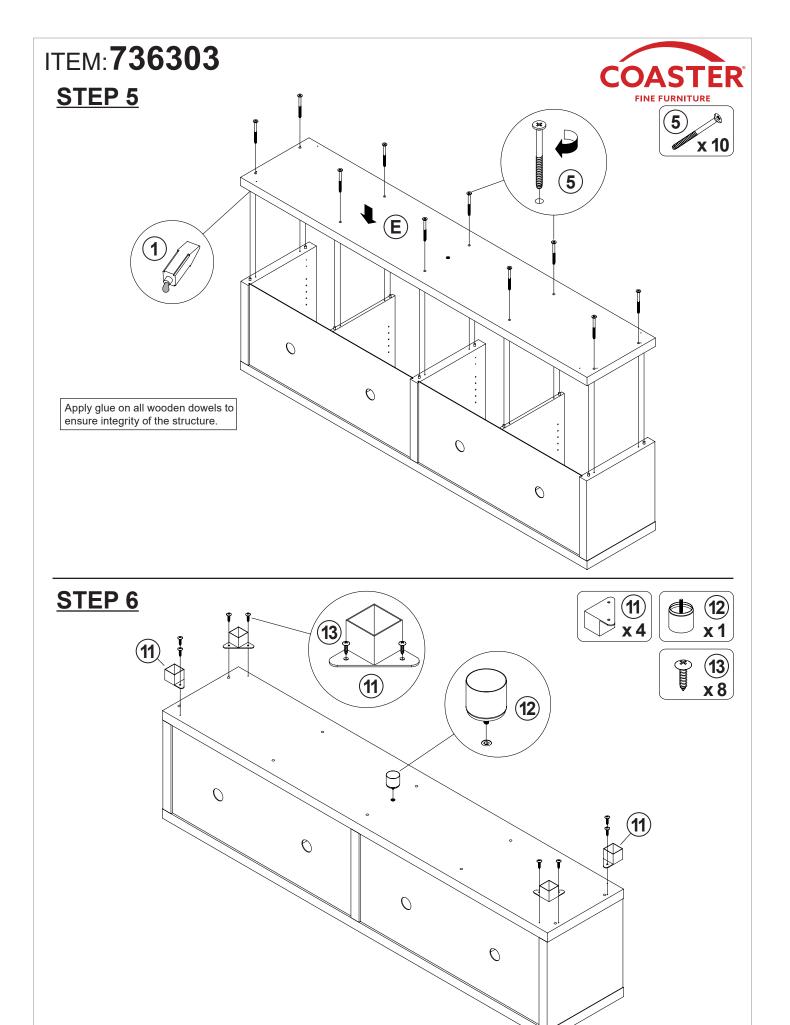

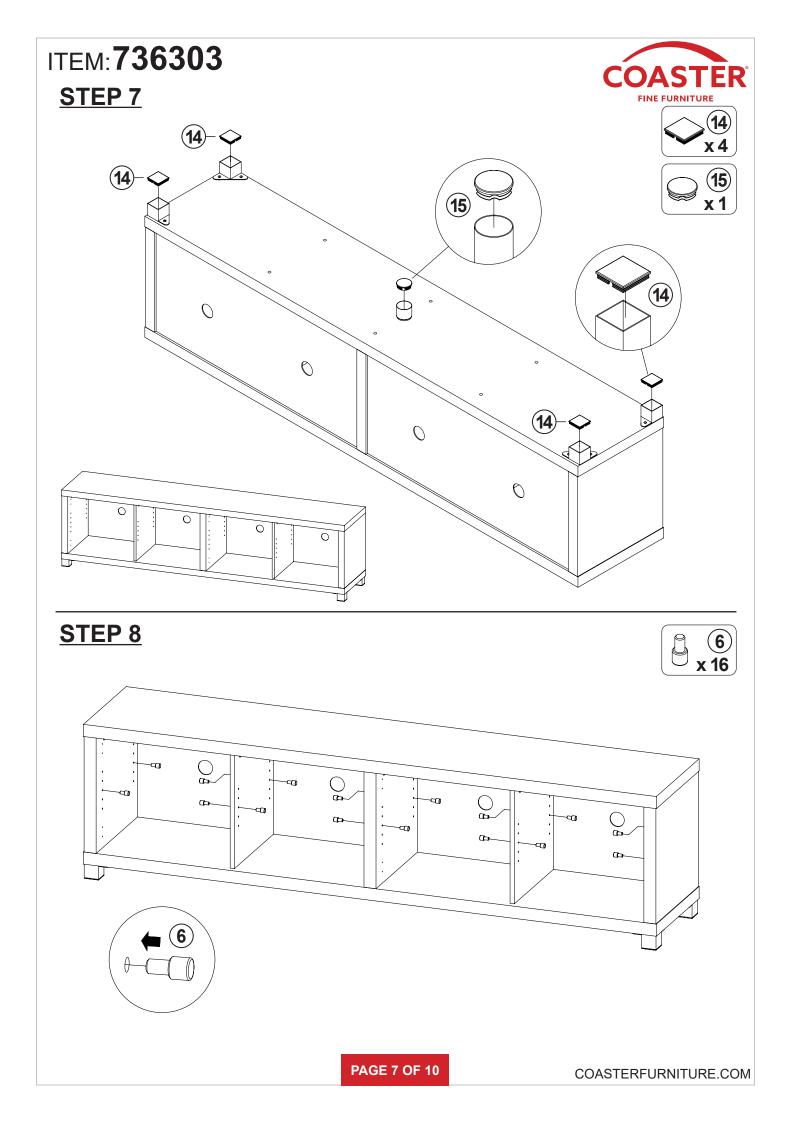


# ITEM: **736303 STEP 9**



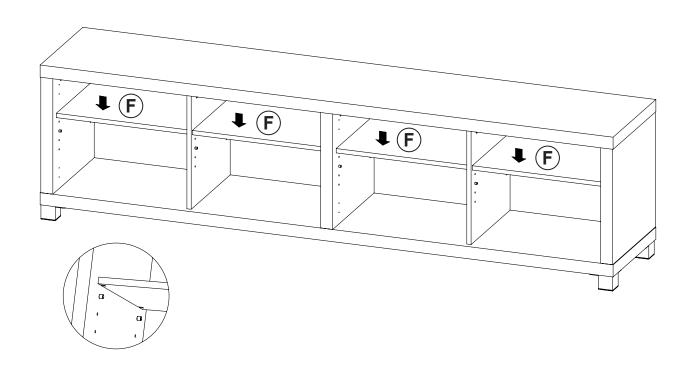

## **STEP 10**

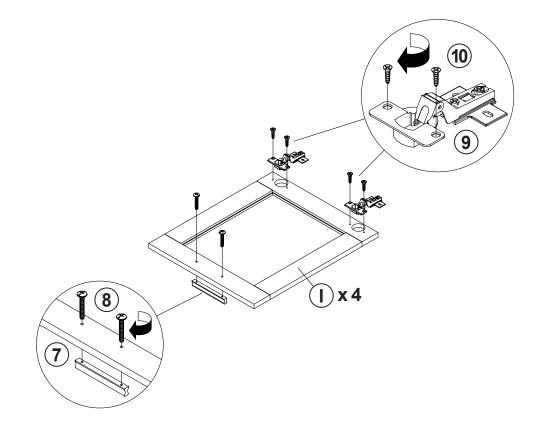












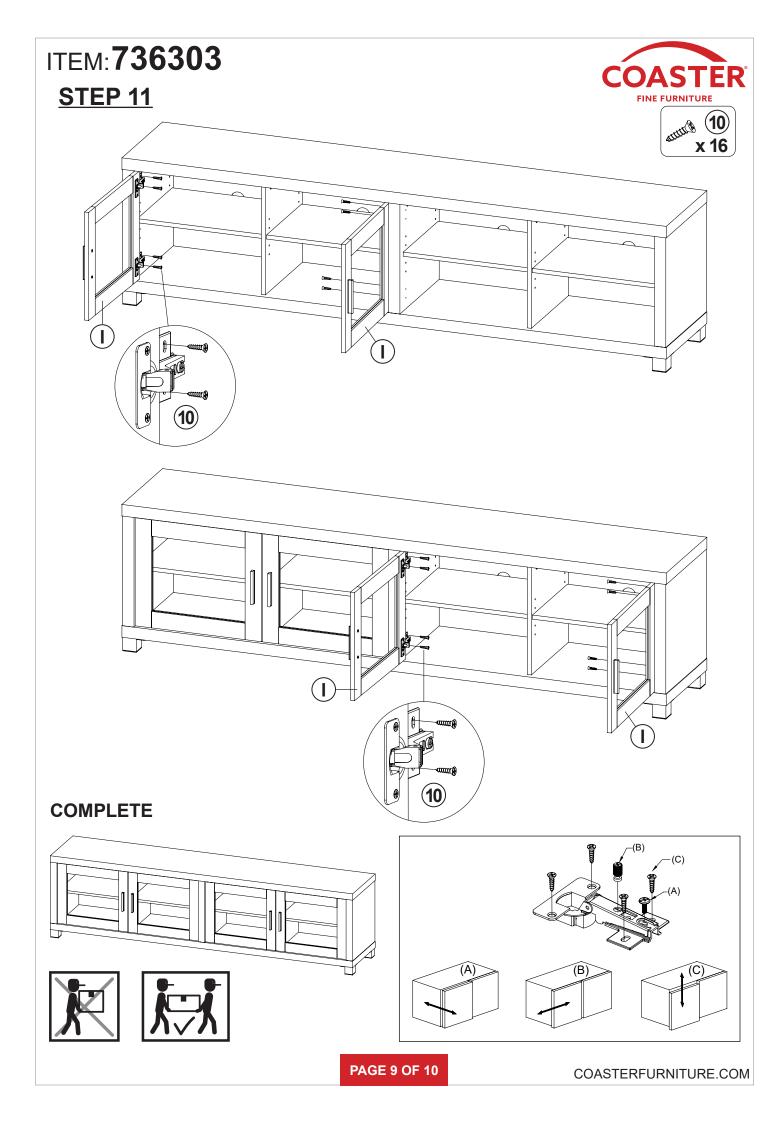



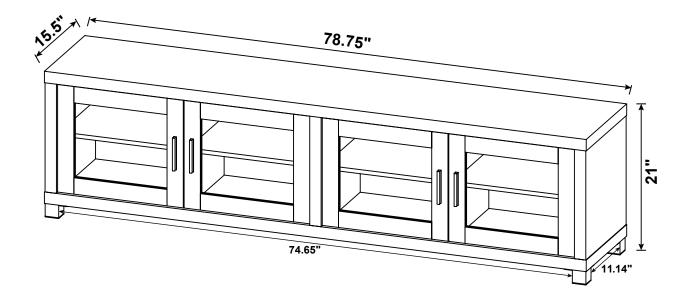

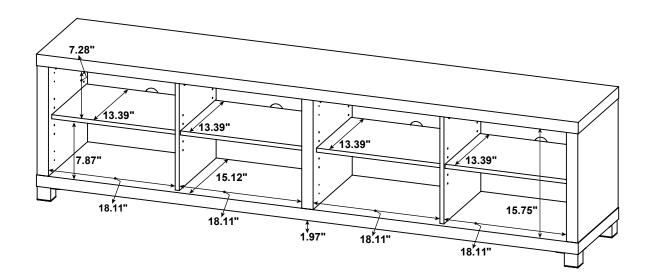

Note: Dimension tolerance ±5%



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

736303 *TV STAND* 

### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

#### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.




**ASSEMBLY TIME** 

50 MINUTES

MAX TV SIZE: 85"

### PARTS IDENTIFICATION

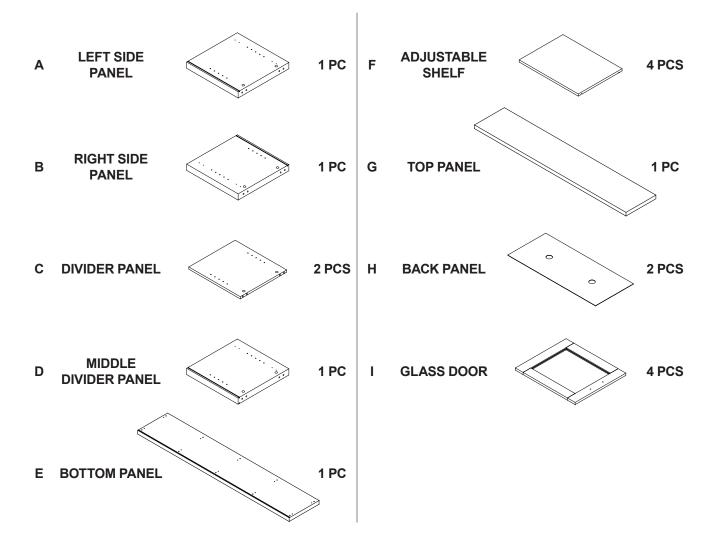

#### NOTE:




## **HARDWARE IDENTIFICATION**


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	10	HINGE SCREW Ø4x15mm SR	attitus (B)	32 PCS
3	CAM BOLT Ø7x35.5mm SR		10 PCS	11	LEG 47mm BLK	·	4 PCS
4	CAM LOCK Ø15x12mm SR		10 PCS	12	SUPORT LEG Ø50mm BLK		1 PC
5	BOLT Ø9.5x55mm SR	<b>Management</b>	10 PCS	13	SCREW Ø4x19mm BLK		8 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS	14	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
7	HANDLE L= 120mm BLK		4 PCS	15	ROUND FLOOR PROTECTOR Ø50mm		1 PC
8	HANDLE BOLT Ø4x28mm BLK		8 PCS	16	STICKER Ø20mm		2 PCS

Z7,Z8,Z9,Z11,Z12 not included in blister packaging.

#### NOTE:

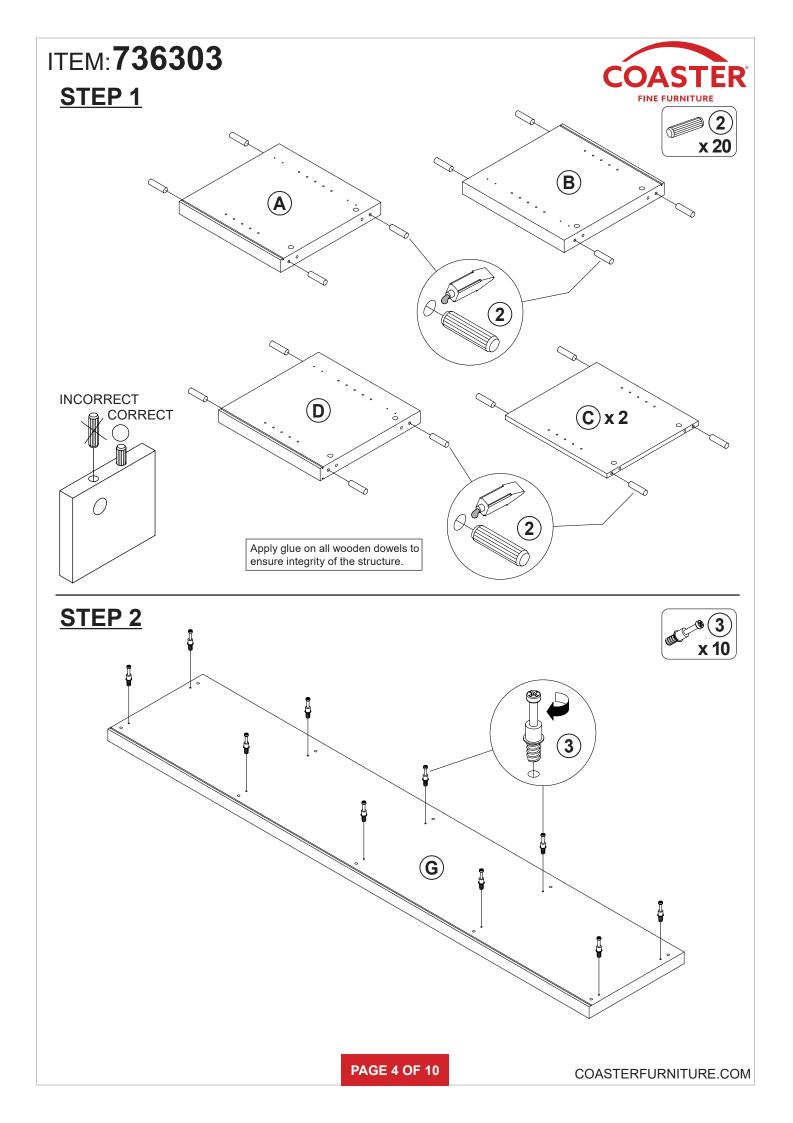


## STEP 3

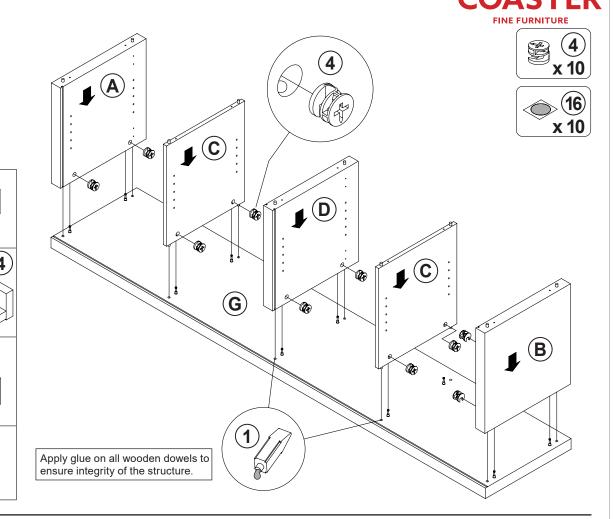


## STEP 4


(16)

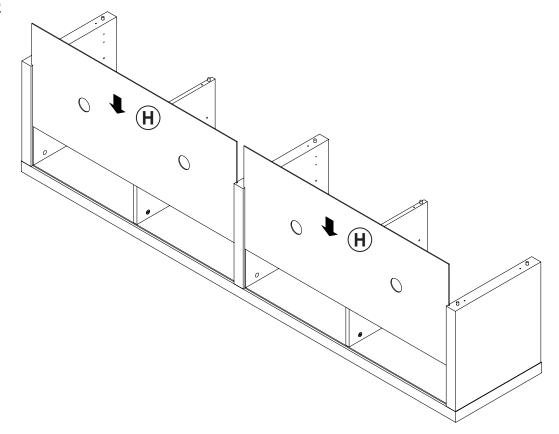

**PAGE 5 OF 10** 


COASTERFURNITURE.COM

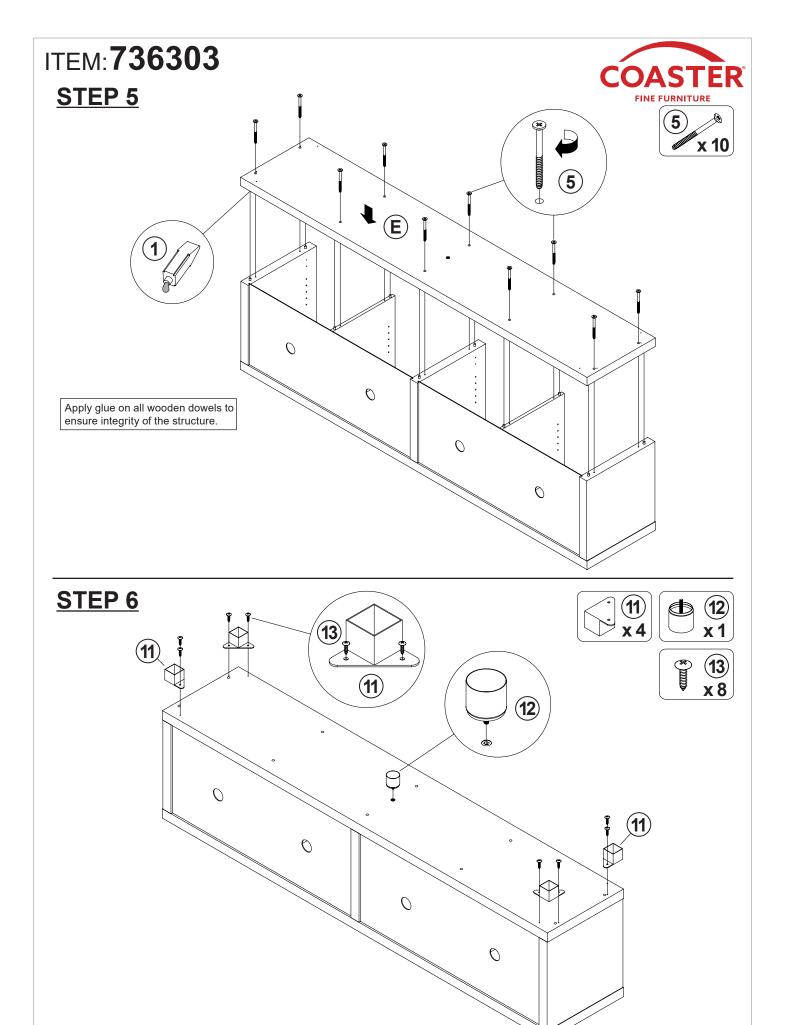

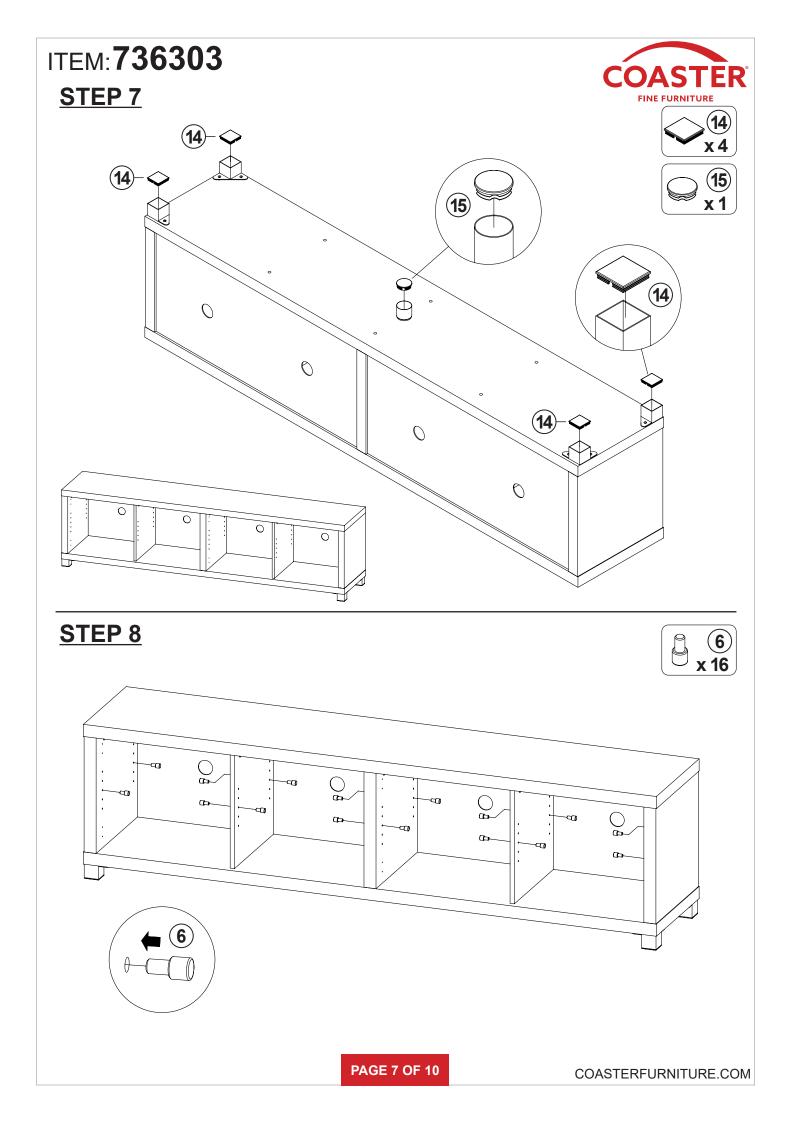


# ITEM: **736303 STEP 9**



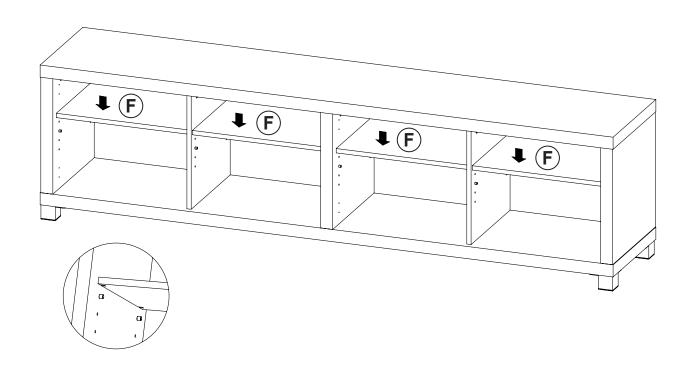

## **STEP 10**

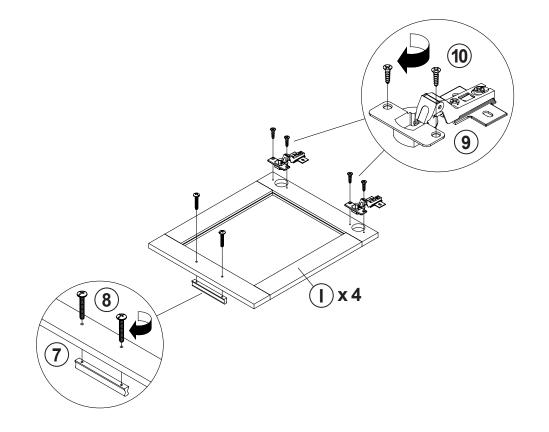












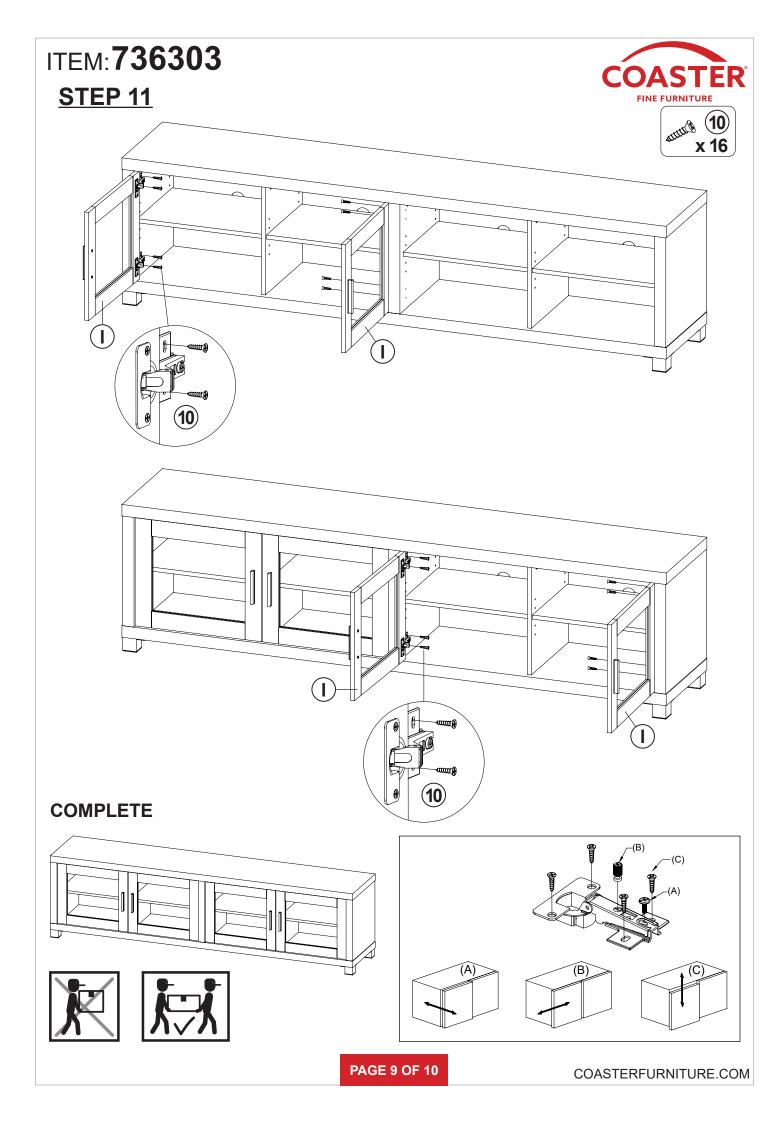



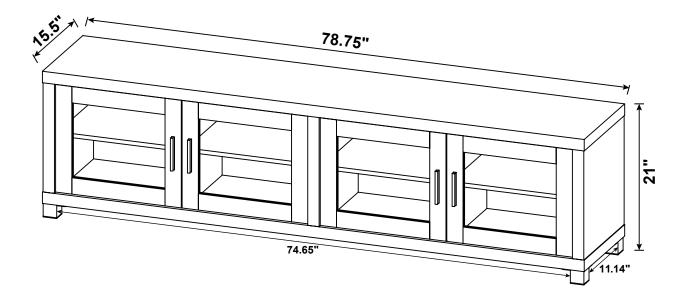

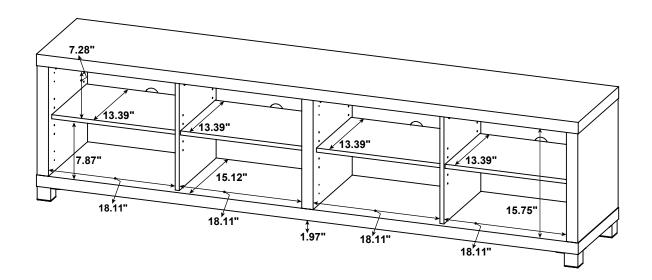

Note: Dimension tolerance ±5%



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 707756 MEDIA TOWER

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

40 MINUTES

### PARTS IDENTIFICATION

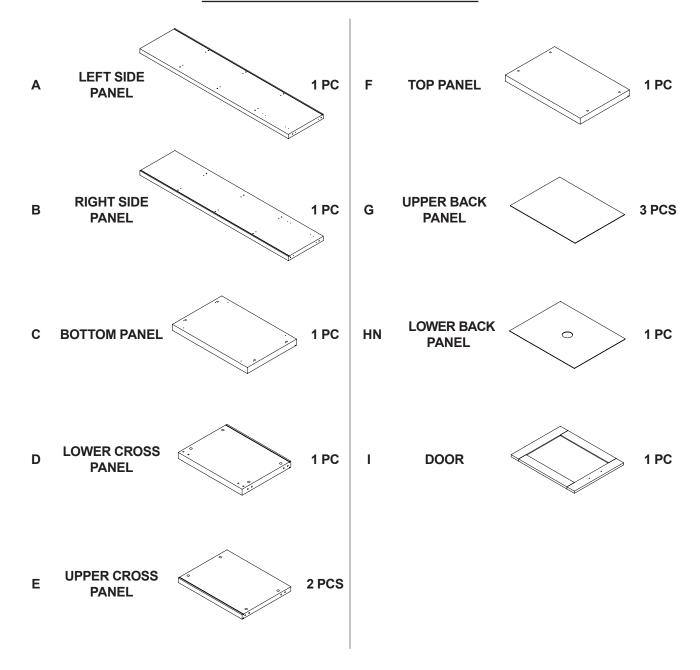

#### NOTE:





## **HARDWARE IDENTIFICATION**


Z	_						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	10	HINGE SCREW	attitu (A)	8 PCS
2	WOODEN DOWEL		20 PCS	11	LEG 47mm BLK	a a	4 PCS
3	CAM BOLT		12 PCS	12	SCREW Ø4x19mm BLK		8 PCS
4	CAM LOCK		12 PCS	13	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
5	BOLT Ø9.5x55mm SR	and the second second	8 PCS	14	FIXER		6 PCS
6	DOOR CATCH		1 PC	15	FIXER SCREW		6 PCS
7	HANDLE L= 120mm BLK		1 PC	16	STICKER ø20mm		2 PCS
8	HANDLE BOLT Ø4x28mm BLK		2 PCS	17	PLASTIC COVER Ø 52mm		1 PC
9	HINGE Ø35mm SR		2 PCS				


Z7,Z8,Z9,Z11 not included in blister packaging.


#### NOTE:

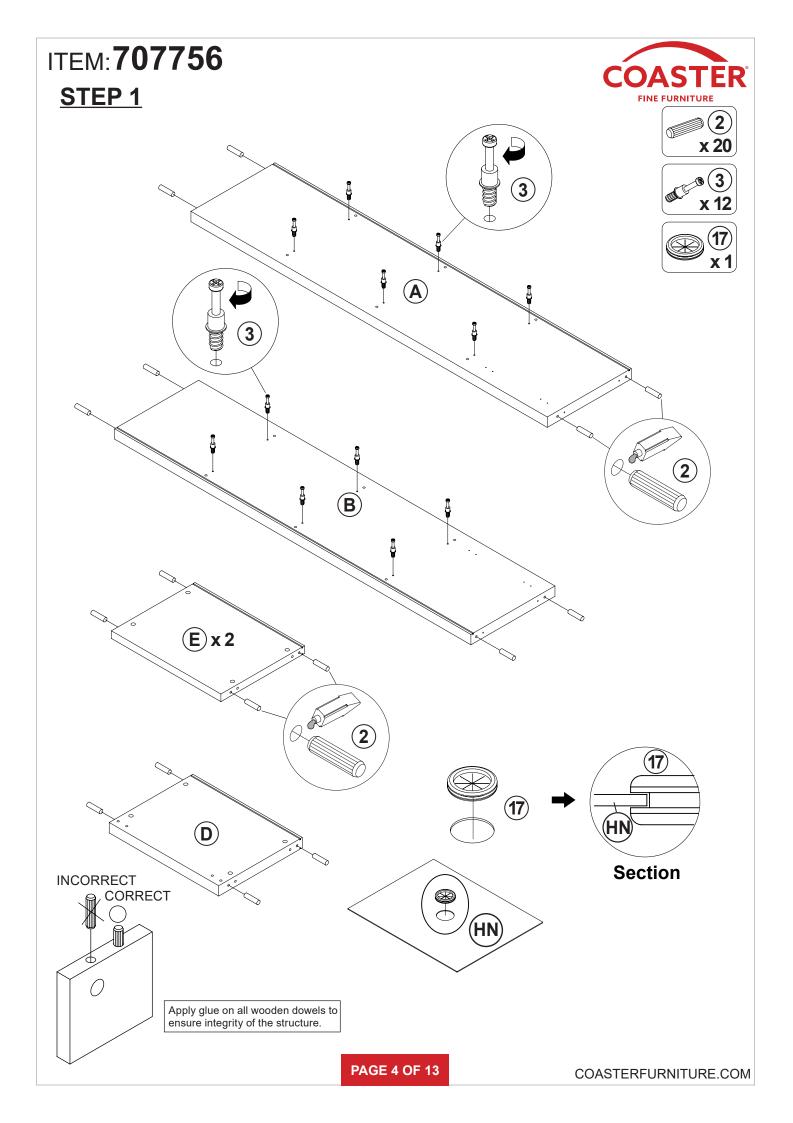


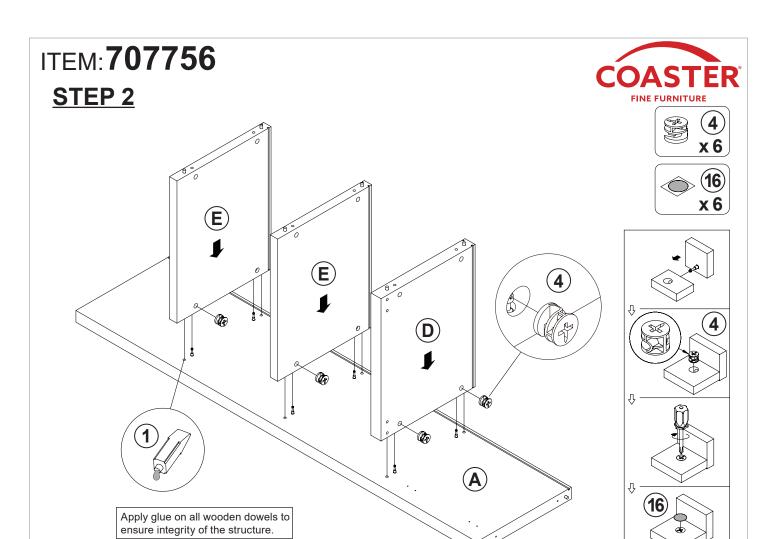

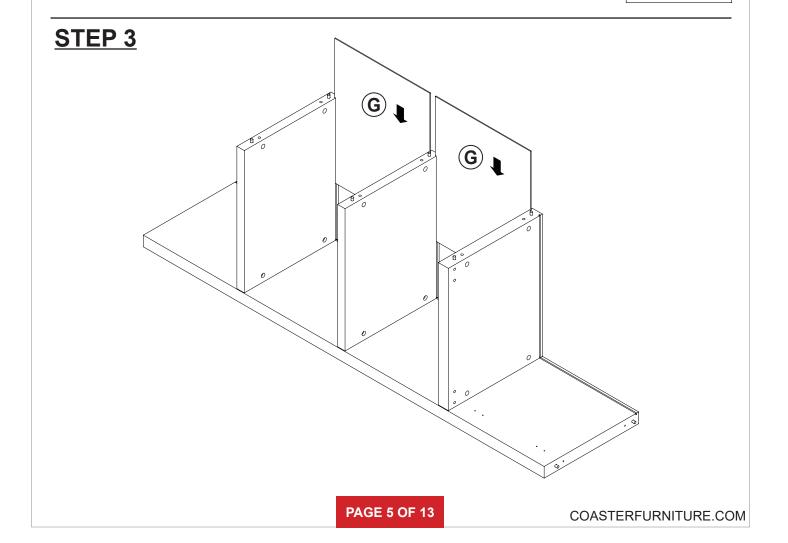


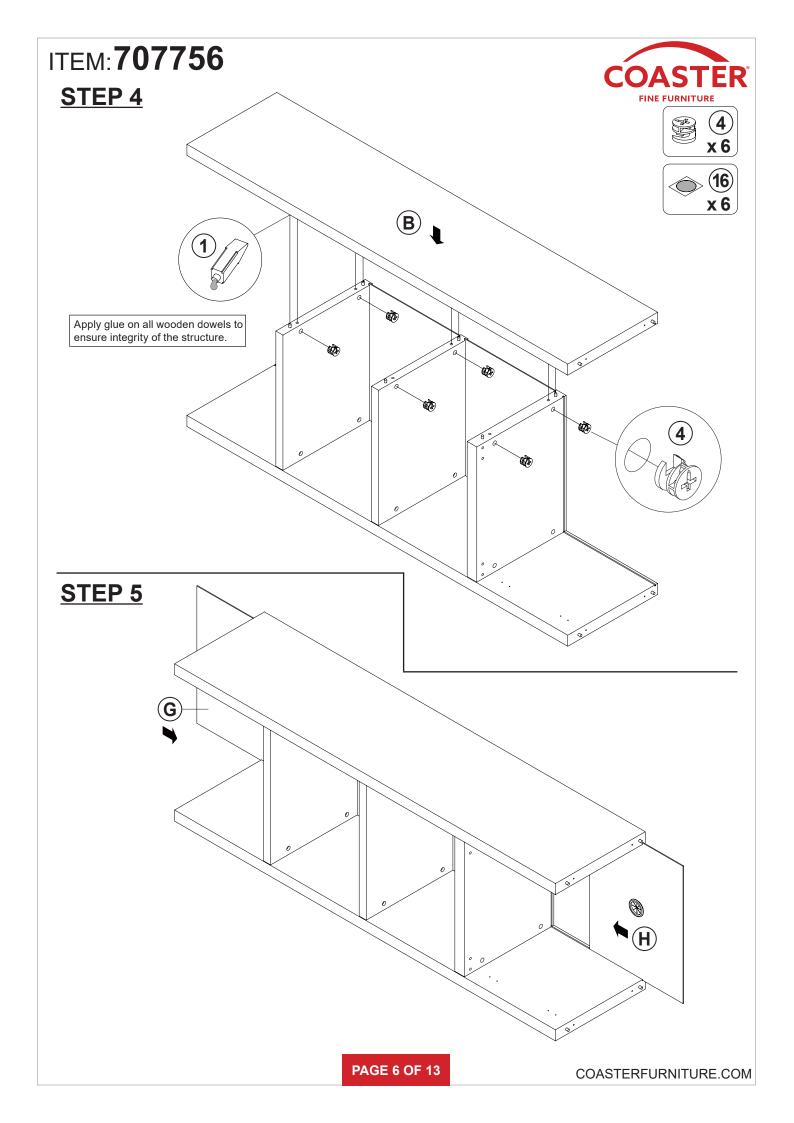

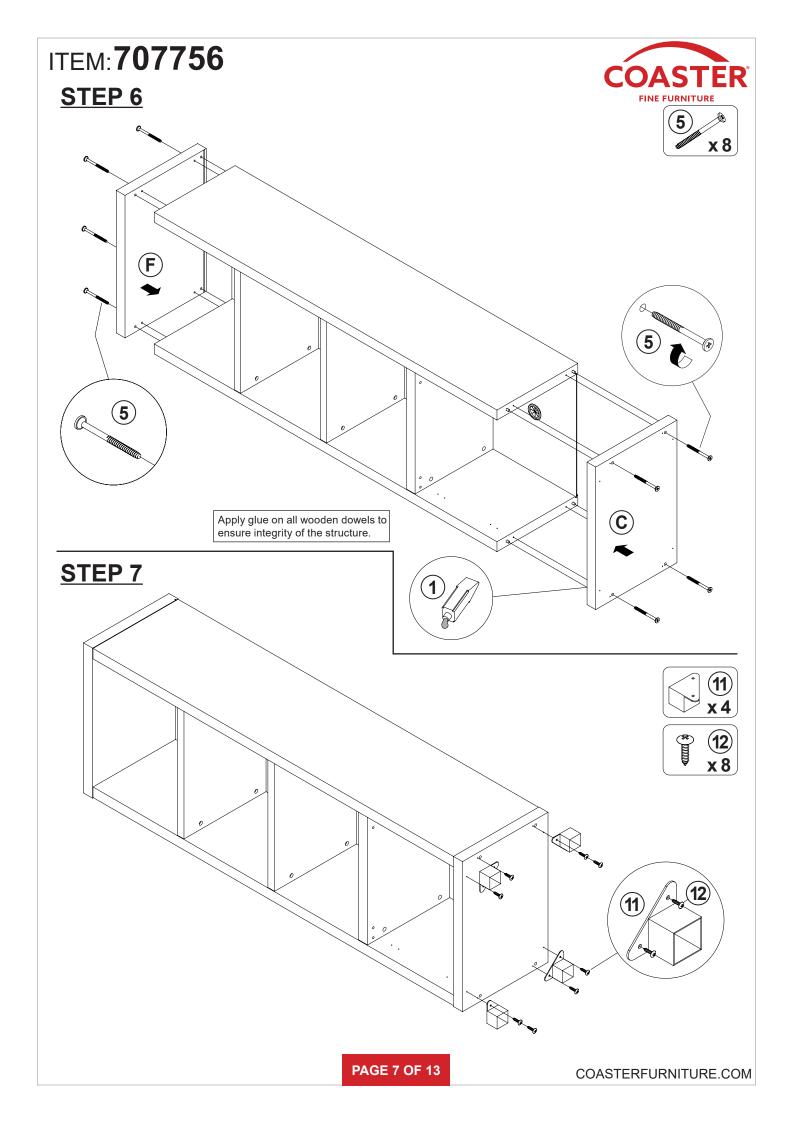


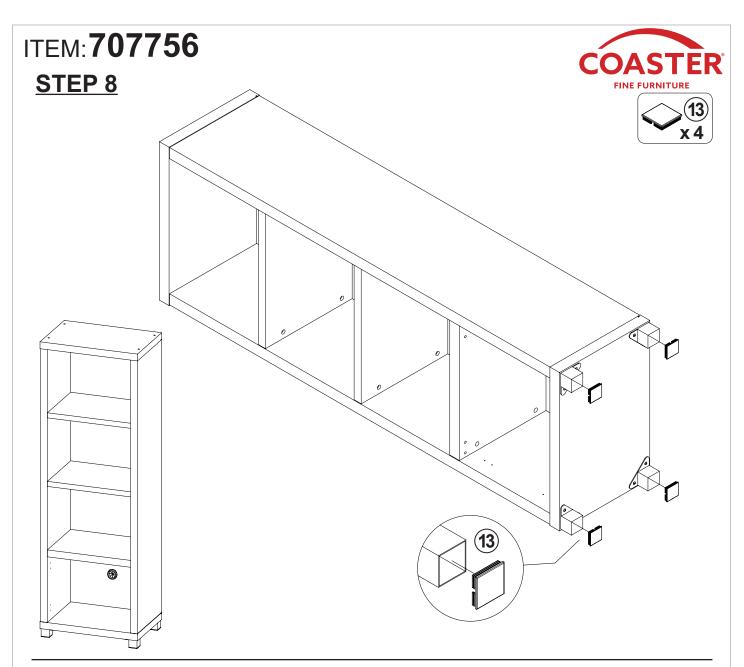



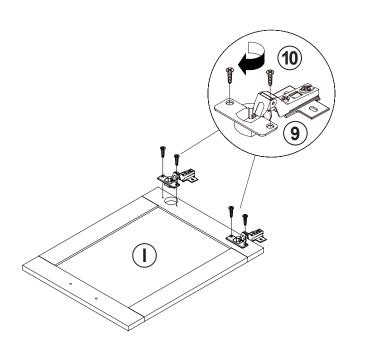

10 x 4

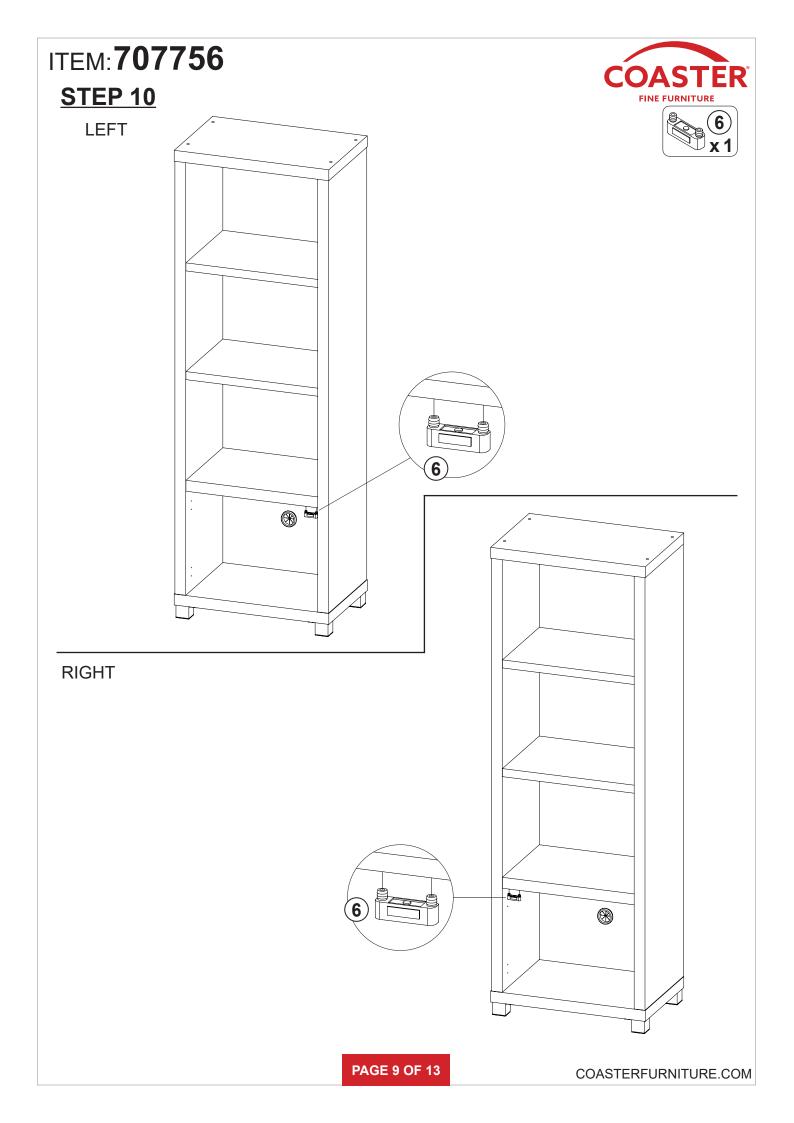

## $\mathsf{ITEM:} \textcolor{red}{\mathbf{707756}}$














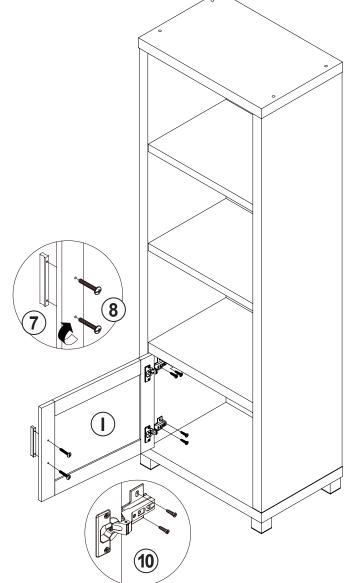


**RIGHT** 

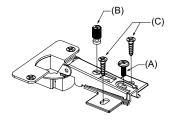


LATERAL BY SCREW B ADJUSTMENT

 


HORIZONTAL BY SCREW AADJUSTMENT

 


VERTICAL BY SCREW C ADJUSTMENT

 

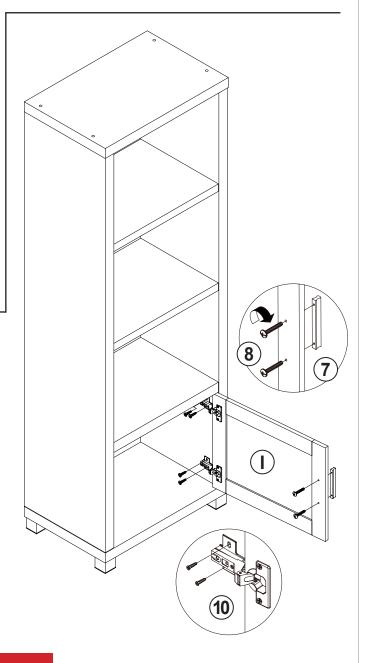







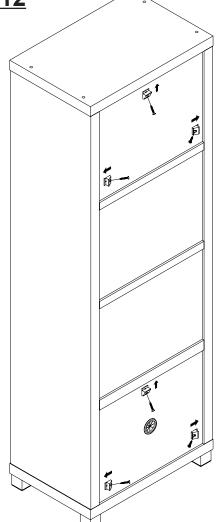



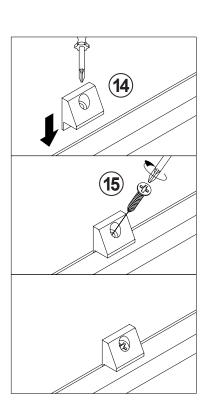


STEP 13
COMPLETE

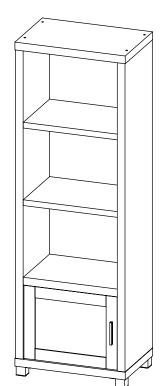







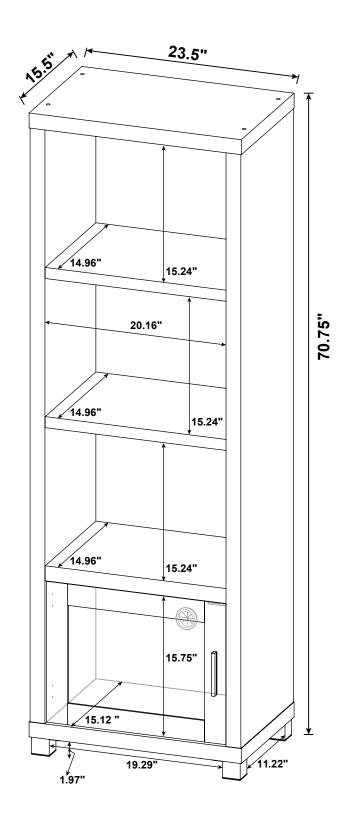

Note: Dimension tolerance ±5%



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

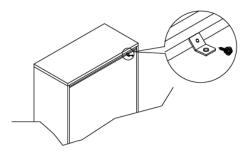

## STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

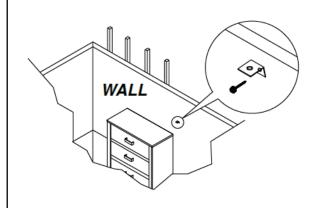

## STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

