

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE





REVISION 0 : 09/26/2017 REVISION 1 : 07/16/2019 REVISION 2 : 06/28/2022

PAGE 1 OF 12

COASTERFURNITURE.COM

ITEM:801541



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING! 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 2 OF 12



NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 3 OF 12















ITEM:801541 COASTER <u>STEP 12</u> FINE FURNITURE J 0 0 0 J 0 **STEP 13** COMPLETE 0 0 0 PAGE 11 OF 12 COASTERFURNITURE.COM





ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 04/20/2017 REVISION 1 : 07/01/2019 REVISION 2 : 06/28/2022

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM:801542



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

WARNING!

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ITEM:**801542** <u>STEP 3</u> COMPLETE







ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture. This restraint is not a substitute for proper adult supervision. Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)



