

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**802061**  
**Writing Desk**

# ITEM: 802061



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

 
 
 

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.









 
ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A	DESKTOP		1PC
B	LEG WITH LABEL "B"		2PCS
C	LEG WITH LABEL "C"		2PCS
D	CROSSBAR		2PCS

## HARDWARE IDENTIFICATION


1	<b>BOLT</b> (Ø5/16" x 2-3/8" - BLK)		8PCS
2	<b>LOCK WASHER</b> (5/16" x 16mm - BLK)		8PCS
3	<b>FLAT WASHER</b> (Ø5/16" - BLK)		8PCS
4	<b>CAM NUT</b> (Ø15 x 12mm - WHT)		4PCS
5	<b>CAM BOLT</b> (Ø6 x 32mm - WHT)		4PCS
6	<b>WOOD DOWEL</b> (Ø3/8" x 1 1/2" - WOOD)		8PCS
7	<b>ALLEN WRENCH</b> (4mm x 59mm - BLK)		1PC

ITEM: **802061**


**ASSEMBLY INSTRUCTIONS**



**STEP 1**

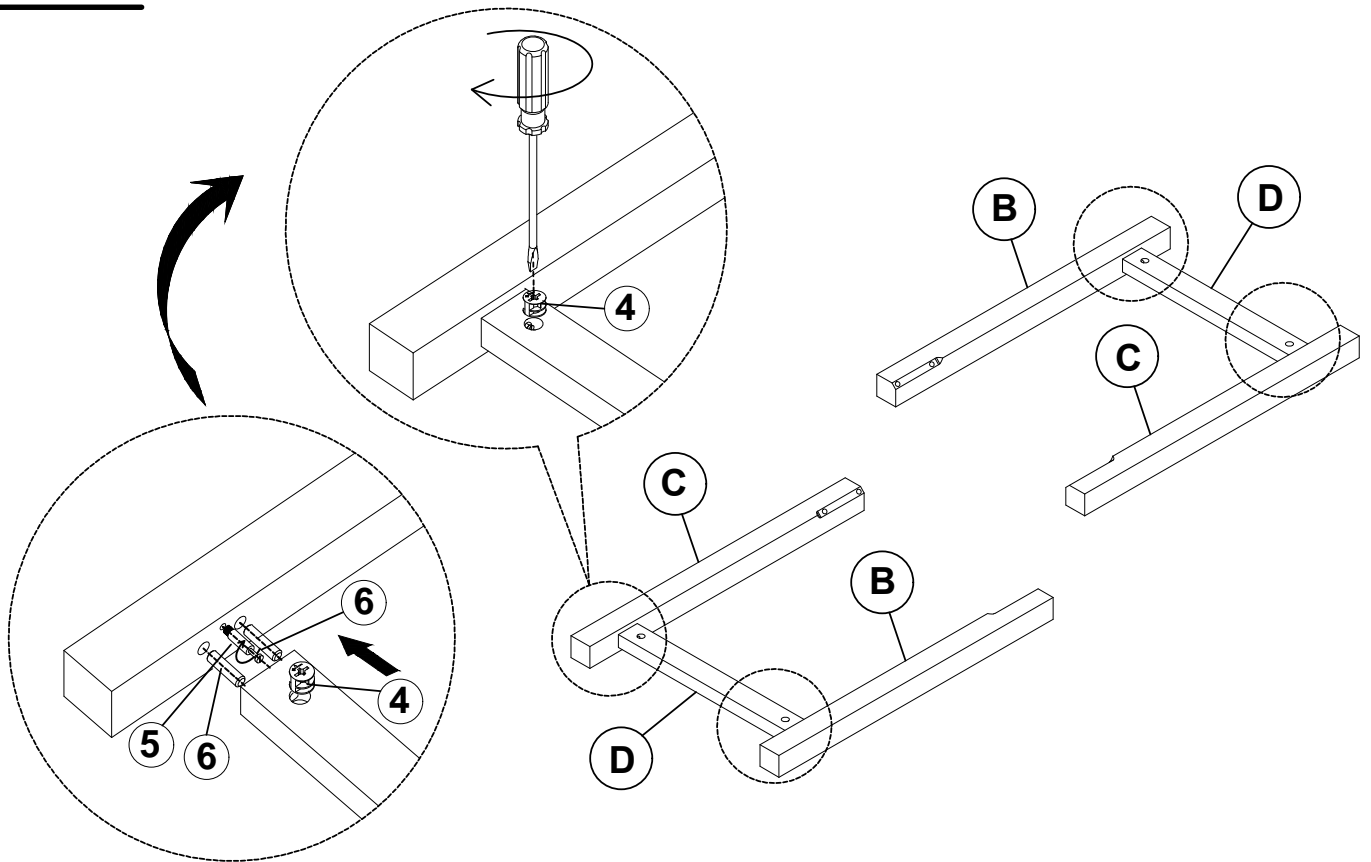

**STEP 2**


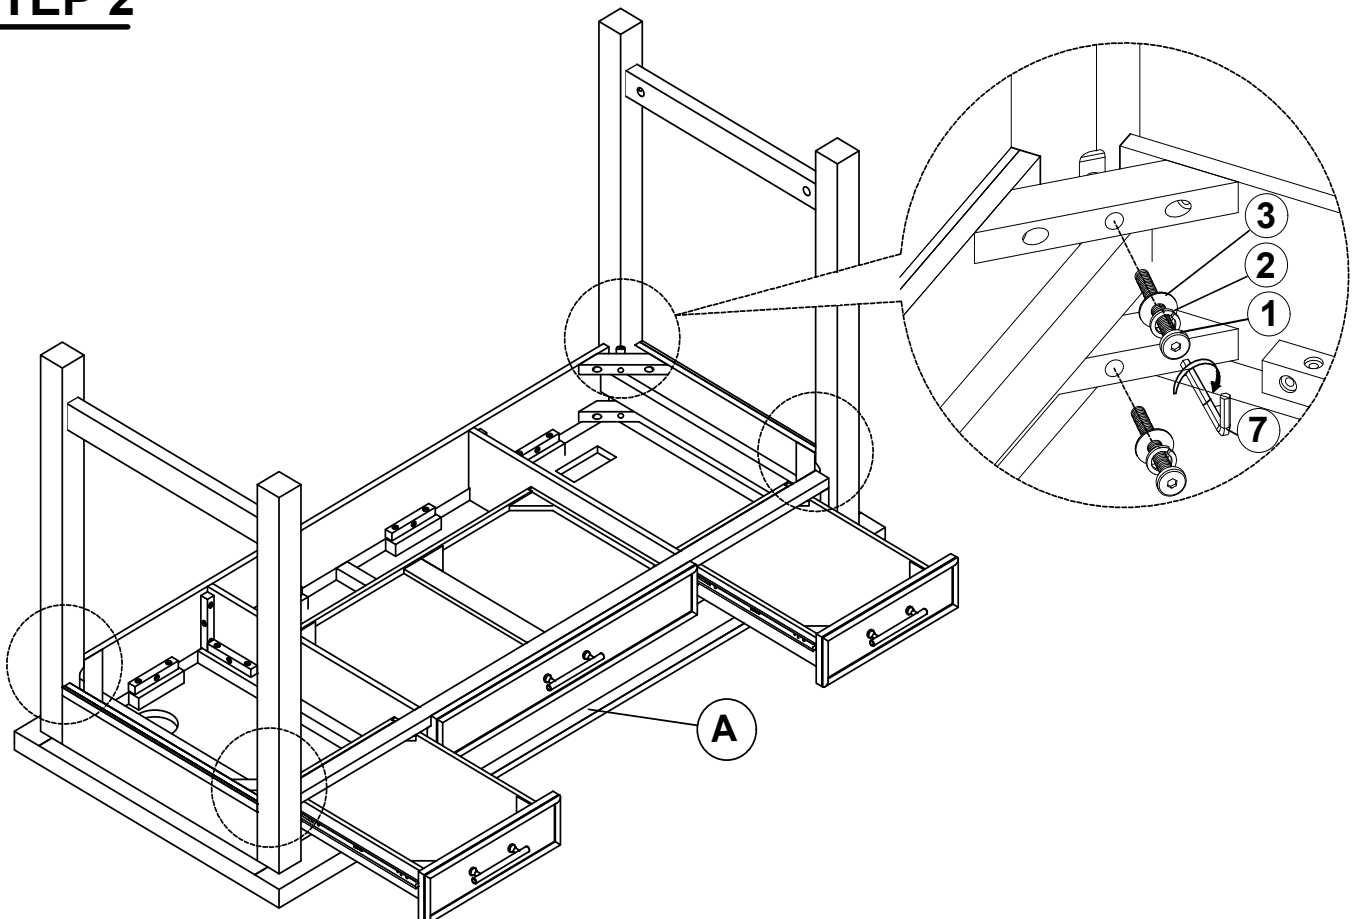


ITEM: **802061**

**ASSEMBLY INSTRUCTIONS**

**STEP 3**

**COMPLETE**

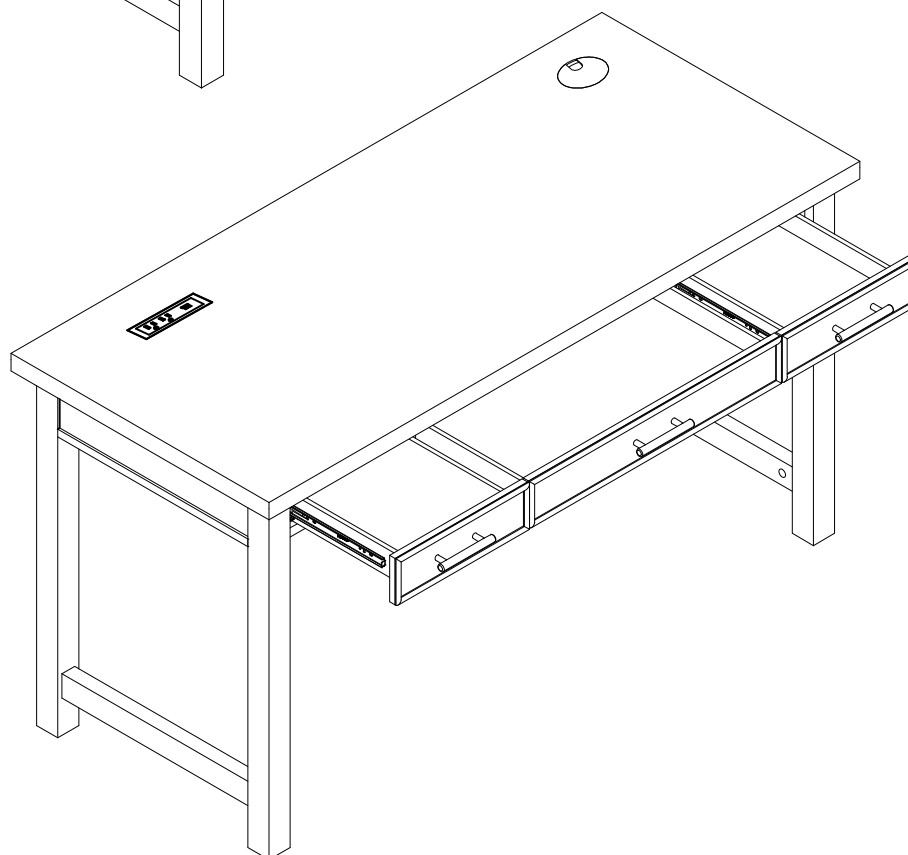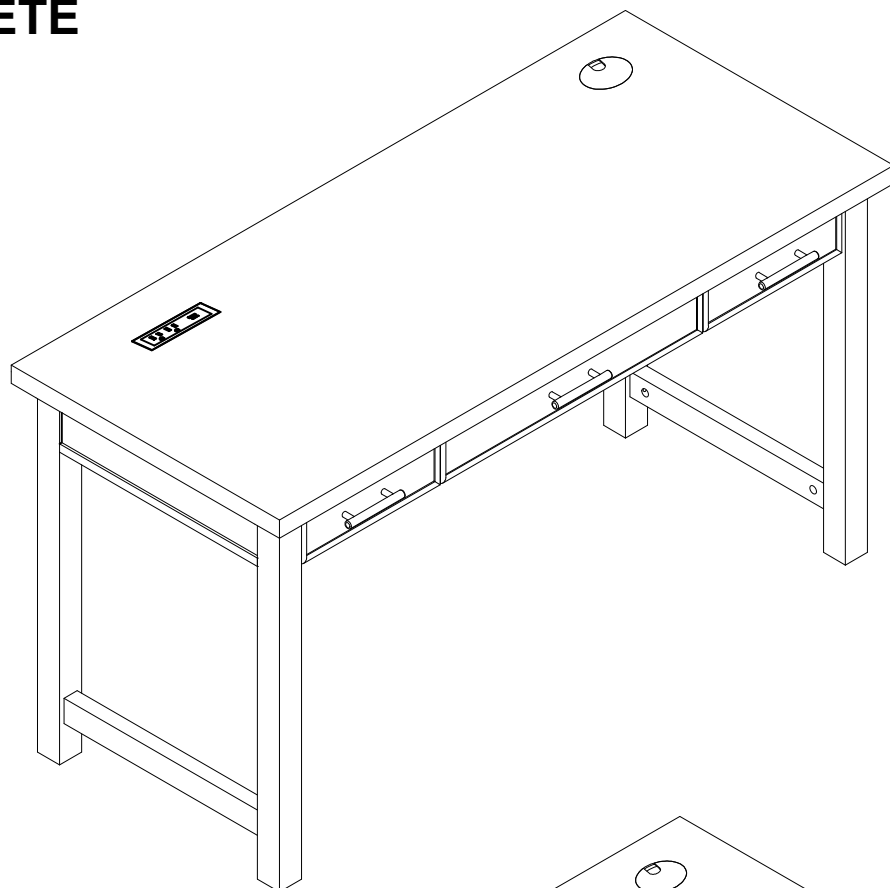


ITEM: 802061



Inner Size of Drawer A: 9.75"W x 13.00"D x 1.50"H x 0.25"T

Inner Size of Drawer B: 21.25"W x 13.00"D x 1.50"H x 0.25"T

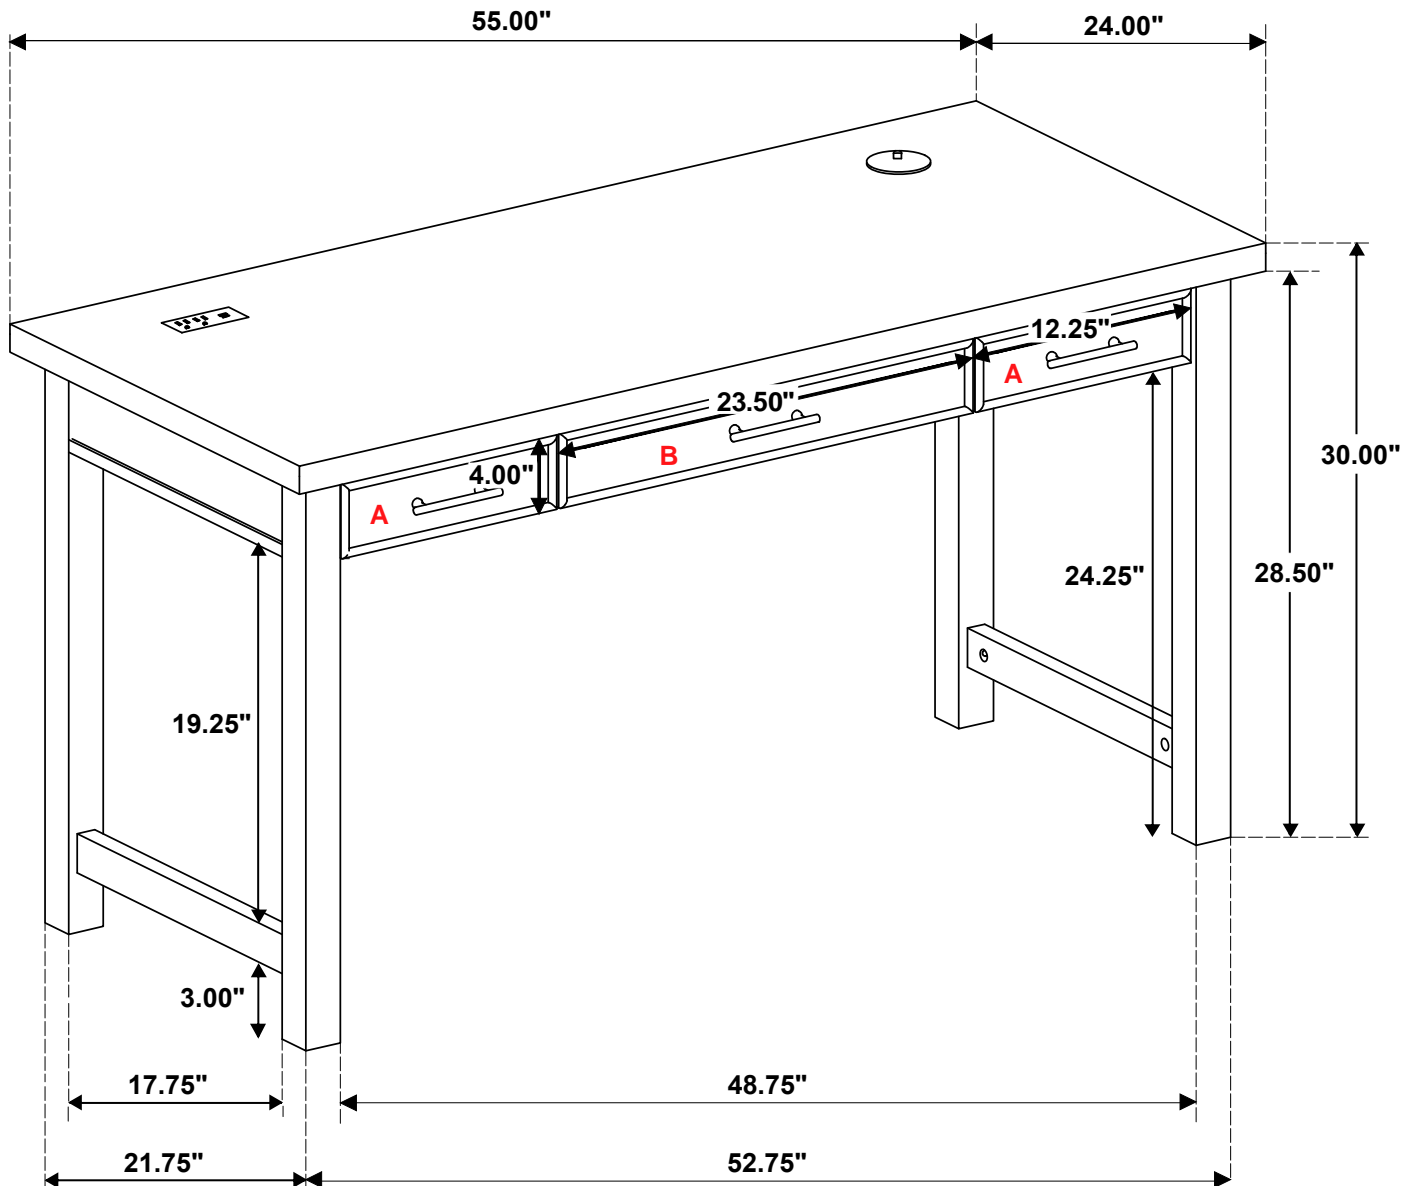

Note: Dimension tolerance  $\pm 5\%$