

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

901081 *TV Tray Table Set*

REVISION 0:06/17/2013 REVISION 1:11/19/2018 REVISION 2:08/26/2019 REVISION 3:01/15/2024



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION


AV	POST	P	2PCS
BV	HANGER BAR		2PCS
CV	HANDLE		1PC
DV	CROSSBAR		1PC
EV	LEG		2PCS
FV	TRAY TABLE		4PCS

HARDWARE IDENTIFICATION

1	HEX HEAD SCREW (Ø1/4" x 30mm - GD)		12PCS
2	ALLEN WRENCH (4MM - GD)		1PC
3	WOOD PLUG (Ø13mm)	9	4PCS


COASTER

ASSEMBLY INSTRUCTIONS STEP 1

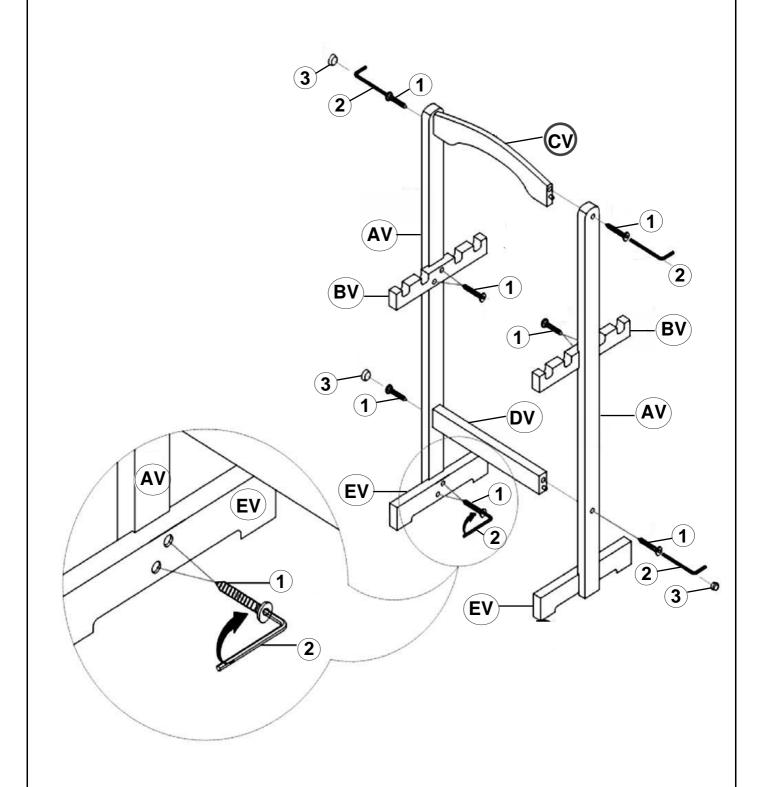




ASSEMBLY INSTRUCTIONS STEP 2 COMPLETE

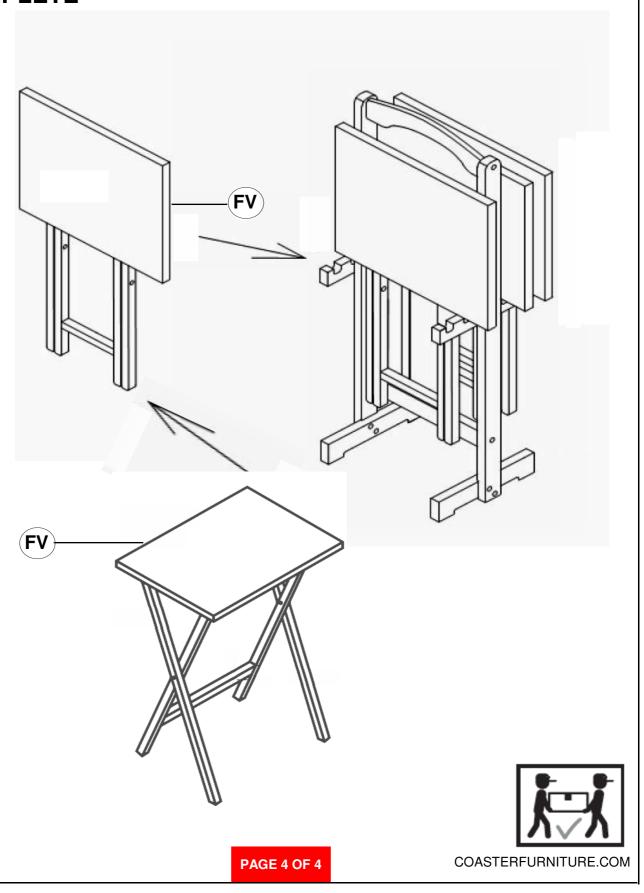



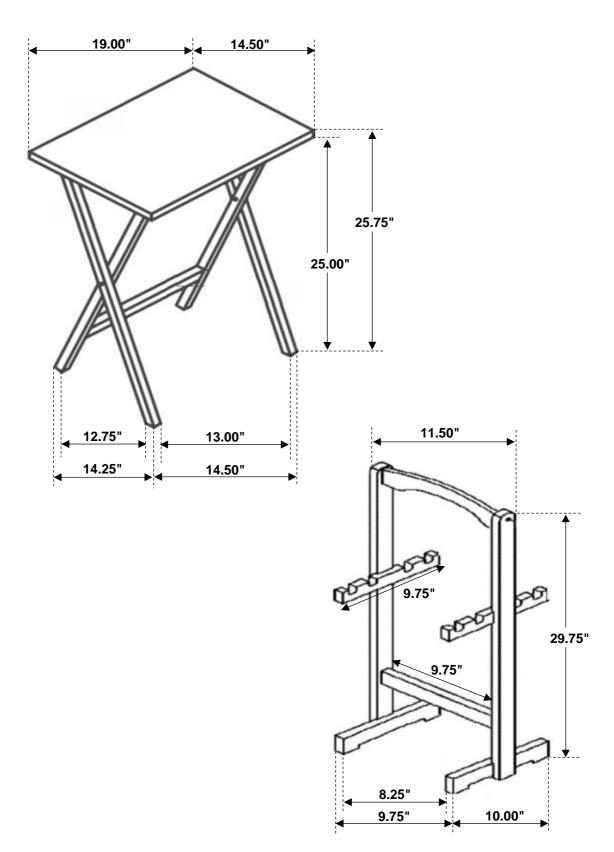

Note: Dimension tolerance ±5%