



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

903161  
***ACCENT CHAIR***

REVISION 0 : 12/12/2023

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM:903161



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



 
 
 
 
## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.






 
ASSEMBLY TIME 40 MINUTES
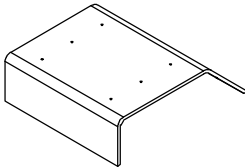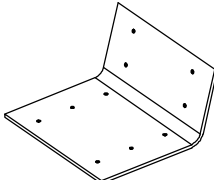
## PARTS IDENTIFICATION

A	CUSHION 1		4PCS
B	CUSHION 2		2PCS
C	BASE ARCYLIC		1PC
D	BACK ARCYLIC		1PC

Z

## HARDWARE IDENTIFICATION

1	SHORT BOLT (1/4" x 18mm SR)		4PCS	3	NUT		4PCS
2	LONG BOLT (1/4" x 35mm SR)		12PCS	4	ALLEN WRENCH (4mm)		1PC

 
ITEM:903161




# ASSEMBLY INSTRUCTIONS

## STEP 1

Do not tighten until each step is completed or instructed.

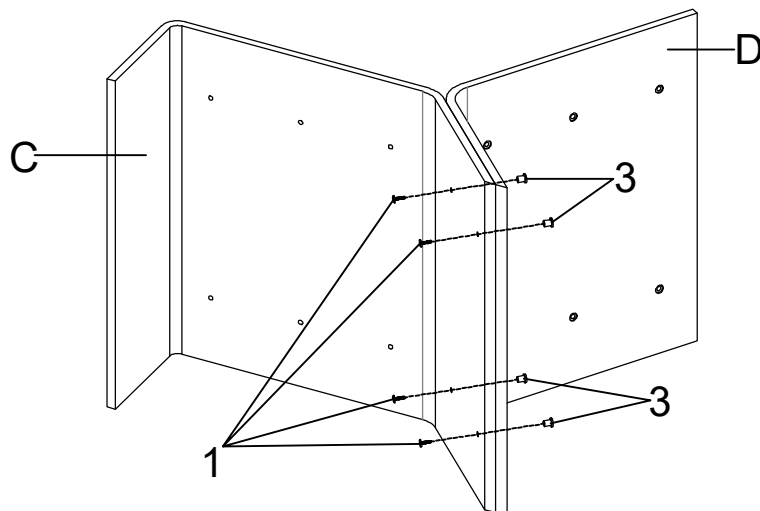


## STEP 2

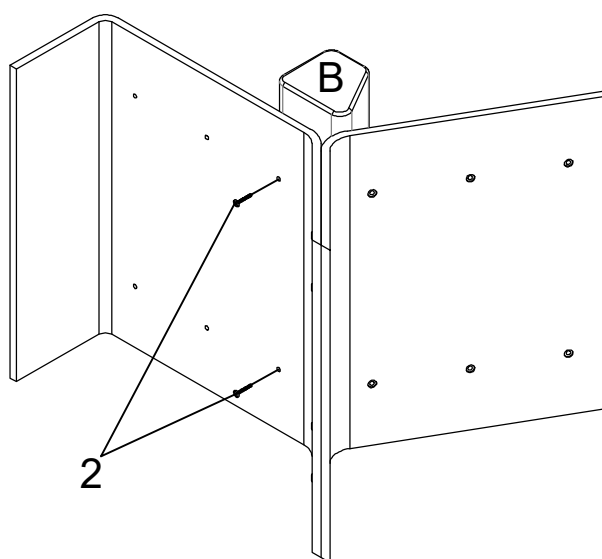 


ITEM:903161

# ASSEMBLY INSTRUCTIONS
 
## STEP 3

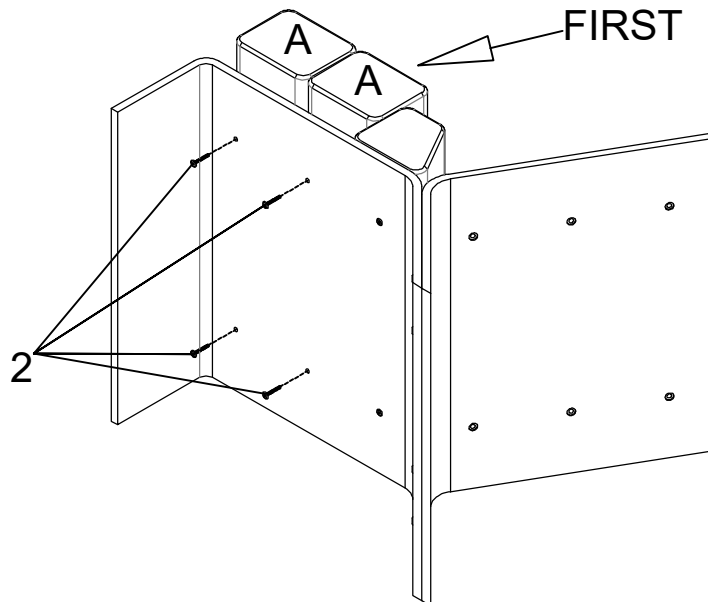


## STEP 4

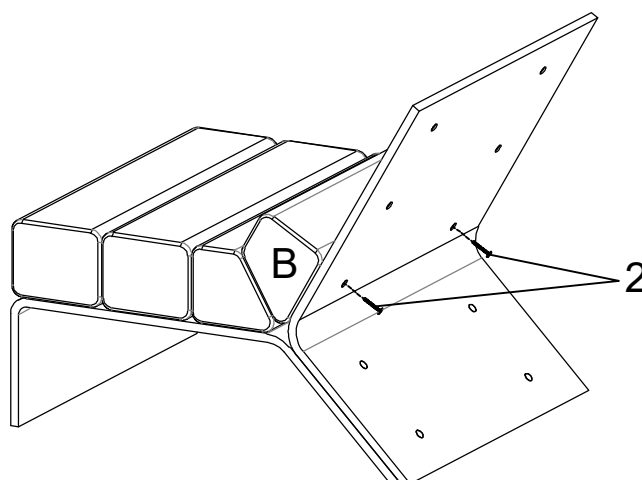 


ITEM:903161

# ASSEMBLY INSTRUCTIONS
 
## STEP 5

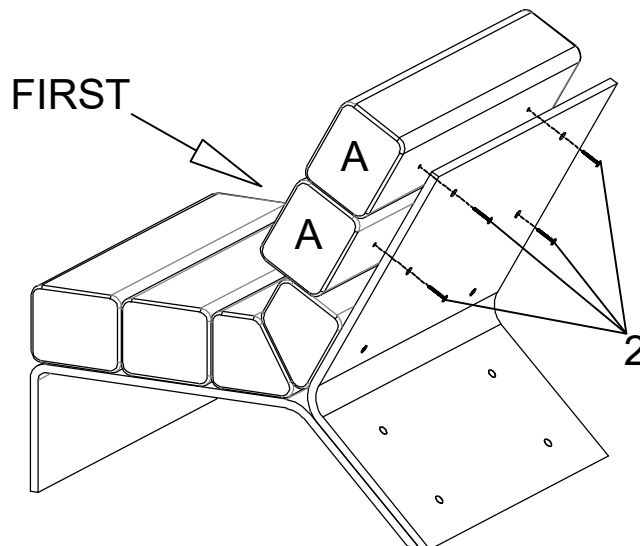

## STEP 6 COMPLETE

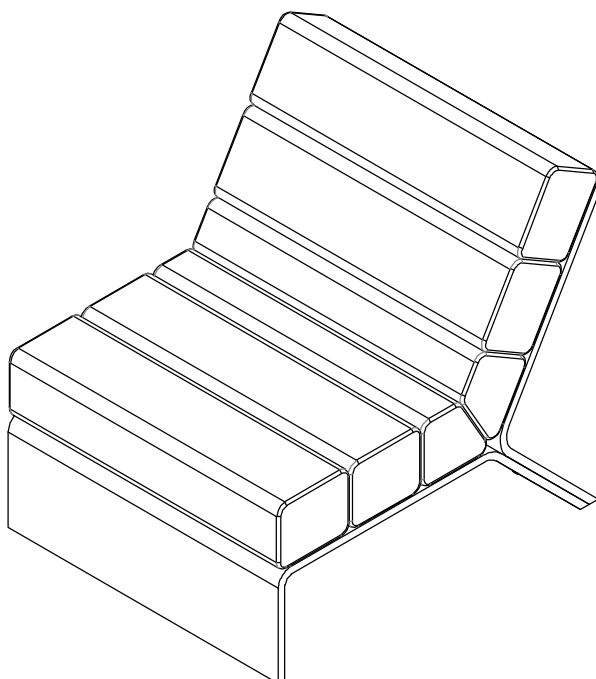 


How to clean Acrylic product:

Using a dry soft microfiber cloth, lightly brush off any dust.

For additional care, dampen the cloth with warm water.

 For deepest cleaning, use an Acrylic cleaner.

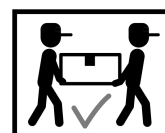


# ITEM:903161

## ASSEMBLY INSTRUCTIONS



**Product Size : 641 X 800 X 743 H (MM)**

 **Product Size : 25.25" X 31.5" X 29.25"**

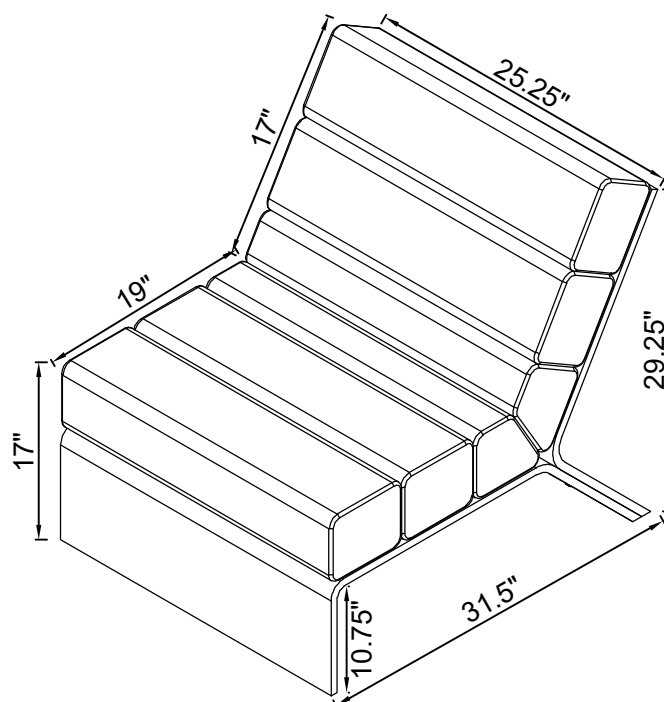

Note : Dimension tolerance  $\pm 5\%$