



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



REVISION 0 : 07/11/2021
REVISION 1 : 07/20/2022
REVISION 2 : 08/28/2025

PAGE 1 OF 4

905739
SWIVEL ACCENT
CHAIR

COASTERFURNITURE.COM

ITEM:905739

ASSEMBLY INSTRUCTIONS



 
 
 

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

 


 
WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

PARTS IDENTIFICATION


	PART NAME	FIGURE	QTY
AN	SEAT AND BACK		1PC
BN	SEAT PLATE		1PC
CN	BASE		1PC
DN	GAS LIFT		1PC

HARDWARE IDENTIFICATION


	PART NAME	FIGURE	QTY
1	ALLEN WRENCH (M4)		1PC
2	BOLT (1/4" x 55mm)		4PCS
3	SPRING WASHER (1/4")		4PCS
4	FLAT WASHER (1/4"*19* 2mm)		4PCS

ASSEMBLY INSTRUCTIONS


STEP 1

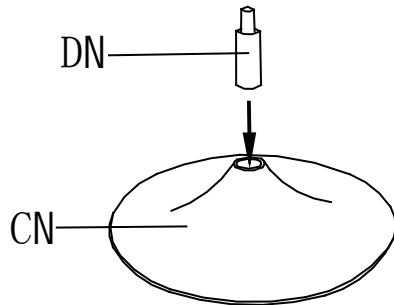


STEP 2

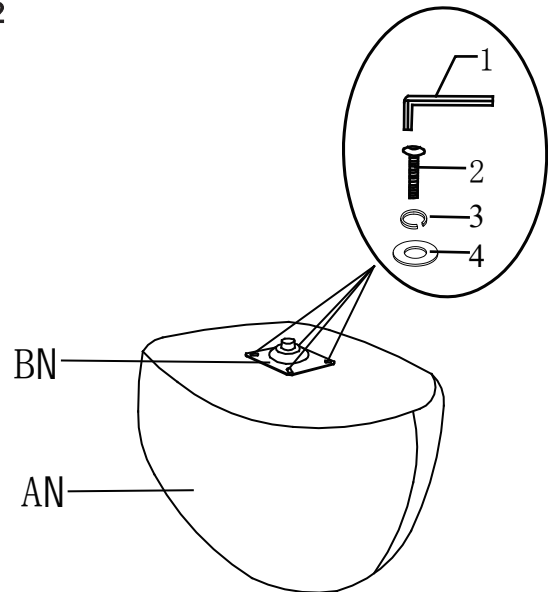


STEP 3

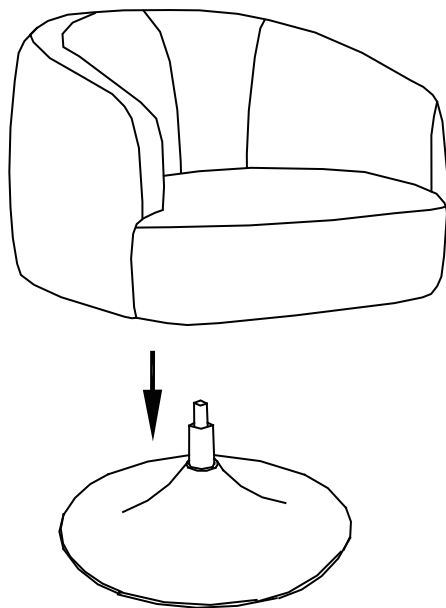

STEP 4

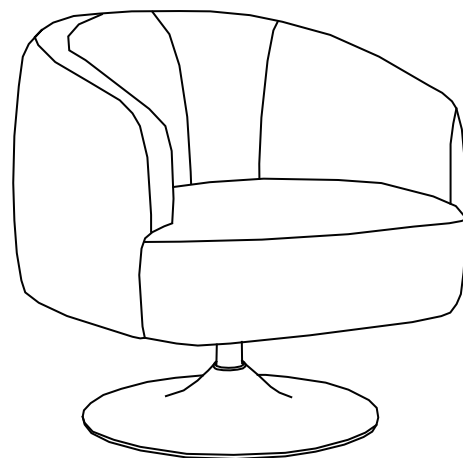

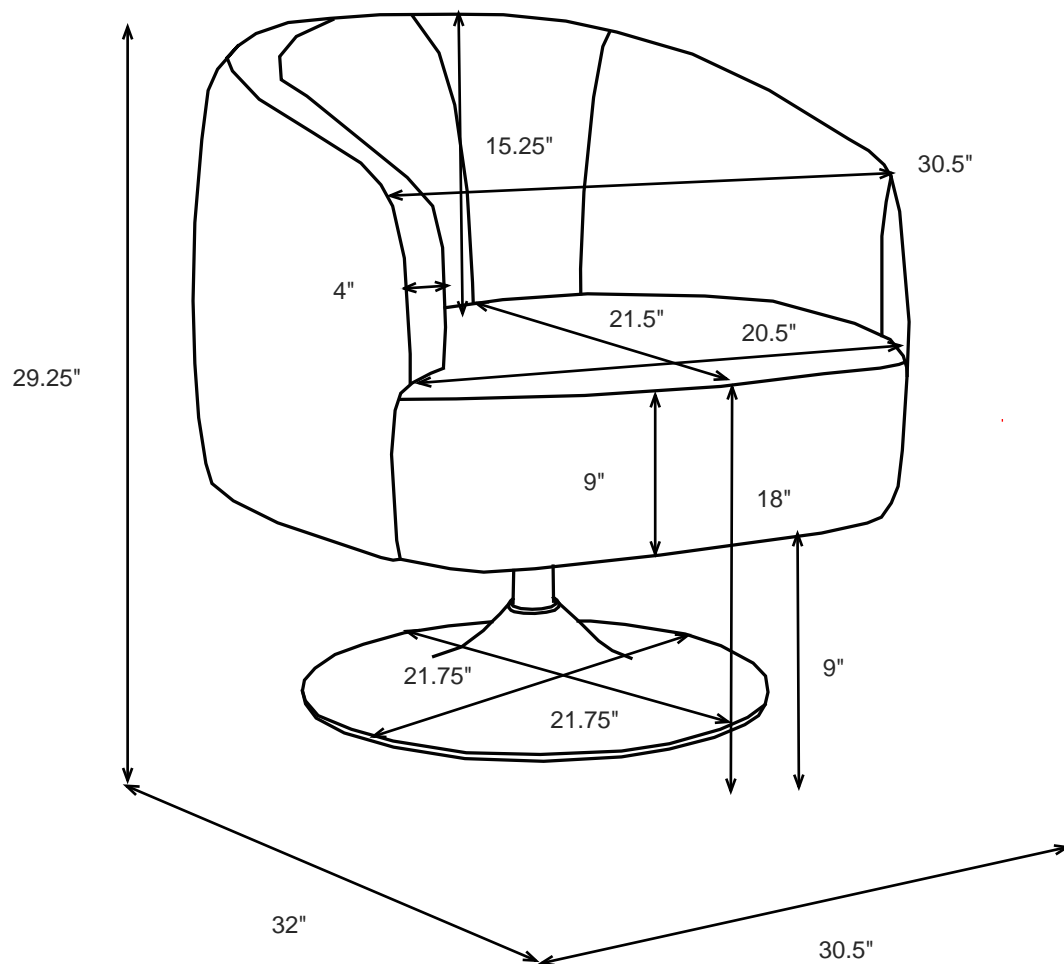

Note : Dimension tolerance $\pm 5\%$