

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

950398 CURIO CABINET

REVISION 0: 12/12/2023

PAGE 1 OF 18

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 95 MINUTES

PARTS IDENTIFICATION

A	TOP PANEL			1PC	
В	TOP LEFT PANEL			1PC	
С	TOP RIGHT PANEL			1PC	
D	MIDDLE PANEL			1PC	
E	BOTTOM LEFT PANEL			1PC	
		PAGE 2 OF 18	COASTERFURNITURE.COM		

ITEM:950398 ASSEMBLY INSTRUCTIONS PARTS IDENTIFICATION




ASS	DNS FICATION	FINE FURNITURE	
F	BOTTOM RIGHT PANEL		1PC
G	BOTTOM PANEL		1PC
н	LEFT AND RIGHT PANEL		2PCS
I	FRONT AND BACK PANEL		2PCS
J	TOP BACK PANEL		1PC
К	BOTTOM BACK PANEL		1PC

PAGE 3 OF 18

ITEM:950398 ASSEMBLY INSTRUCTIONS PARTS IDENTIFICATION



 L DOOR PANEL




4PCS

M SIDE GLASS




4PCS

 N SHELF GLASS



4PCS

 O SHELF LIGHT



1PC

P POWER ADAPTER



1PC

Q POWER CORD CLAMP



3PCS

ASSEMBLY INSTRUCTIONS



Ζ

HARDWARE IDENTIFICATION


1	CAM-BOLT (6 x 35mm SR)	O TOTAL MAN	22PCS	9 METAL CON	NTACT 🕥	4PCS
2	CAM-LOCK (ø15mm SR)		22PCS	10 ADHESIVI	E 🔷	4PCS
3	WOOD DOWEL (8 x 30mm)		24PCS	11 DOOR PII	N &	8PCS
4	SCREW (3.5 x 15mm)	Edmini	21PCS	12 STICKEF		16PCS
5	SHORT SCREW (3.5 x 8mm)	D TIME	16PCS	13 LONG WOOD (8 x 50m		4PCS
6	PUSH-TO-OPEN MECHANISM	N ES	4PCS	14 GLUE		1PC
7	SHELF PIN		16PCS	15 ALLEN WR (4mm)	<i>∧</i> /	1PC
8	SMALL SHELF PIN	\bigcirc	8PCS			


ASSEMBLY INSTRUCTIONS




COASTERFURNITURE.COM


Do not tighten until each step is completed or instructed.

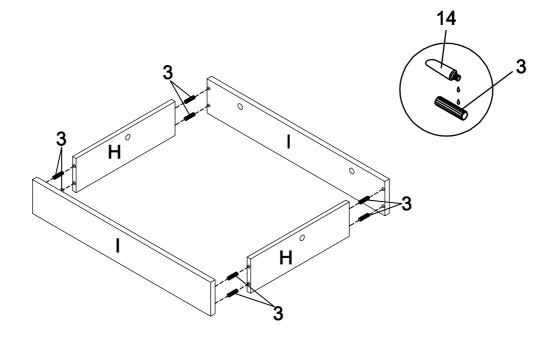

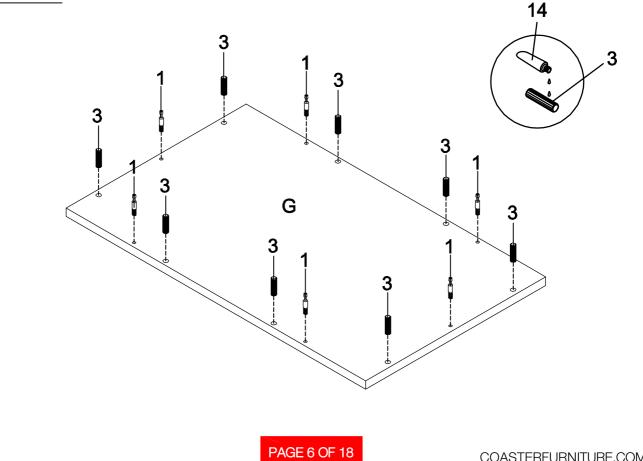




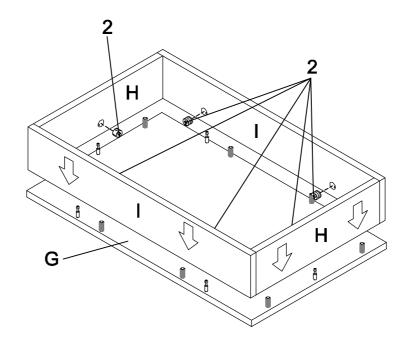


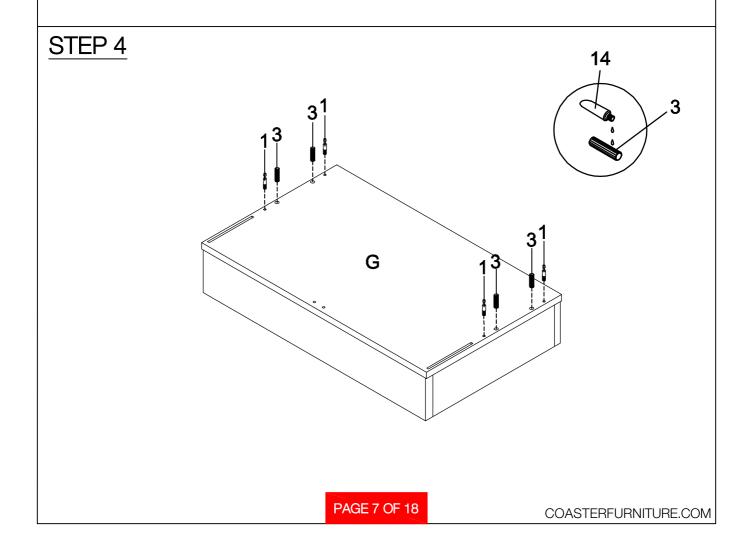




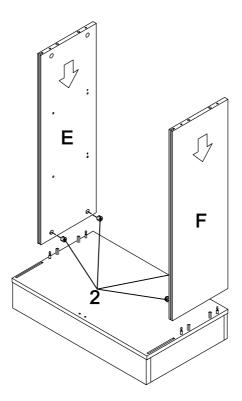

STEP 6

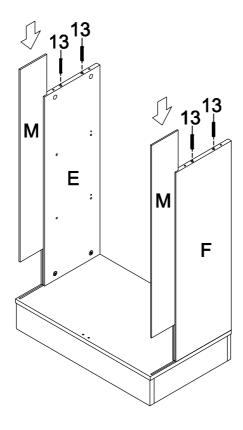


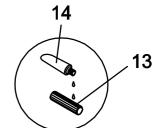


PAGE 8 OF 18



STEP 7

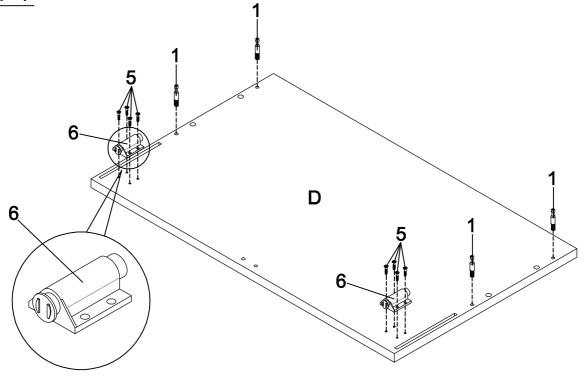


STEP 8

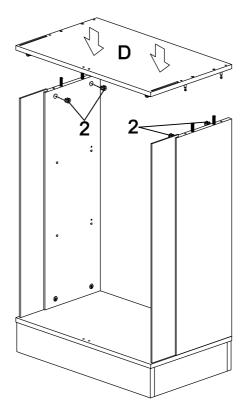


PAGE 9 OF 18





STEP 9

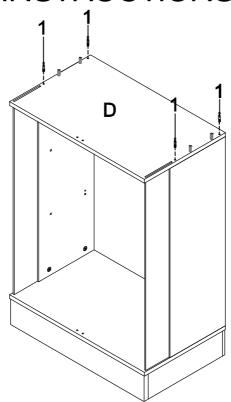

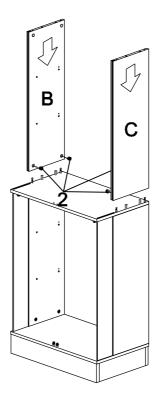




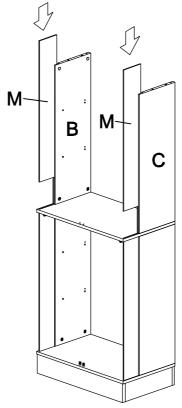


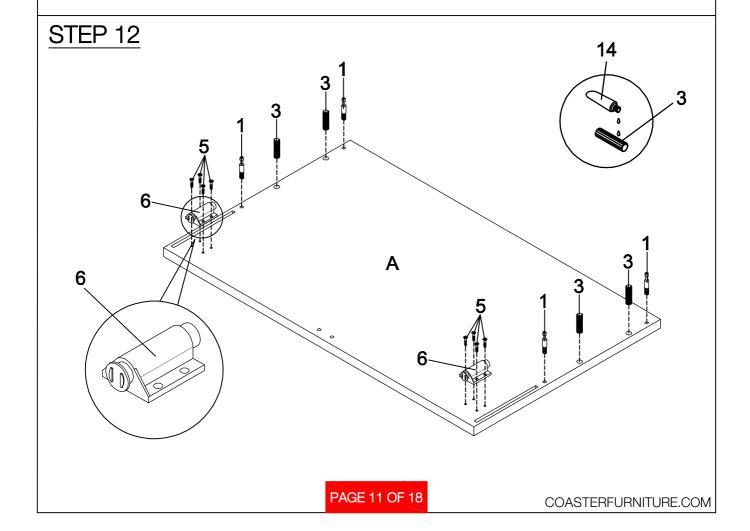




STEP 13

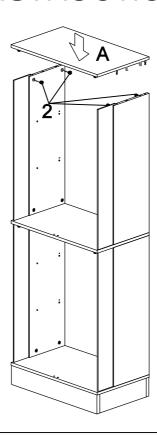

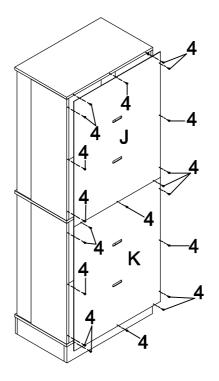





<u>STEP 15</u>

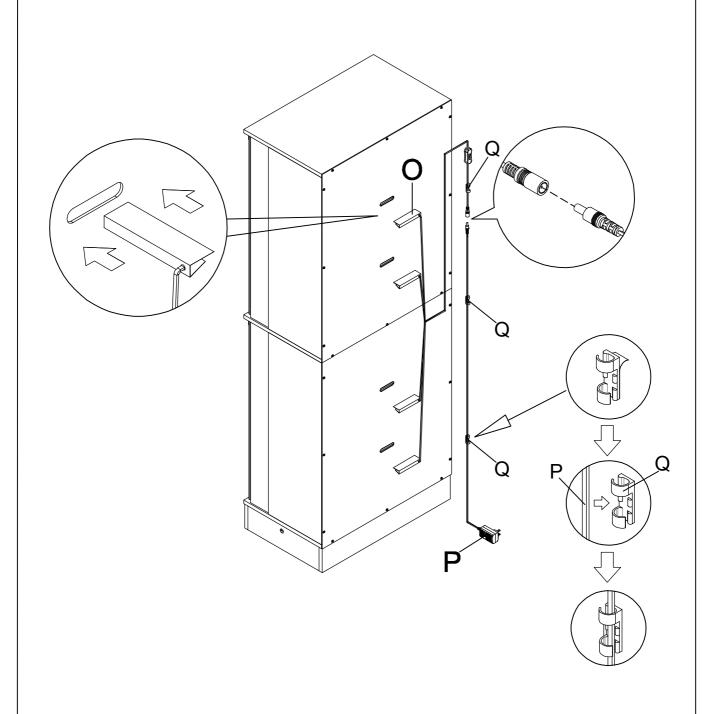



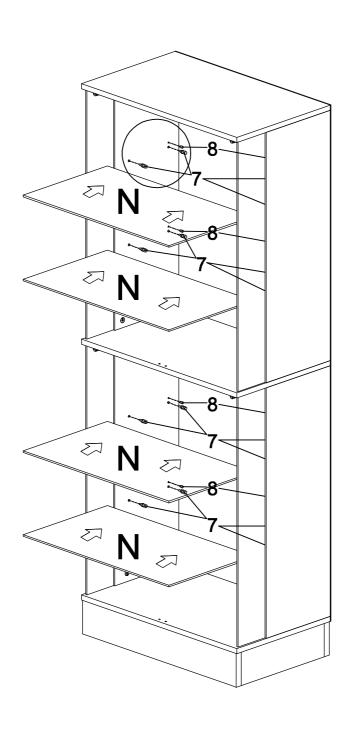




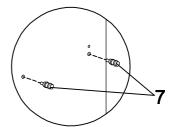


STEP 2



STEP 3

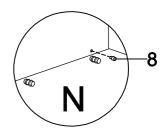


STEP 4

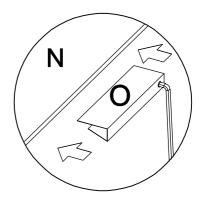





STEP 17

STEP 1

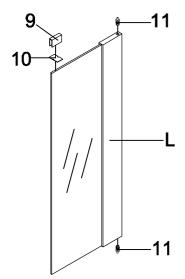

STEP 2

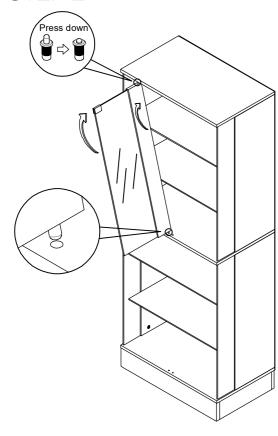


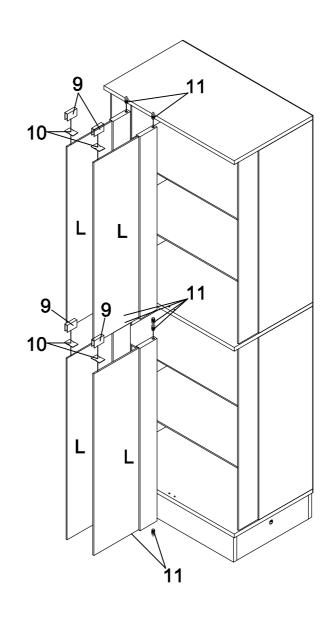


PAGE 15 OF 18





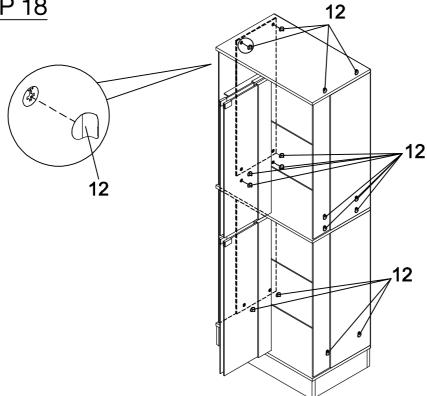

STEP 19 COMPLETE

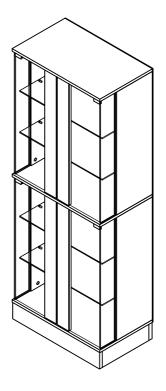








Product Size: 610 X 362 X 1619 H (MM)

Product Size: 24" X 14.25" X 63.75"

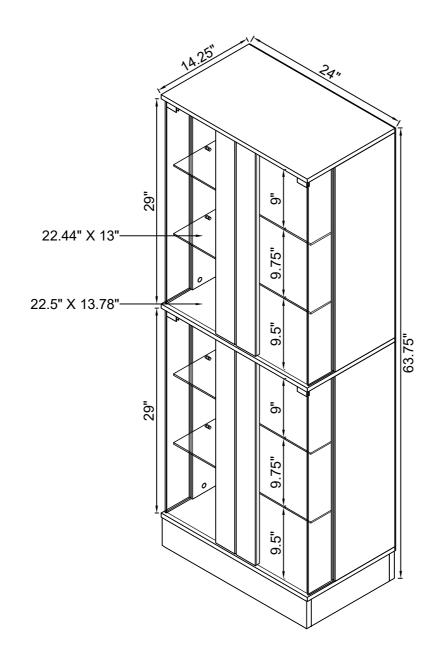

Note: Dimension tolerance ±5%



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

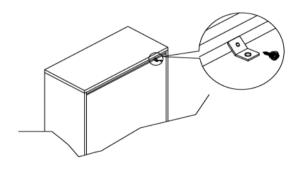

STEP 2

Locate the other bracket on the wall over a plastic wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

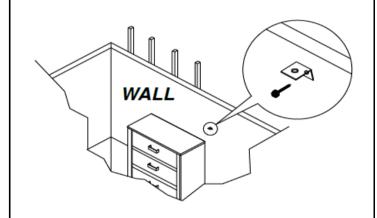

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

