

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**950404**  
**SHOE CABINET**

# ITEM:950404



## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

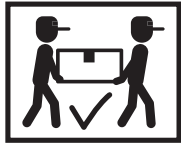


ASSEMBLY TIME

60 MINUTES


## PARTS IDENTIFICATION

 A LEFT SIDE  
PANEL

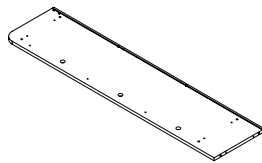


1 PC

 B RIGHT SIDE  
PANEL

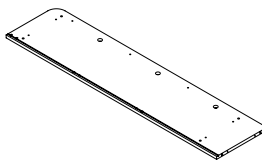


1 PC

 C BOTTOM PANEL

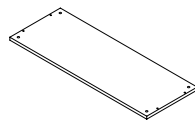


1 PC

 D CROSS PANEL




1 PC

 E TOP PANEL




1 PC

 F UPPER  
CROSSBRACE




1 PC

 G BACK  
CROSSBRACE




2 PCS

 H UPPER BACK  
PANEL




3 PCS

 I LOWER BACK  
PANEL




1 PC

 J SHELF




3 PCS

 K PARTITION  
PANEL



6 PCS

 L DOOR








3 PCS

### NOTE:

     Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950404****HARDWARE IDENTIFICATION**

| ZN |                           |                                                                                     |        |    |                               |                                                                                       |        |
|----|---------------------------|-------------------------------------------------------------------------------------|--------|----|-------------------------------|---------------------------------------------------------------------------------------|--------|
| NO | DESCRIPTION               | FIGURE                                                                              | Q'TY   | NO | DESCRIPTION                   | FIGURE                                                                                | Q'TY   |
| 1  | GLUE 40g                  |    | 1 PC   | 11 | PLASTIC SIDE SCREW<br>Ø8x17mm |    | 6 PCS  |
| 2  | WOODEN DOWEL<br>Ø8x30mm   |    | 22 PCS | 12 | BOLT<br>Ø6x13mm SR            |    | 6 PCS  |
| 3  | CAM BOLT<br>Ø7x35.5mm SR  |    | 12 PCS | 13 | SCREW<br>Ø4x15mm SR           |    | 18 PCS |
| 4  | CAM LOCK<br>Ø15x12mm SR   |    | 12 PCS | 14 | FIXER                         |    | 6 PCS  |
| 5  | SCREW<br>Ø4.5x42mm SR     |   | 4 PCS  | 15 | FIXER SCREW<br>Ø3x19mm SR     |   | 24 PCS |
| 6  | HANDLE<br>L=120mm         |  | 3 PCS  | 16 | FOOT<br>Ø35xH19mm             |  | 4 PCS  |
| 7  | HANDLE BOLT<br>Ø4x28mm SR |  | 6 PCS  | 17 | WALL PLUG<br>6x30mm           |  | 4 PCS  |
| 8  | PLASTIC SIDE              |  | 3 PCS  | 18 | SCREW<br>Ø4.3x35mm SR         |  | 4 PCS  |
| 9  | LATCH-MALE                |  | 6 PCS  | 19 | STICKER<br>Ø20mm              |  | 2 PCS  |
| 10 | LATCH-FEMALE              |  | 6 PCS  |    |                               |                                                                                       |        |


Z6,Z7,Z8,Z16 not included in blister packaging.

**NOTE:**

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:950404

## STEP 1

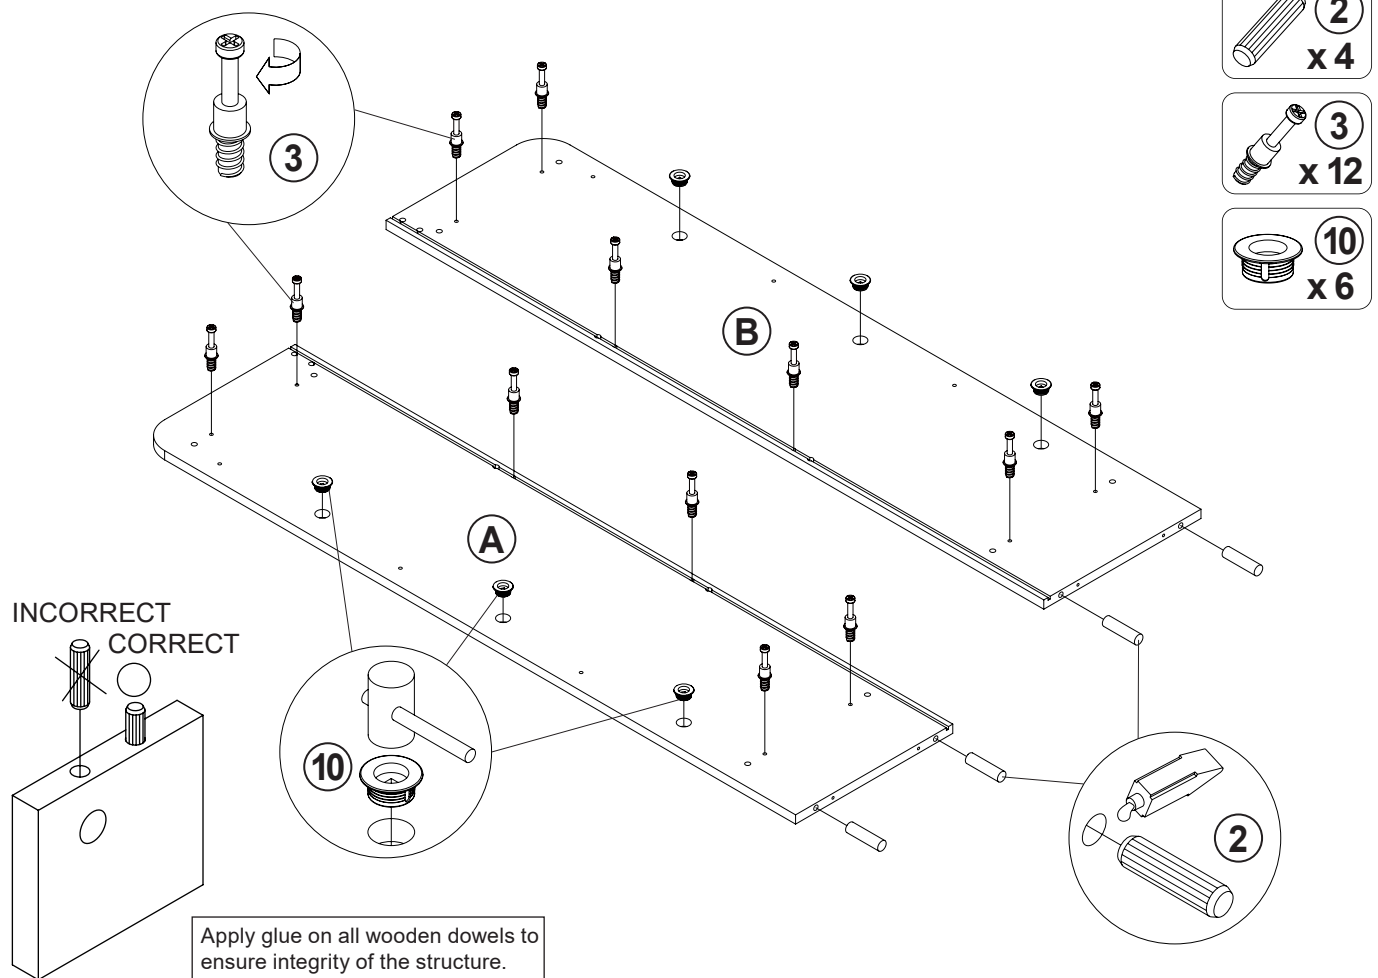


## STEP 2



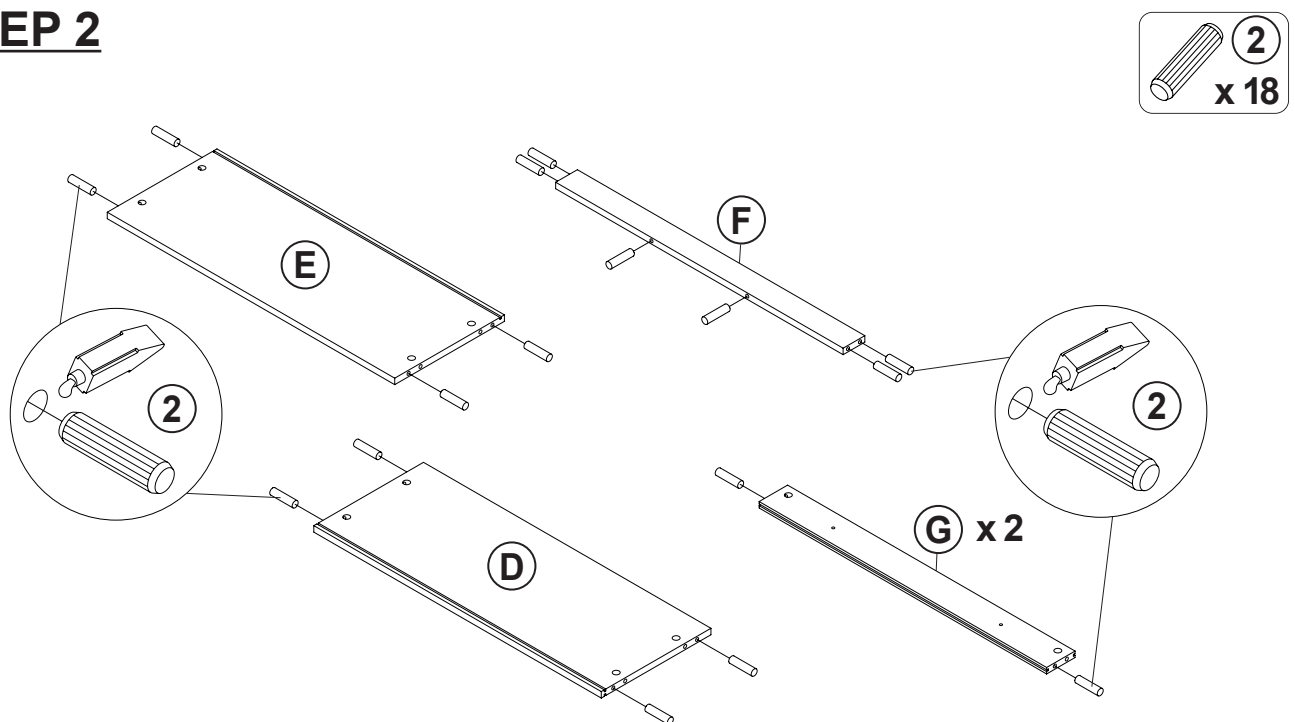 


ITEM: **950404**

**STEP 3**

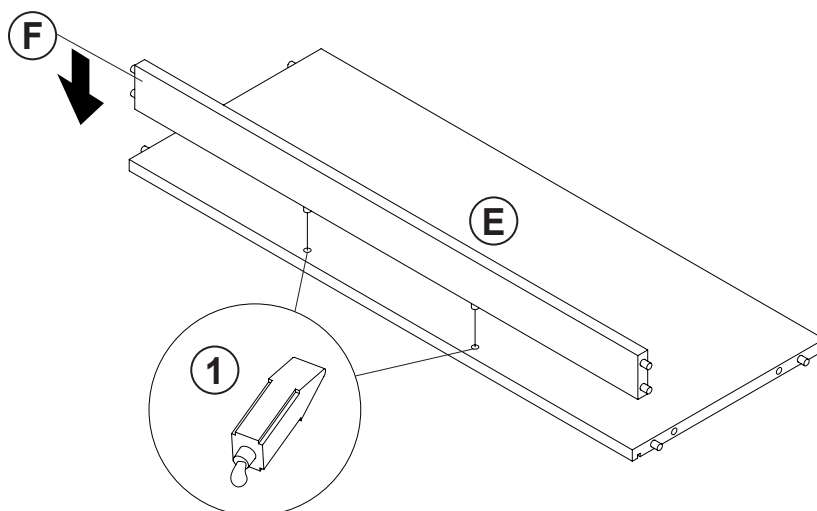 



**STEP 4**

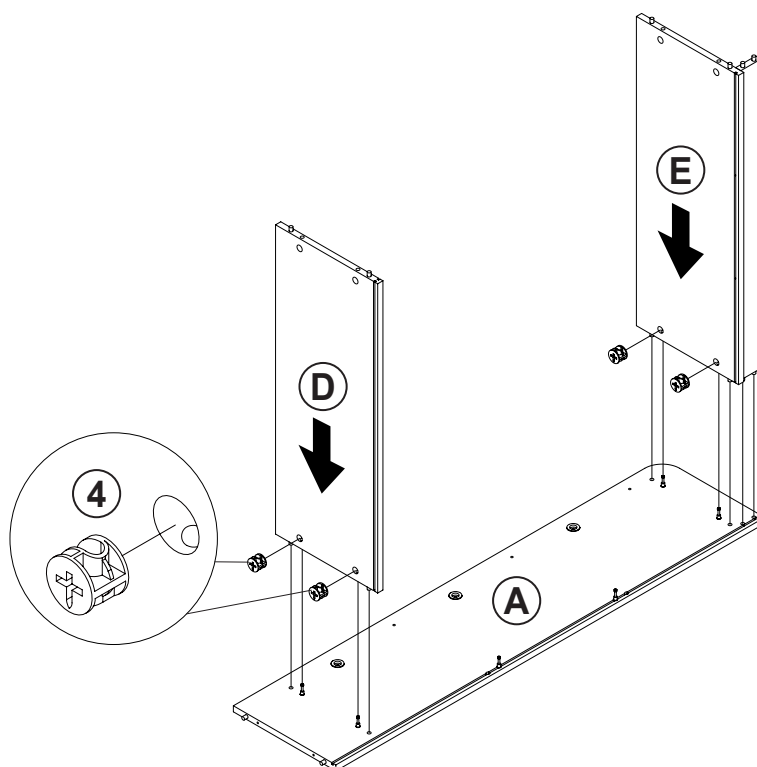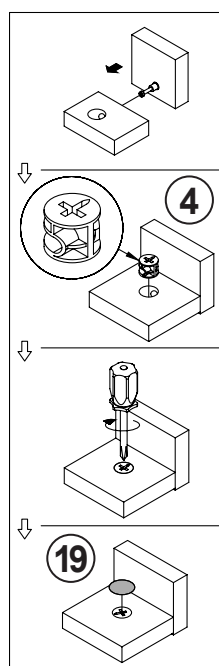   


ITEM: **950404**

**STEP 5**

  **COASTER**  
FINE FURNITURE

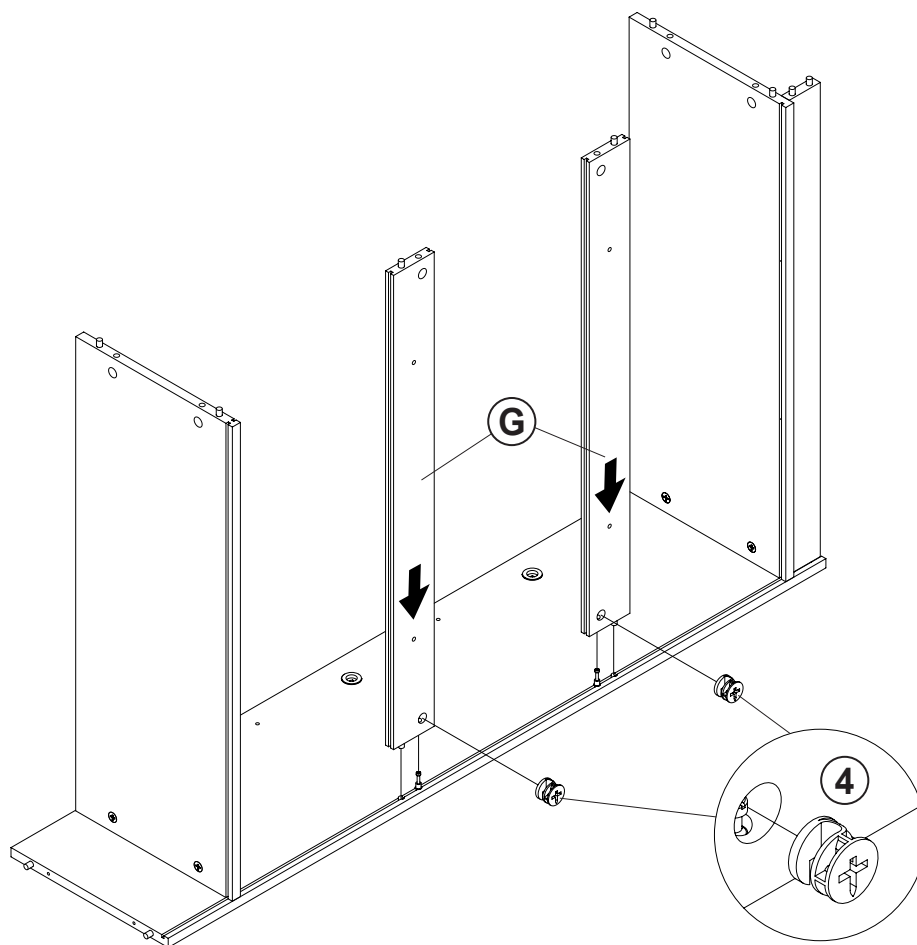



**STEP 6**

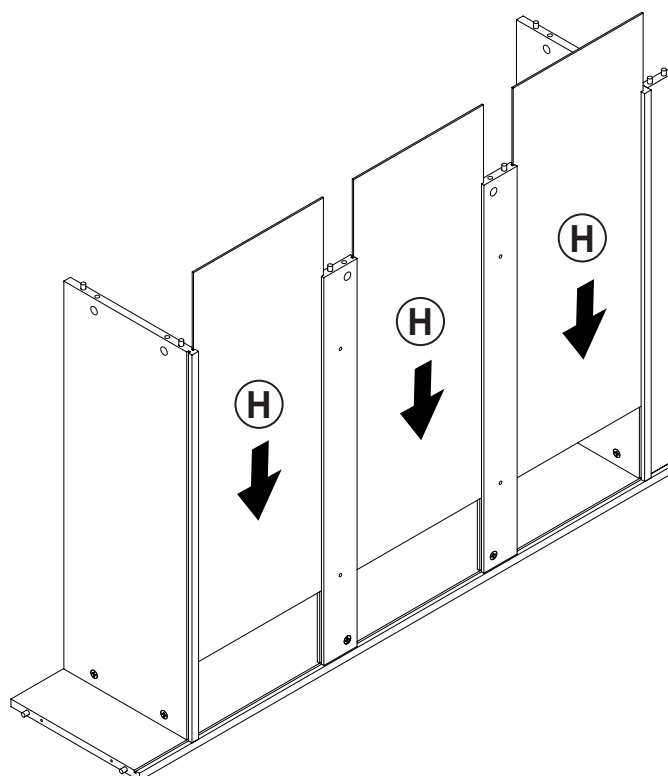 



ITEM: **950404**

**STEP 7**

  **COASTER**  
FINE FURNITURE

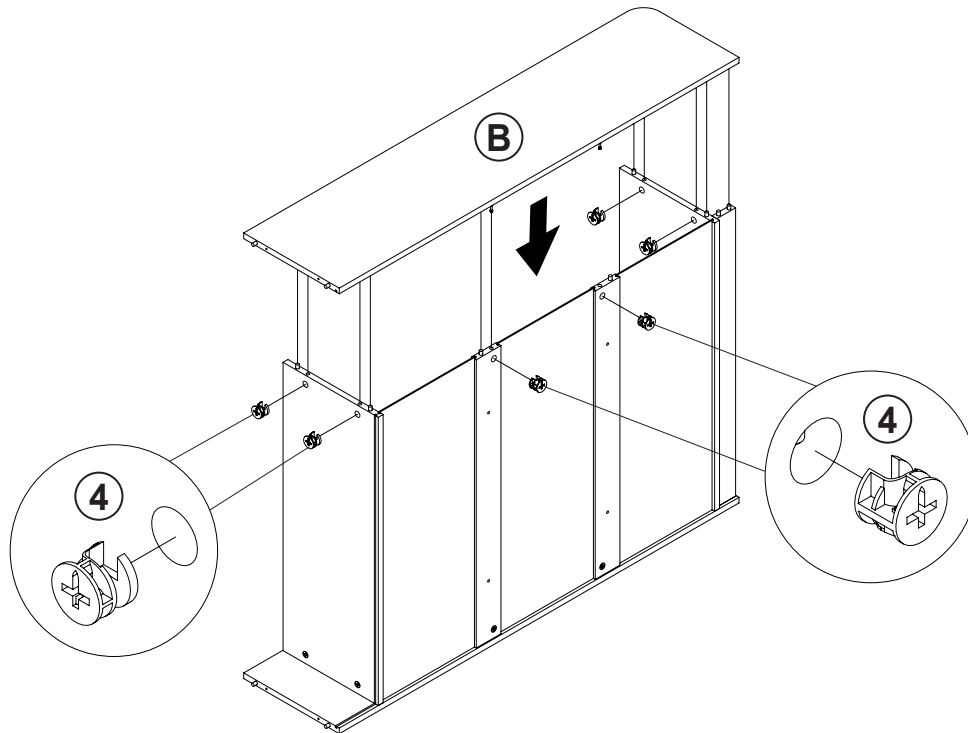



**STEP 8**

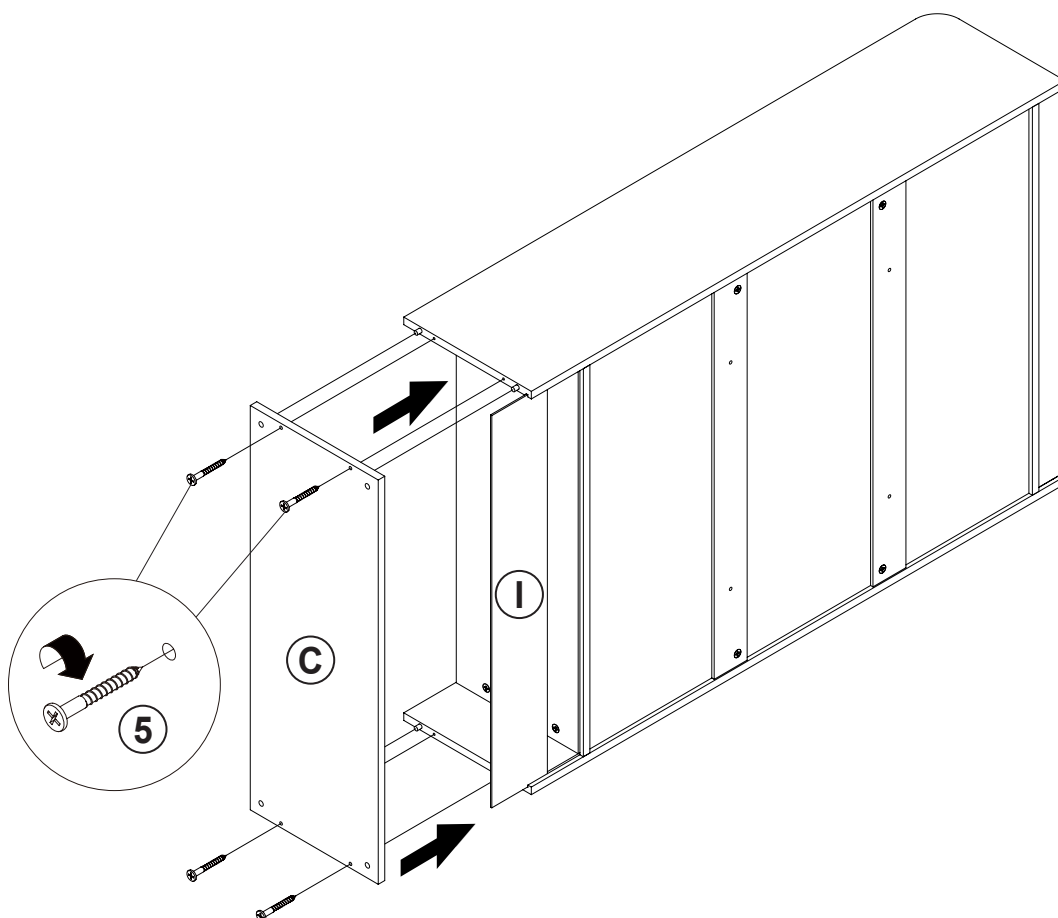  


ITEM: **950404**

**STEP 9**

  **COASTER**  
FINE FURNITURE

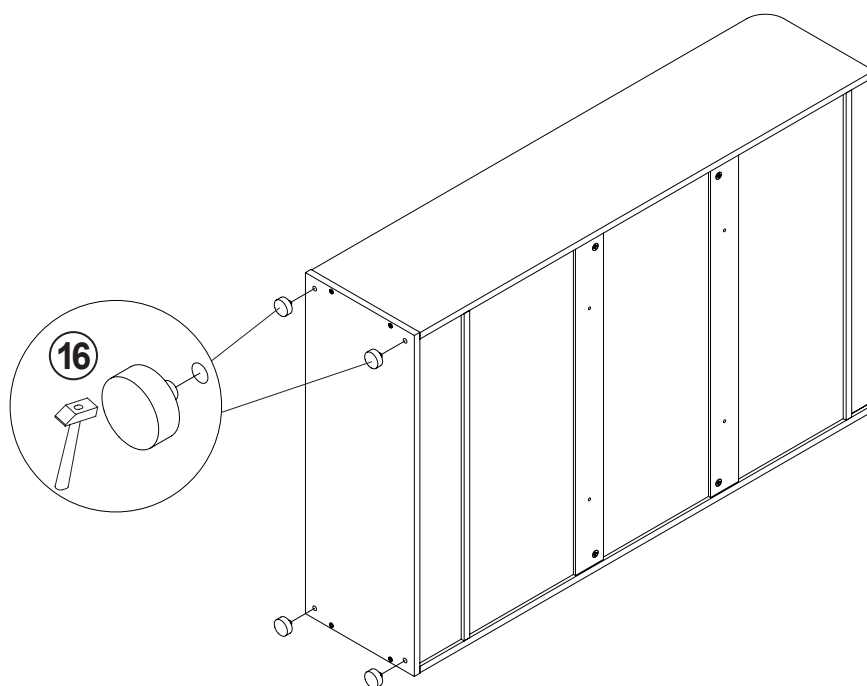

**STEP 10**




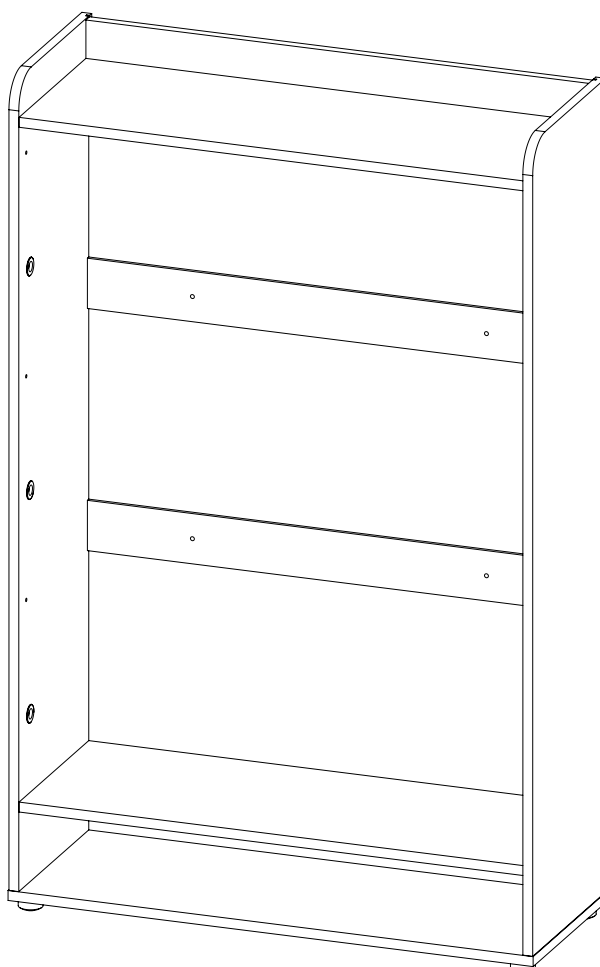 








ITEM: **950404**

## **STEP 11**

    **COASTER**  
FINE FURNITURE

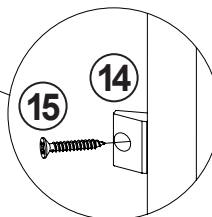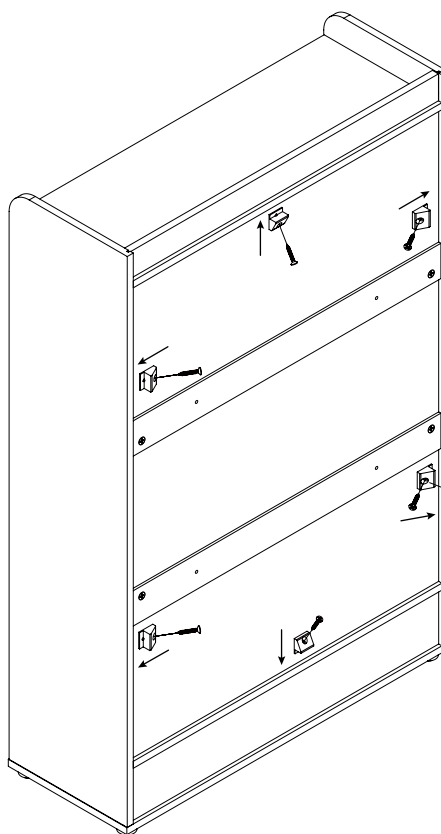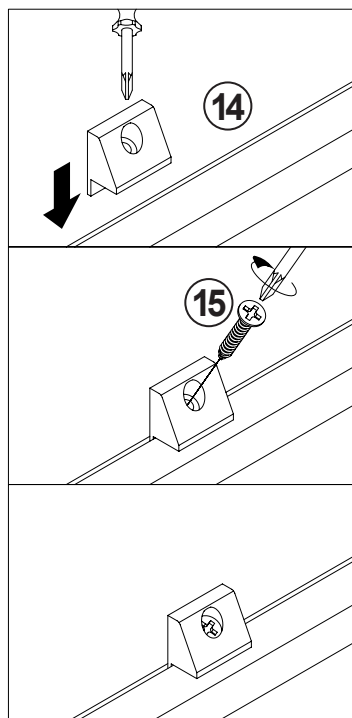


## **STEP 12**

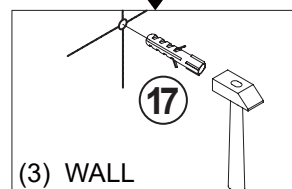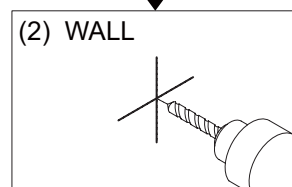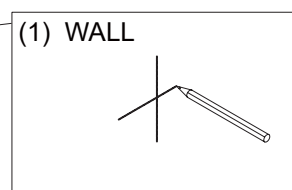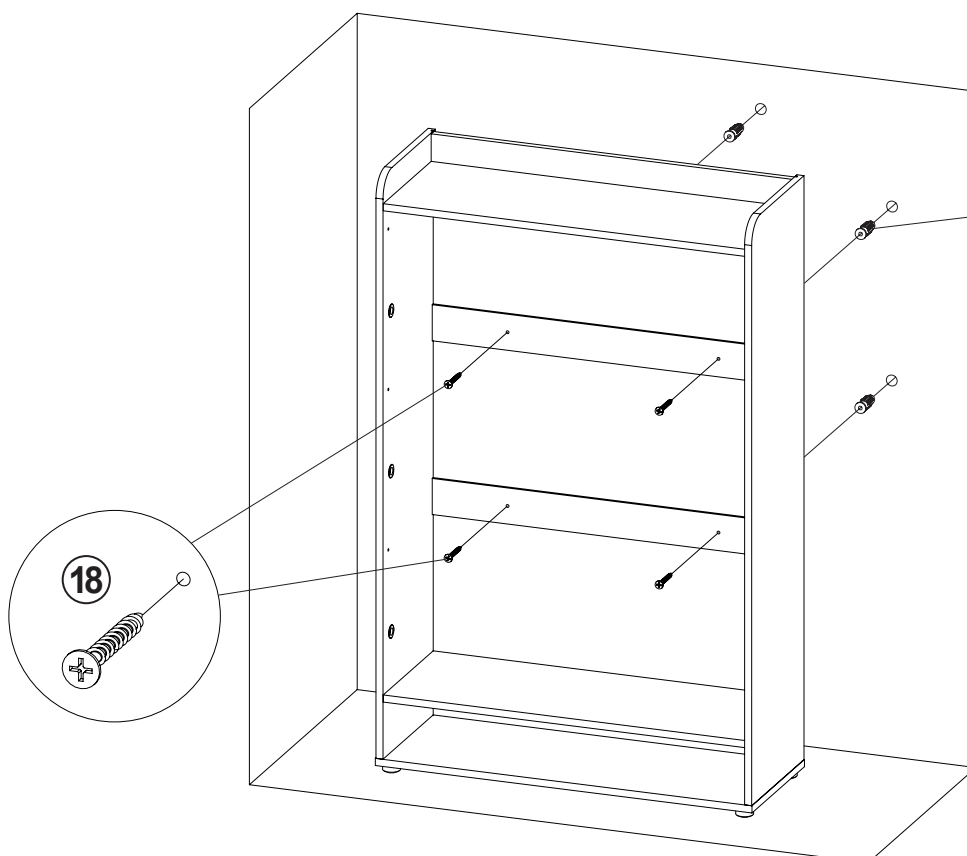    



ITEM: **950404**

**STEP 13**

 **COASTER**  
FINE FURNITURE

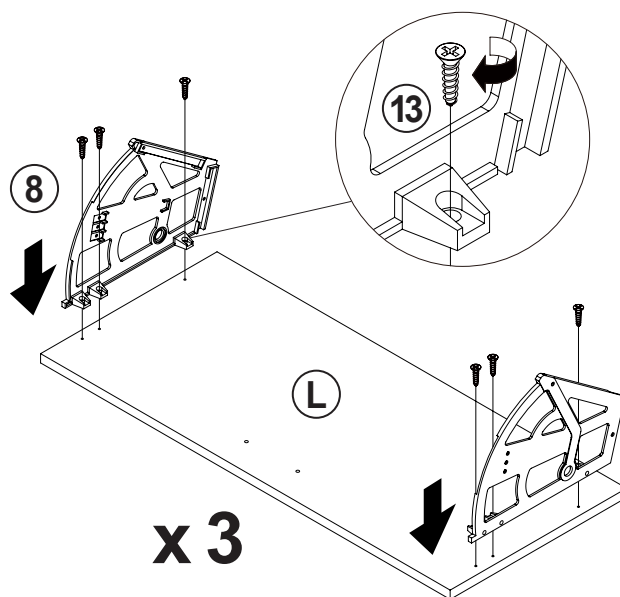


**STEP 14**

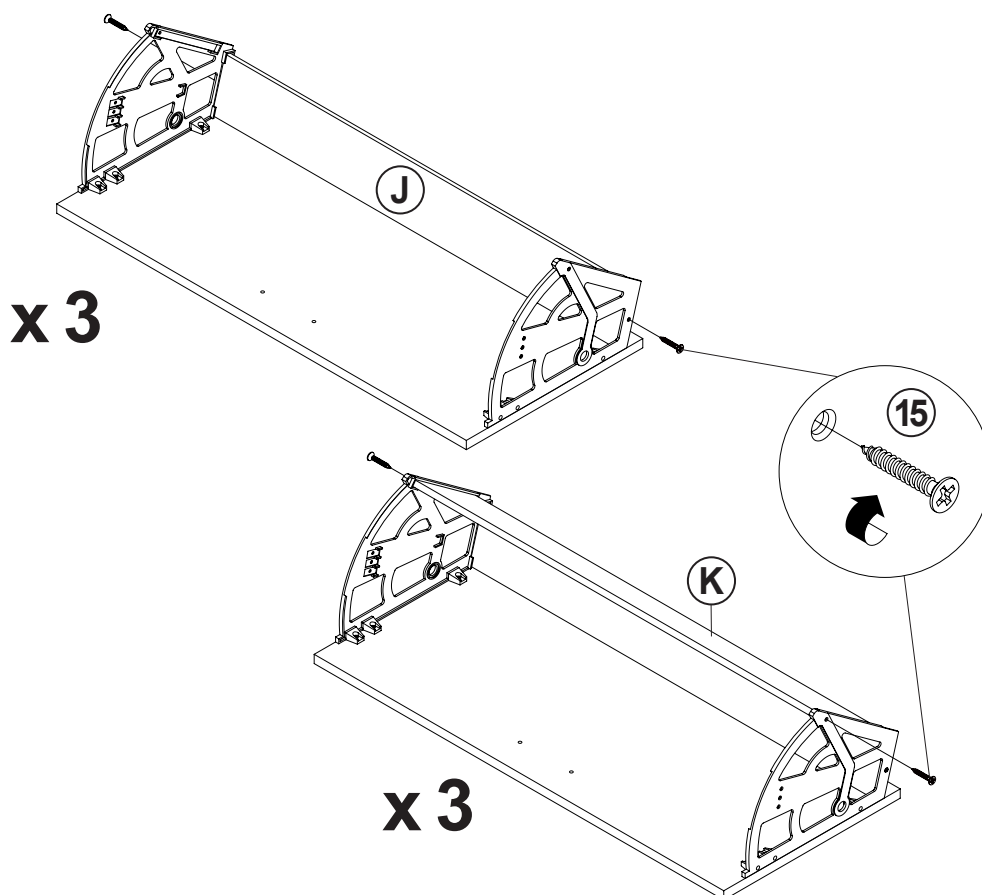  





ITEM: **950404**

**STEP 15**

 **COASTER**  
FINE FURNITURE

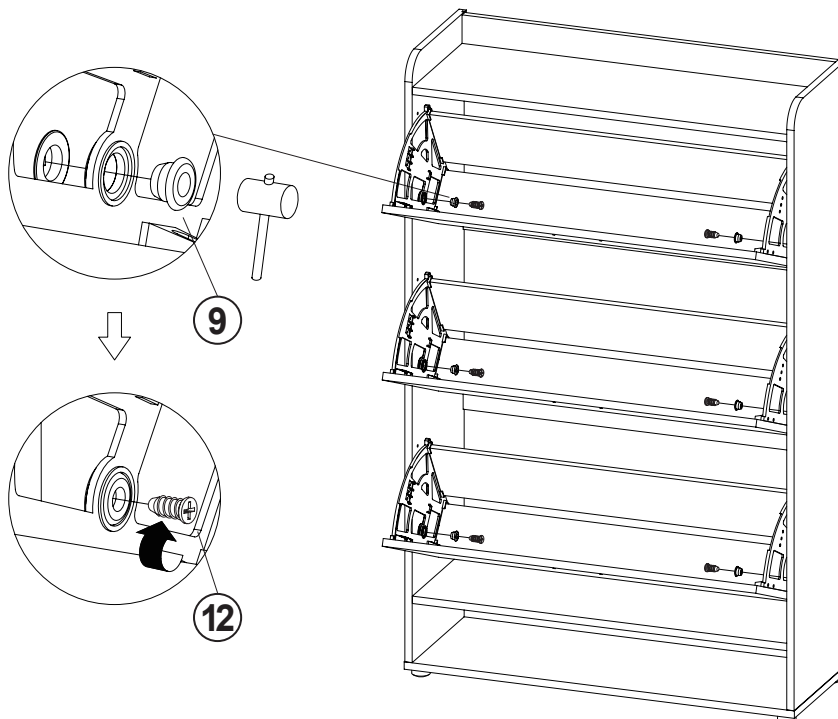


**STEP 16**

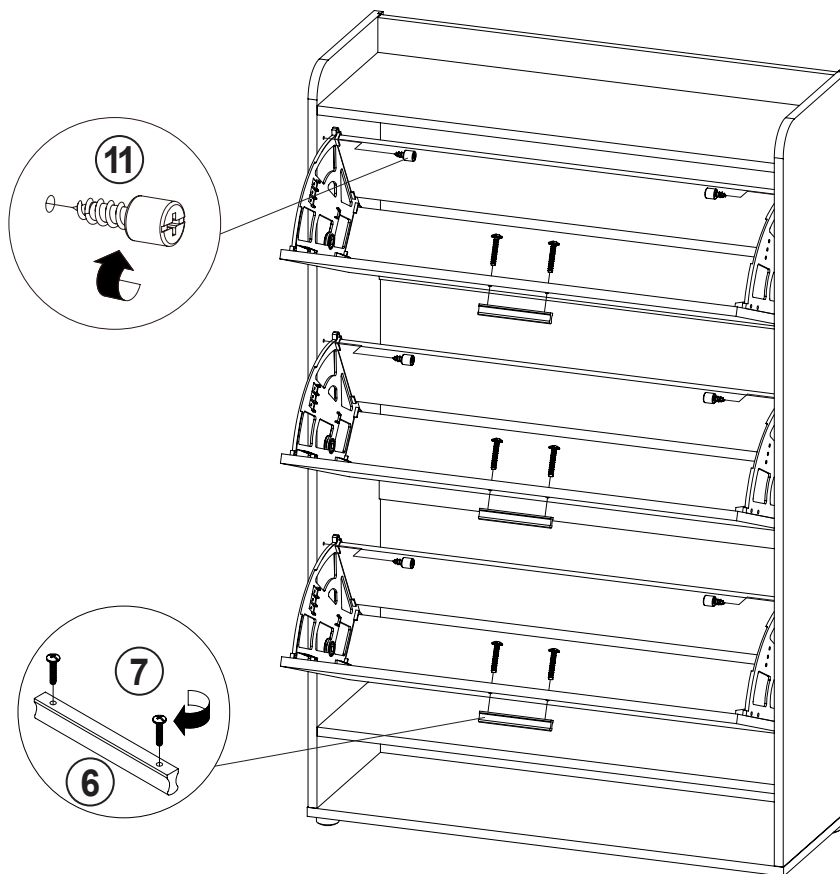    



ITEM: **950404**

**STEP 17**

 
**COASTER**  
FINE FURNITURE

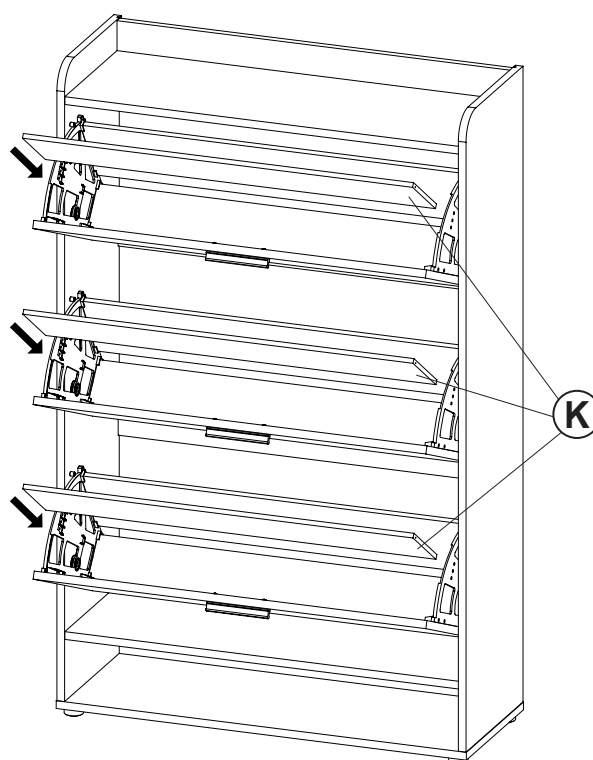

**STEP 18**

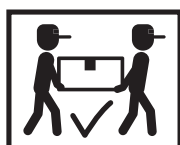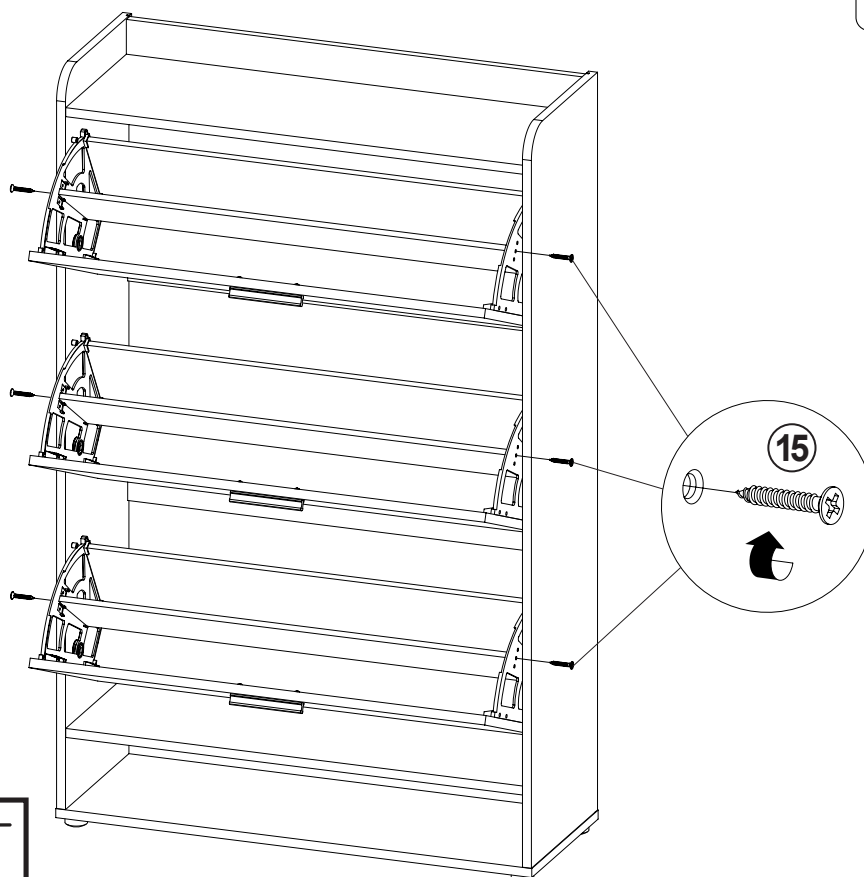  

ITEM: 950404

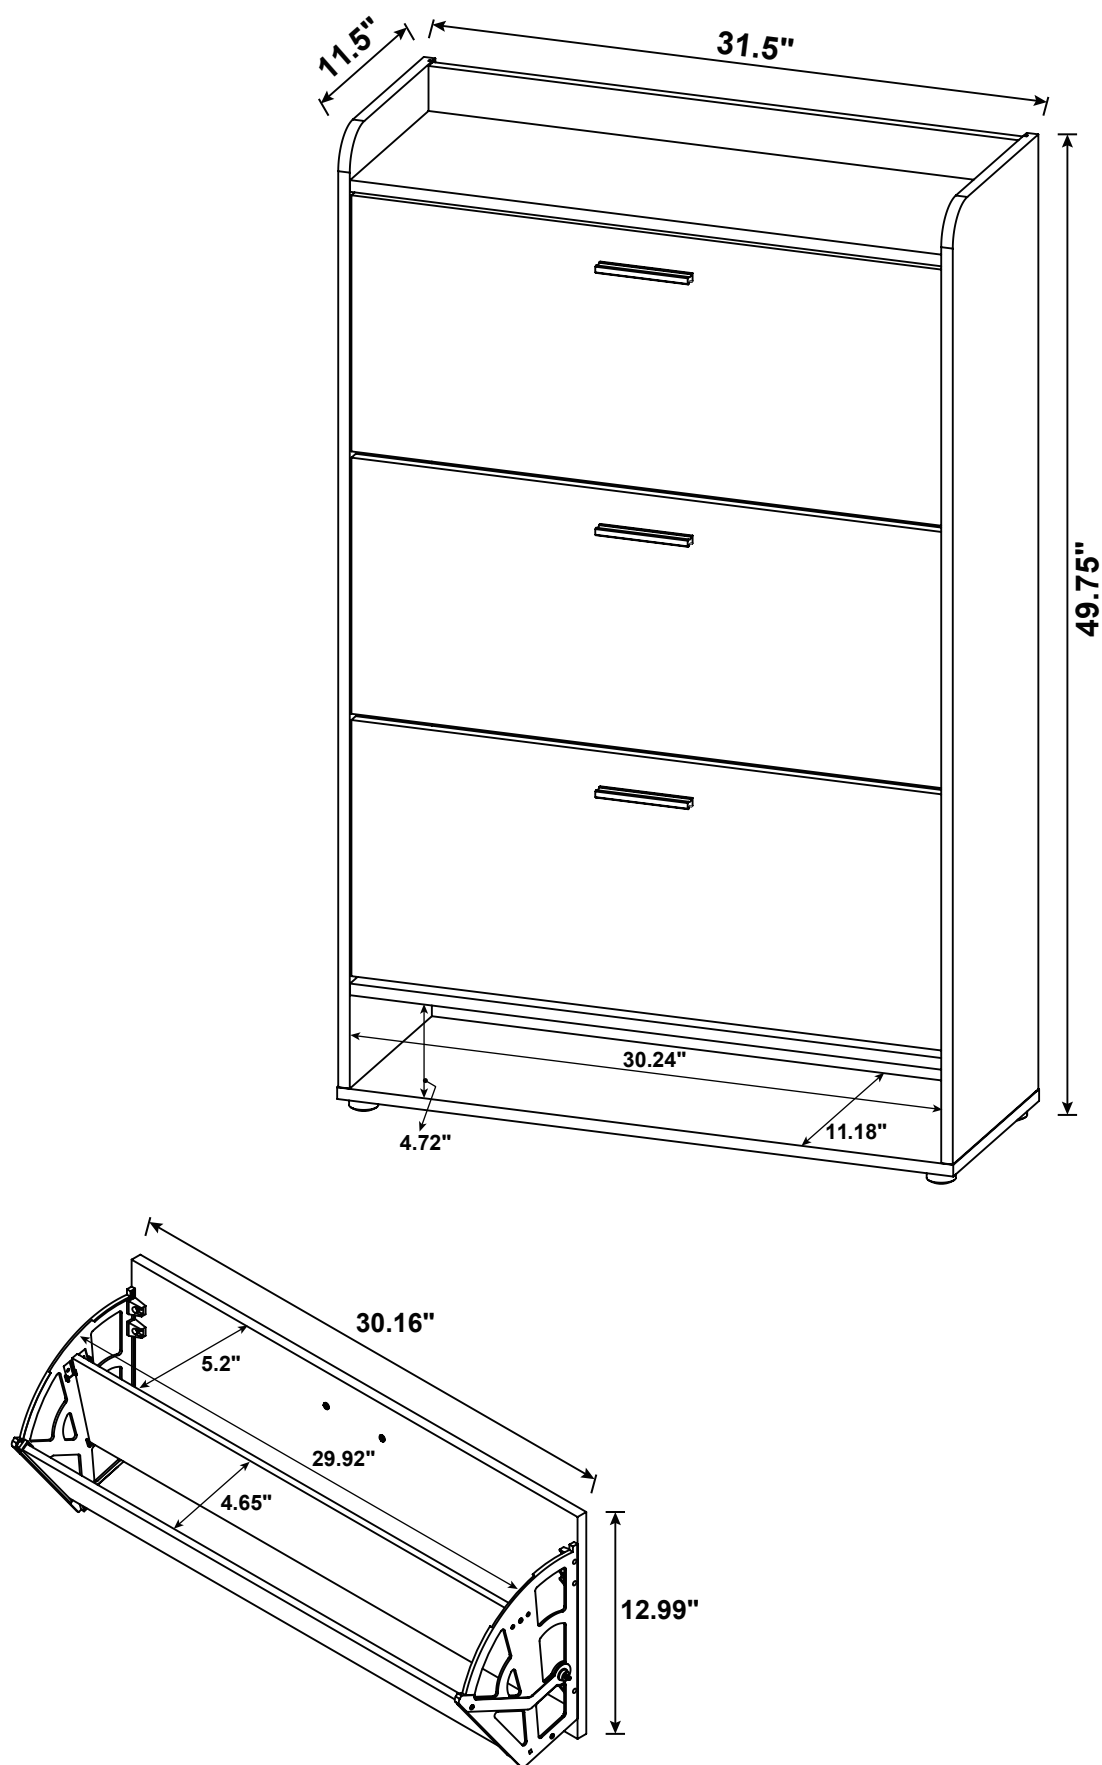 

**Note :** Dimension tolerance  $\pm 5\%$

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

 
#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

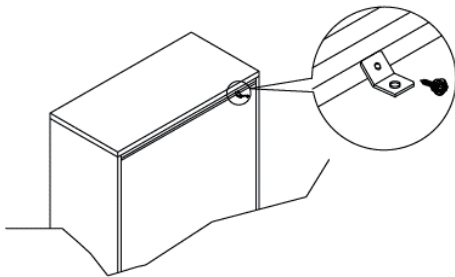

#### STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

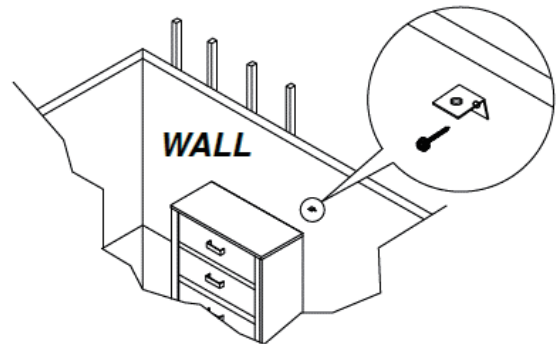

#### STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

