

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950445
WARDROBE CABINET

ITEM:950445

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES








PARTS IDENTIFICATION

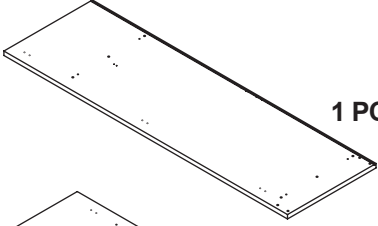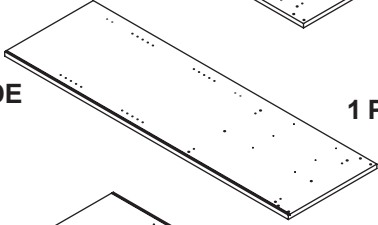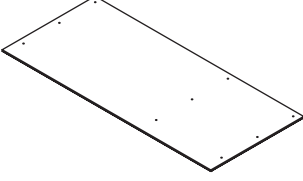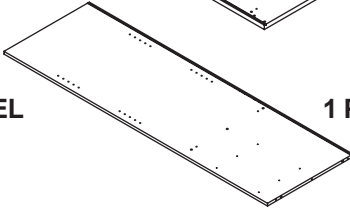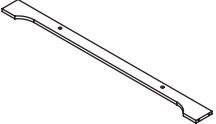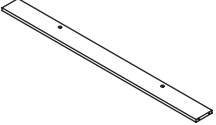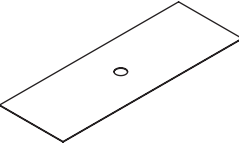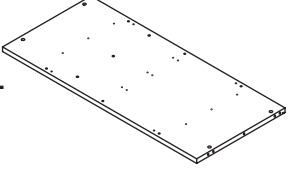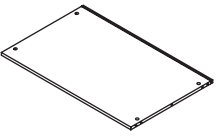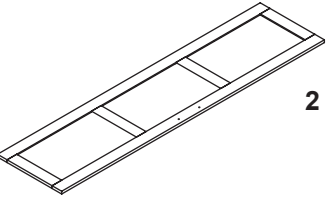A	LEFT SIDE PANEL		1 PC	H	ADJUSTABLE SHELF		2 PCS
B	RIGHT SIDE PANEL		1 PC	I	TOP PANEL		1 PC
C	DIVIDER PANEL		1 PC	J	RIGHT CROSS PANEL		1 PC
D	FRONT CROSS BRACE		1 PC	K	BACK PARTITION PANEL		1 PC
E	BACK CROSS BRACE		1 PC	L	RIGHT UPPER BACK PANEL		1 PC
F	BOTTOM PANEL		1 PC	M	RIGHT LOWER BACK PANEL		1 PC
G	LEFT CROSS PANEL		1 PC	N	LEFT DOOR		2 PCS




NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

       ITEM: **950445**


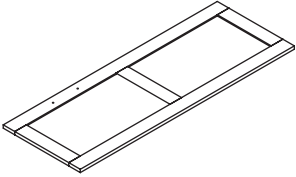


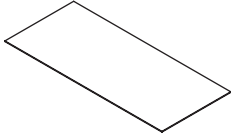
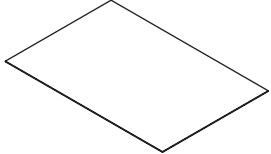
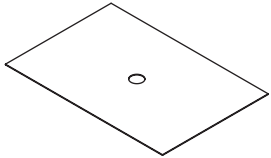

O	RIGHT DOOR		1 PC	T	DRAWER BOTTOM PANEL		2 PCS
P	DRAWER FRONT PANEL		2 PCS	U	LEFT UPPER BACK PANEL		1 PC
Q	DRAWER BACK PANEL		2 PCS	V	LEFT MIDDLE BACK PANEL		1 PC
R	DRAWER LEFT SIDE PANEL		2 PCS	A1	LEFT LOWER BACK PANEL		1 PC
S	DRAWER RIGHT SIDE PANEL		2 PCS	A2	BOTTOM SUPPORT PANEL		2 PCS

   HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm SR		24 PCS
2	WOODEN DOWEL Ø8x30mm		52 PCS	5	SCREW Ø4.5x42mm SR		24 PCS
3	CAM BOLT Ø7x35.5mm SR		24 PCS	6	SCREW Ø 4.3x35mm SR		8 PCS

ITEM: 950445

        Z

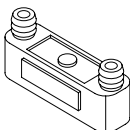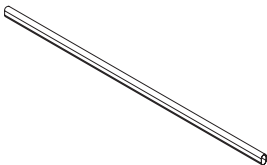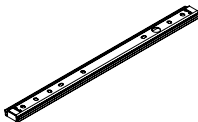NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
7	PLASTIC FEET Ø15mm		5 PCS	15	RAIL SCREW Ø3.5x15mm BLK		20 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	16	RUBBER Ø 58mm BLK		2 SETS
9	ROD HOLDER		2 PCS	17	DOOR CATCH		2 PCS
10	HINGE Ø35mm SR		8 PCS	18	BACK PANEL SUPPORT		6 PCS
11	HINGE SCREW Ø4x15mm SR		36 PCS	19	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
12	HANDLE L= 170mm SR		5 PCS	20	STICKER Ø20mm		4 PCS
13	BOLT M4x25mm SR		10 PCS	21	HANGING ROD L= 801mm SR		1 PC
14	RAIL L= 350mm BLK		4 PCS				

 
Z9, Z10, Z12, Z13, Z14, Z16, Z21 not included in blister packaging.

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950445**


STEP 1

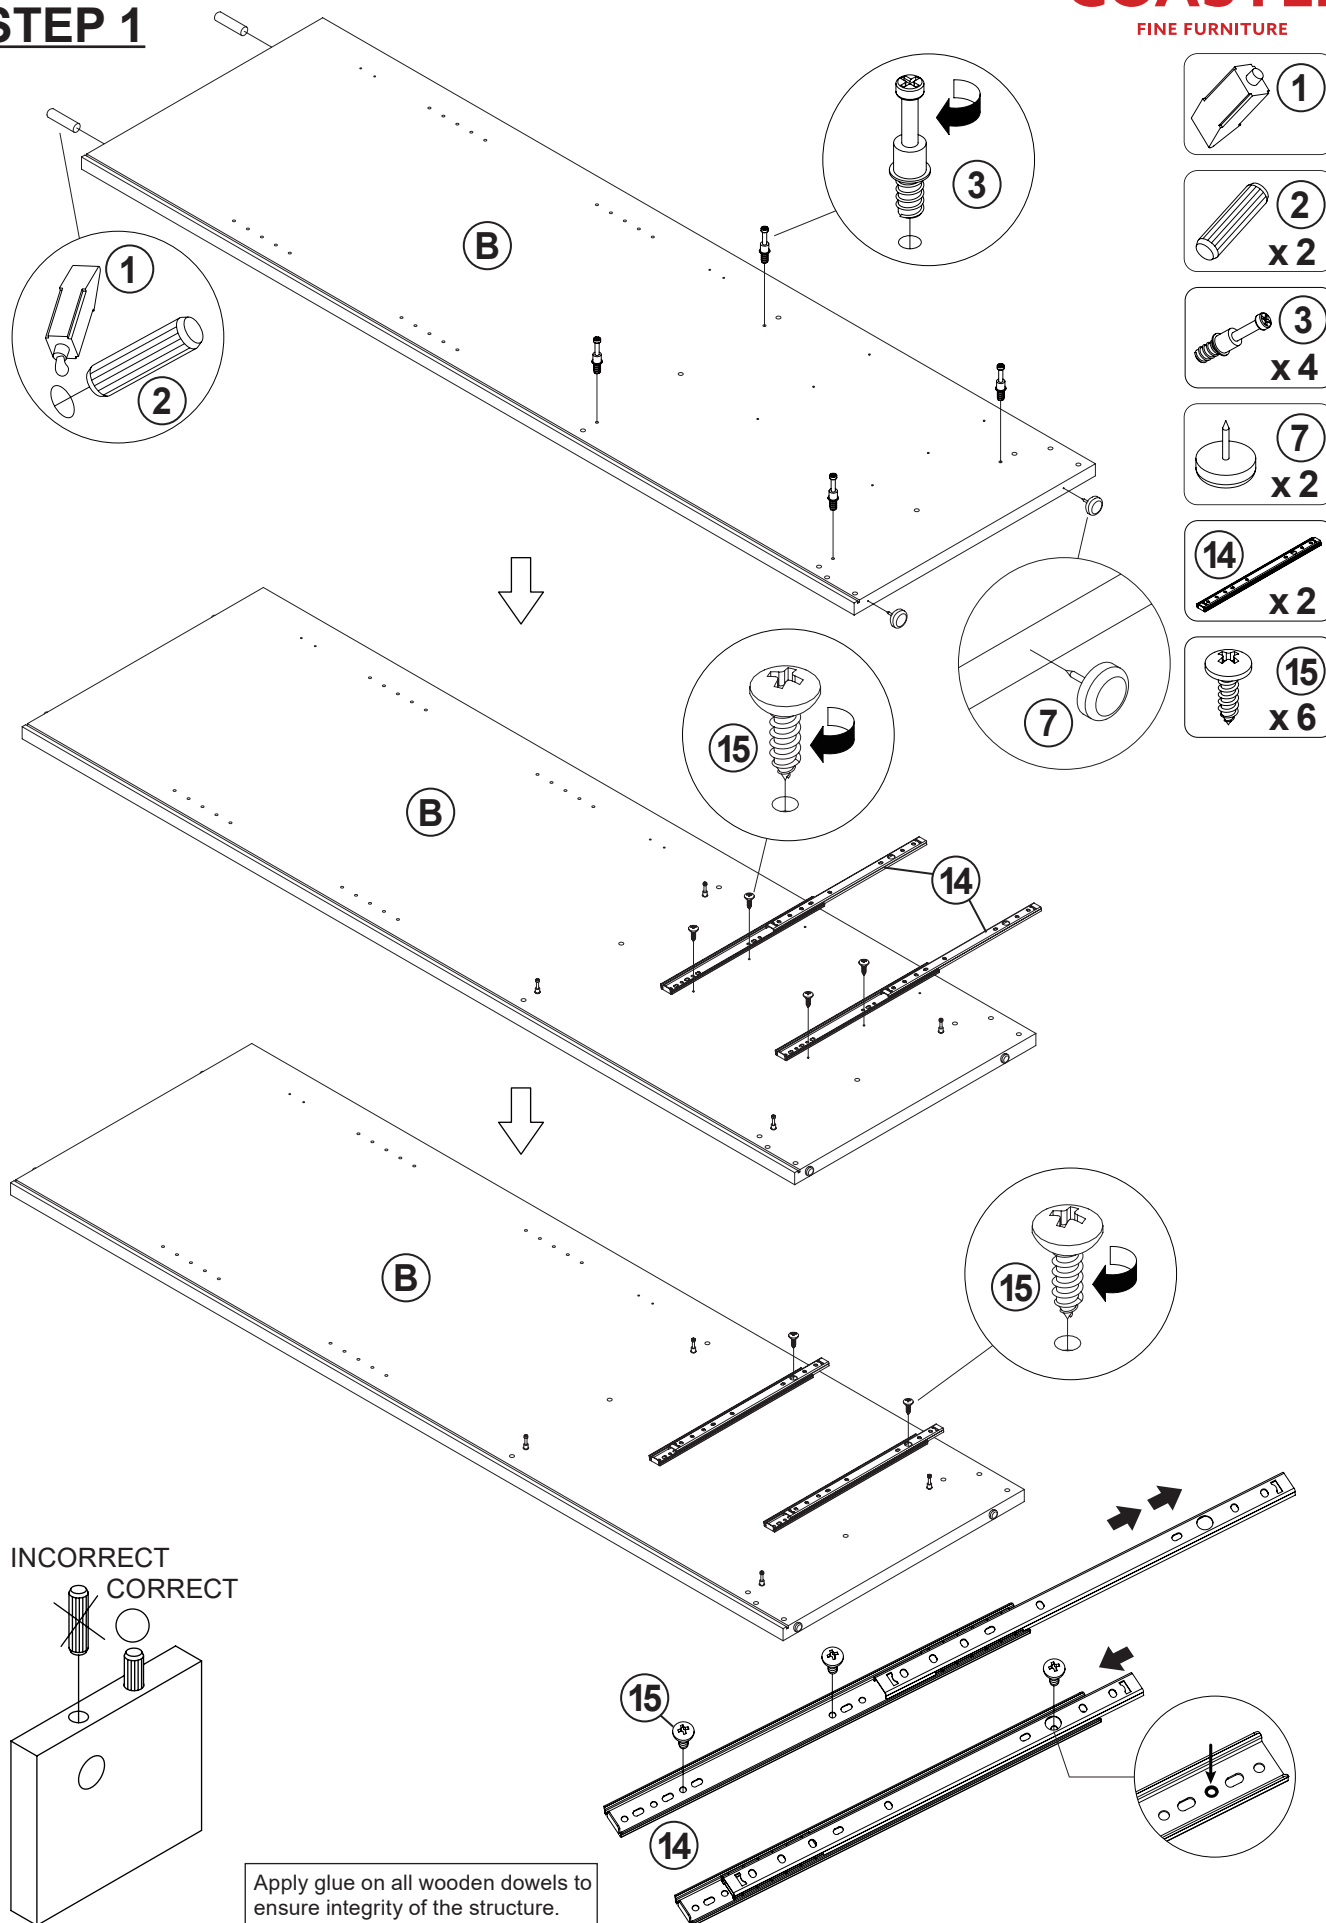

ITEM: **950445**


STEP 2

 COASTER
FINE FURNITURE

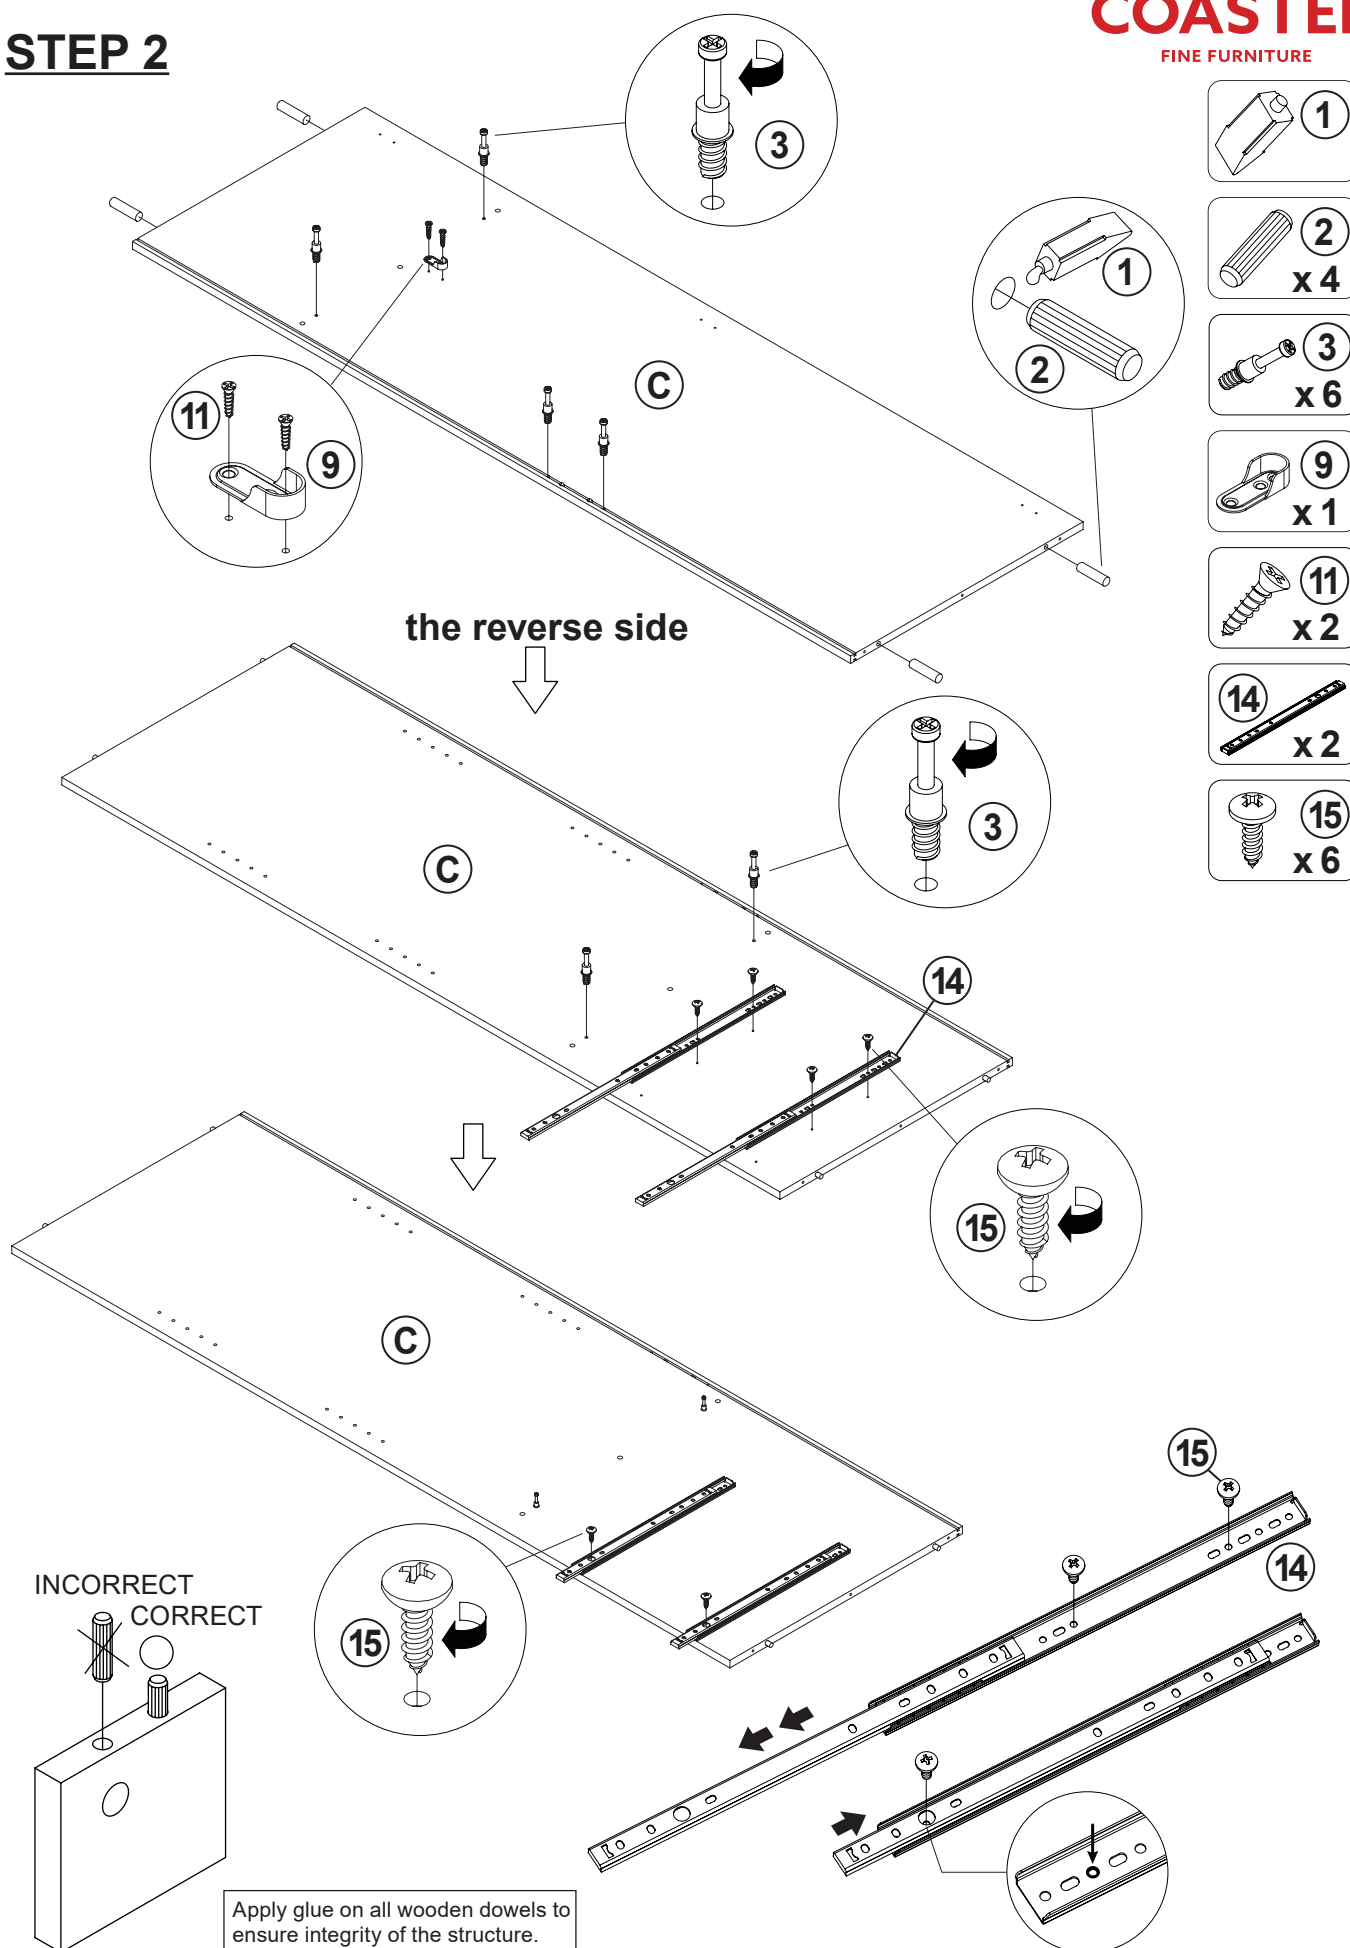


ITEM: **950445**

 STEP 3

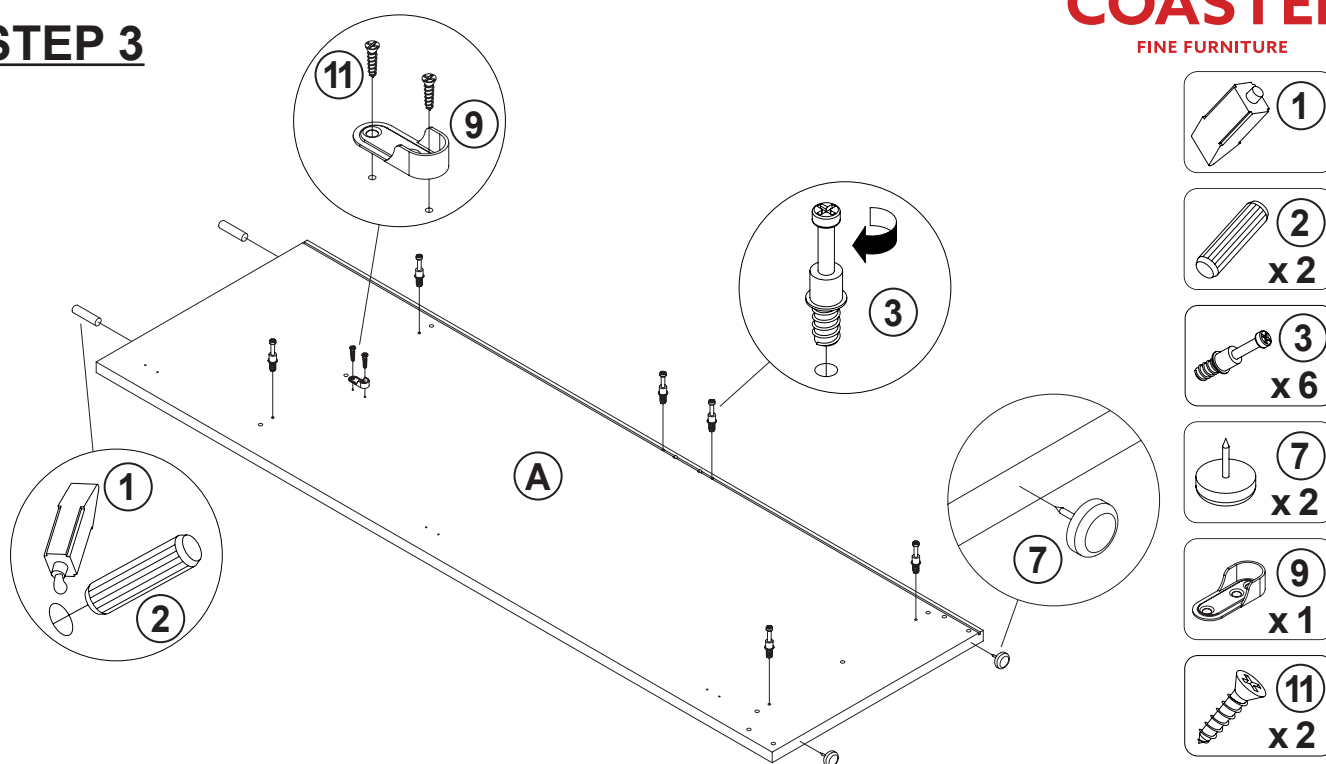


 STEP 4

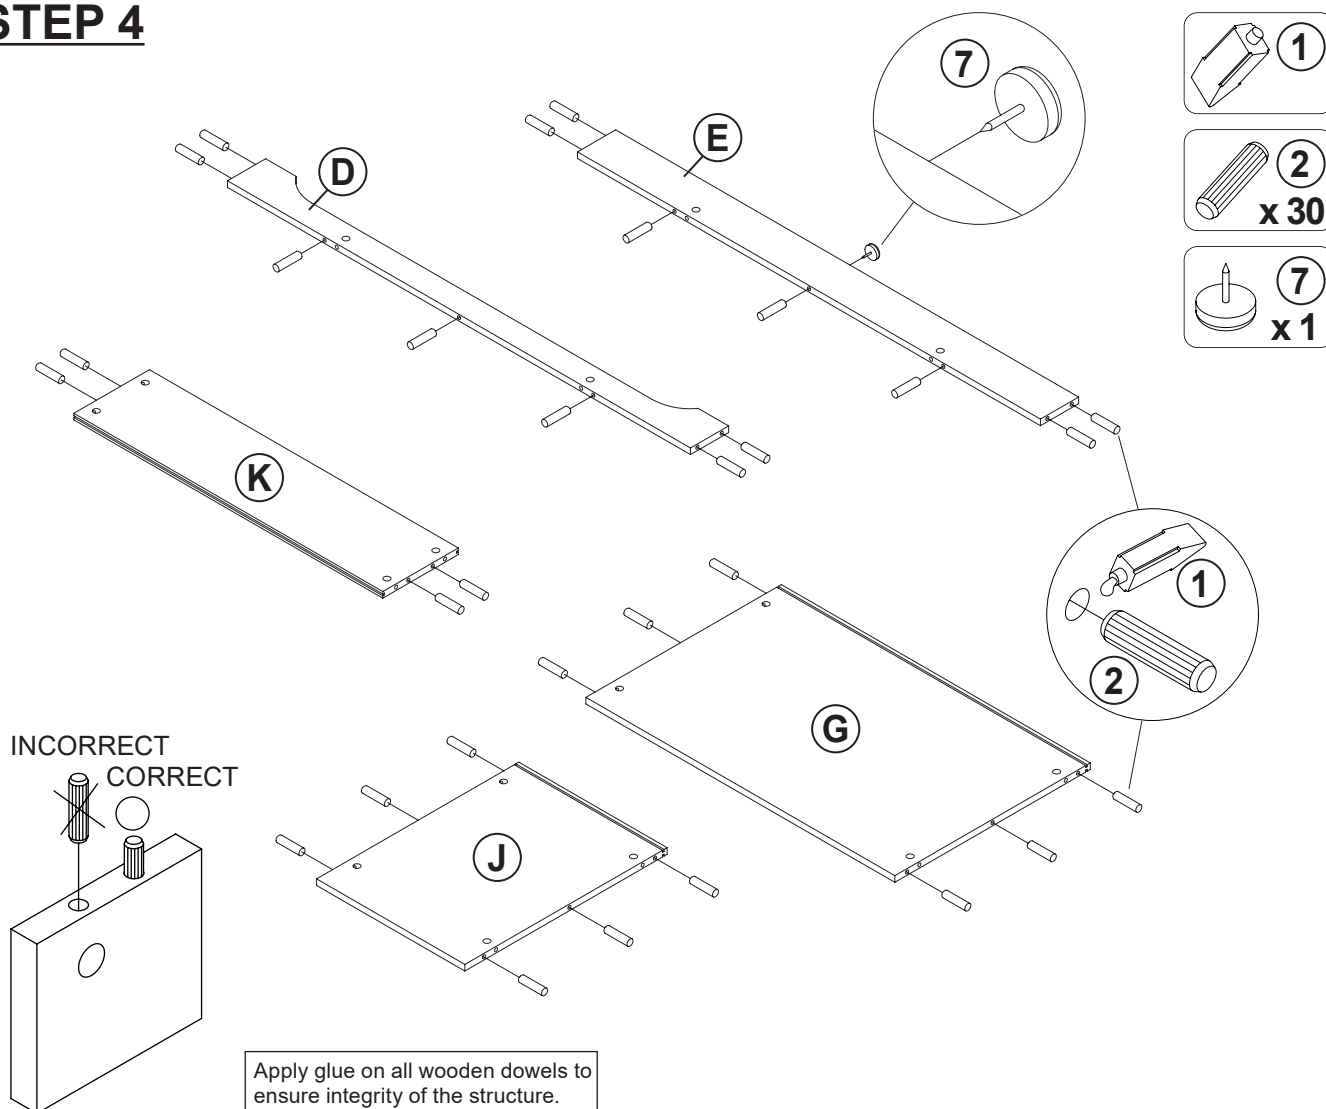


ITEM: **950445**

 STEP 5

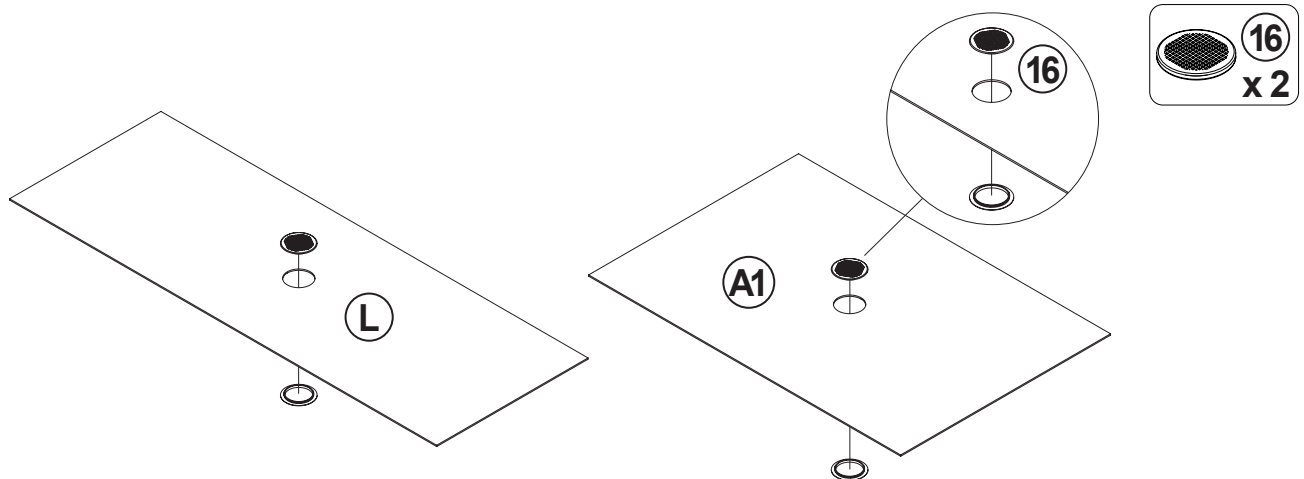

 STEP 6


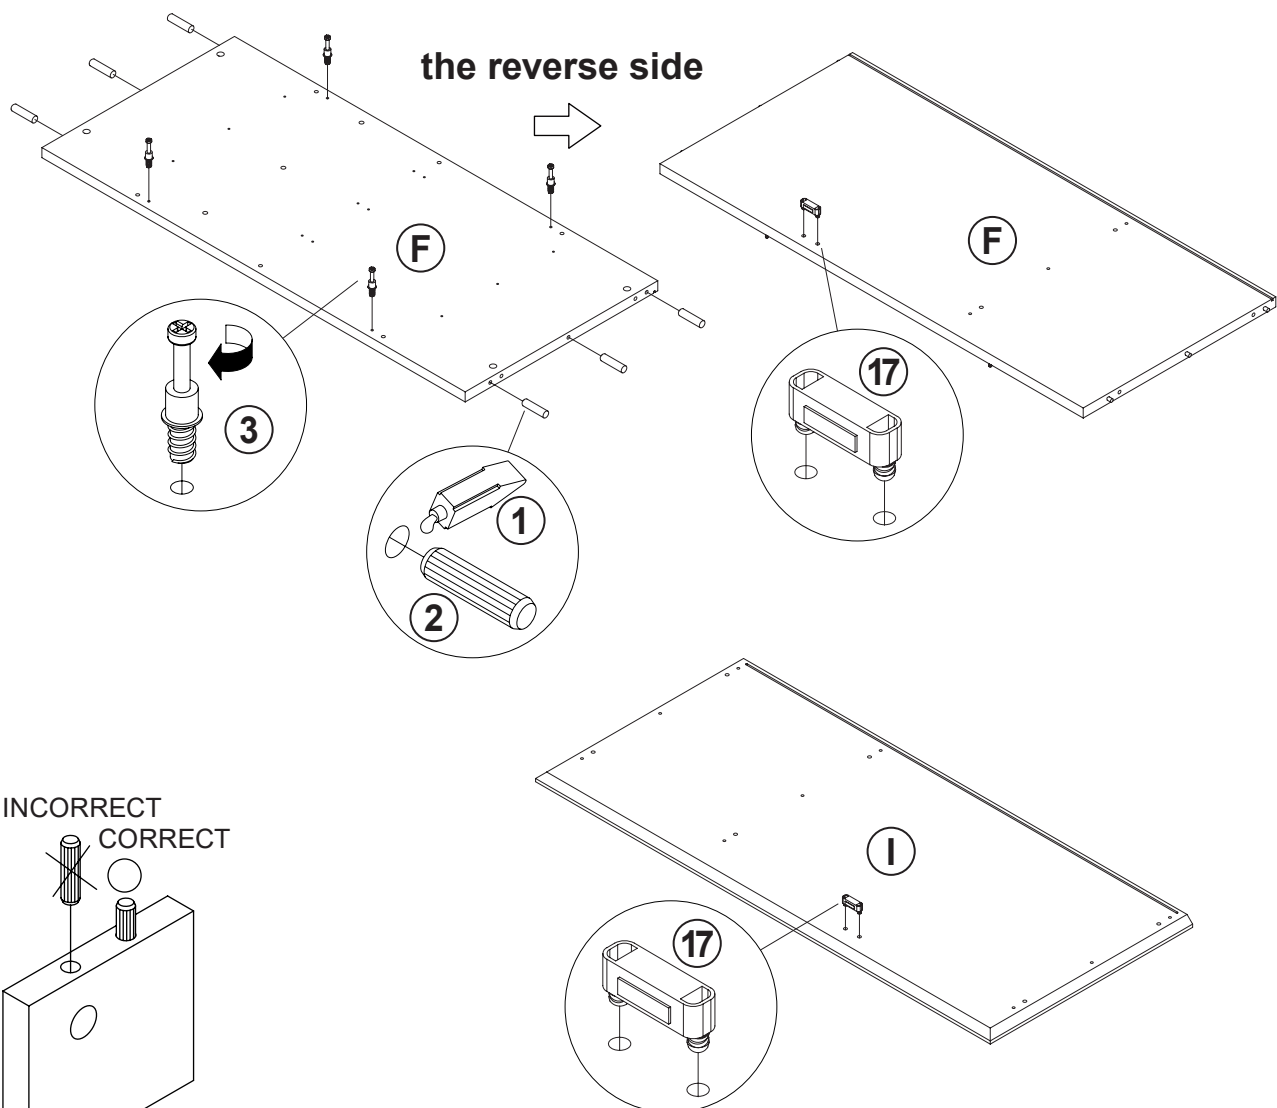


Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: **950445**

STEP 7

  COASTER
FINE FURNITURE

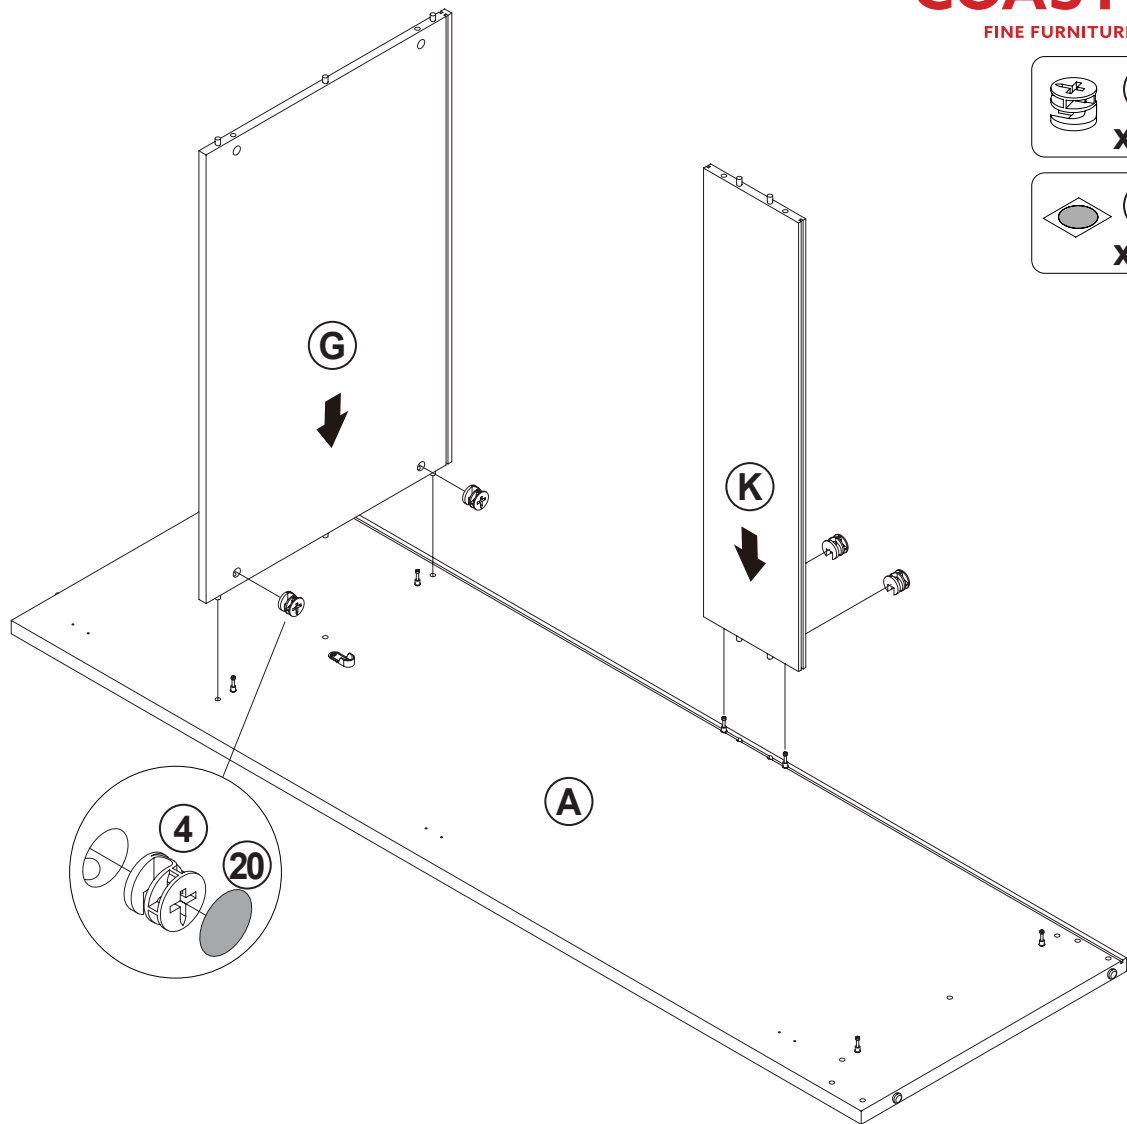


 
 
 
STEP 8

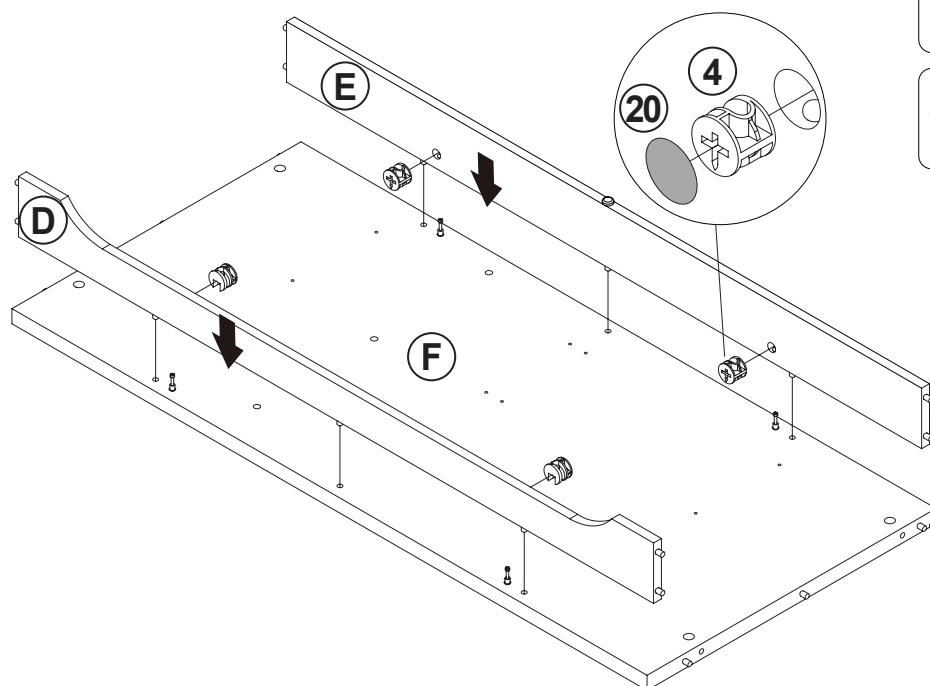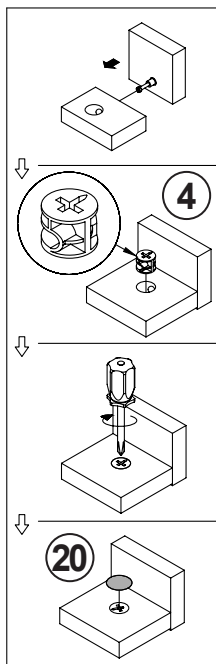


ITEM: **950445**

COASTER
FINE FURNITURE

    STEP 9

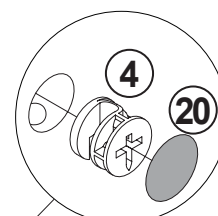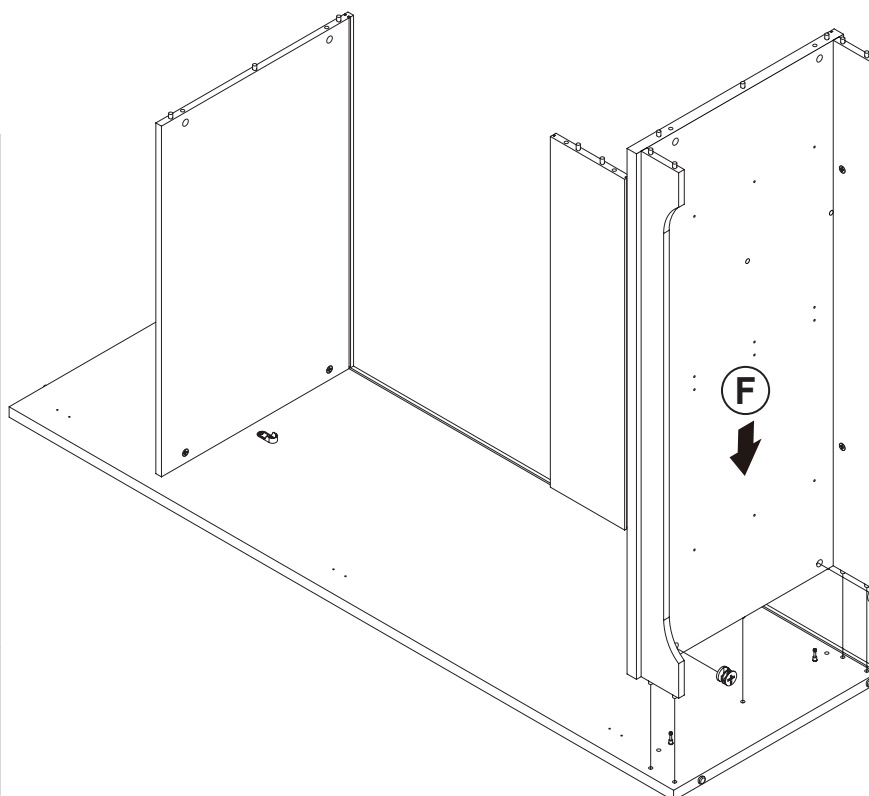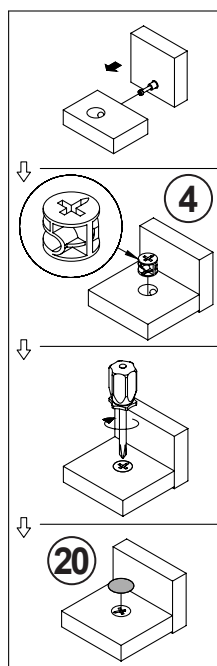


 STEP 10






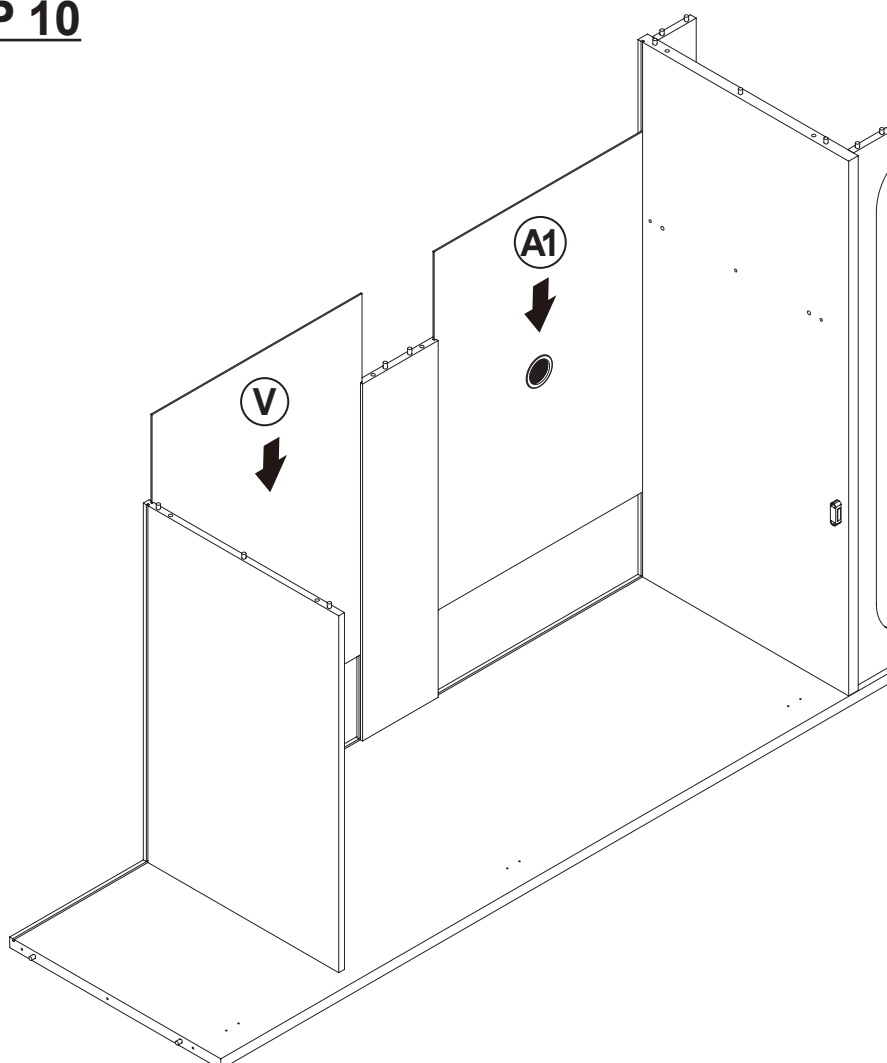


ITEM: **950445**

 STEP 11

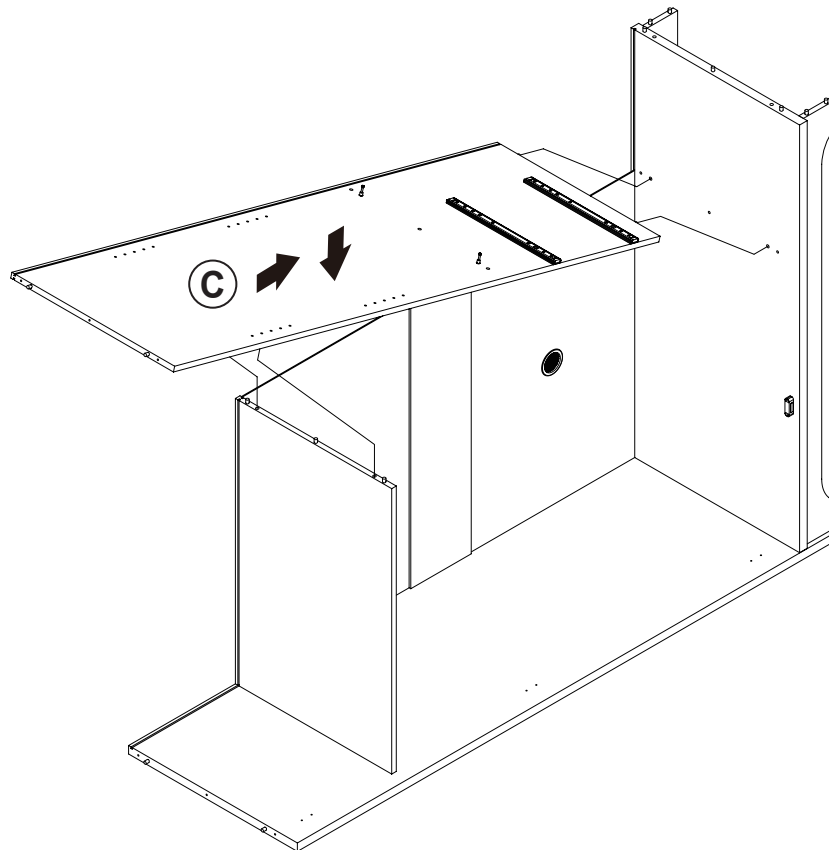

     
 
STEP 12

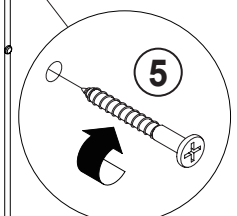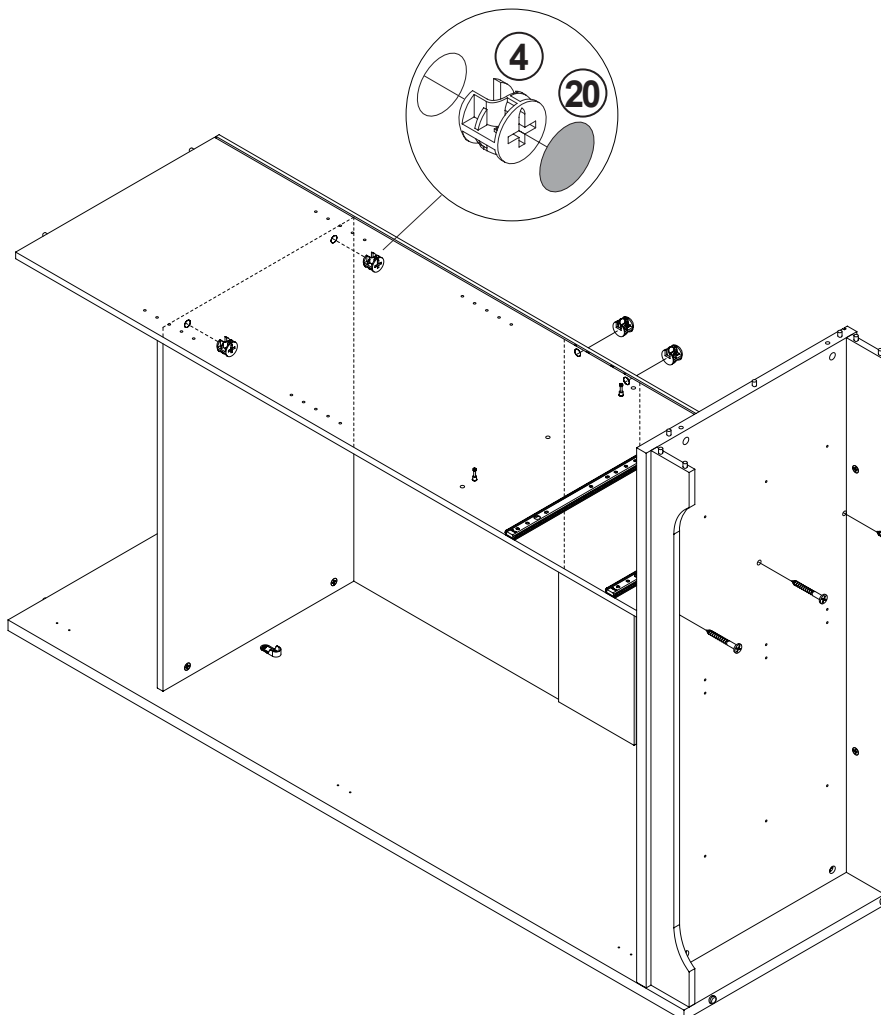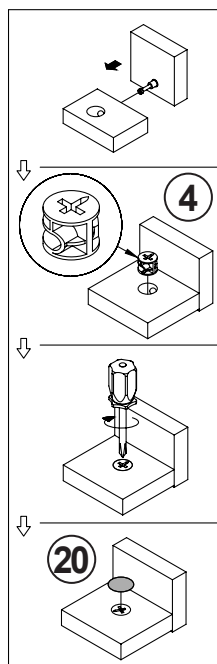





ITEM: **950445**

STEP 13

  COASTER
FINE FURNITURE

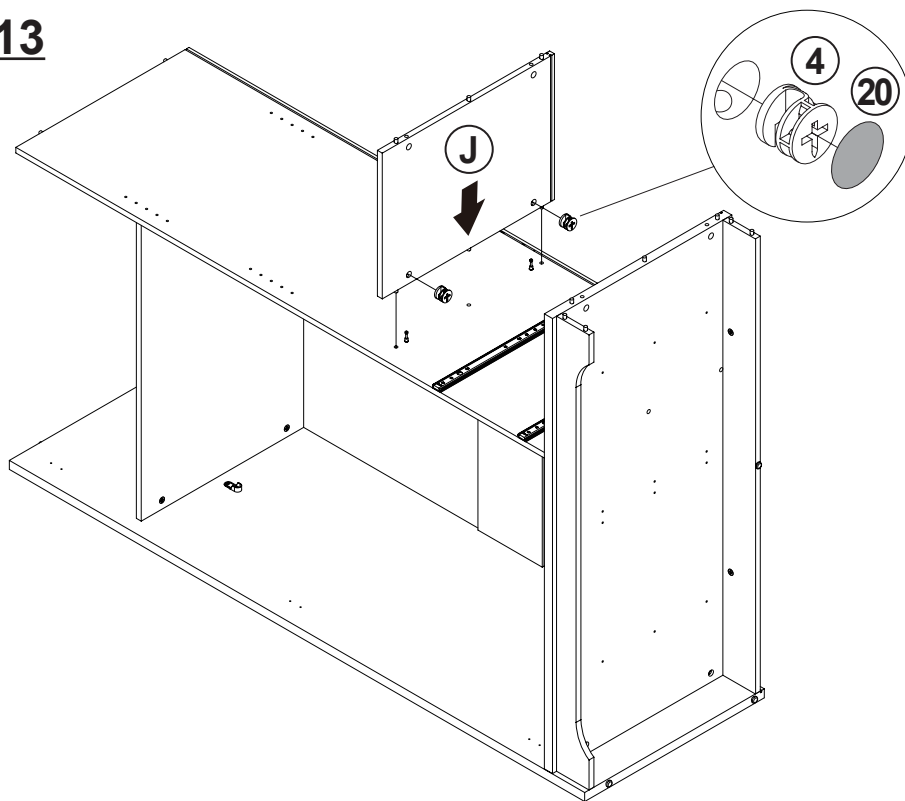

   
 
STEP 14

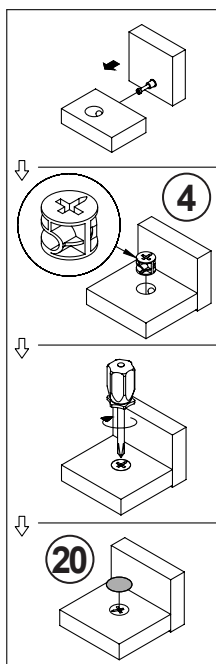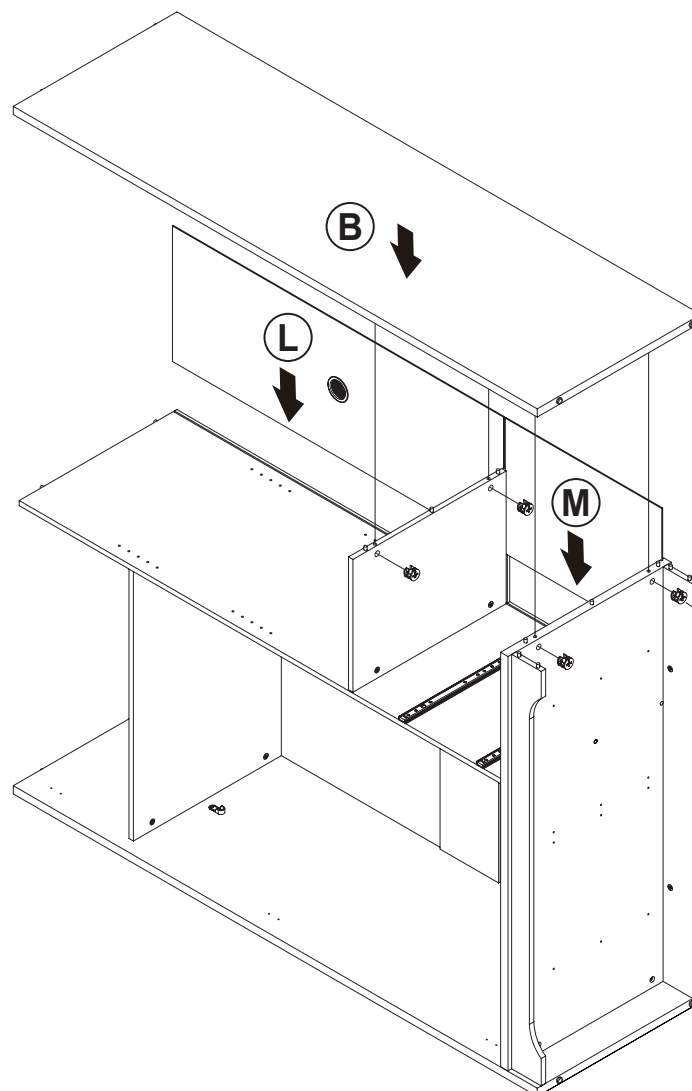

ITEM: **950445**

STEP 15

  
COASTER
FINE FURNITURE

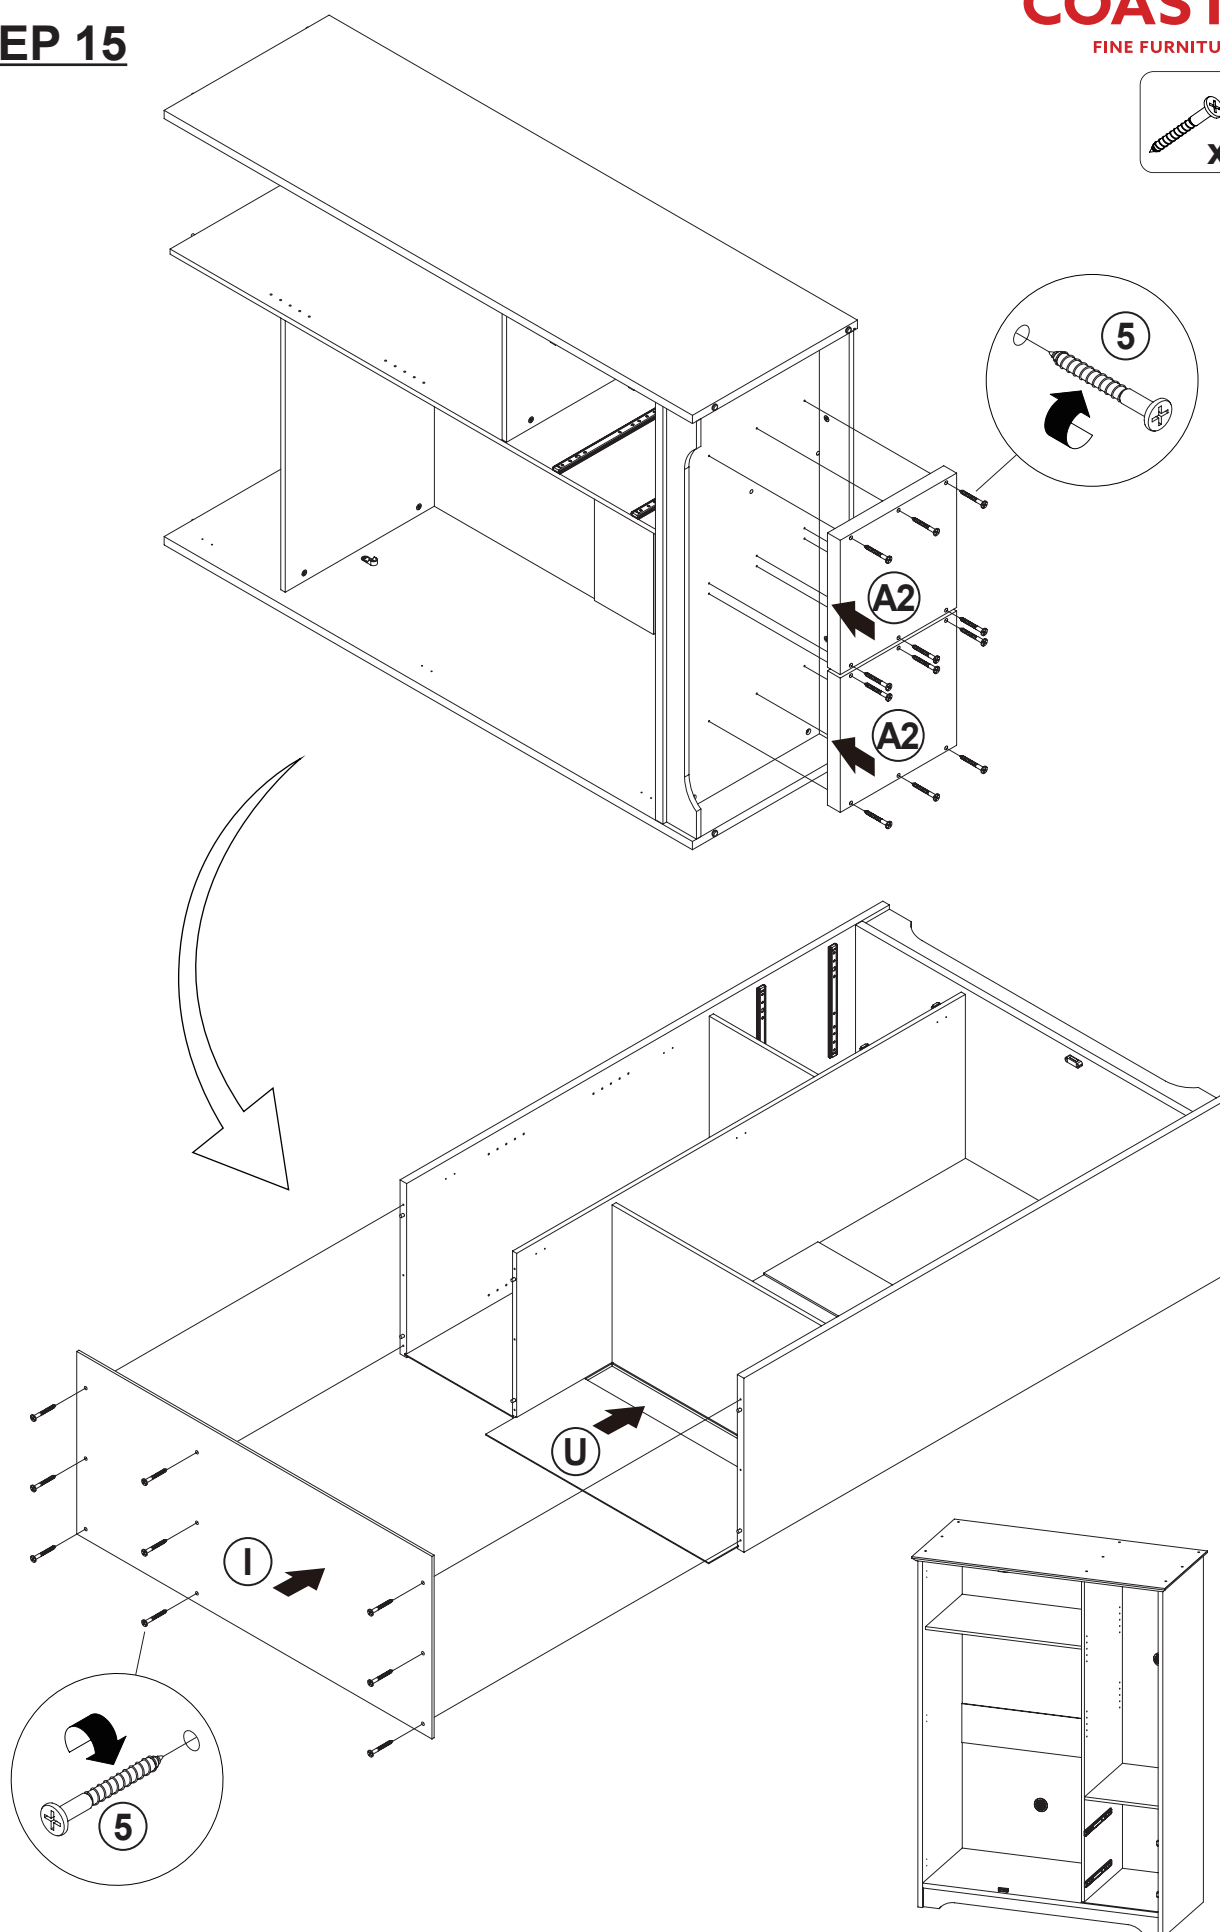


ITEM: **950445**

STEP 16

 COASTER
FINE FURNITURE

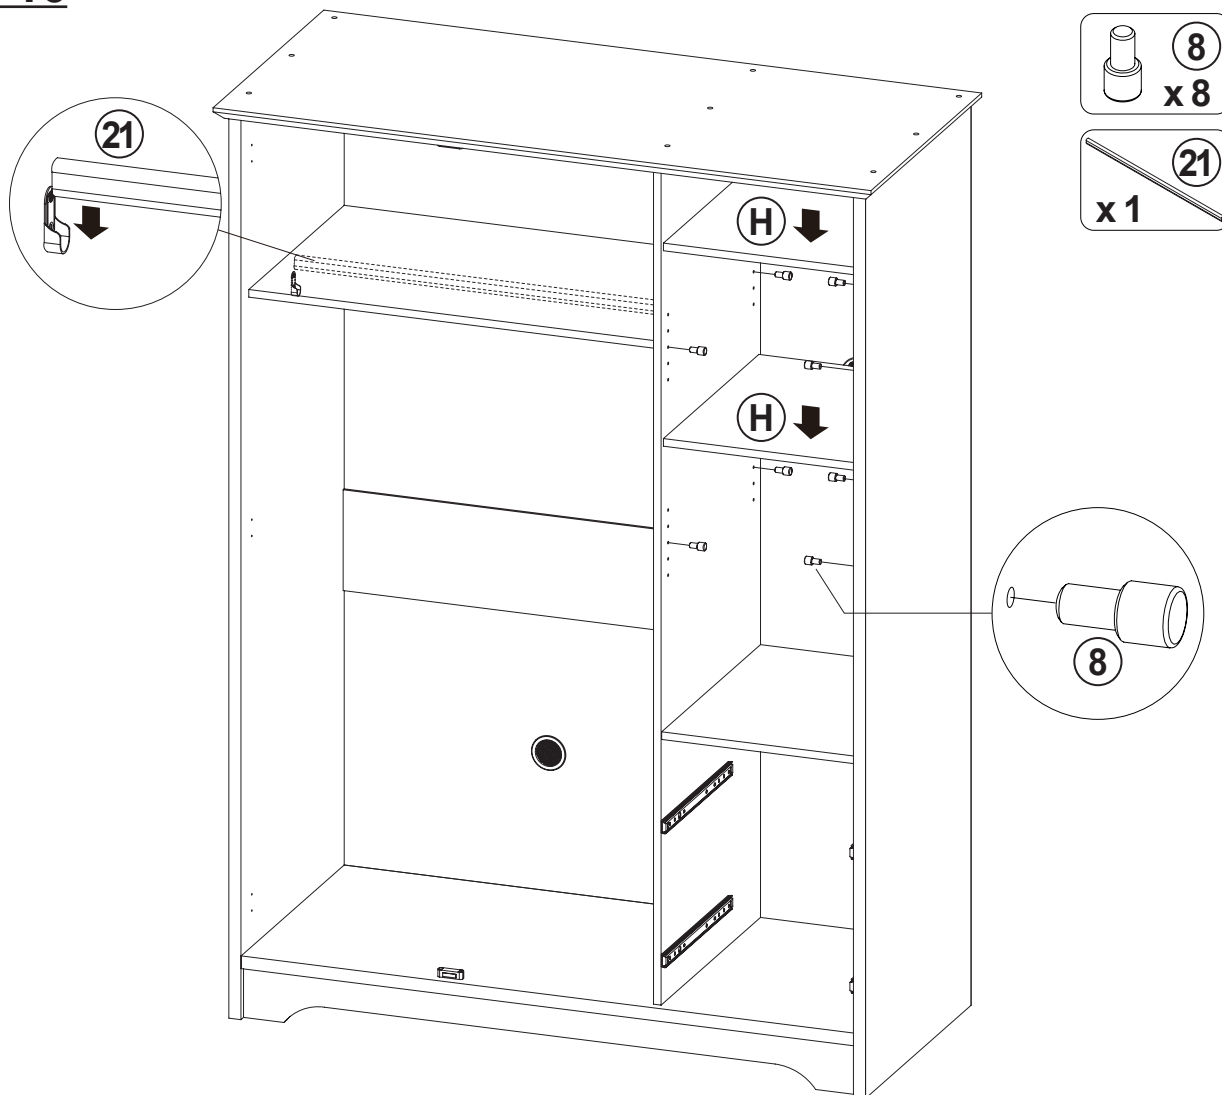






 
STEP 17

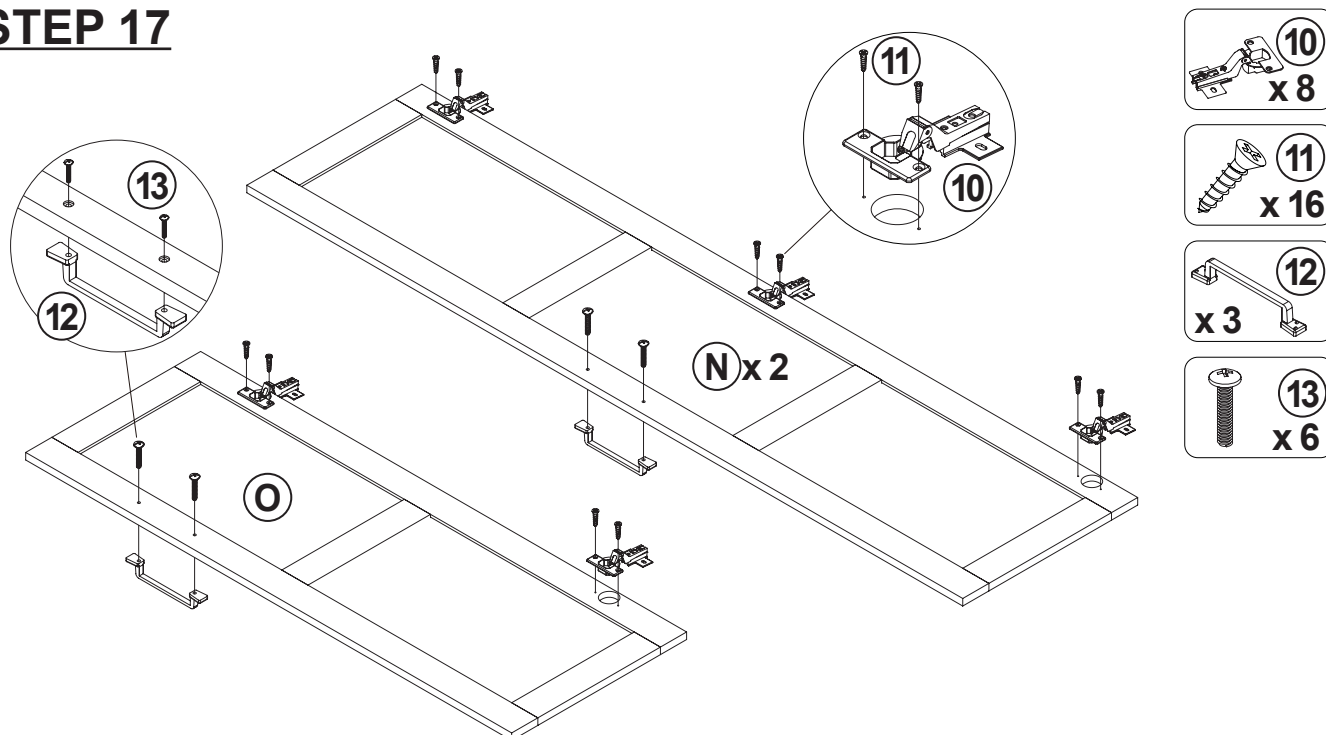

ITEM: **950445**


STEP 18

      COASTER
FINE FURNITURE

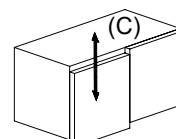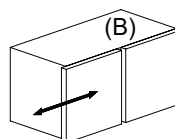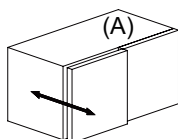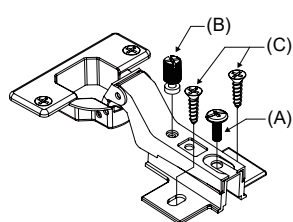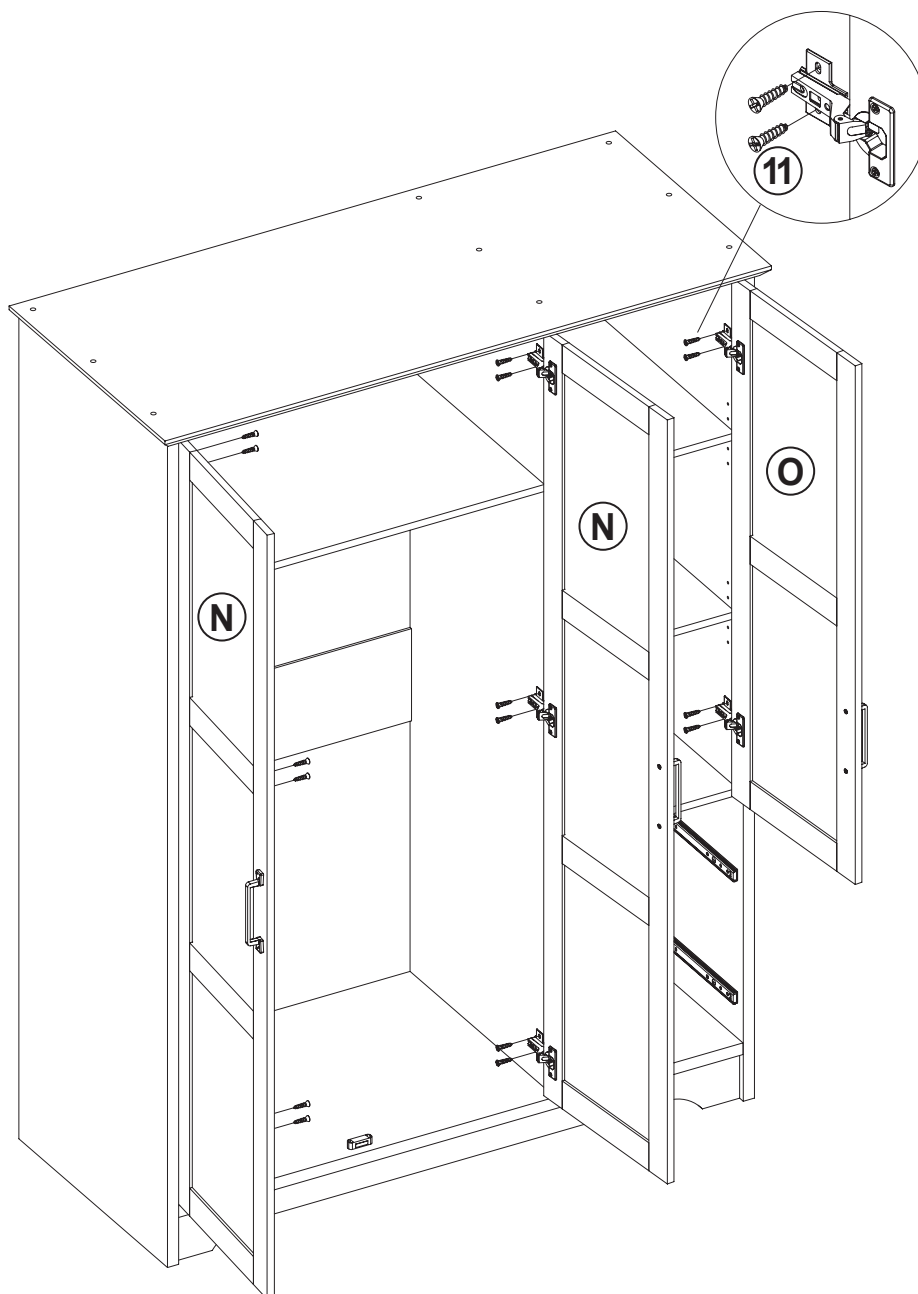

ITEM:950445




 
STEP 19

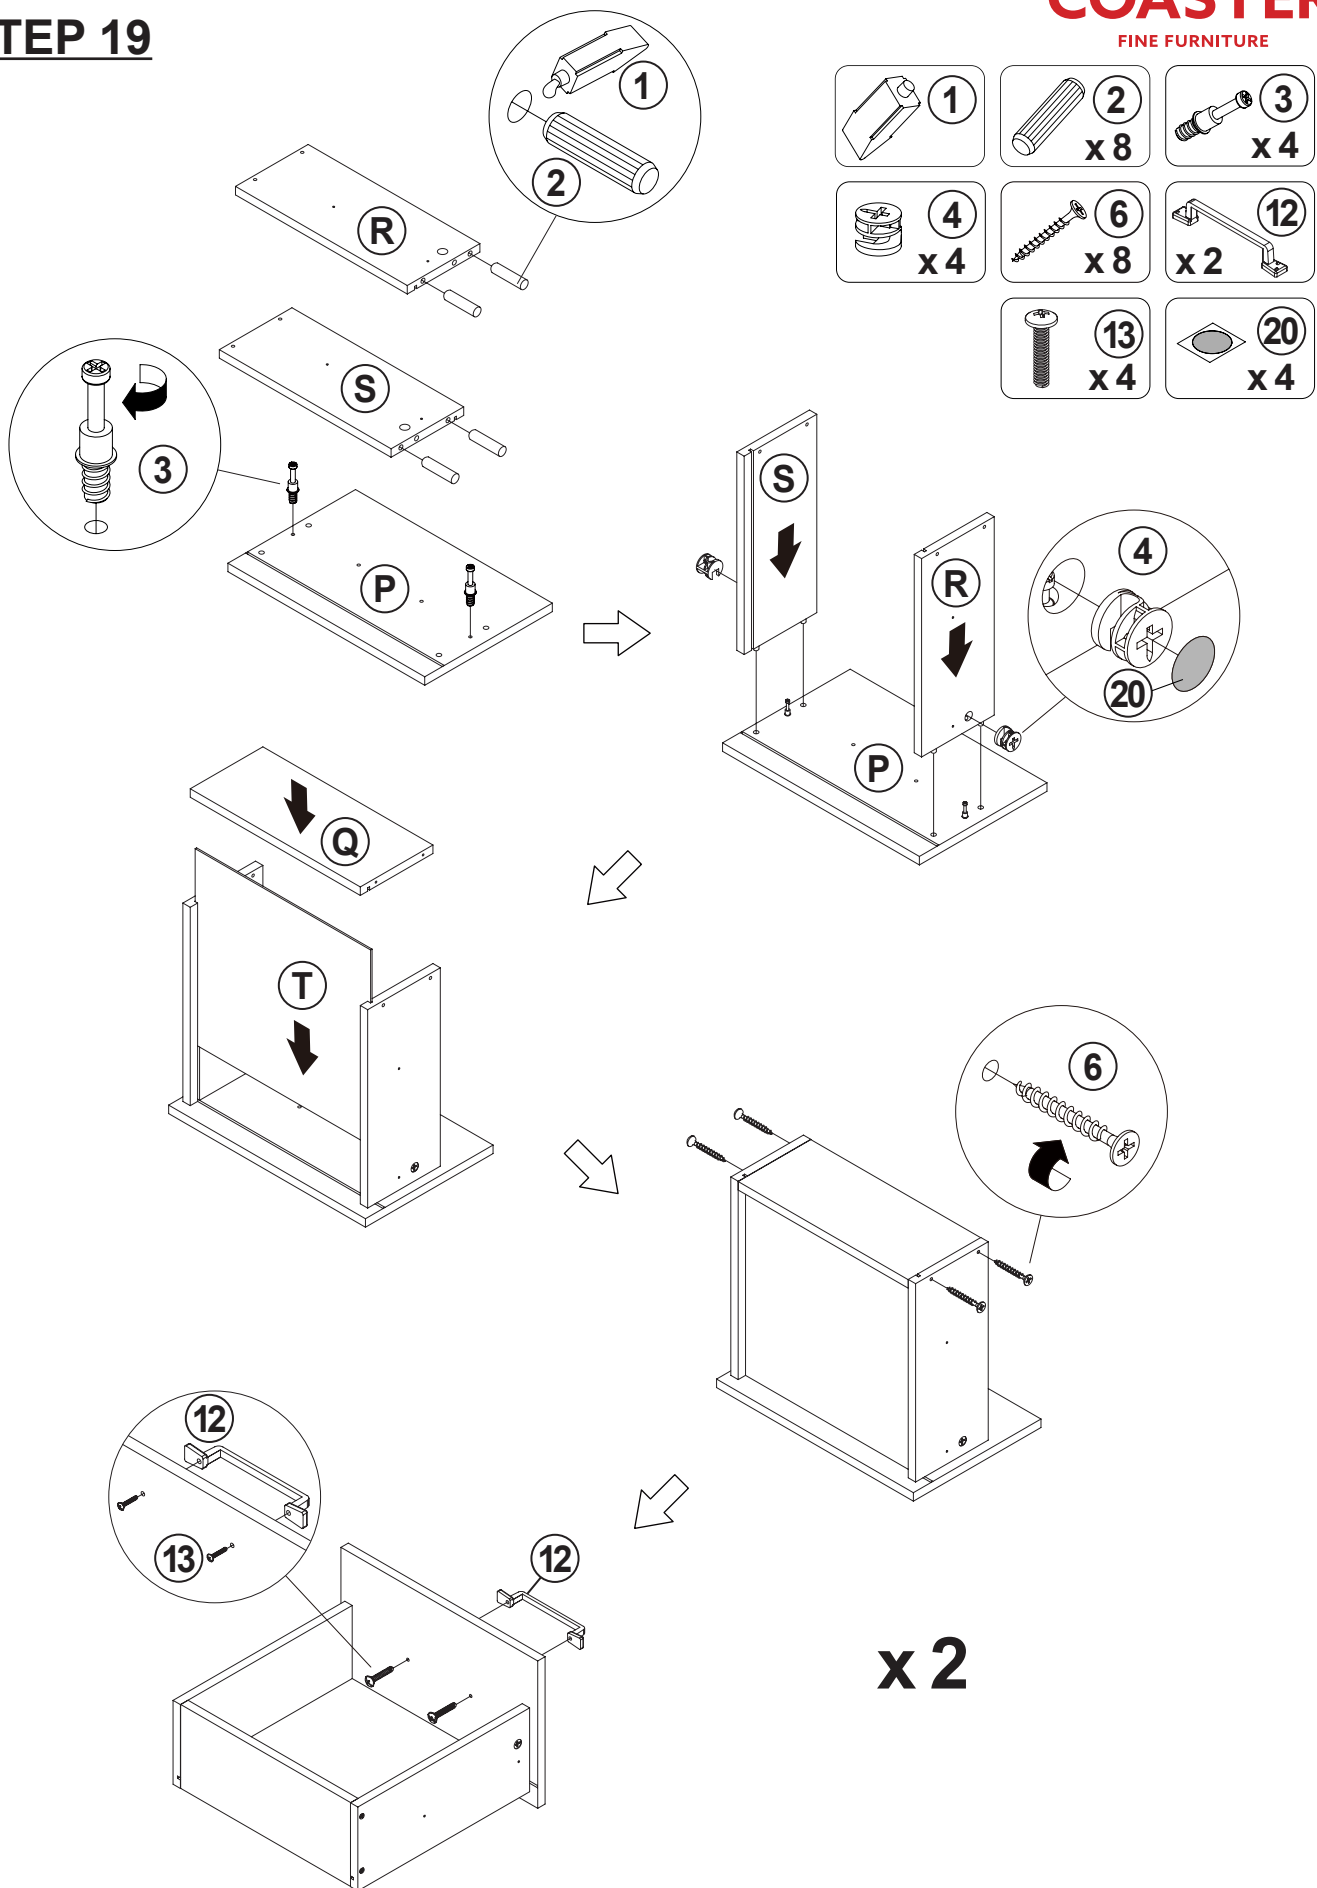

ITEM: **950445**

STEP 20

 
 
 
 
COASTER
FINE FURNITURE

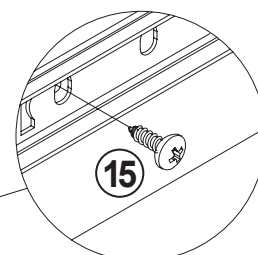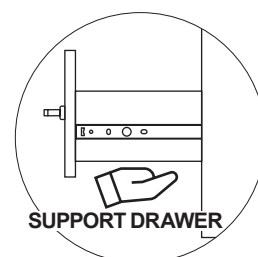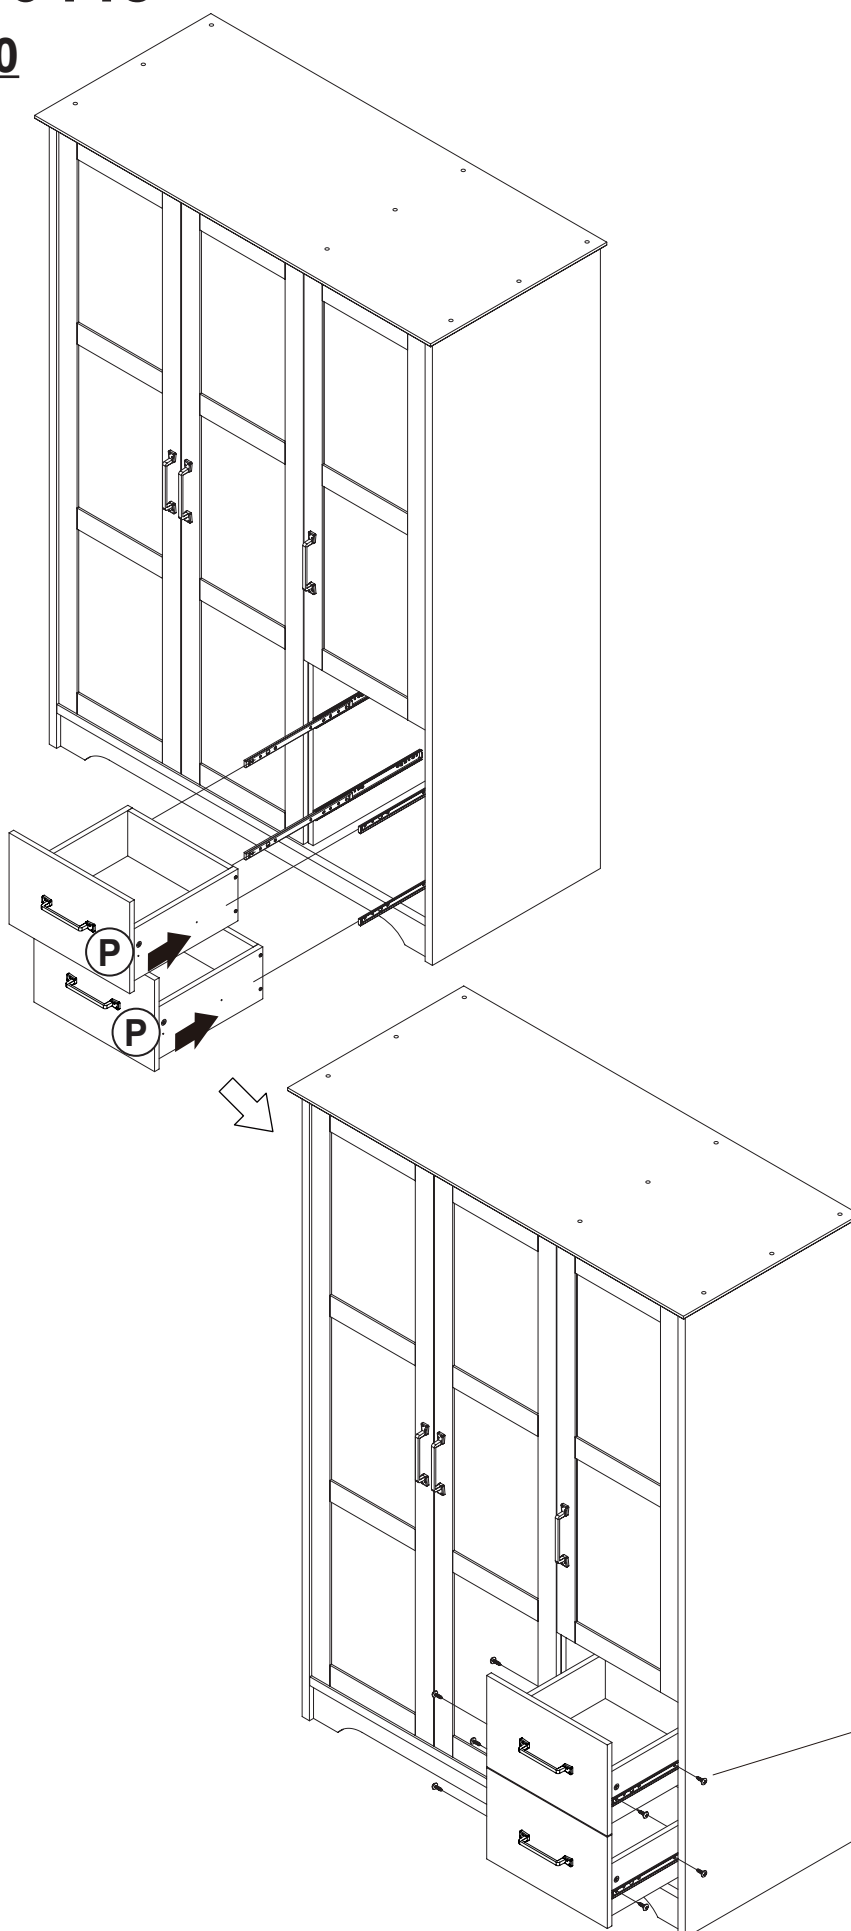

ITEM: **950445**

STEP 21

    COASTER
FINE FURNITURE

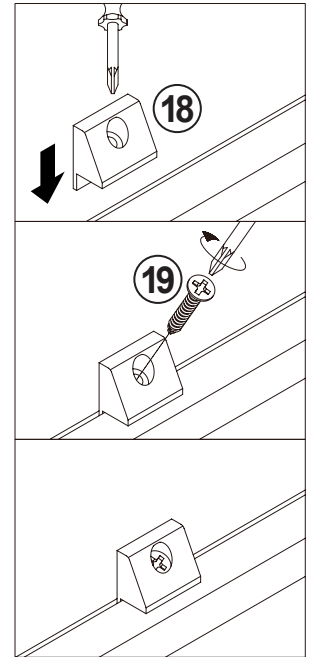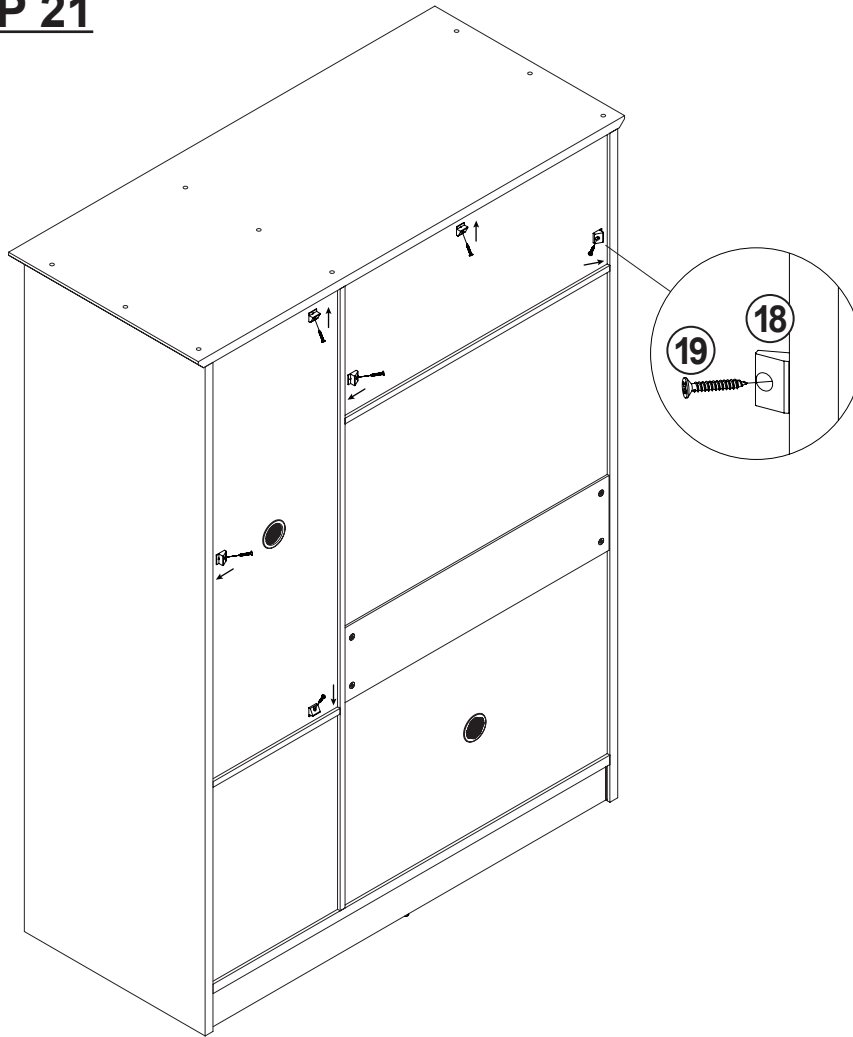



STEP 22
COMPLETE



ITEM: **950445**

  COASTER
FINE FURNITURE

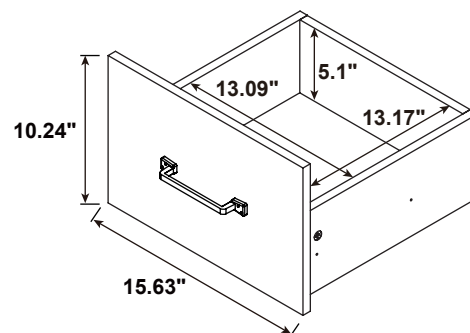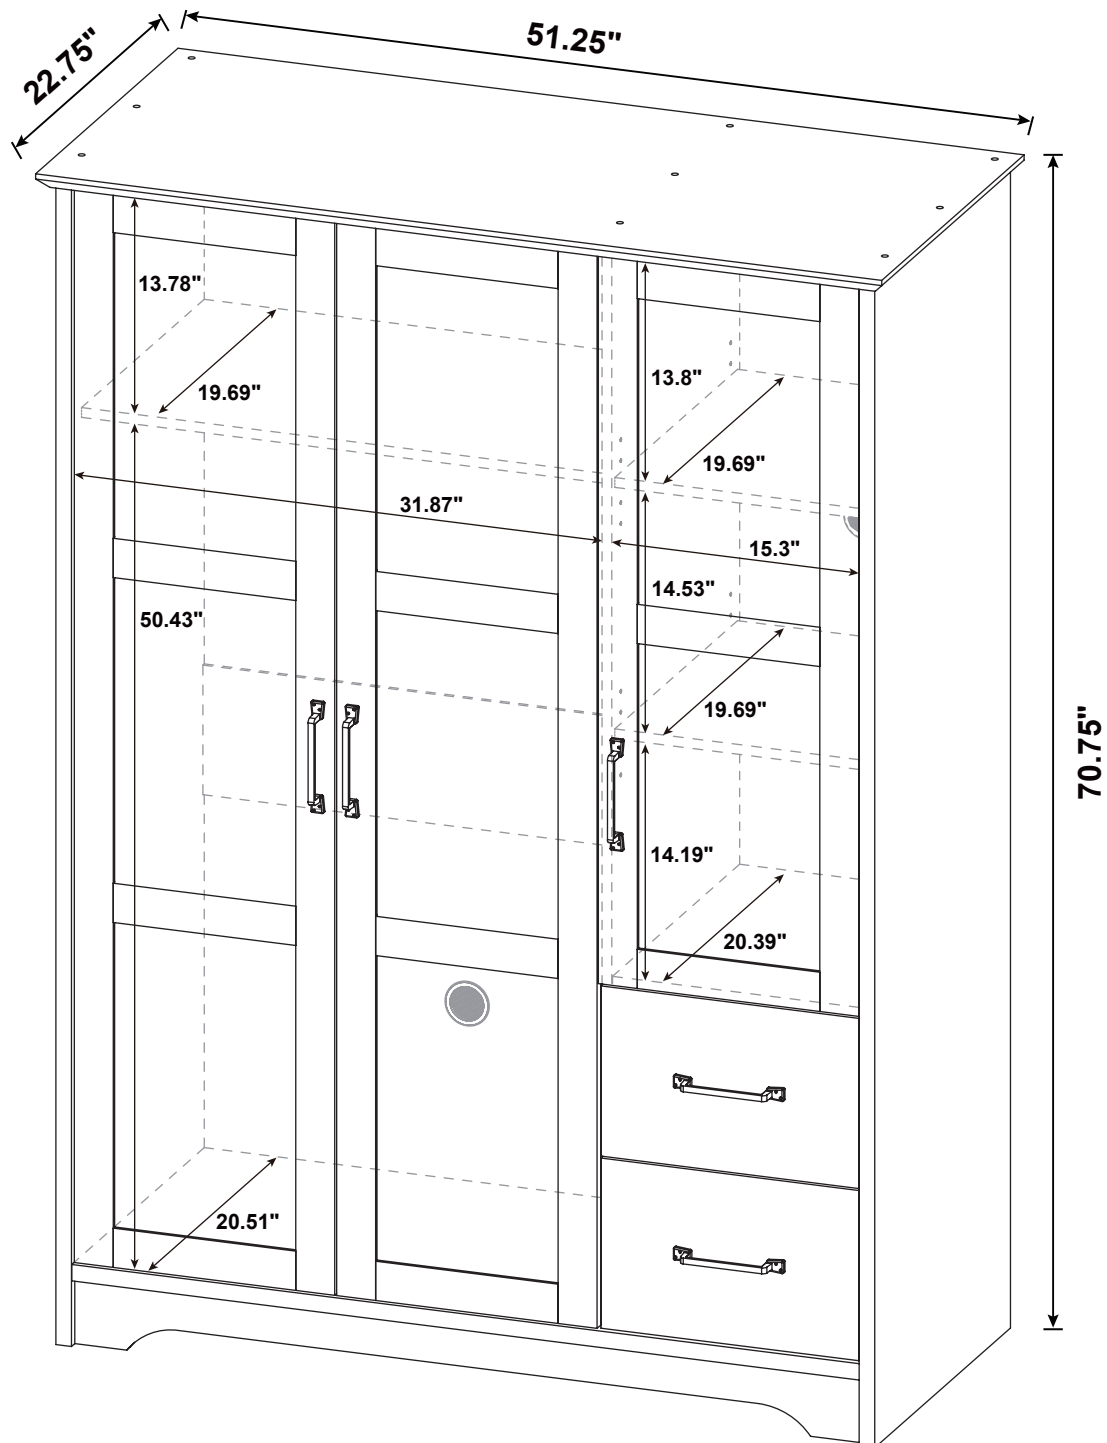

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

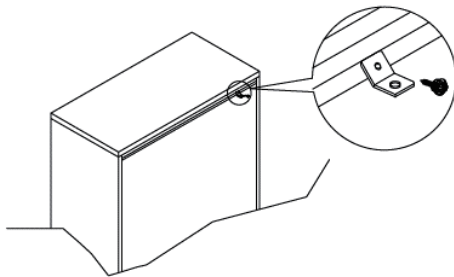**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

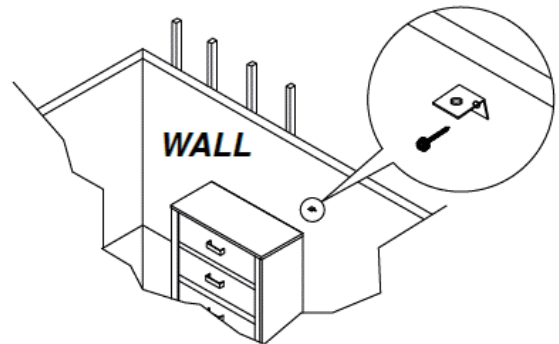**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

