

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950446
WARDROBE CABINET

ITEM:950446



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES




PARTS IDENTIFICATION

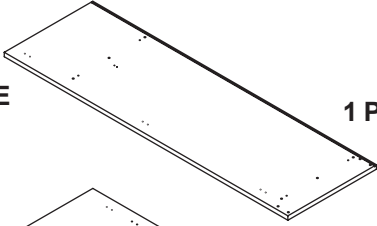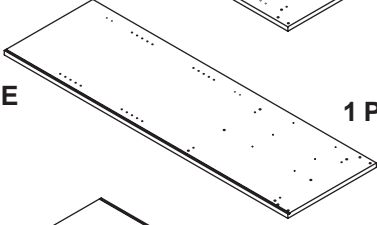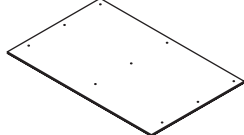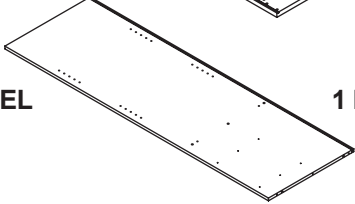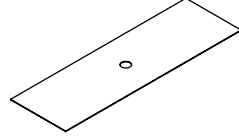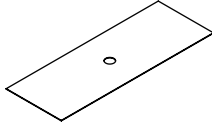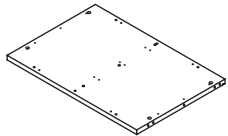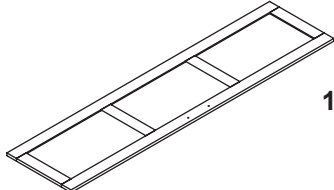A	LEFT SIDE PANEL		1 PC	H	ADJUSTABLE SHELF		2 PCS
B	RIGHT SIDE PANEL		1 PC	I	TOP PANEL		1 PC
C	DIVIDER PANEL		1 PC	J	LEFT UPPER BACK PANEL		1 PC
D	FRONT CROSS BRACE		1 PC	K	LEFT LOWER BACK PANEL		1 PC
E	BACK CROSS BRACE		1 PC	L	RIGHT UPPER BACK PANEL		1 PC
F	BOTTOM PANEL		1 PC	M	RIGHT LOWER BACK PANEL		1 PC
G	CROSS PANEL		2 PCS	N	LEFT DOOR		1 PC




NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

   ITEM: **950446**






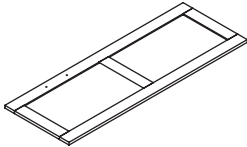


O	RIGHT DOOR		1 PC	S	DRAWER RIGHT SIDE PANEL		2 PCS
P	DRAWER FRONT PANEL		2 PCS	T	DRAWER BOTTOM PANEL		2 PCS
Q	DRAWER BACK PANEL		2 PCS	U	BOTTOM SUPPORT PANEL		2 PCS
R	DRAWER LEFT SIDE PANEL		2 PCS				

   HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	5	SCREW Ø4.5x42mm SR		24 PCS
2	WOODEN DOWEL Ø8x30mm		48 PCS	6	SCREW Ø4.3x35mm SR		8 PCS
3	CAM BOLT Ø7x35.5mm SR		20 PCS	7	PLASTIC FEET Ø15mm		5 PCS
4	CAM LOCK Ø15x12mm SR		20 PCS	8	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS

ITEM:950446

        Z

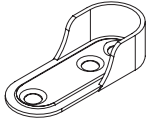NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
9	ROD HOLDER		2 PCS	15	RAIL SCREW Ø3.5x15mm BLK		20 PCS
10	HINGE Ø35mm SR		5 PCS	16	RUBBER Ø58mm BLK		2 SETS
11	HINGE SCREW Ø4x15mm SR		24 PCS	17	BACK PANEL SUPPORT		6 PCS
12	HANDLE L= 170mm SR		4 PCS	18	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
13	BOLT M4x25mm SR		8 PCS	19	STICKER Ø20mm		4 PCS
14	RAIL L = 350mm BLK		4 PCS	20	HANGING ROD L= 389mm SR		1 PC

 
Z9, Z10, Z12, Z13, Z14, Z16, Z20 not included in blister packaging.

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950446**







STEP 1

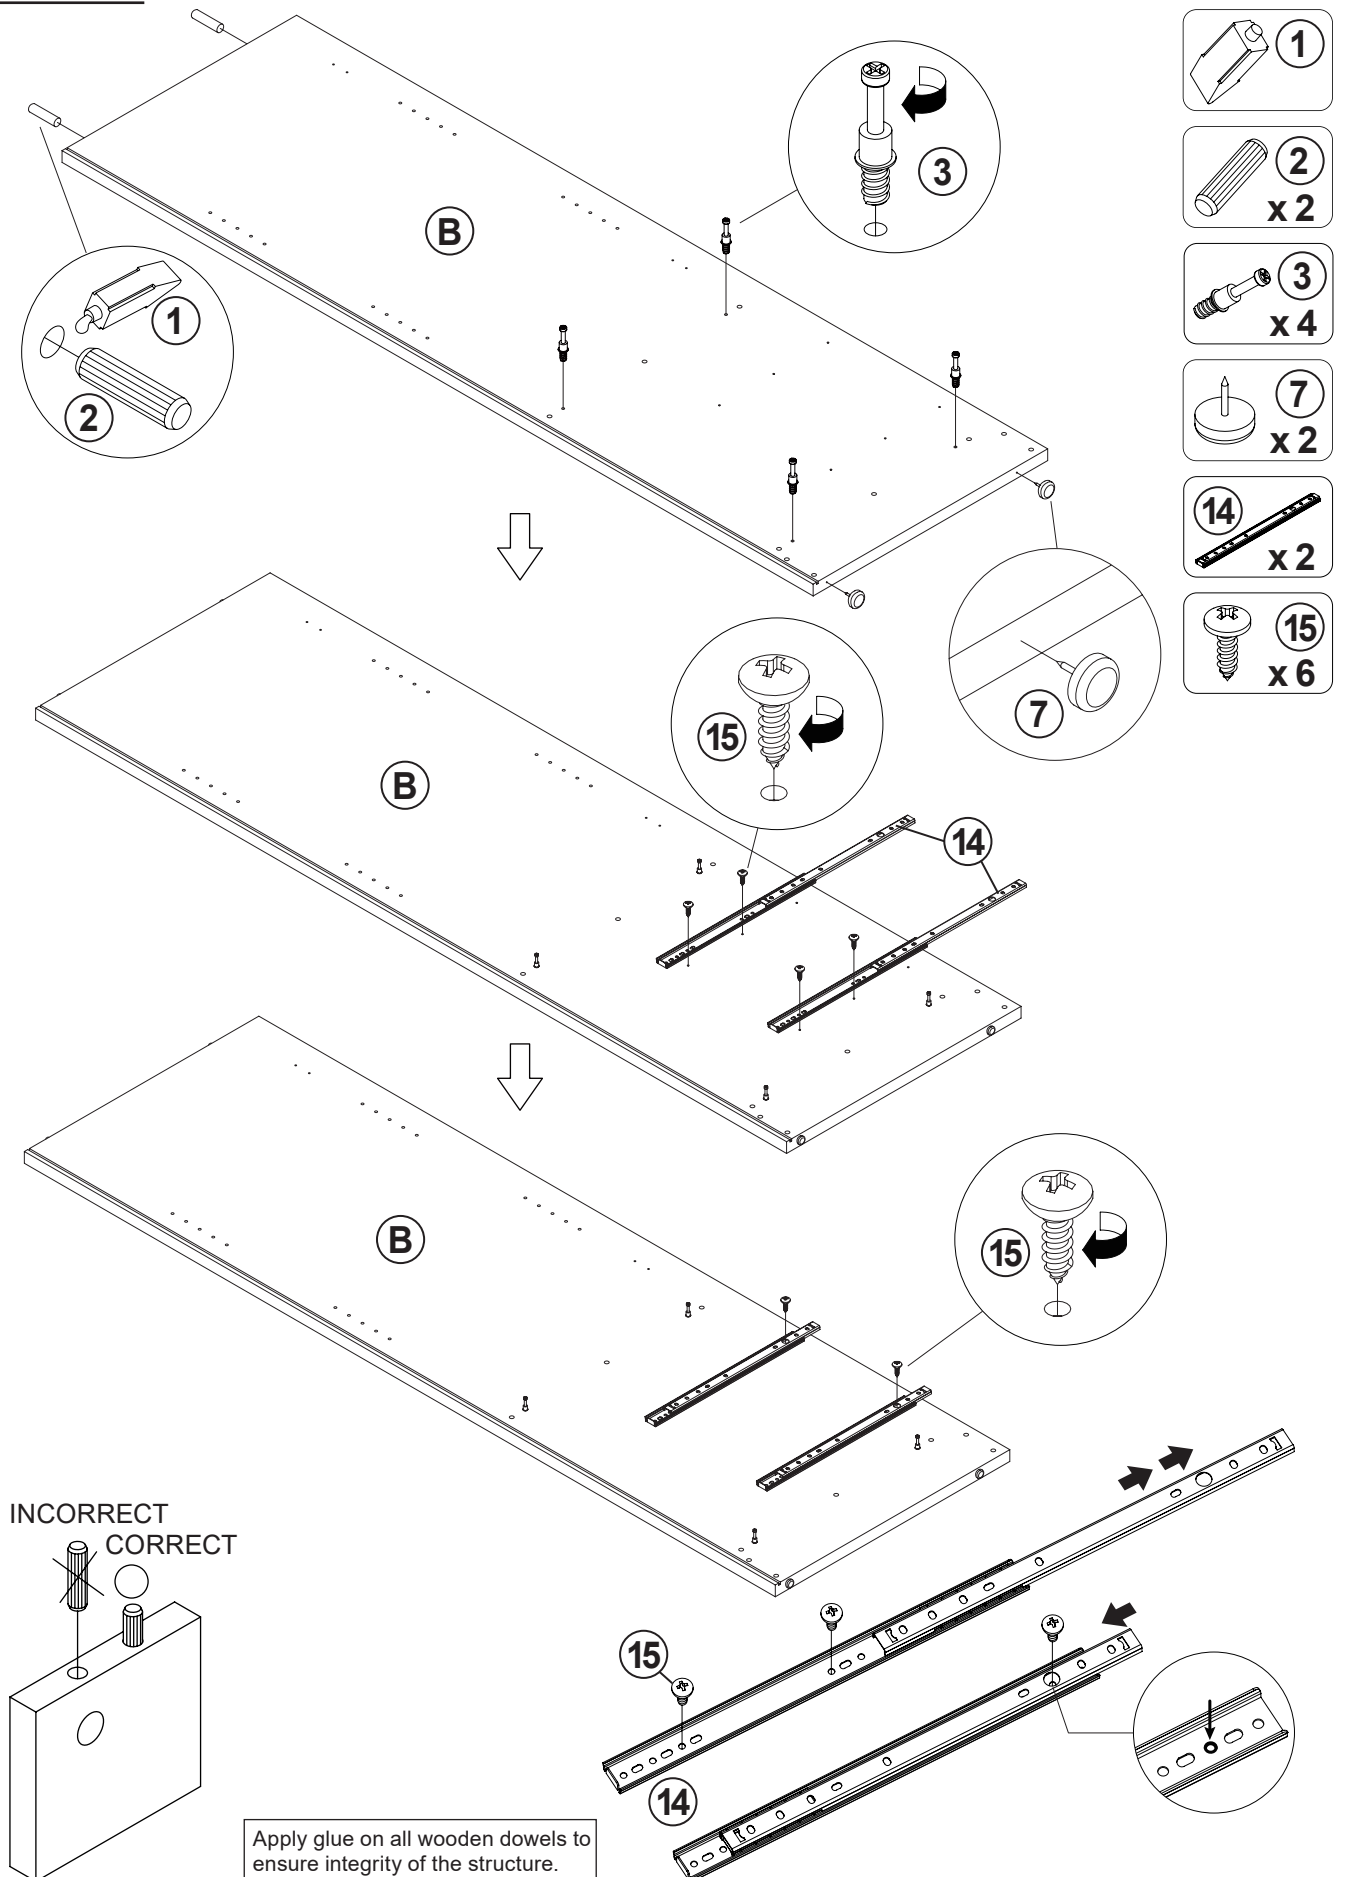



ITEM: **950446**

STEP 2

      COASTER
FINE FURNITURE

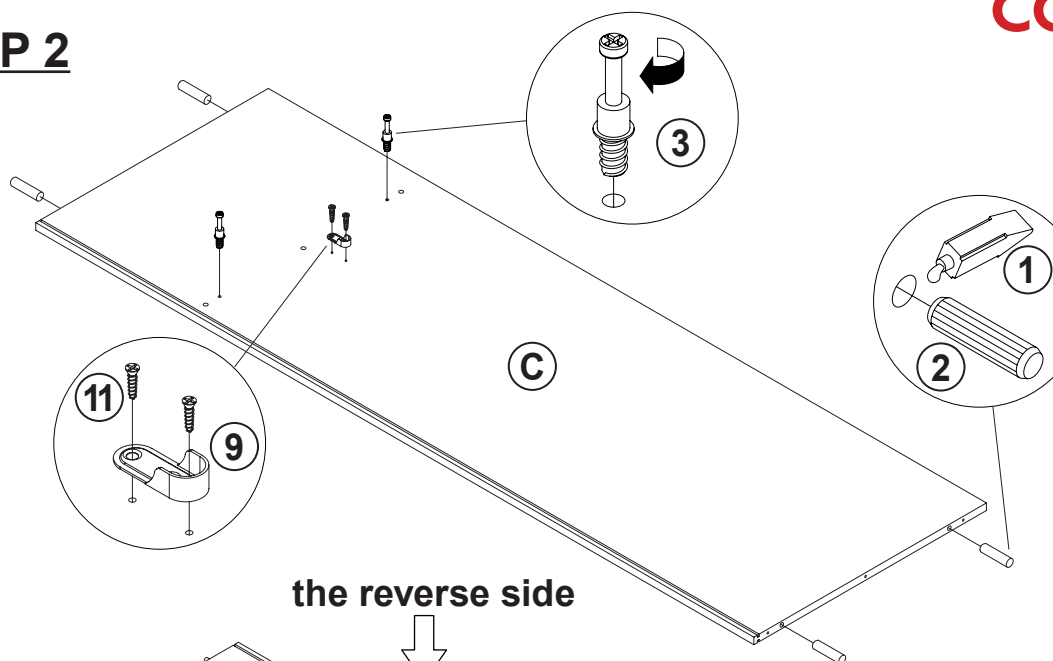

the reverse side

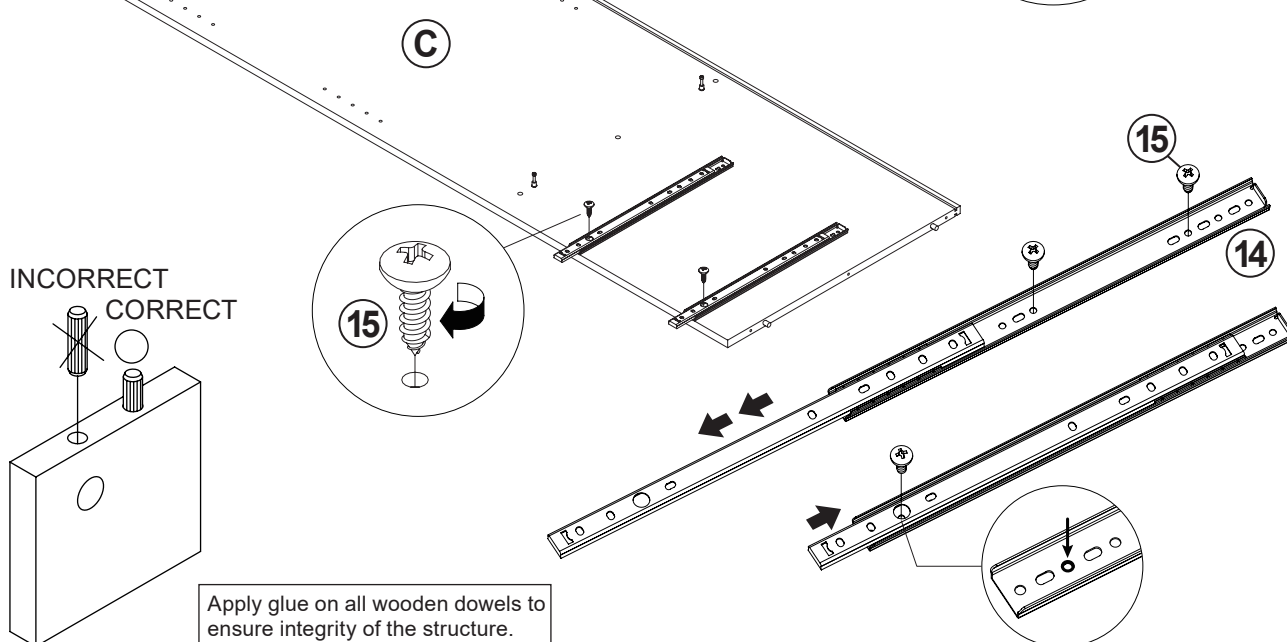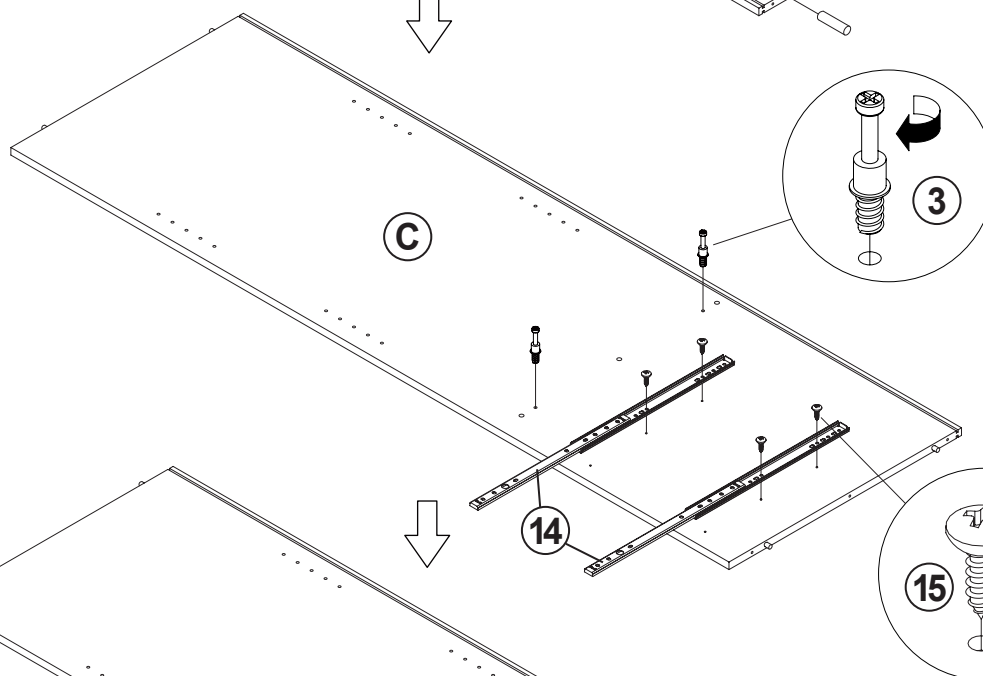  


INCORRECT
CORRECT


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **950446**

 STEP 3

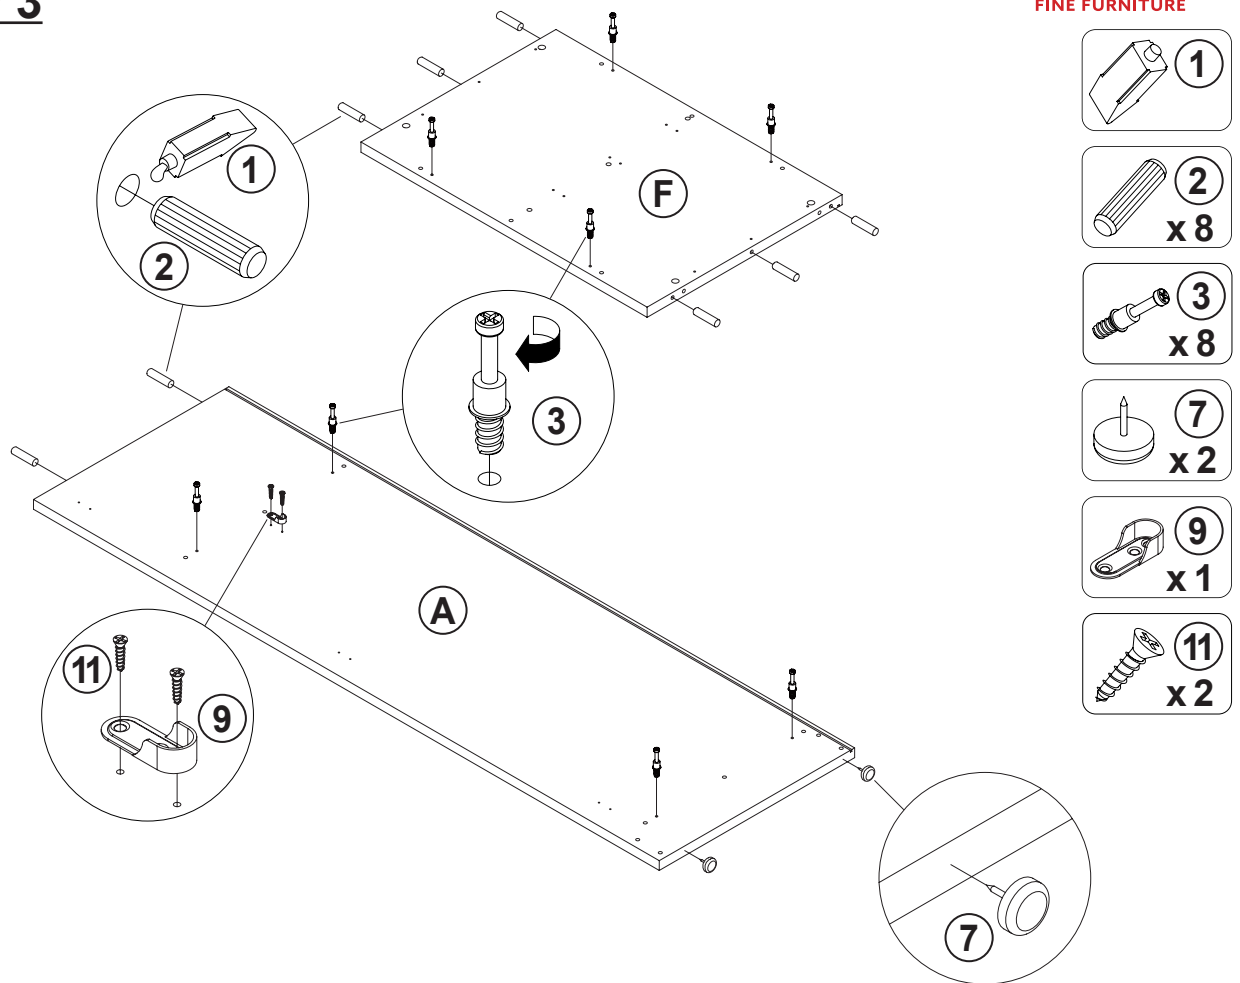


 STEP 4



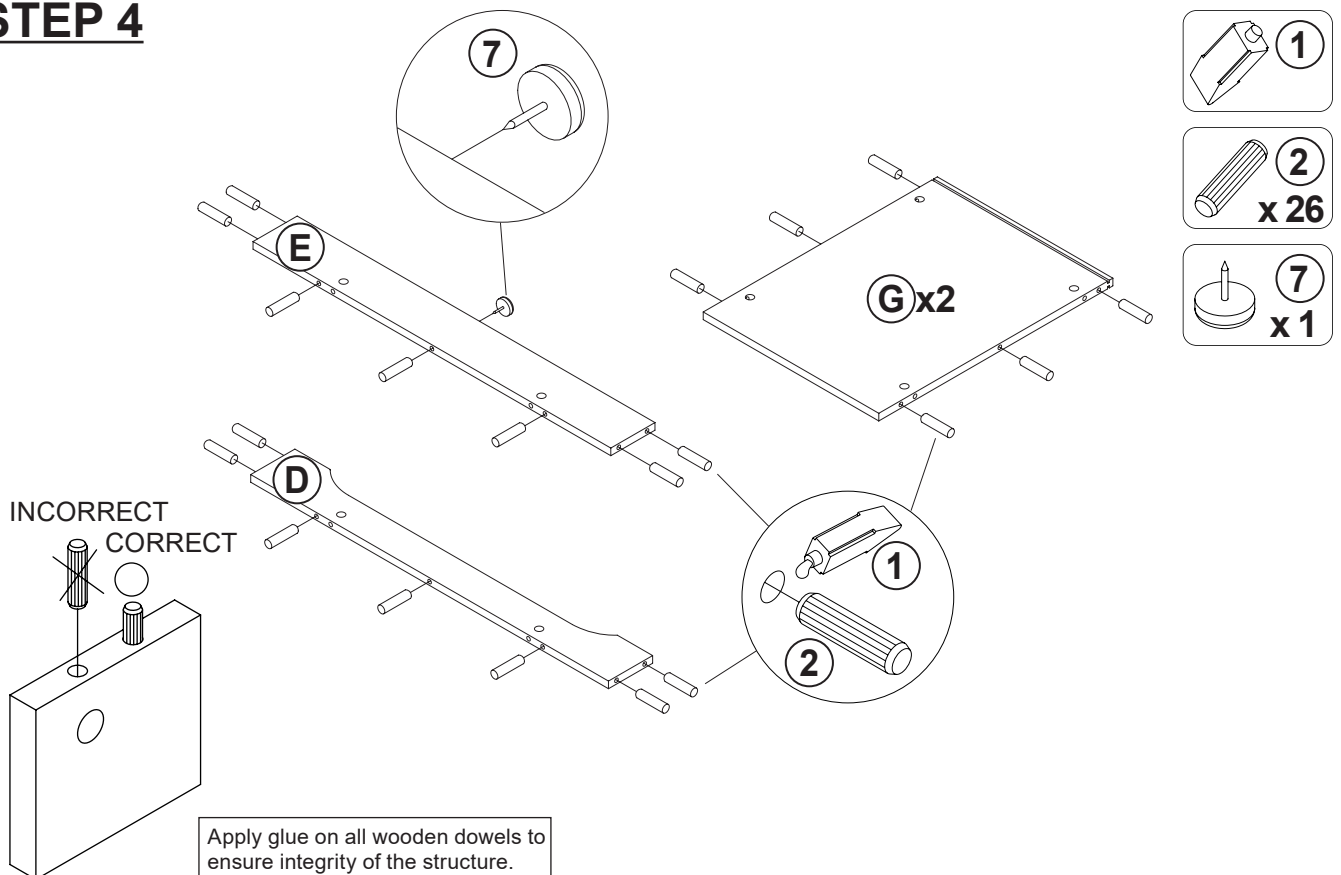


ITEM: **950446**

 STEP 5

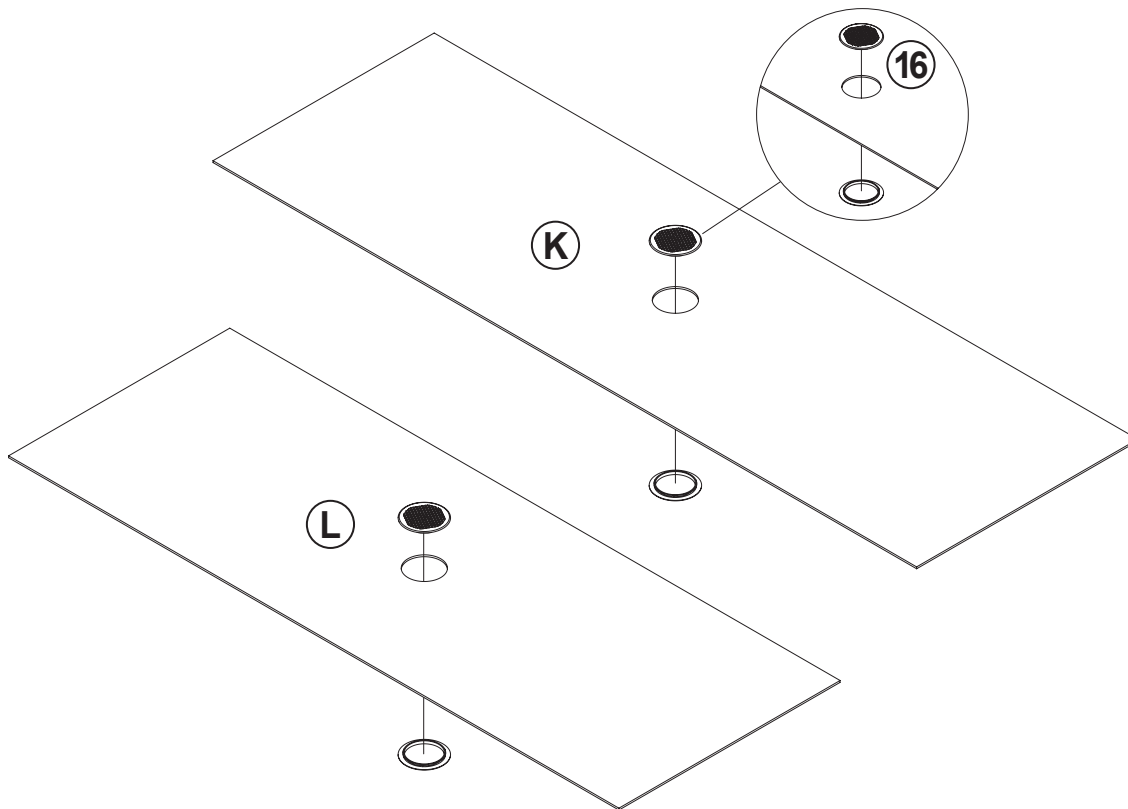


   STEP 6

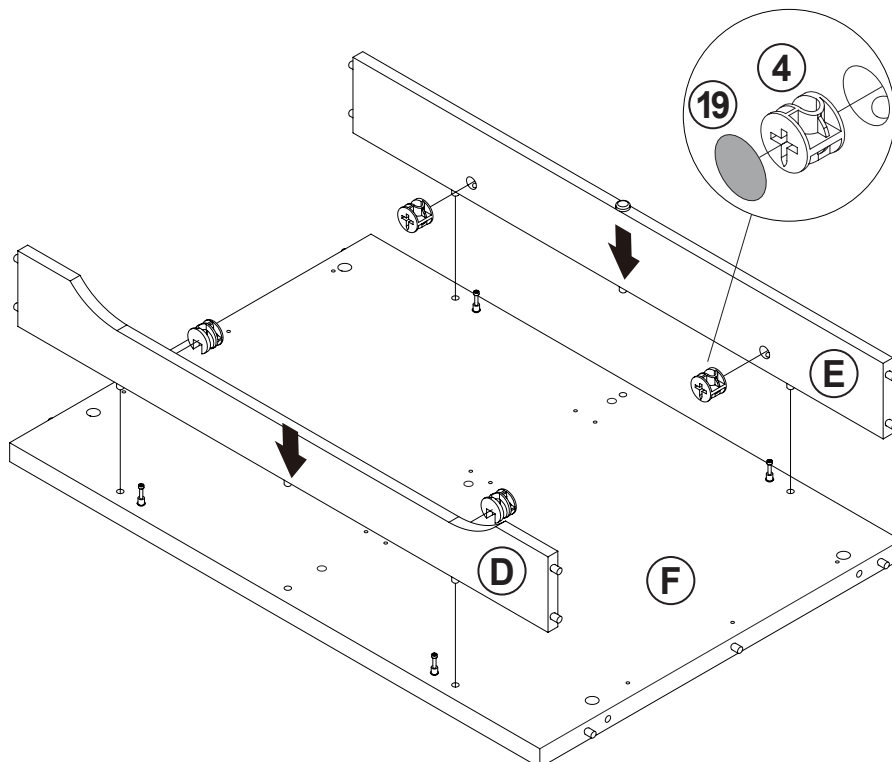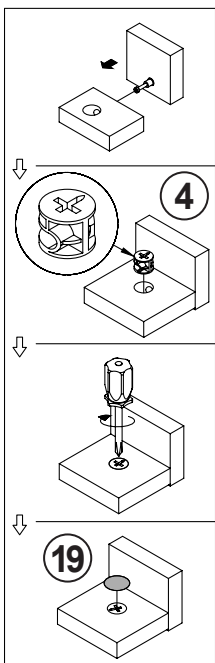


ITEM: **950446**

 STEP 7

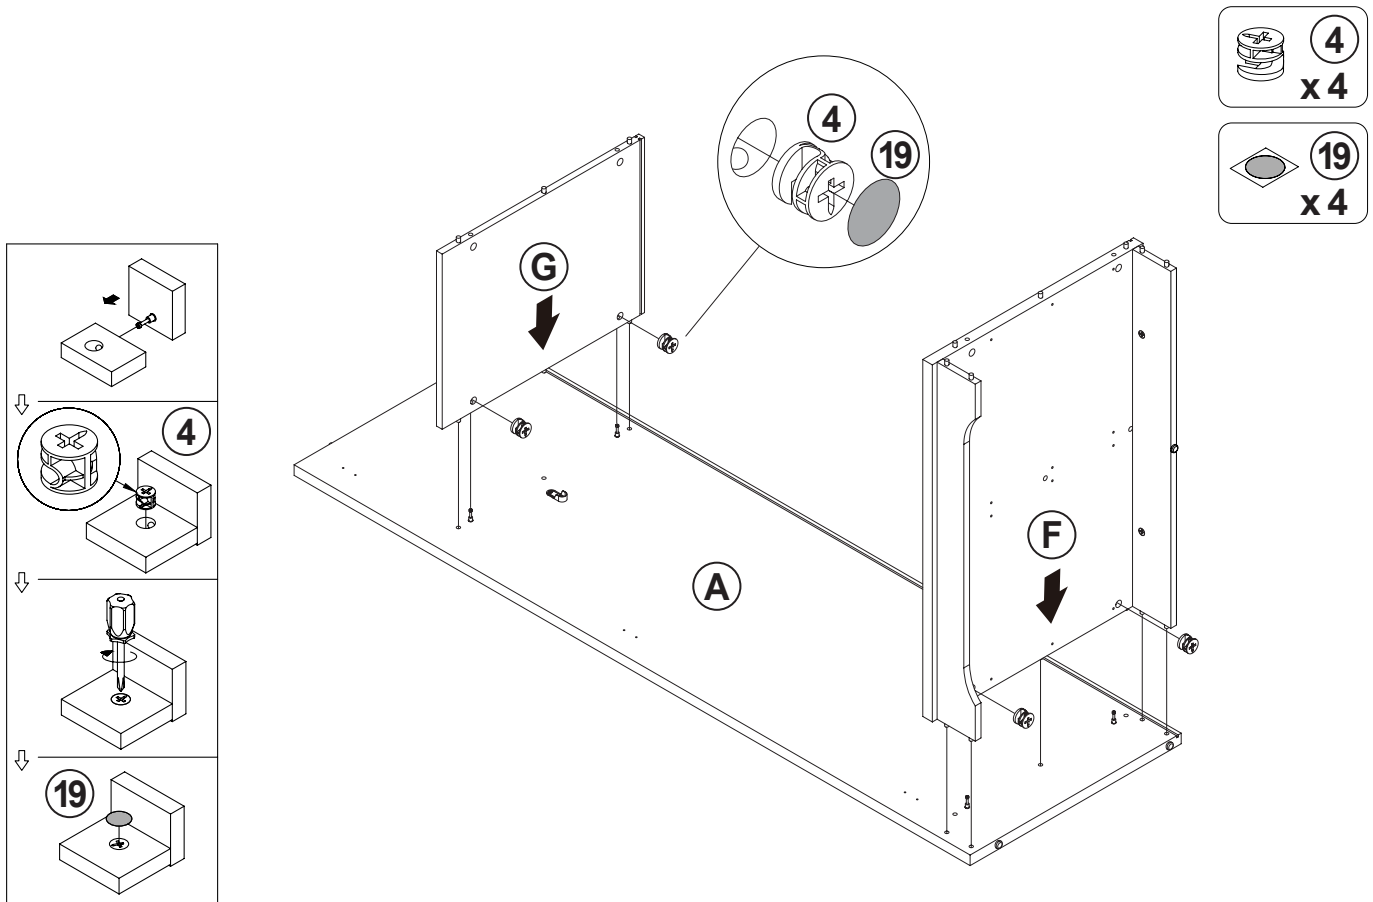


 STEP 8






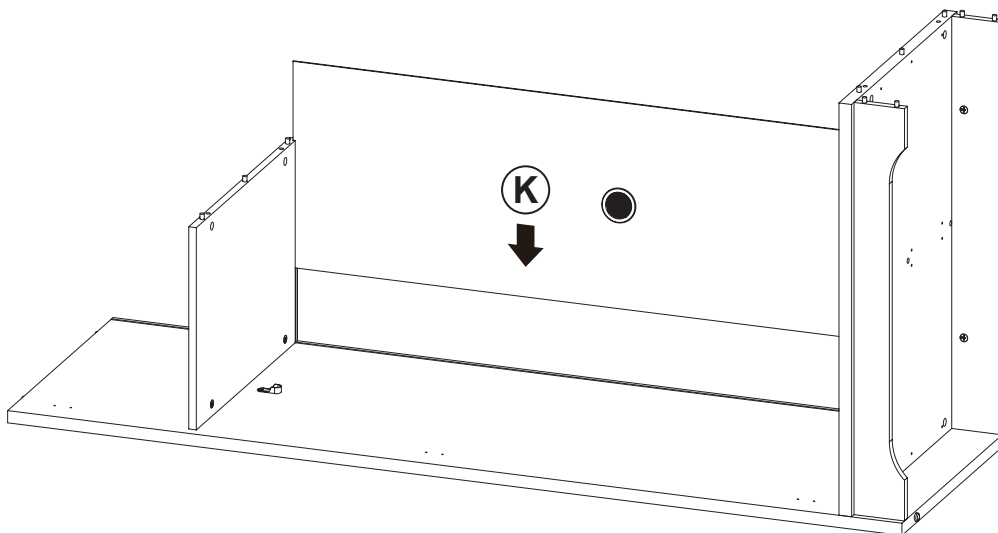


ITEM: **950446**

 STEP 9

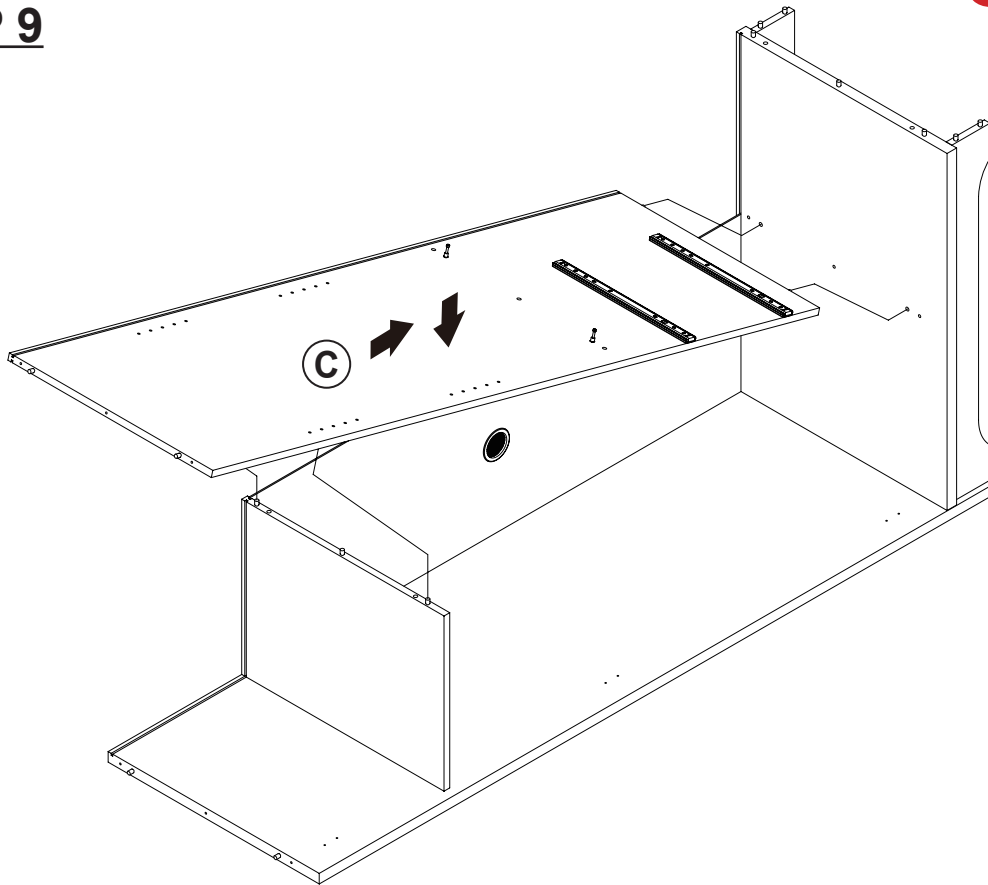


      STEP 10

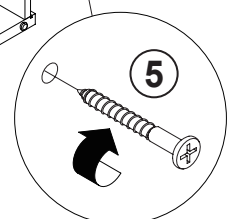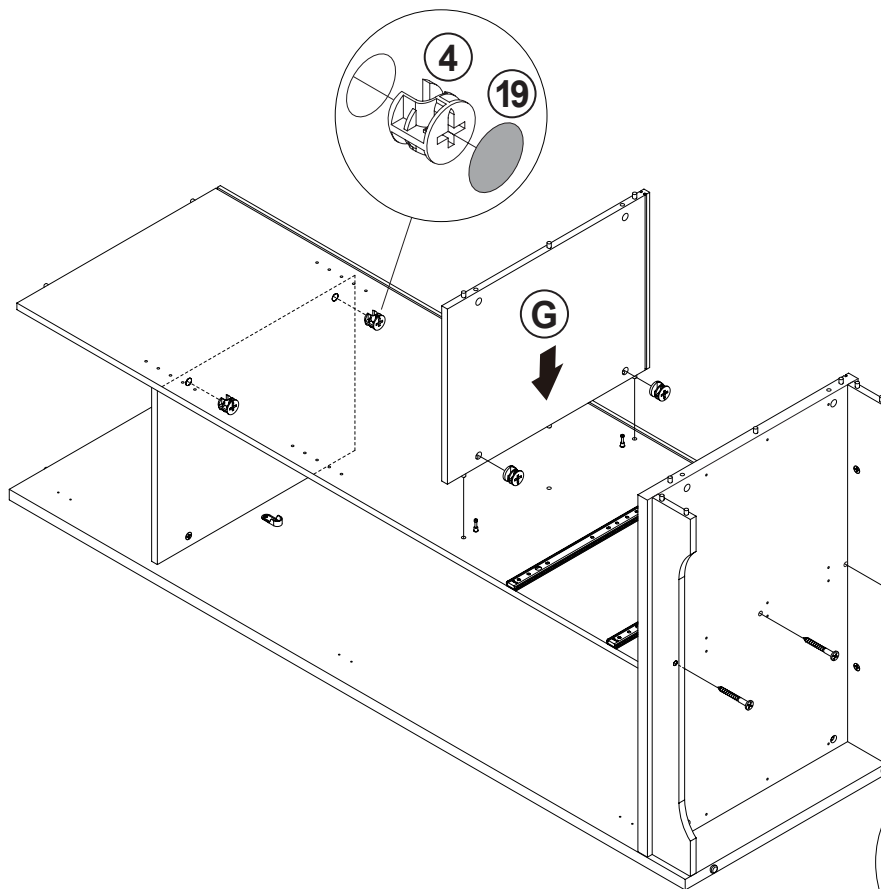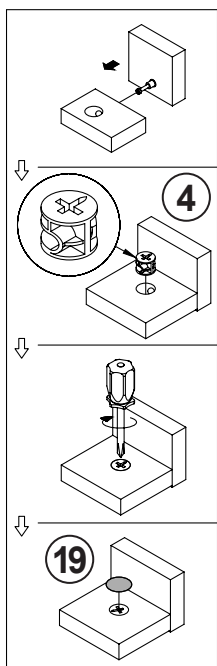


ITEM: **950446**

 STEP 11

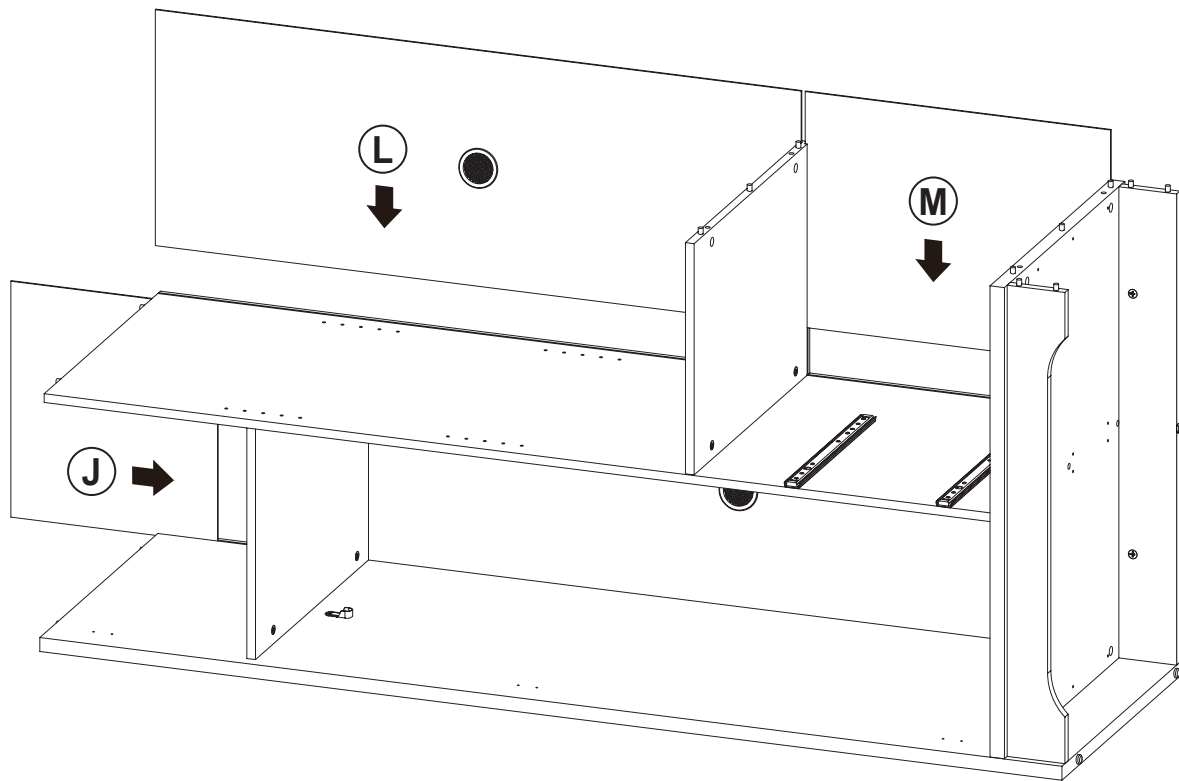


 
STEP 12

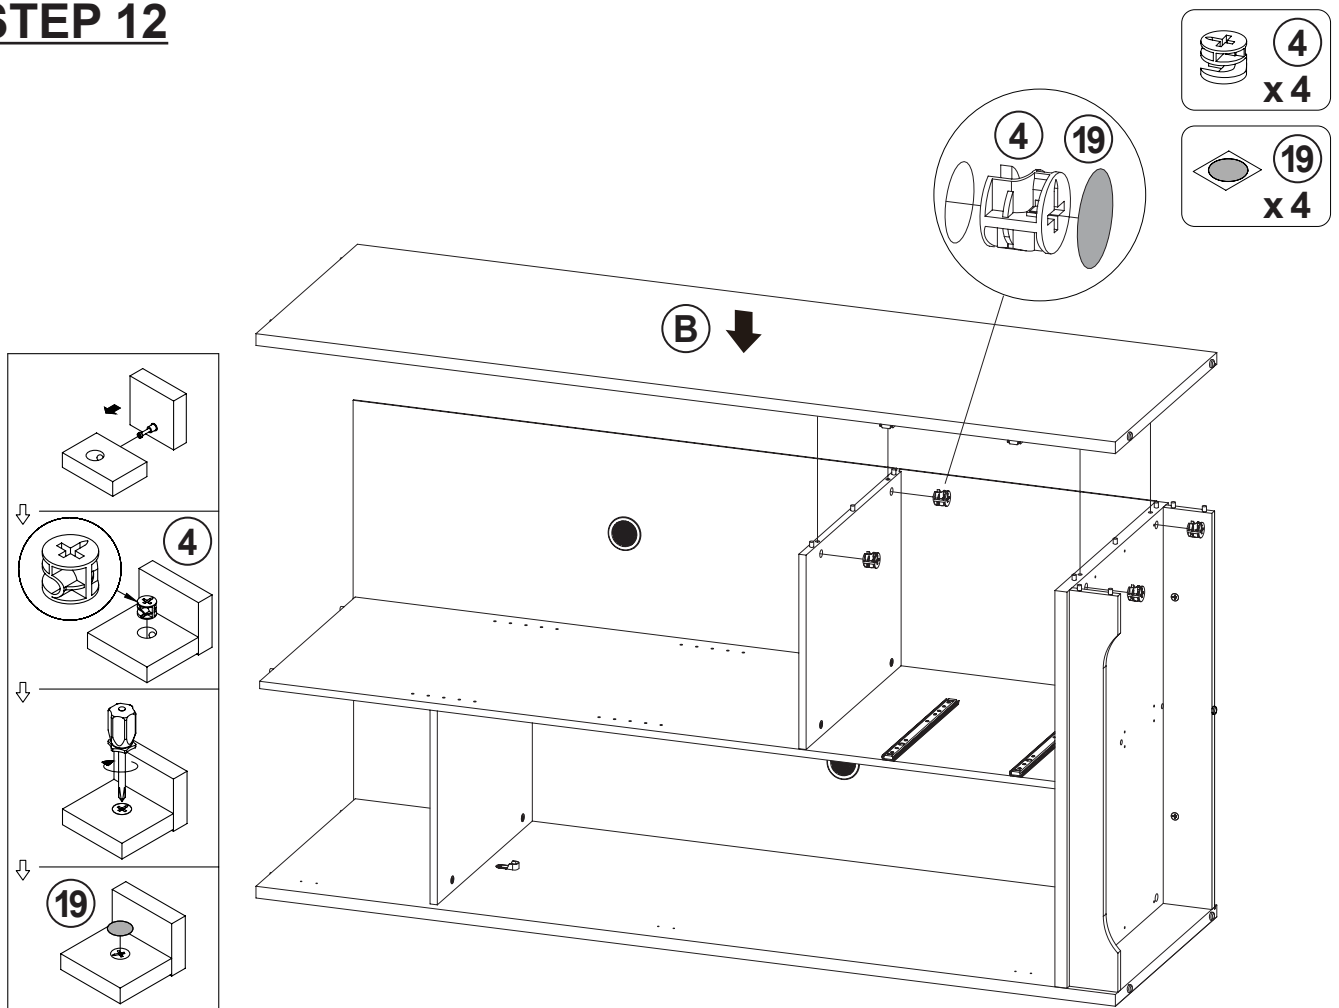

ITEM: **950446**


STEP 13

  COASTER
FINE FURNITURE

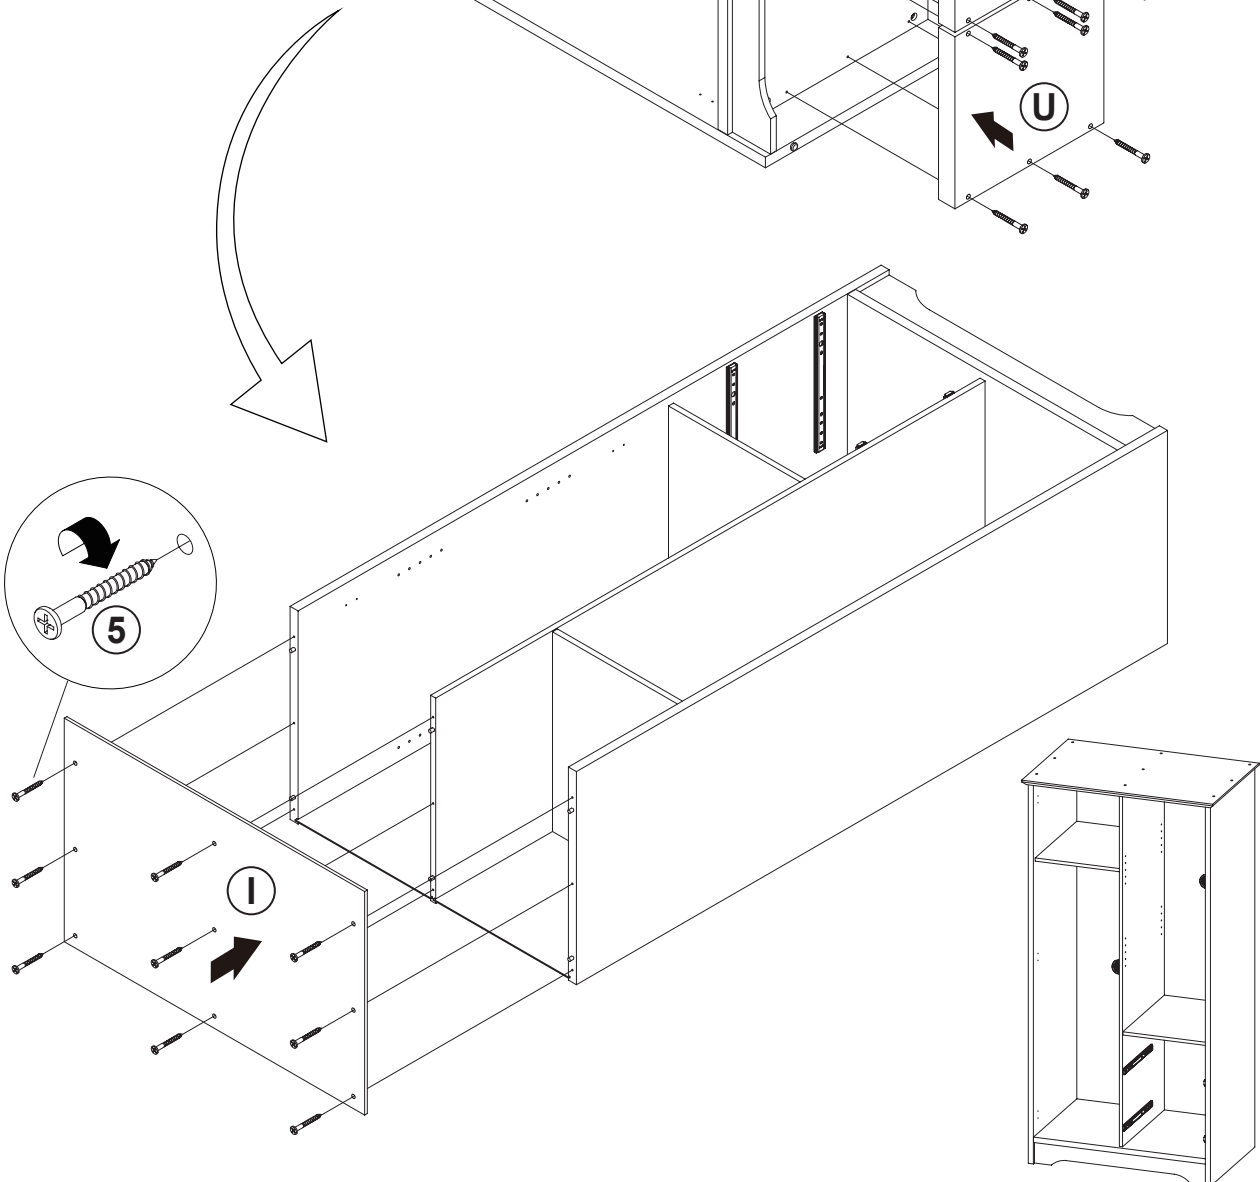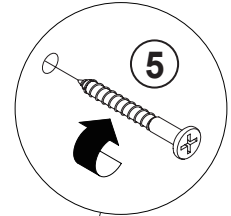


ITEM:950446

 STEP 14

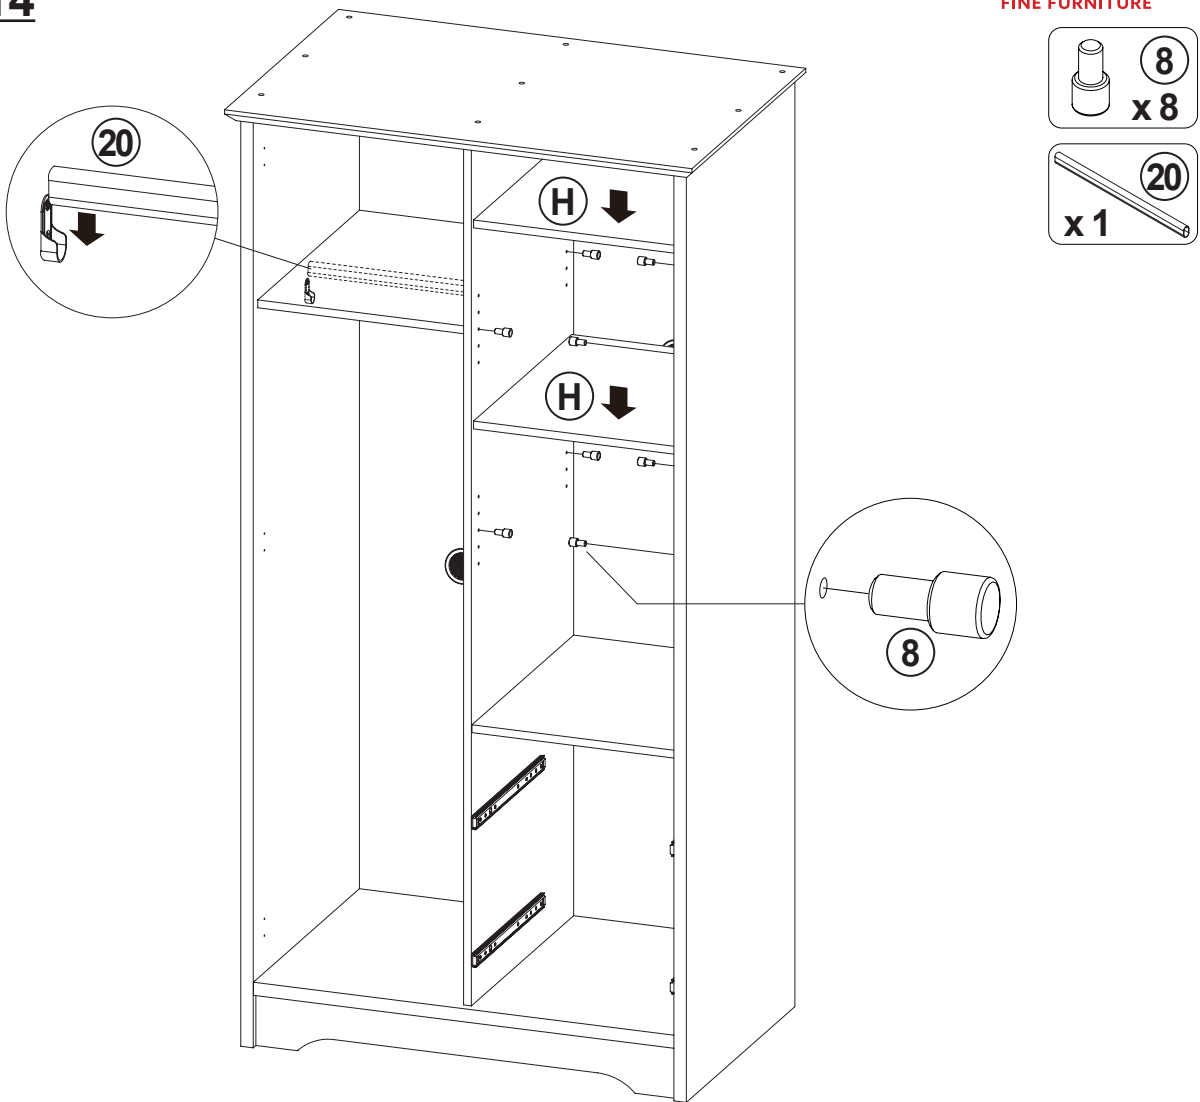






 
STEP 15

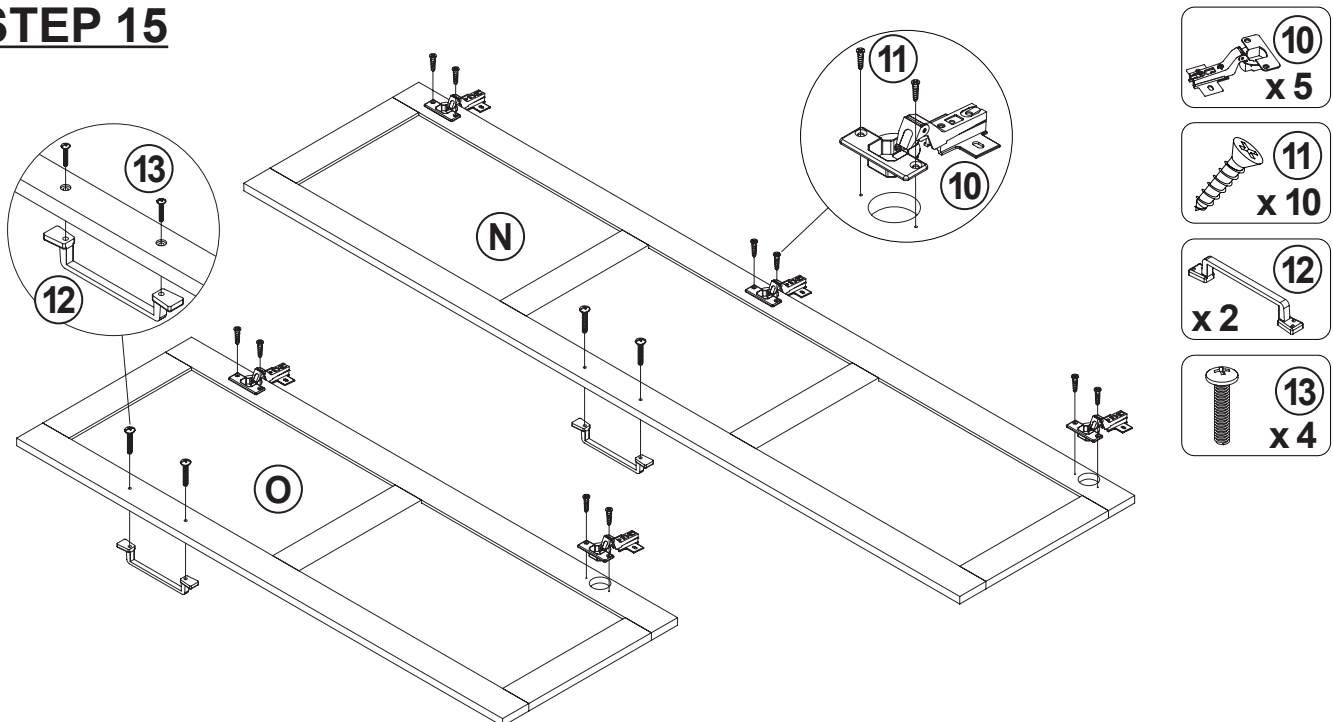

ITEM: **950446**

STEP 16

      
COASTER
FINE FURNITURE

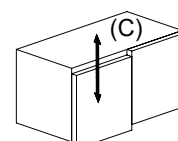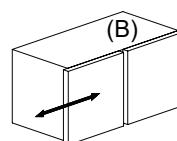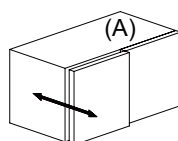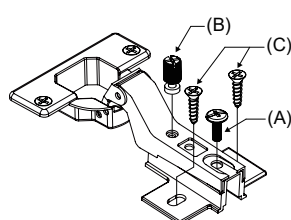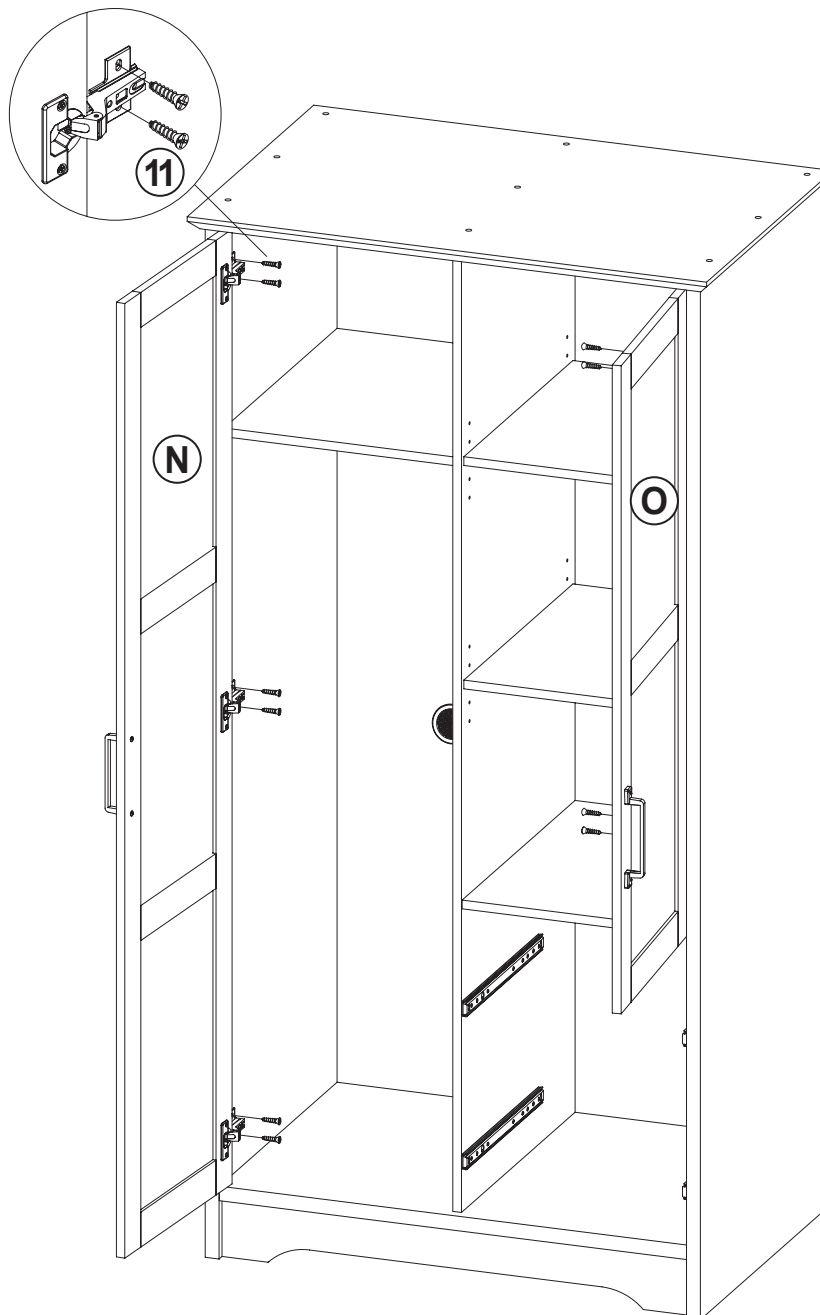

ITEM: **950446**

STEP 17





 
COASTER
FINE FURNITURE

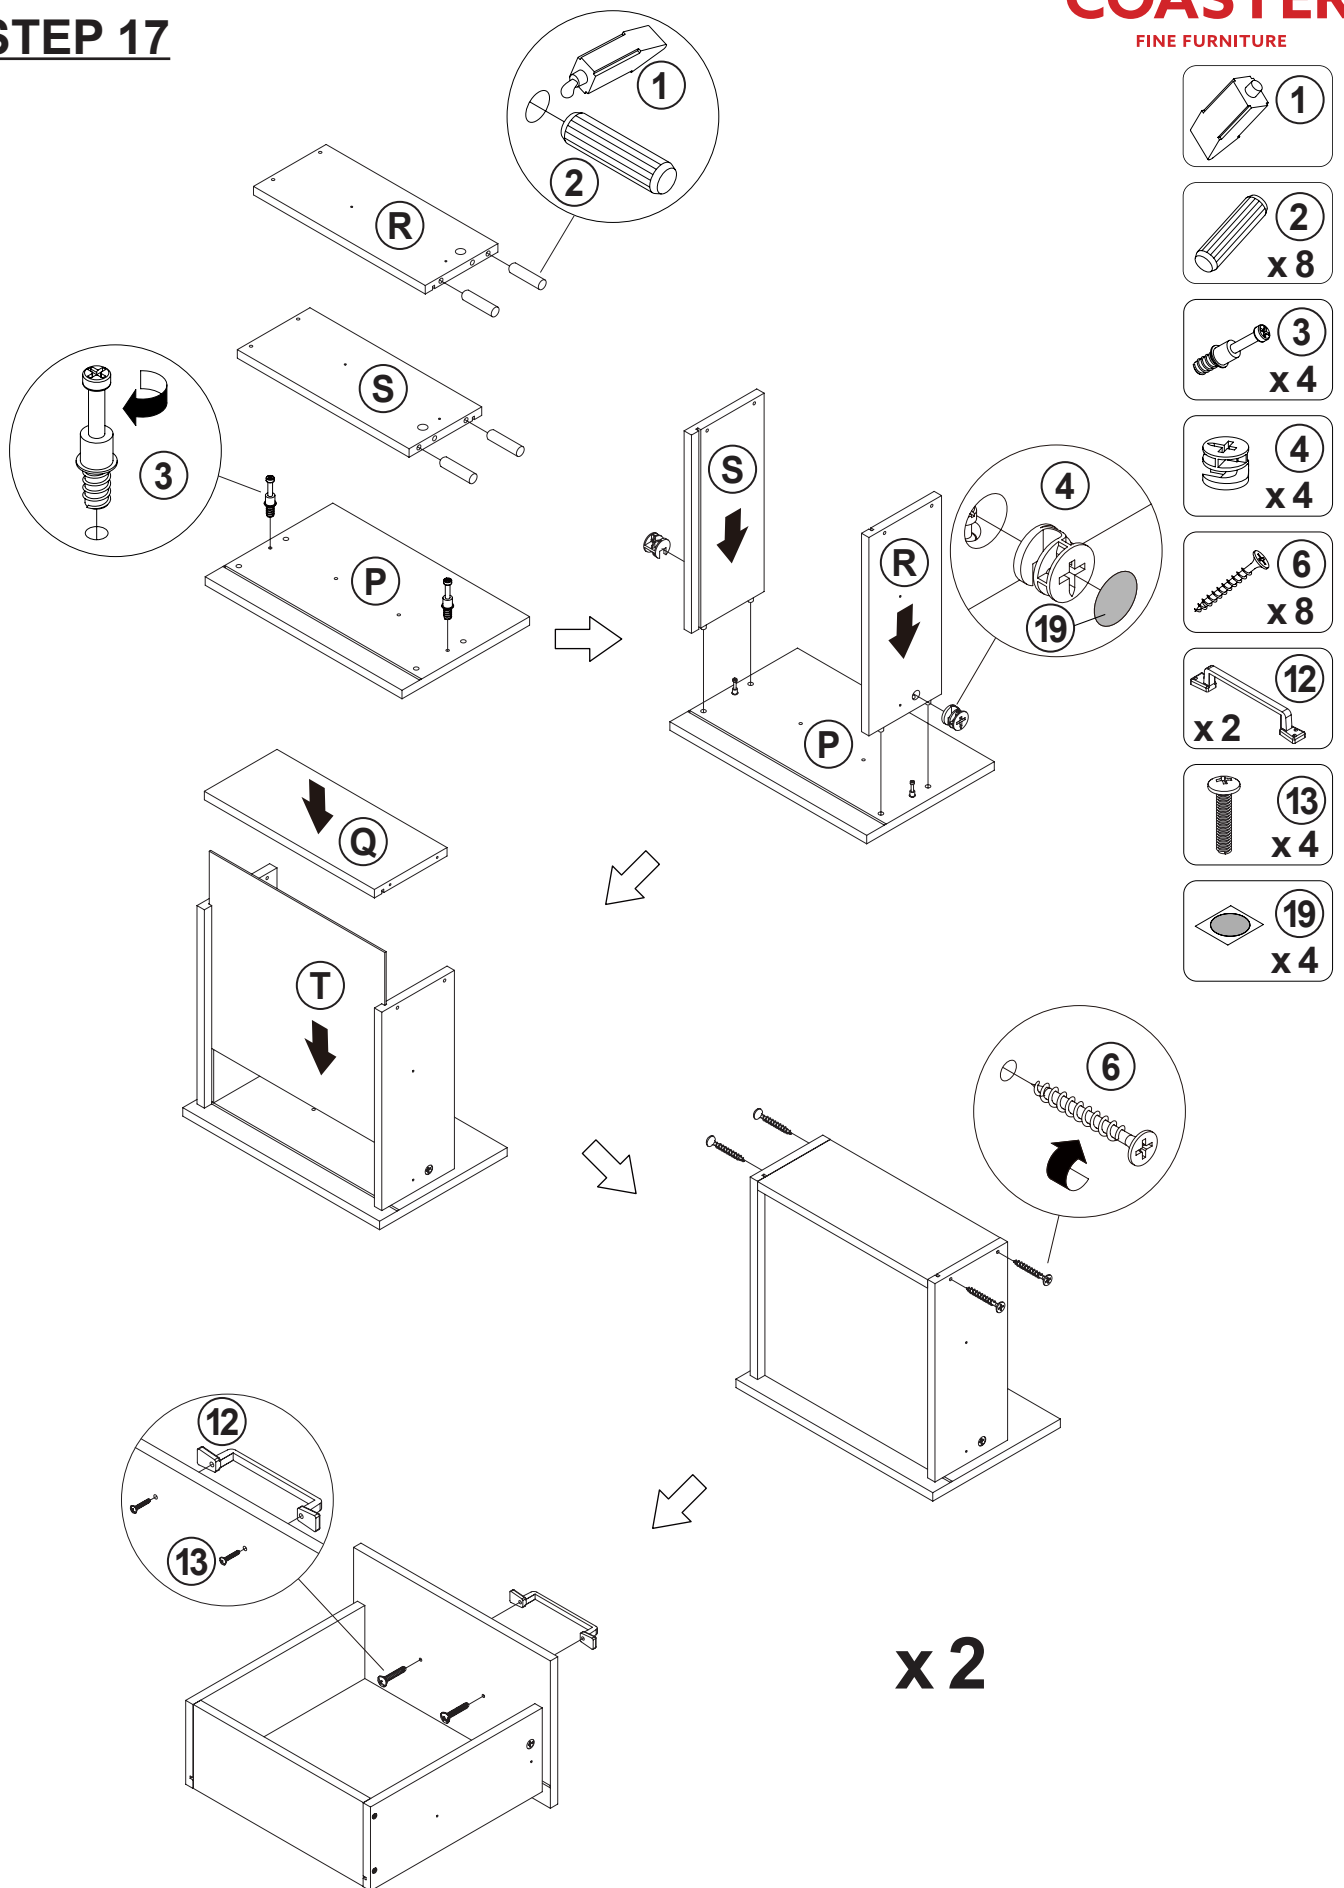

ITEM: **950446**

STEP 18

   
 
 
COASTER
FINE FURNITURE

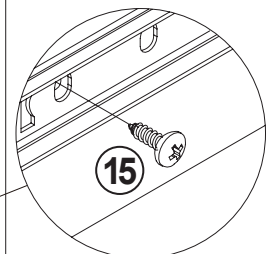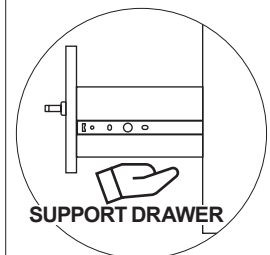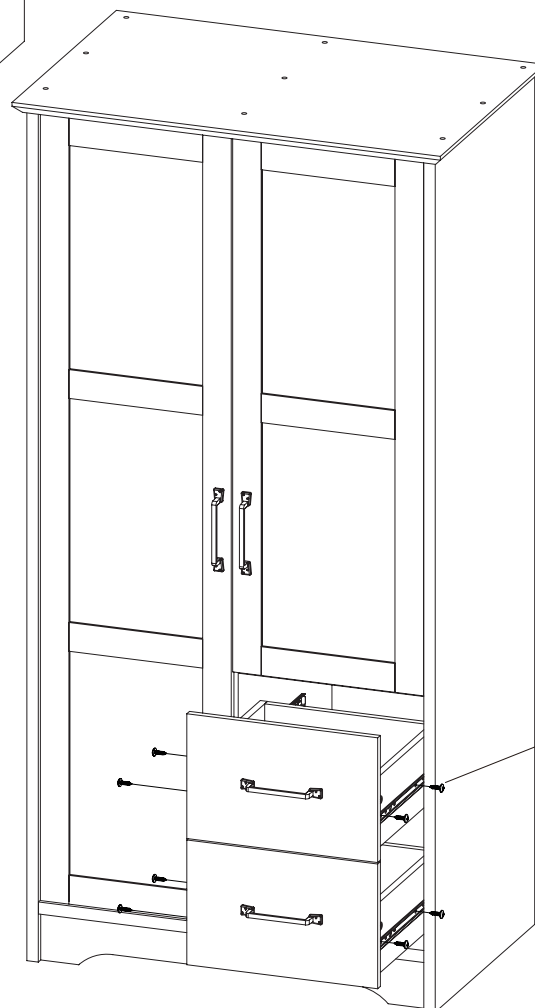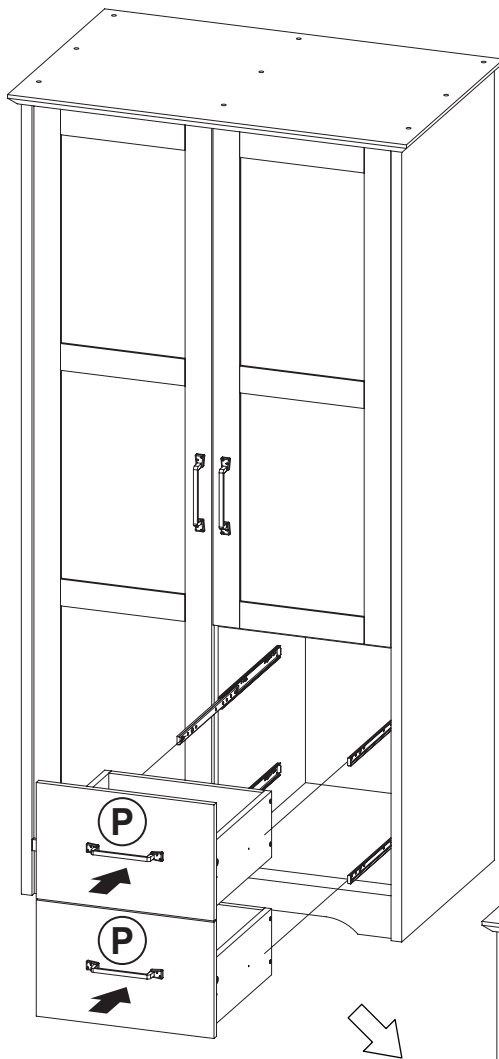

ITEM: **950446**

STEP 19

   COASTER
FINE FURNITURE

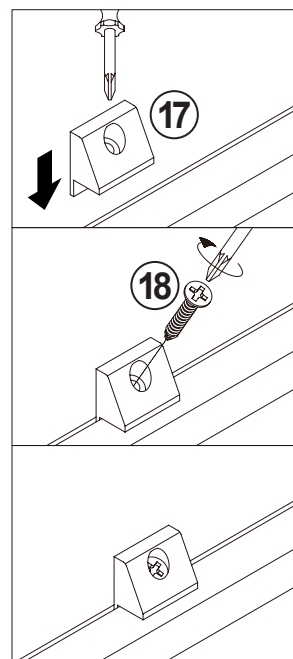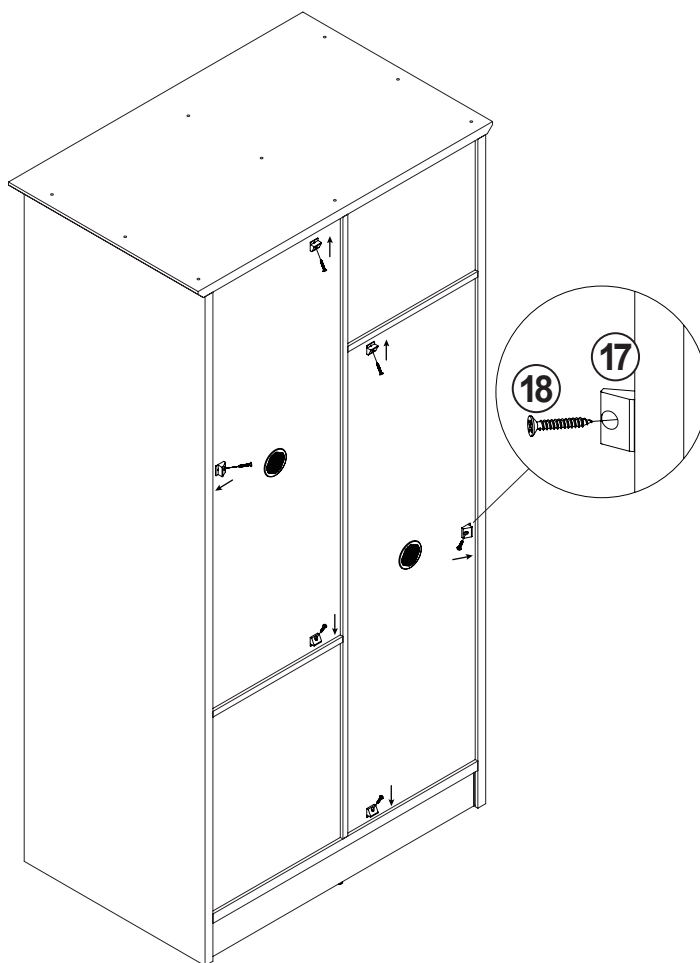


STEP 20
COMPLETE



ITEM: 950446

 COASTER
FINE FURNITURE

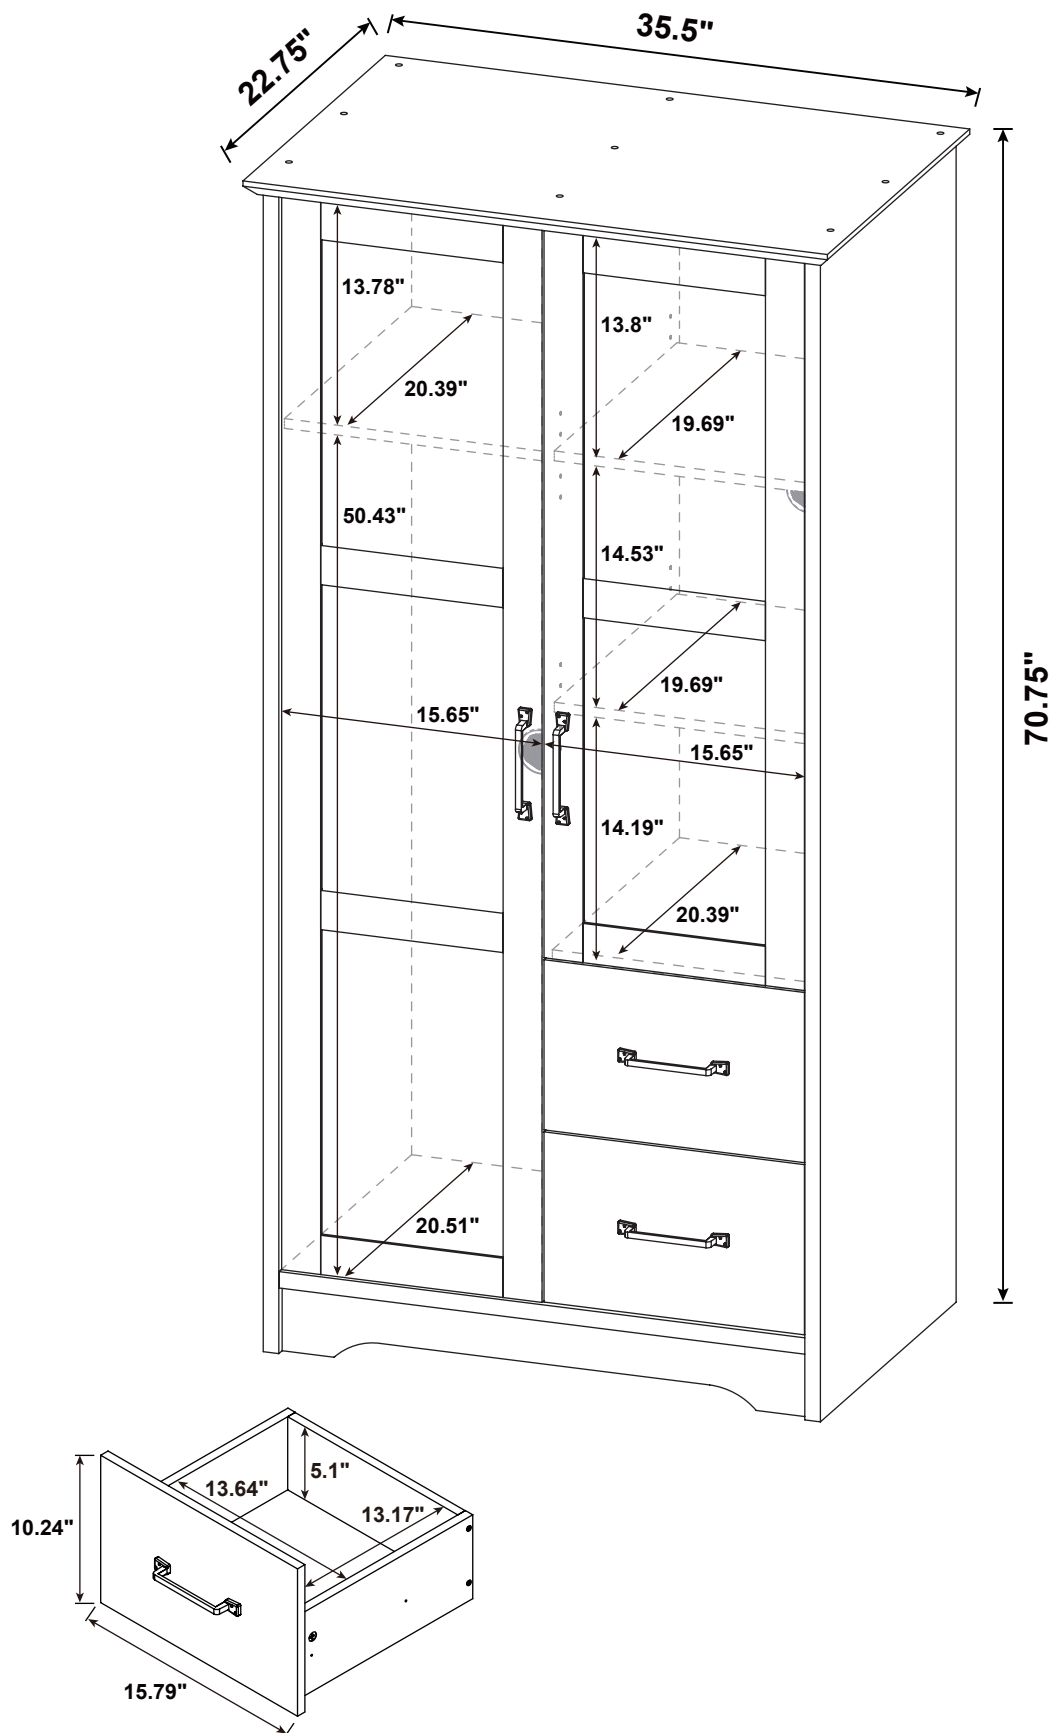

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

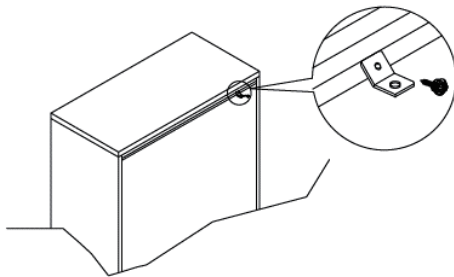

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

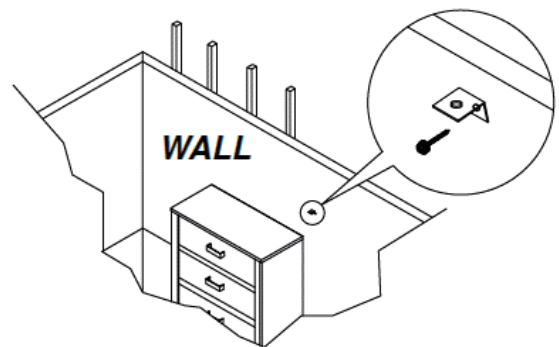

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

