

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950448LTE
WARDROBE CABINET

ITEM:950448LTE



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES











PARTS IDENTIFICATION

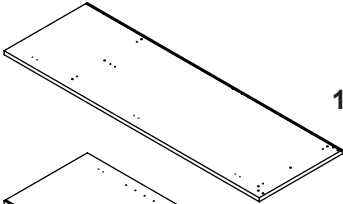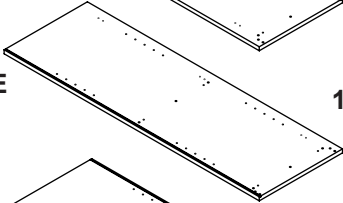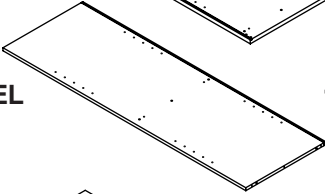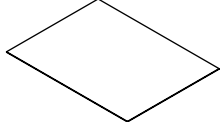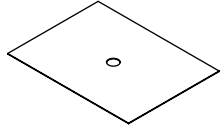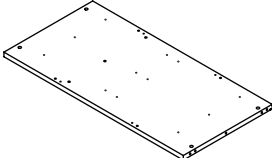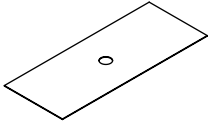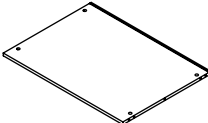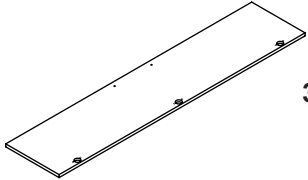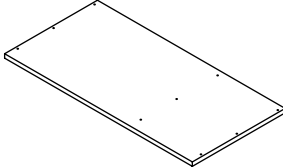A	LEFT SIDE PANEL		1 PC	J	BACK PARTITION PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	K	LEFT UPPER BACK PANEL		1 PC
C	DIVIDER PANEL		1 PC	L	LEFT MIDDLE BACK PANEL		1 PC
D	CROSS BRACE		2 PCS	M	LEFT LOWER BACK PANEL		1 PC
E	BOTTOM PANEL		1 PC	N	RIGHT UPPER BACK PANEL		1 PC
F	LEFT CROSS PANEL		1 PC	O	RIGHT LOWER BACK PANEL		1 PC
G	RIGHT CROSS PANEL		1 PC	P	DOOR		3 PCS
H	ADJUSTABLE SHELF		2 PCS	Q	BOTTOM SUPPORT PANEL		2 PCS
I	TOP PANEL		1 PC				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

          ITEM: **950448LTE****HARDWARE IDENTIFICATION****Z**

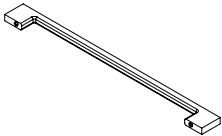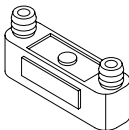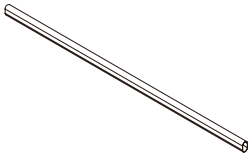NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HINGE SCREW Ø4x15mm SR		40 PCS
2	WOODEN DOWEL Ø8x30mm		42 PCS	11	HANDLE L= 289mm BLK		3 PCS
3	CAM BOLT Ø7x35.5mm SR		18 PCS	12	BOLT M4x28mm BLK		6 PCS
4	CAM LOCK Ø15x12mm SR		18 PCS	13	RUBBER Ø 58mm BLK		3 SETS
5	SCREW Ø4.5x42mm SR		24 PCS	14	DOOR CATCH		1 PC
6	PLASTIC FEET Ø15mm		6 PCS	15	BACK PANEL SUPPORT		6 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	16	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
8	ROD HOLDER		2 PCS	17	STICKER Ø20mm		3 PCS
9	HINGE Ø35mm SR		9 PCS	18	HANGING ROD L= 740mm SR		1 PC

 
 
 
 
 
 
Z8, Z9, Z11, Z13, Z18 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **950448LTE**

STEP 1

COASTER
FINE FURNITURE

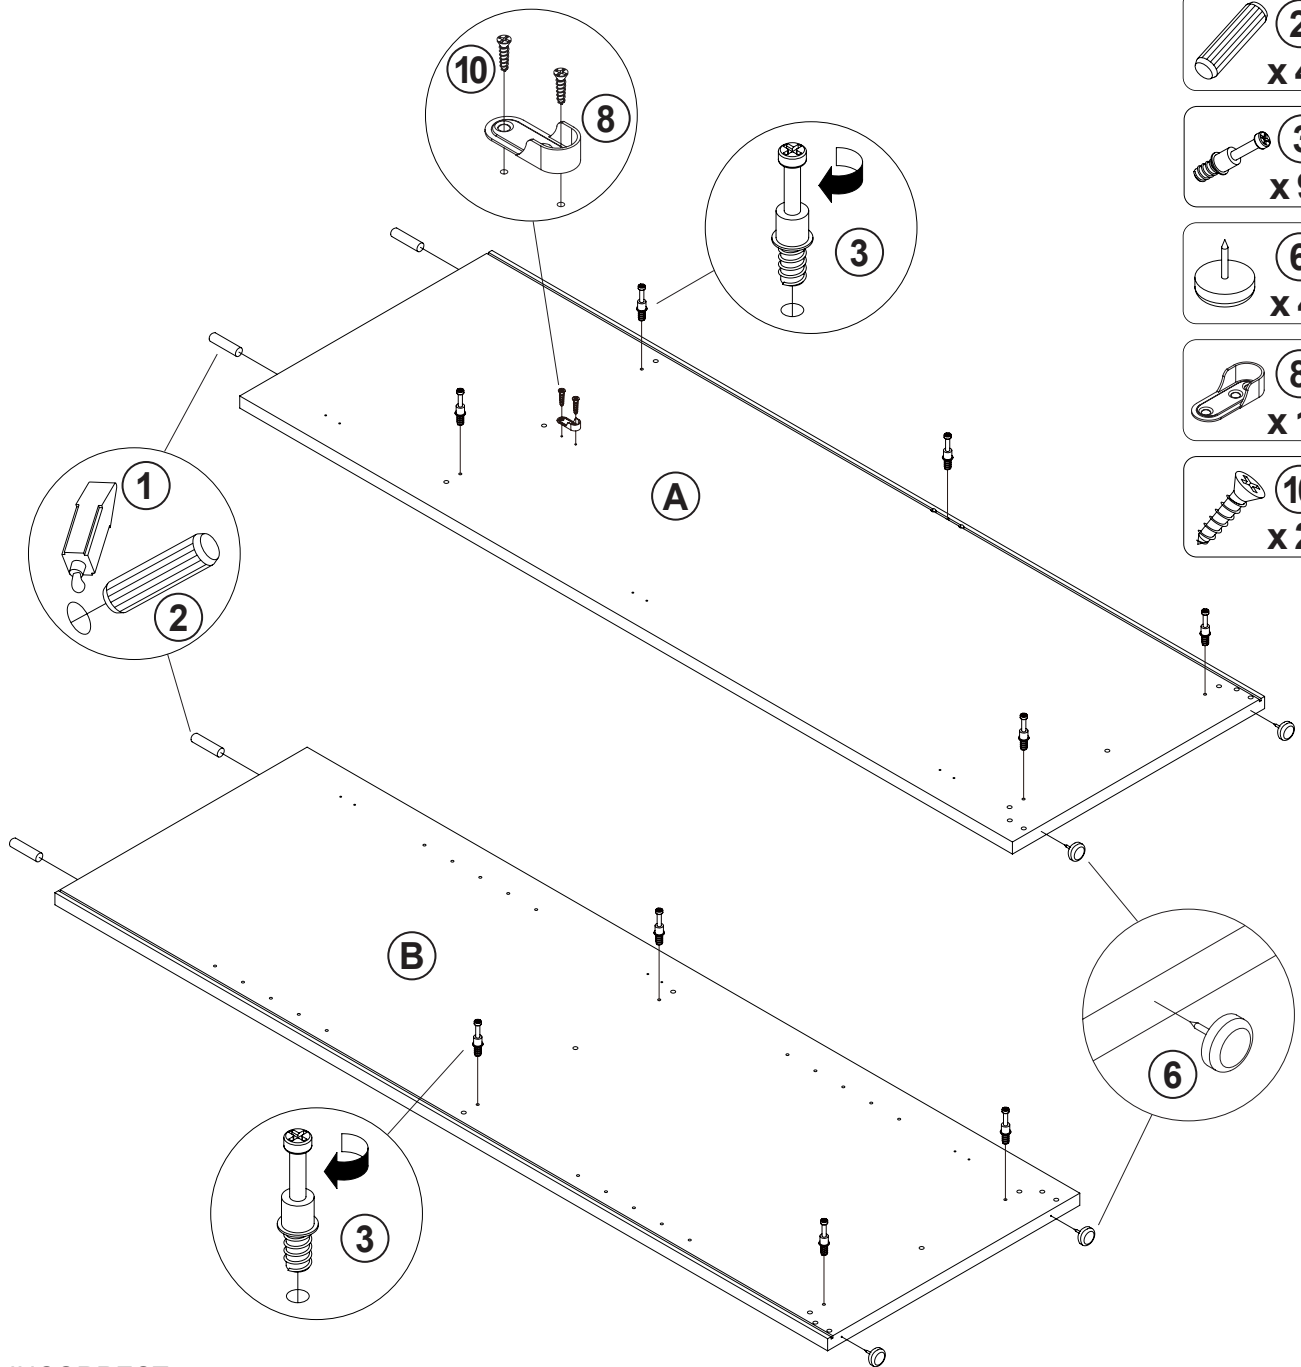






INCORRECT
CORRECT

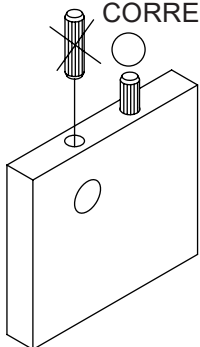 


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **950448LTE**

     
STEP 2

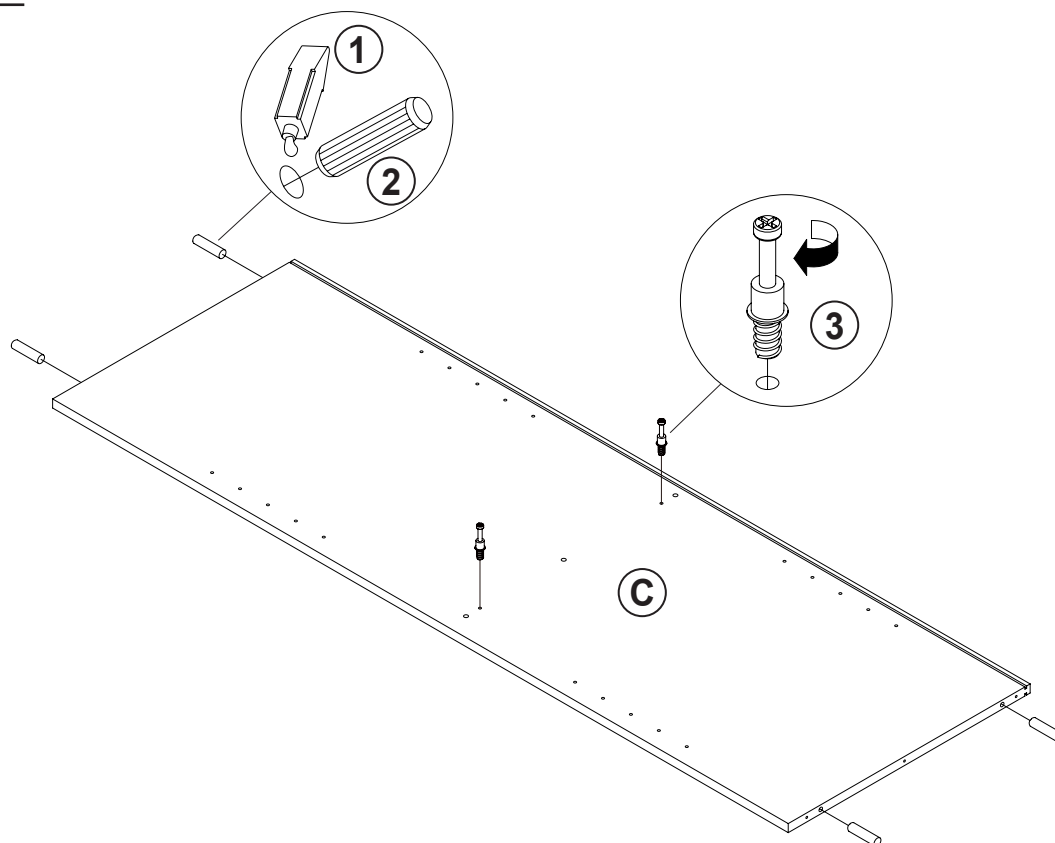

the reverse side

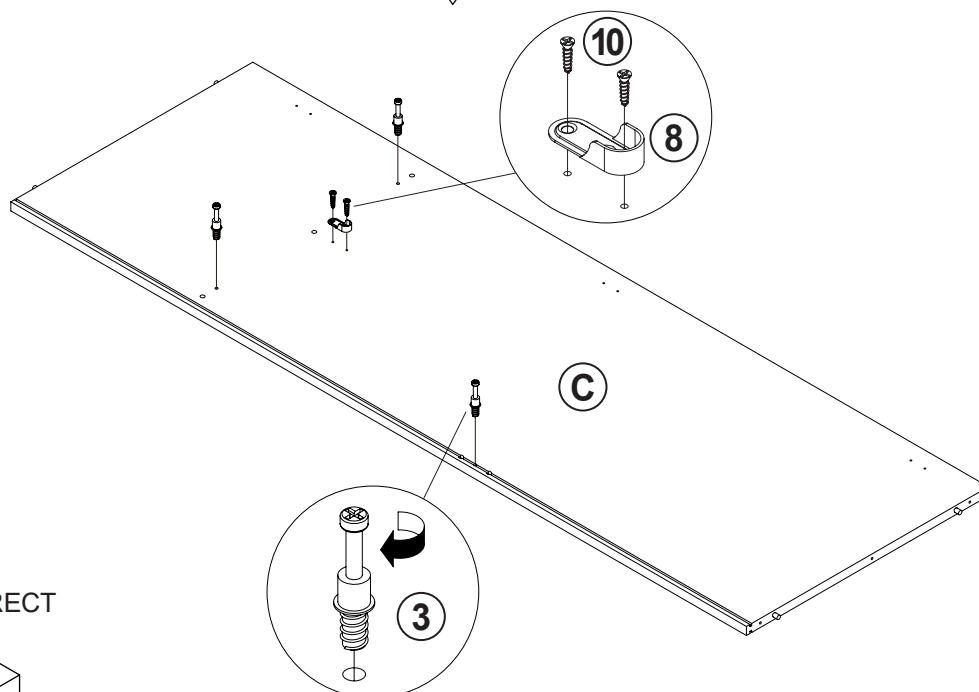 



INCORRECT
CORRECT

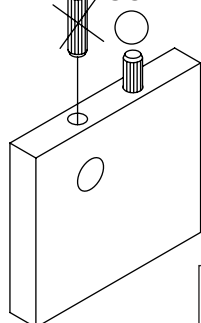 




Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **950448LTE**

  STEP 3

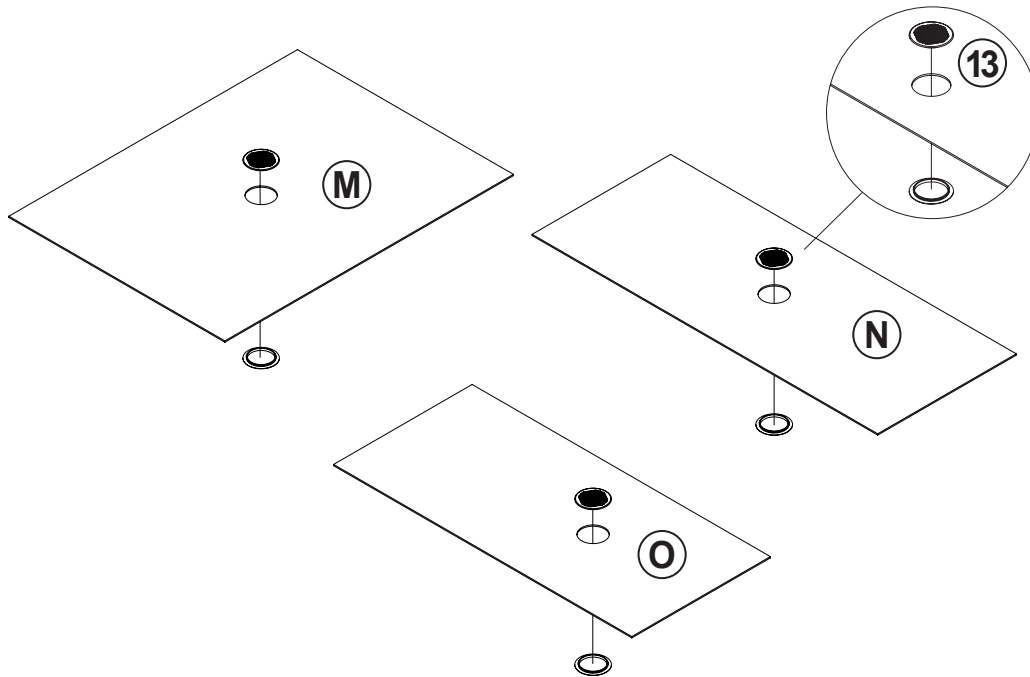

  
 
STEP 4

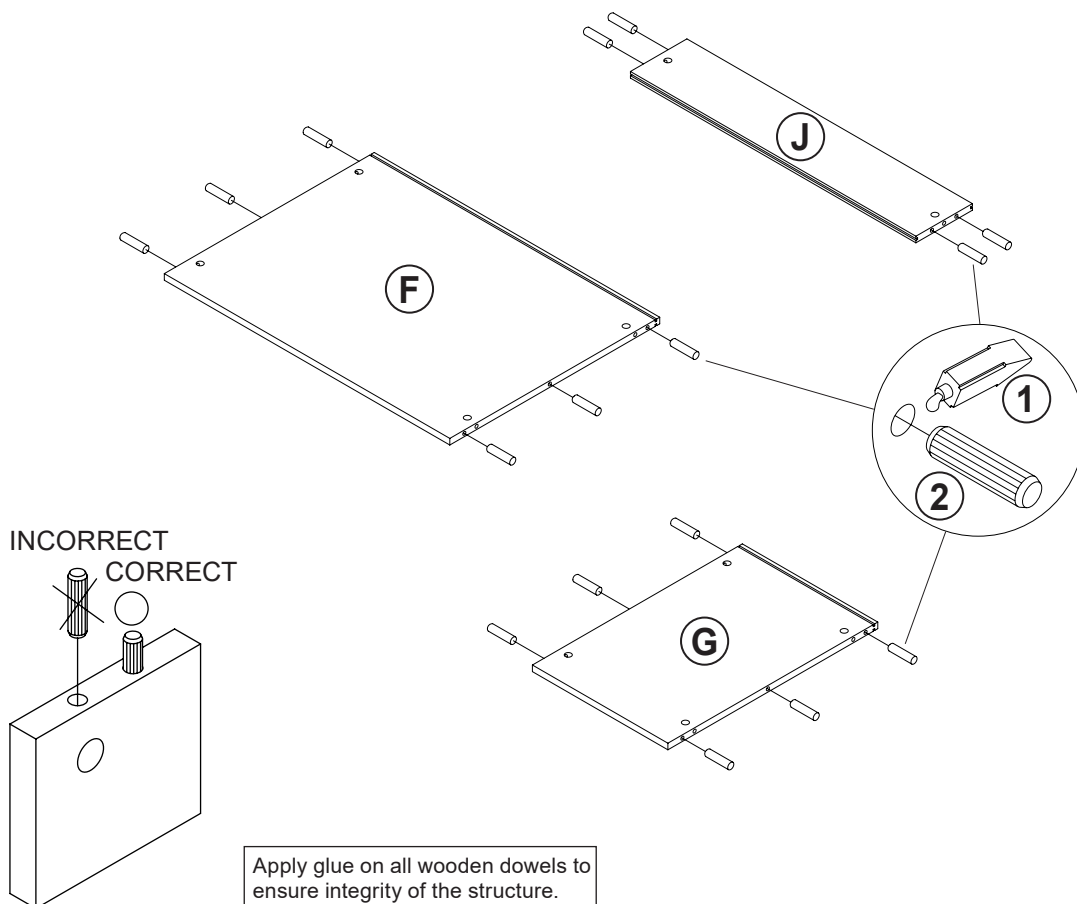





ITEM: **950448LTE**

COASTER
FINE FURNITURE

  
STEP 5

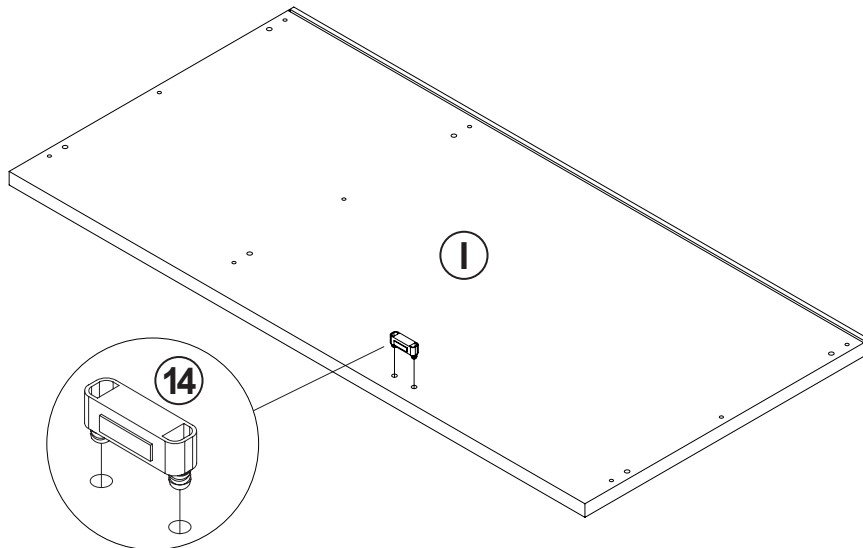

    STEP 6

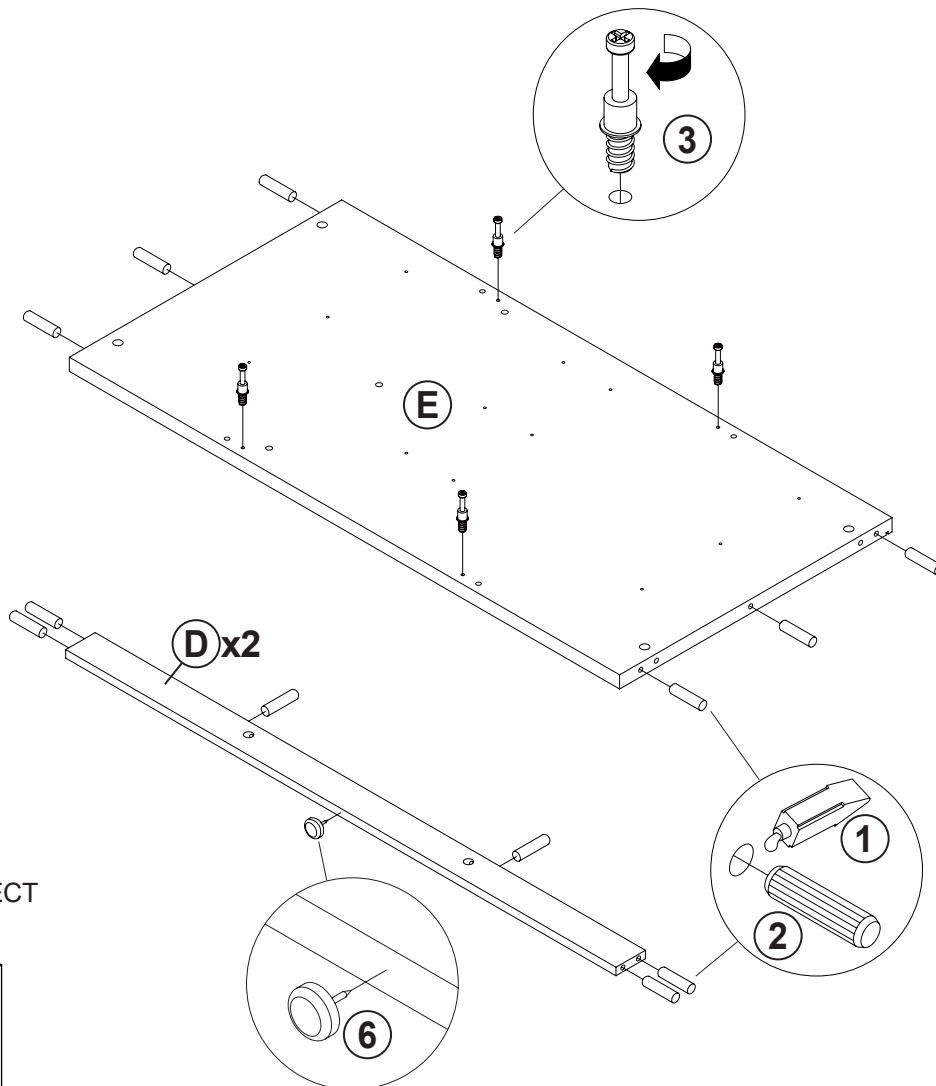

INCORRECT
CORRECT



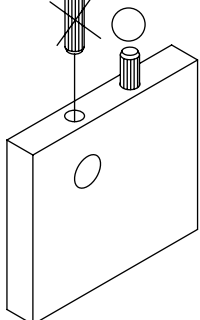 


Apply glue on all wooden dowels to ensure integrity of the structure.



ITEM: **950448LTE**

COASTER
FINE FURNITURE

   STEP 7

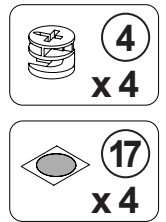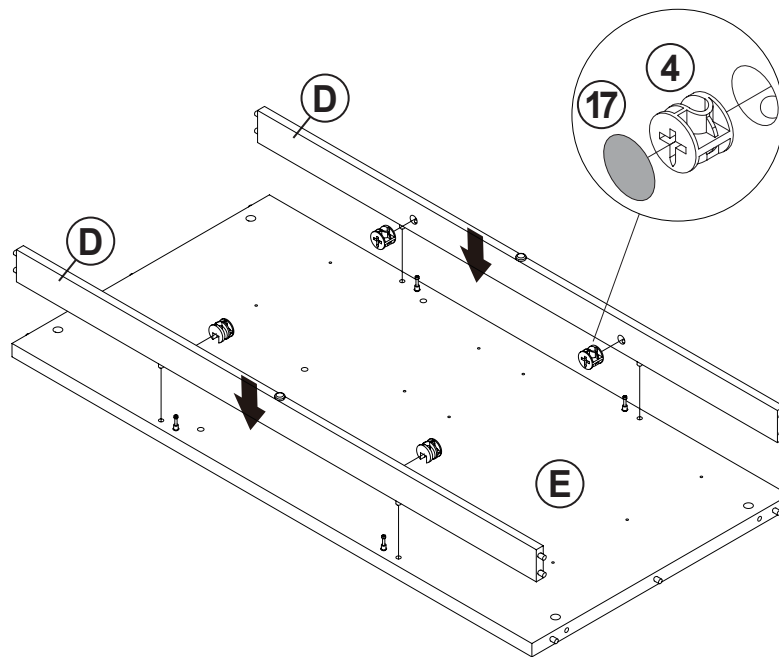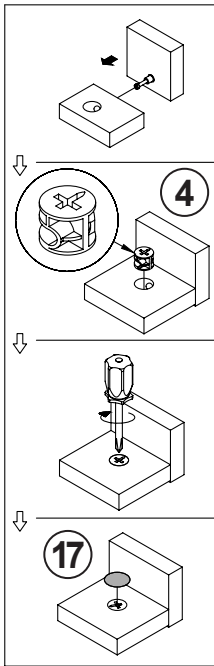


  STEP 8

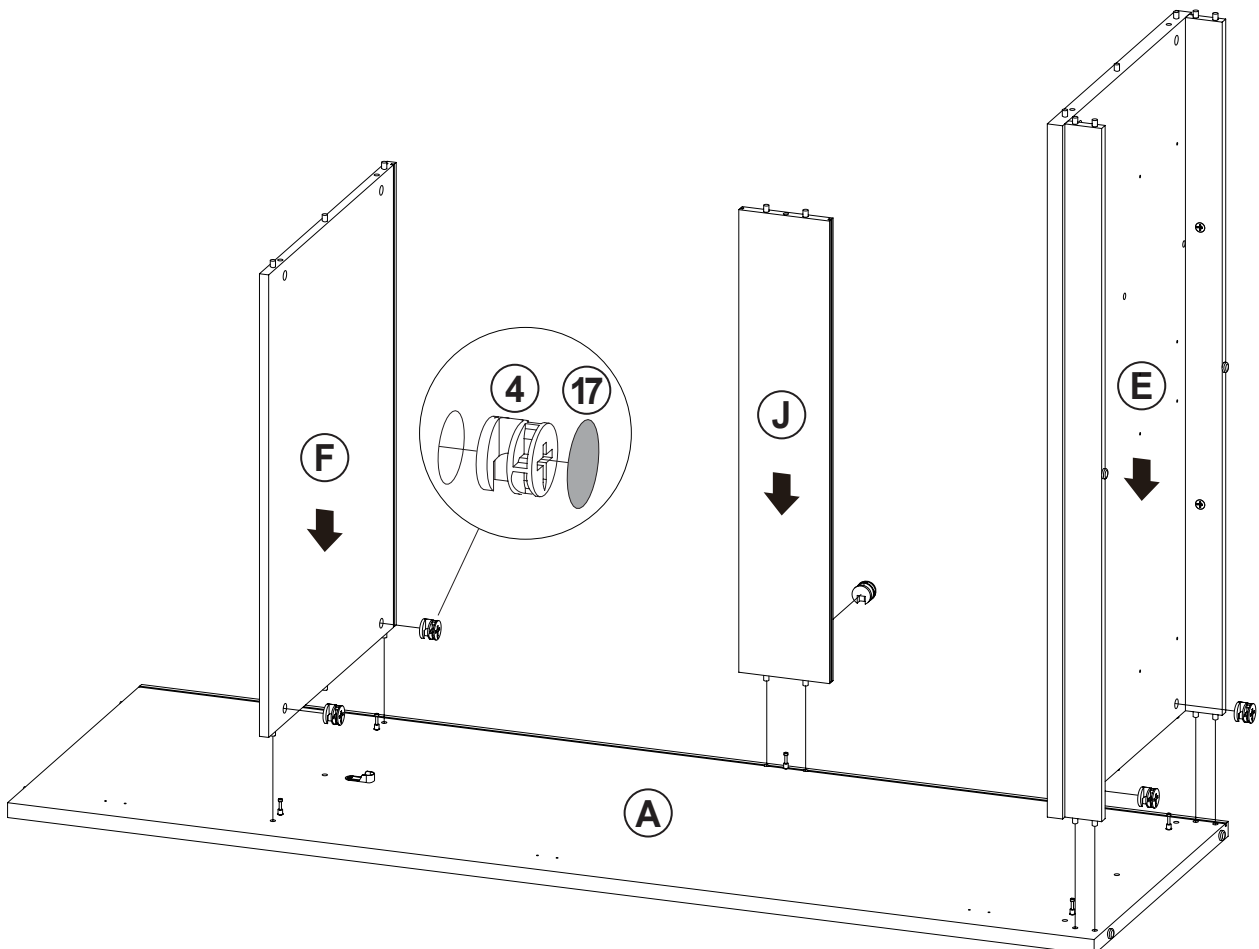


ITEM: **950448LTE**

 STEP 9

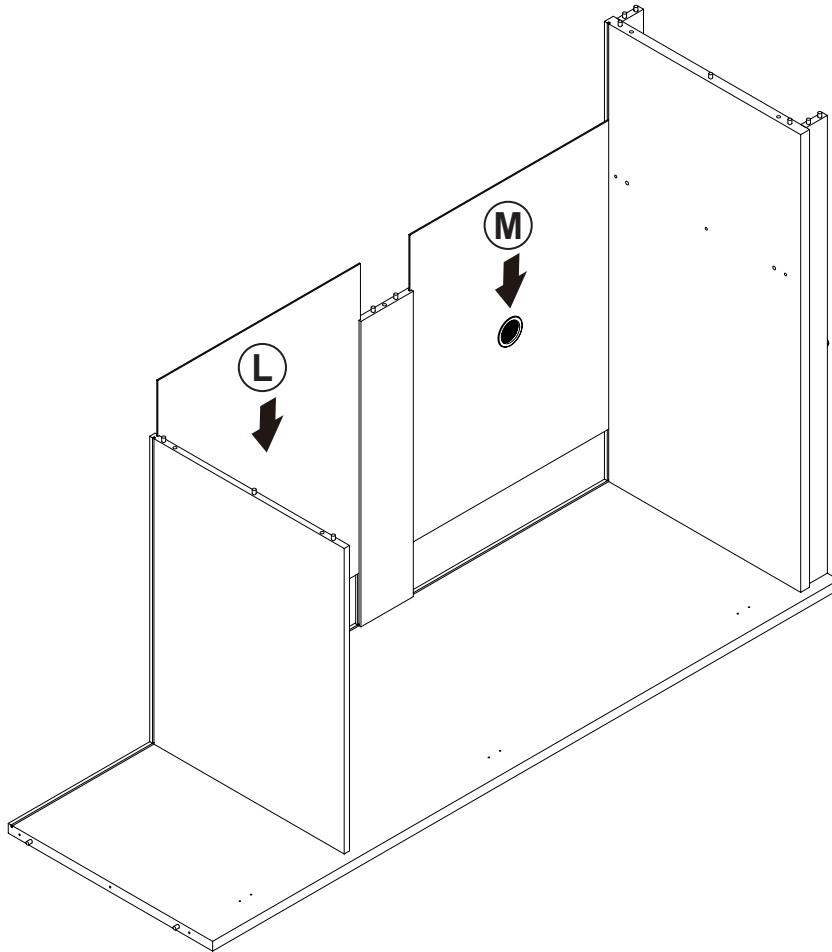

 
STEP 10

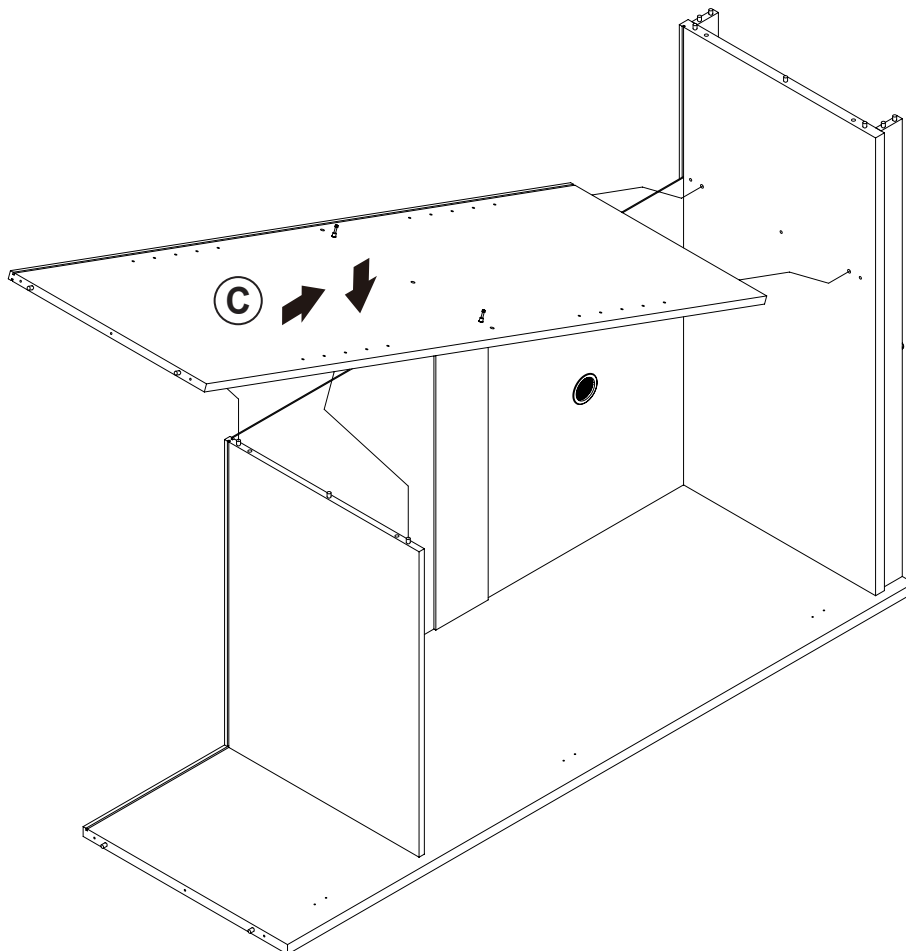


ITEM: **950448LTE**

COASTER
FINE FURNITURE

 STEP 11

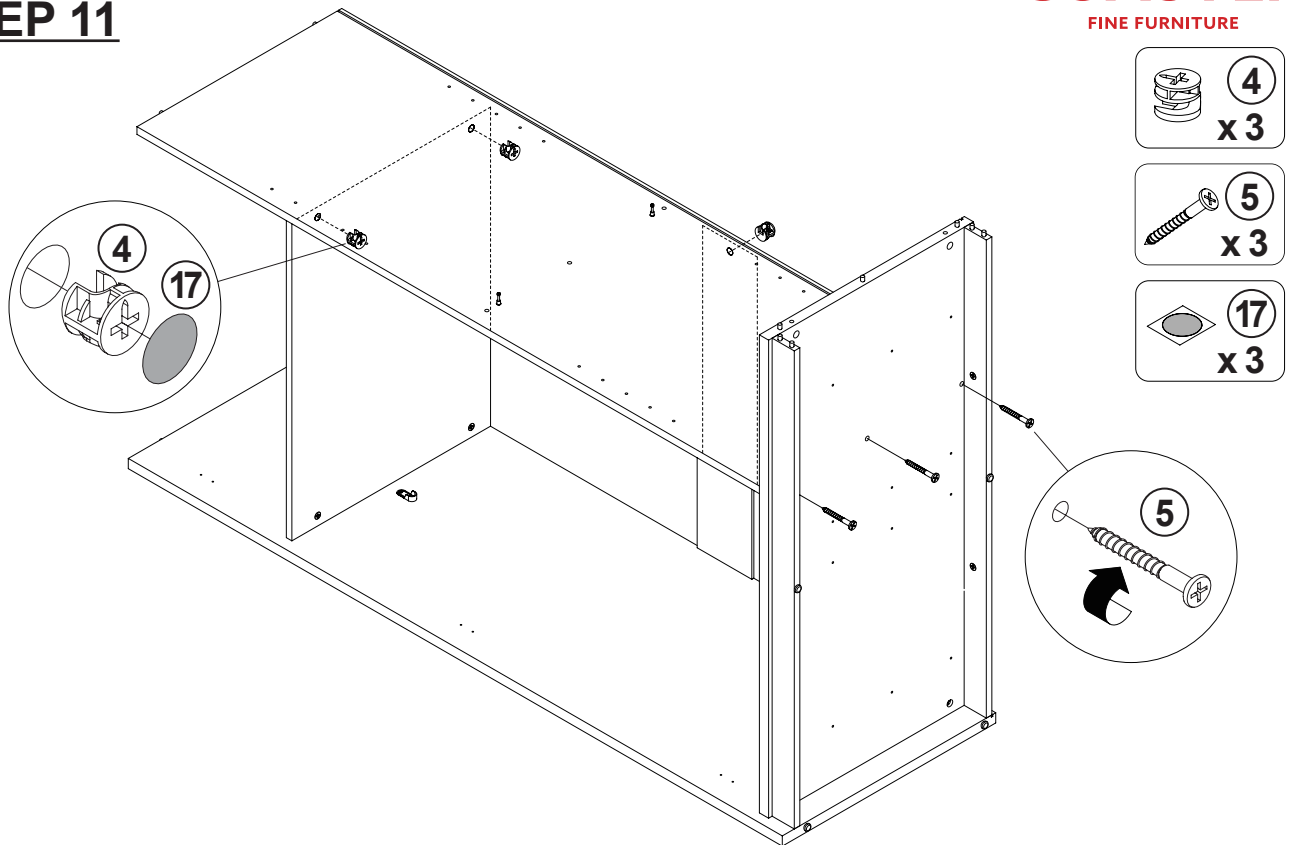



 
STEP 12

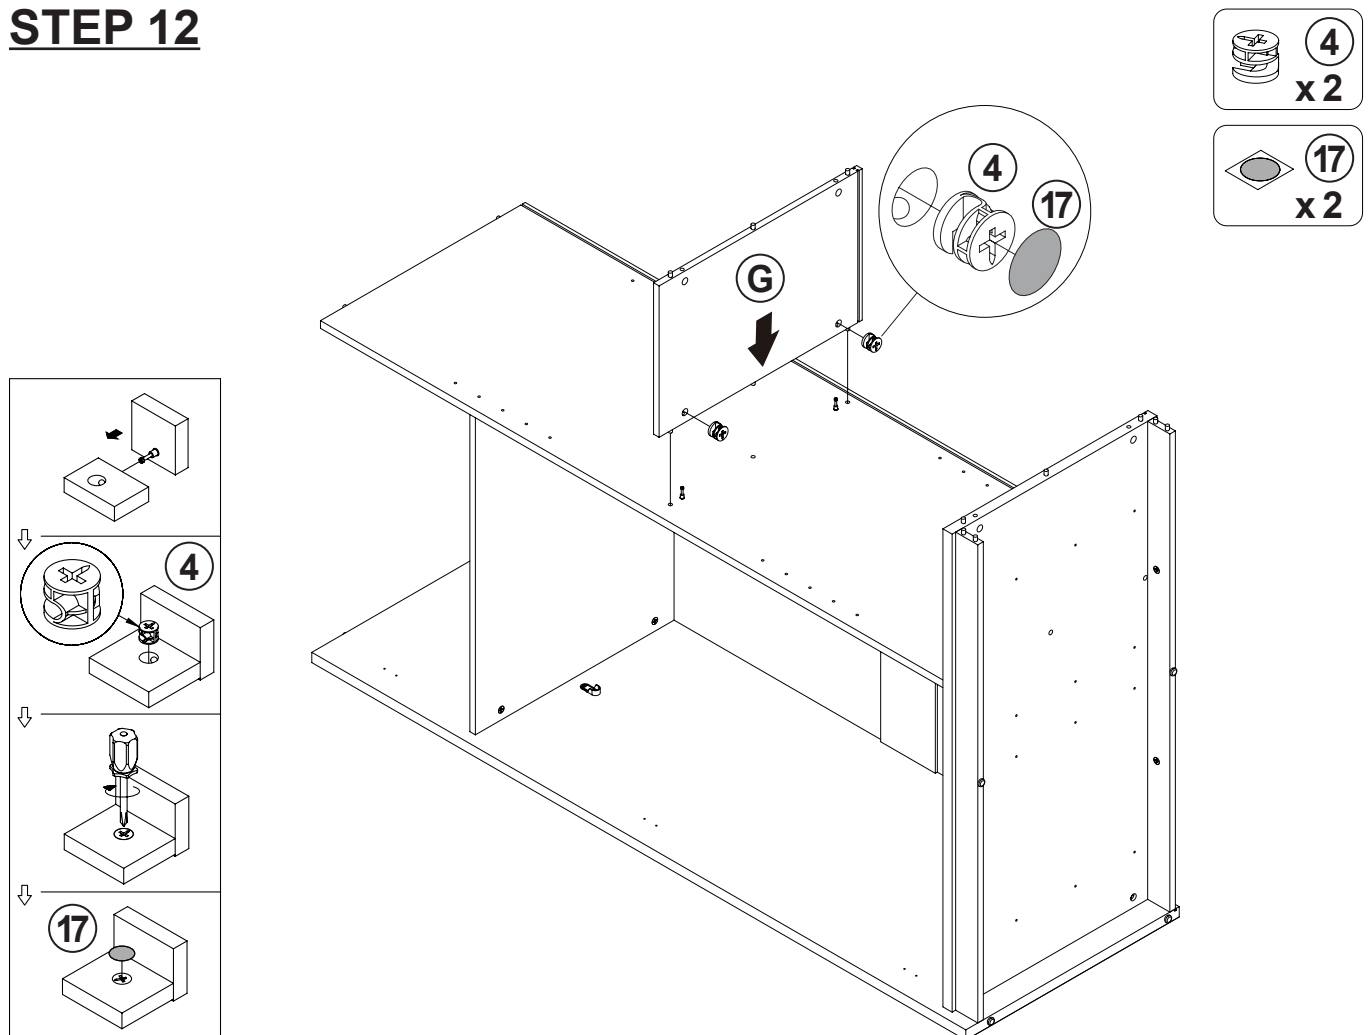



ITEM: **950448LTE**

STEP 13

   COASTER
FINE FURNITURE

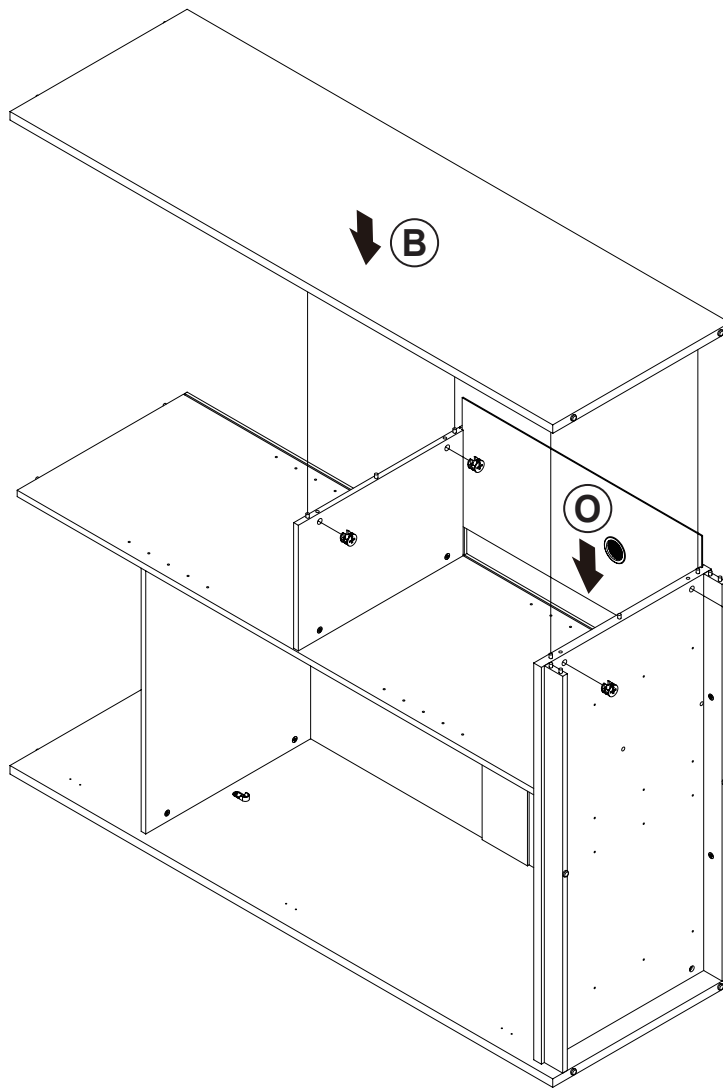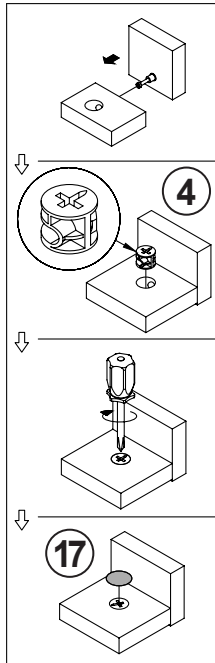

  
STEP 14

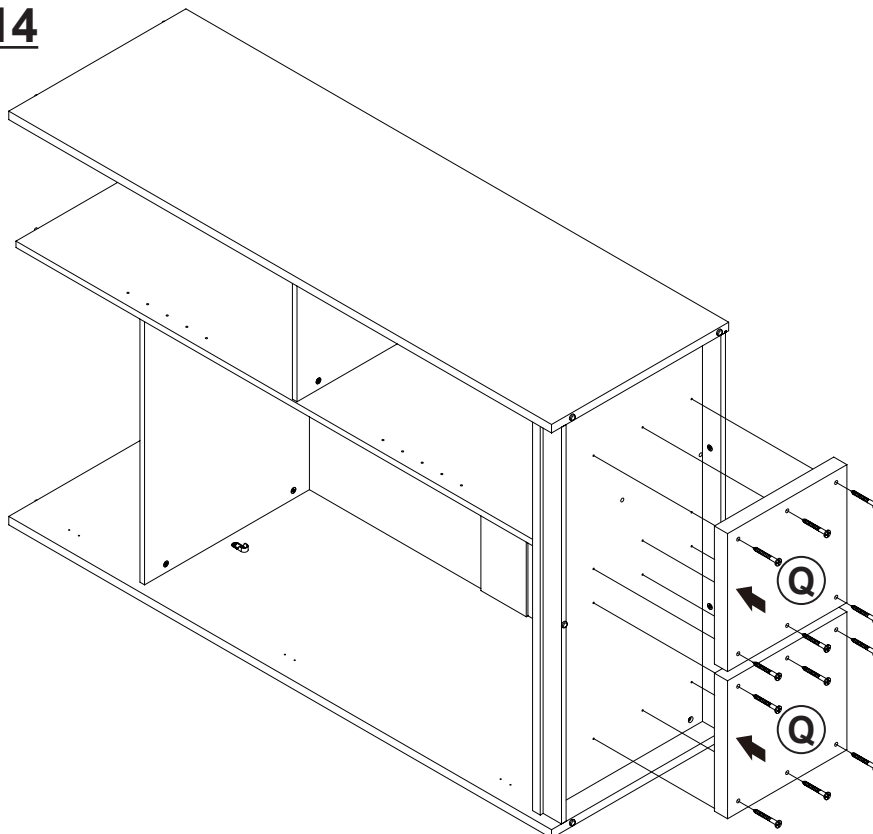


ITEM: **950448LTE**

COASTER
FINE FURNITURE

 STEP 15

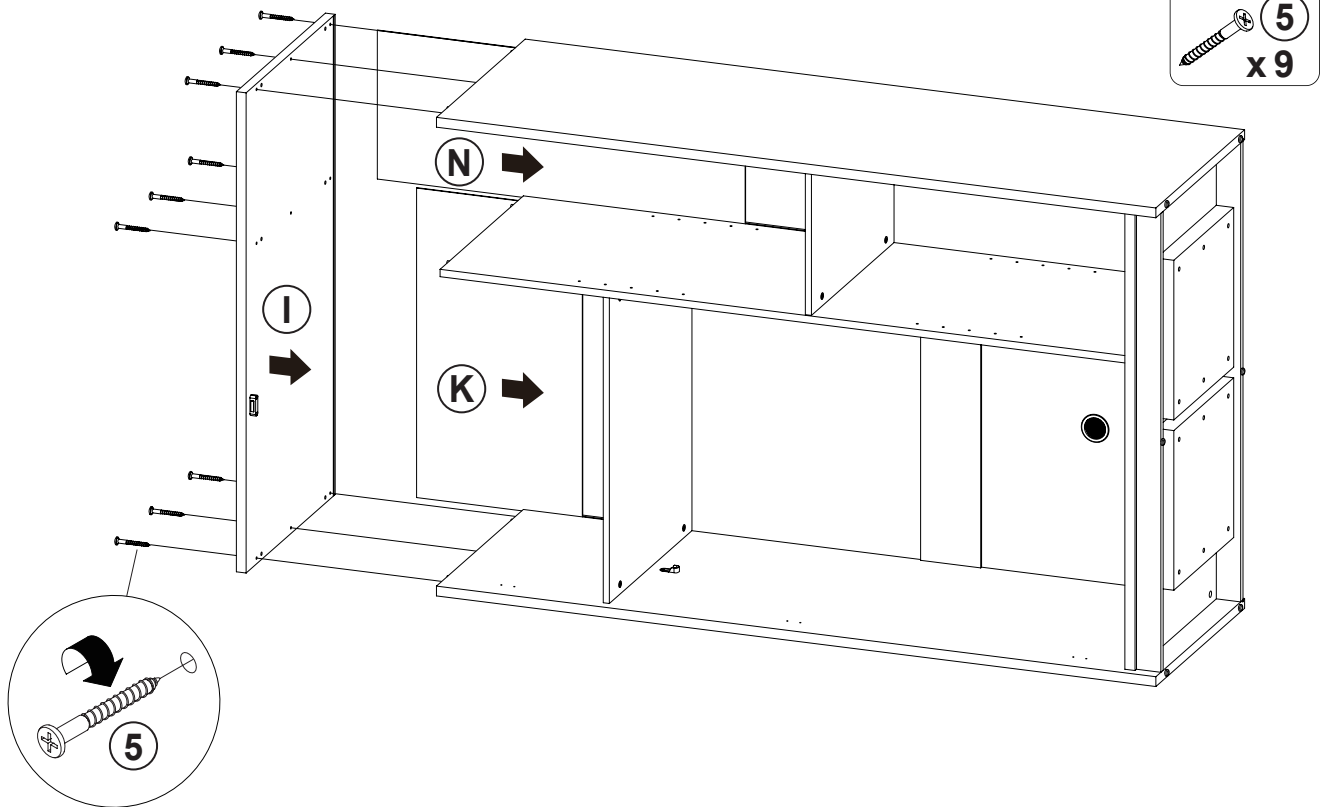





 
STEP 16

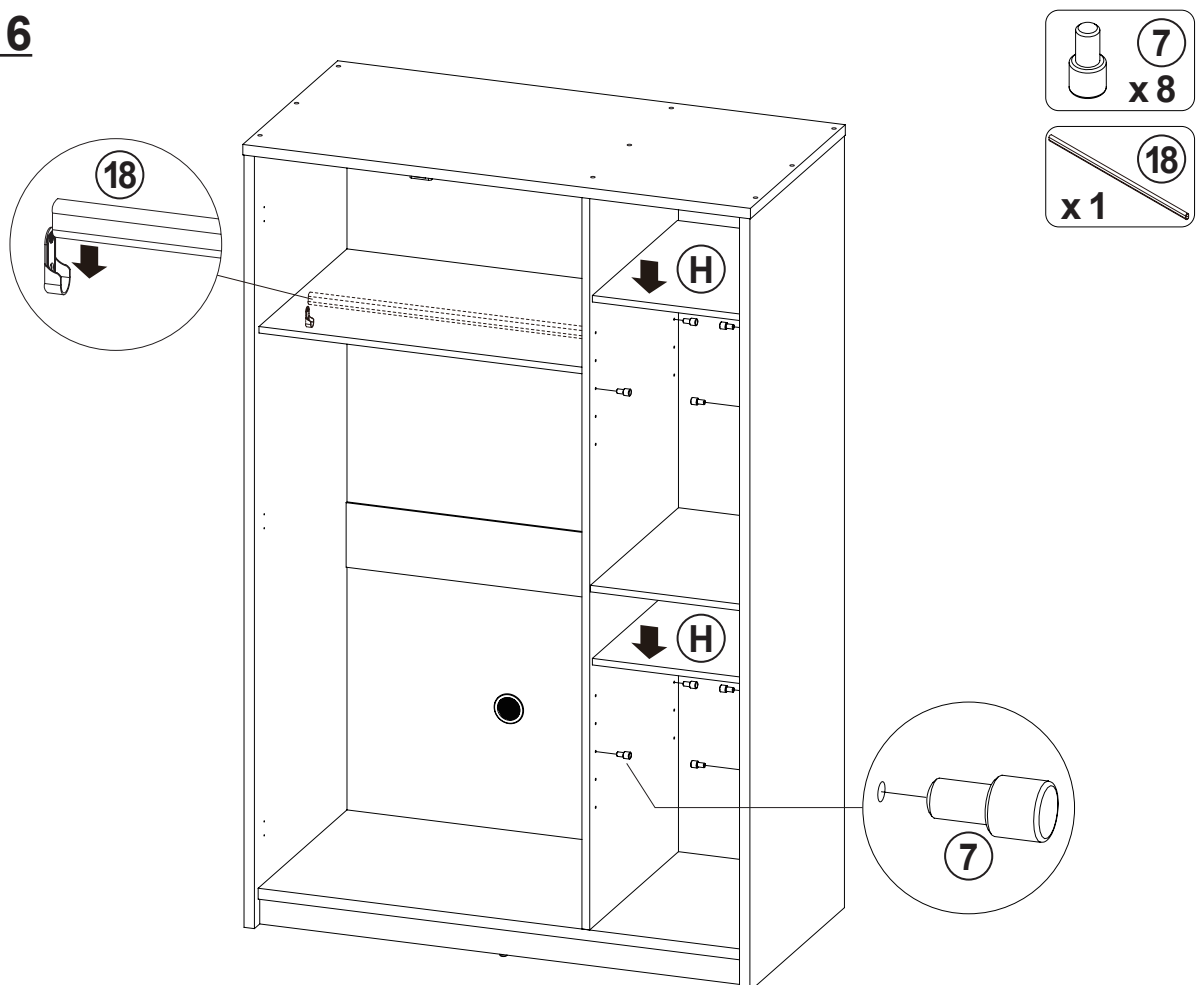



ITEM: **950448LTE**

COASTER
FINE FURNITURE

     STEP 17

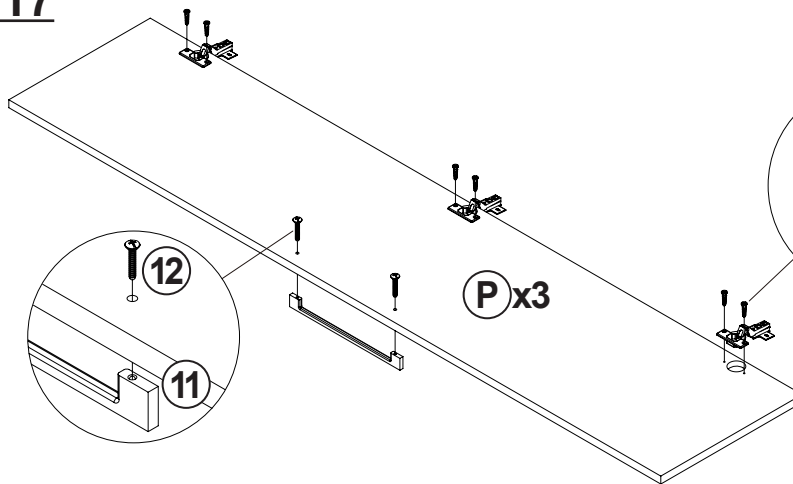




 
 
STEP 18

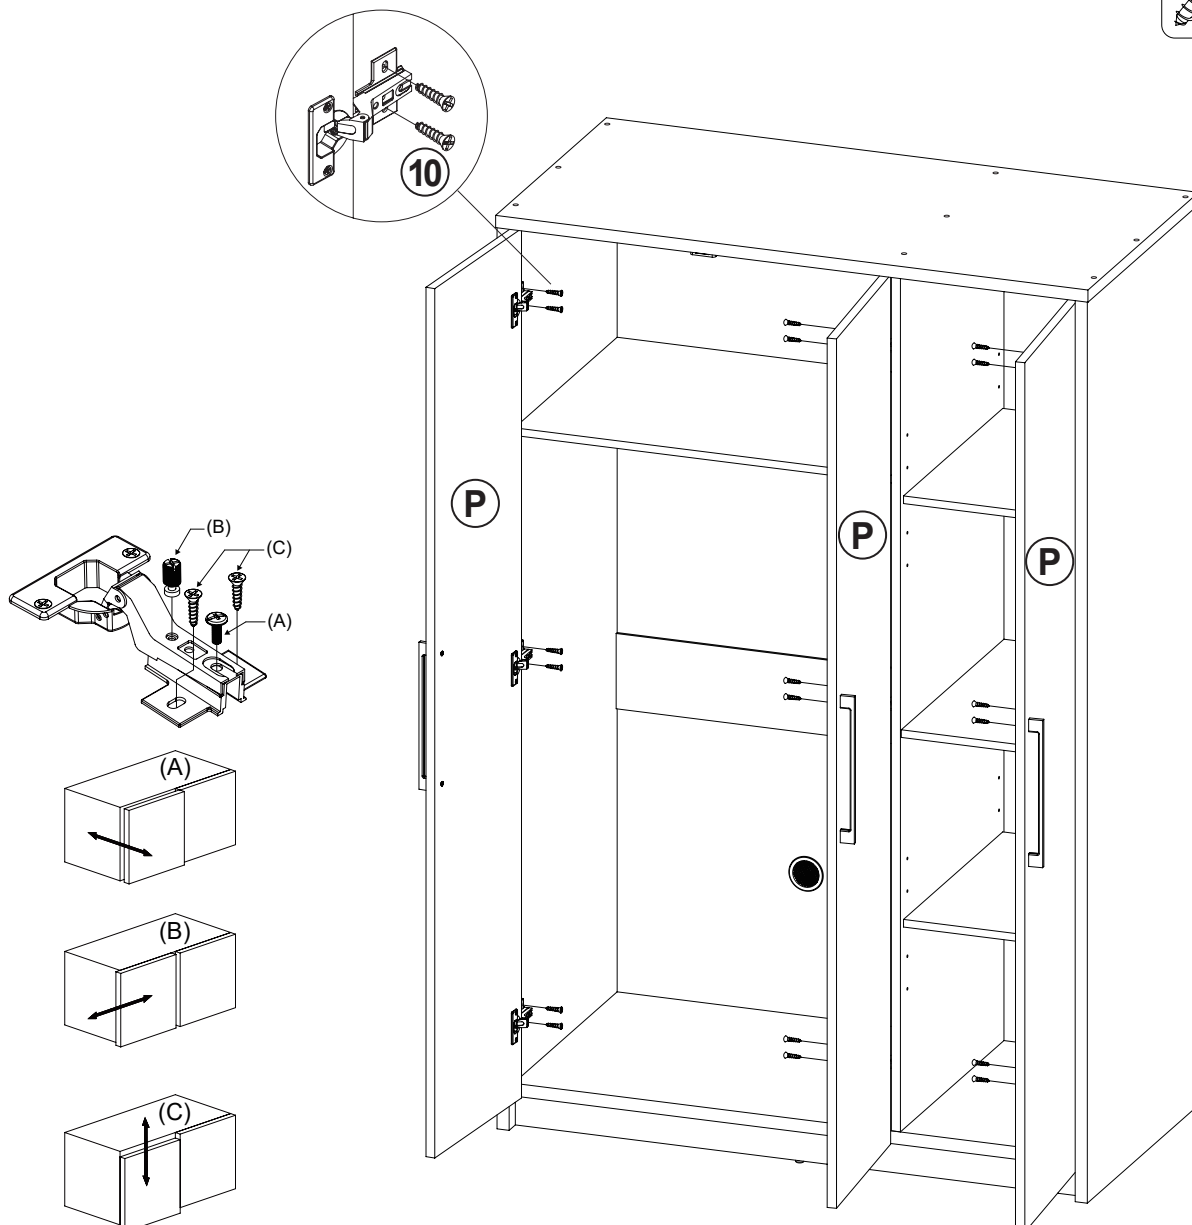


ITEM: **950448LTE**


STEP 19

     COASTER
FINE FURNITURE

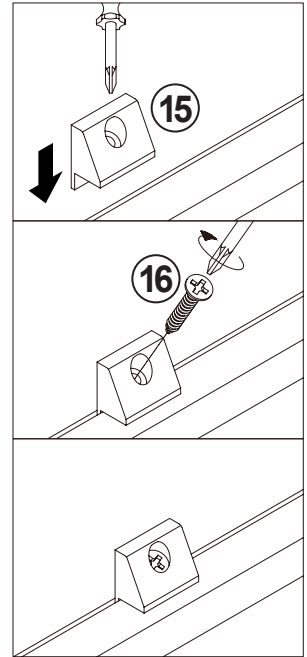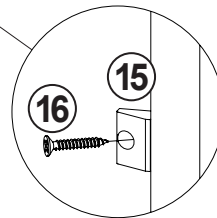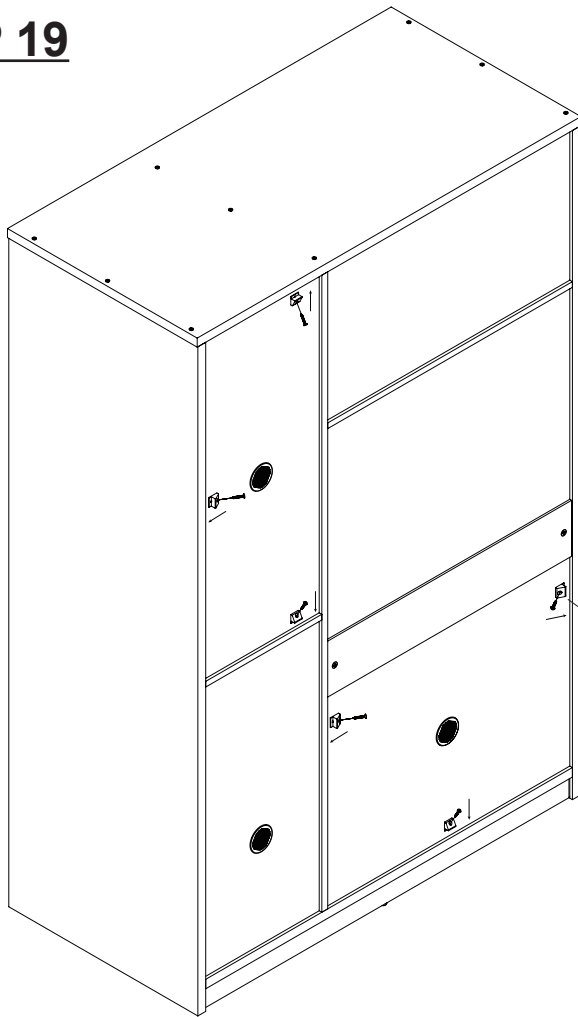

  STEP 20
COMPLETE

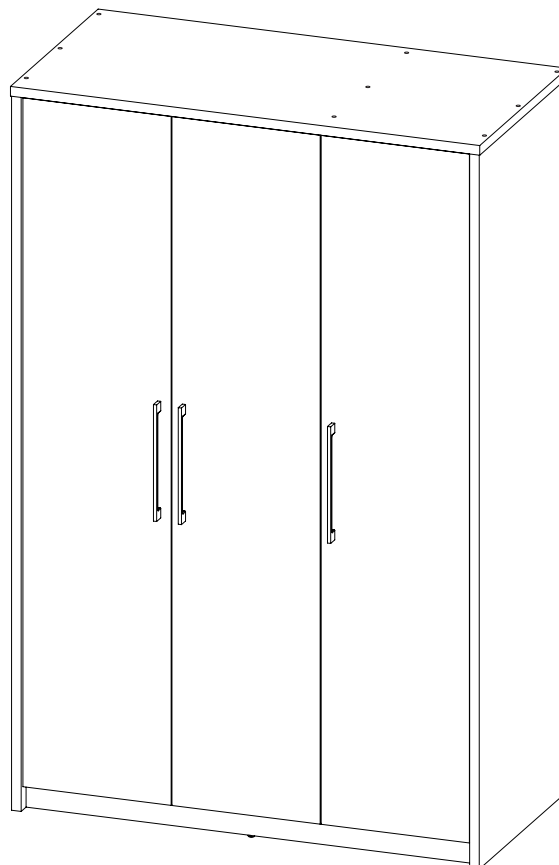

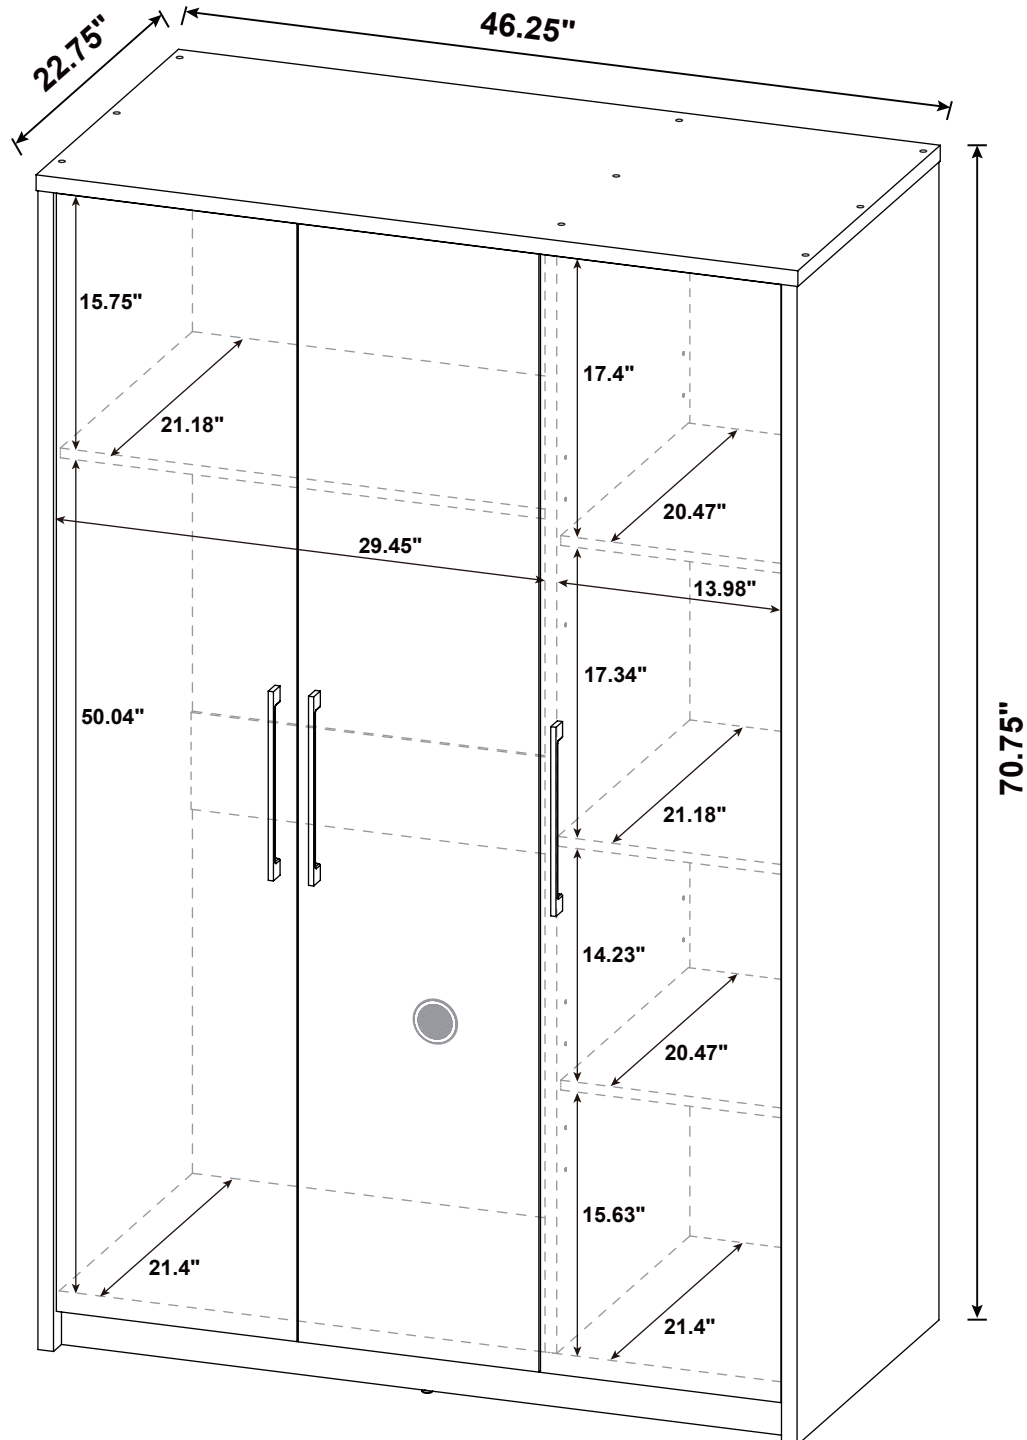

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

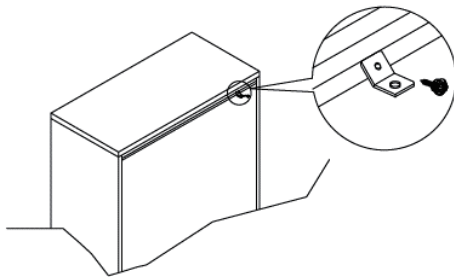**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

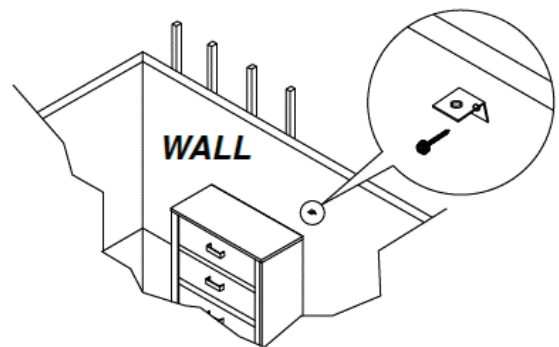**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

