

COASTER[®]
FINE FURNITURE

600187ii

ROCKER CHAIR

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



www.coastercompany.com


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.




 


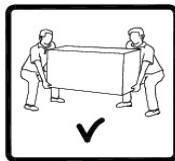



Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




 




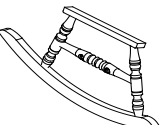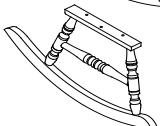

ASSEMBLY TIME 10 MINUTES


PARTS IDENTIFICATION

A		CHAIR BACK	1PC	D		WOOD SEAT	1PC
B1		LEFT ARM REST	1PC	E		LONG STRETCHER	1PC
B2		RIGHT ARM REST	1PC	F		SHORT STRETCHER	1PC
C1		LEFT LEG	1PC				
C2		RIGHT LEG	1PC				


HARDWARE IDENTIFICATION

1		LONG BOLT	8PCS	6		ALLEN WRENCH	1PC
2		SHORT BOLT	9PCS	7		BARREL NUT	6PCS
3		LOCK WASHER	17PCS	8		WOOD PLUG	9PCS
4		BIG FLAT WASHER	2PCS				
5		SMALL FLAT WASHER	15PCS				


STEP 1

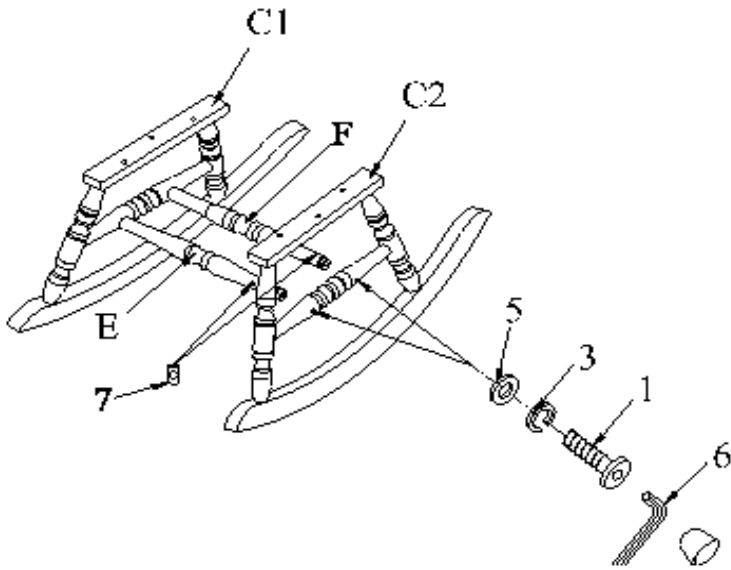


STEP 2

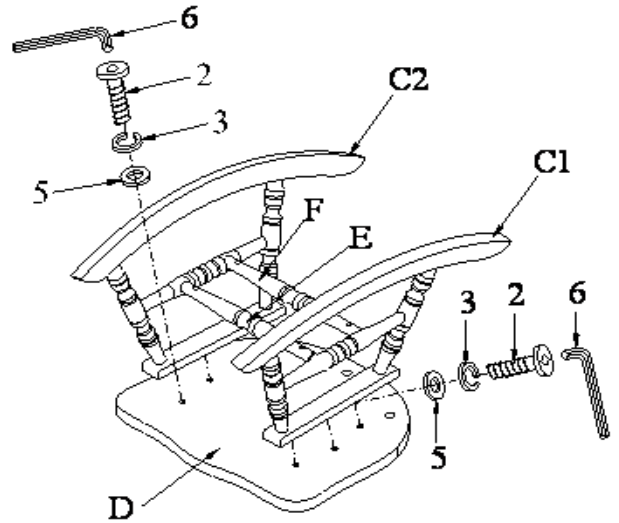

STEP 3

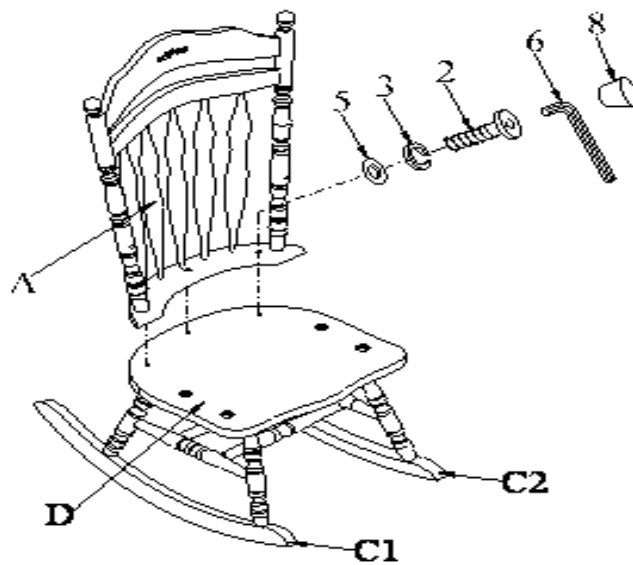

STEP 4

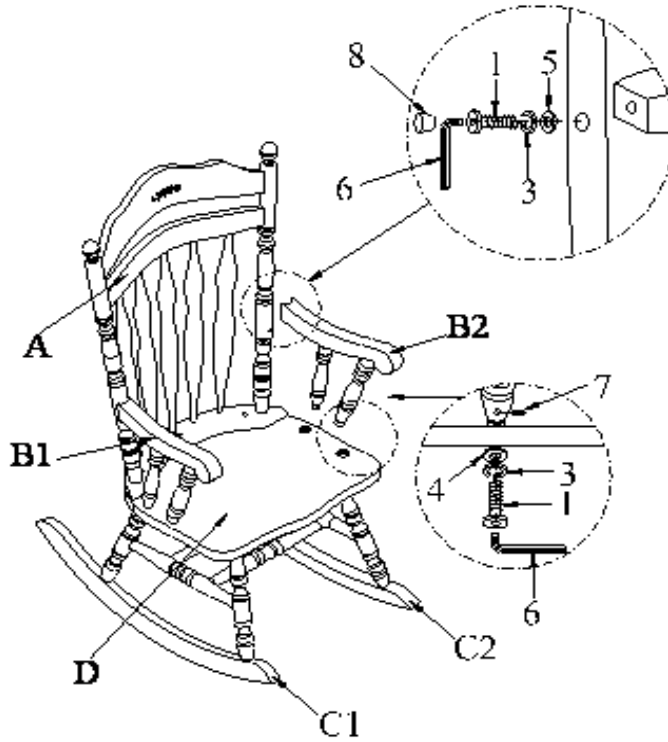

STEP 5
Complete

