

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

702587 END TABLE

REVISION 0: 11/10/2017 REVISION 1: 10/17/2019

PAGE 1 OF 6

ITEM: 702587 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 35 MINUTES

PARTS IDENTIFICATION


A	TOP FRAME						1PC
В	LEG						4PCS
C	TOP GLASS						1PC
HARDWARE IDENTIFICATION							
1	ALLEN WRENCH (4mm)		1PC	4	FLOOR LEVELER (1/4" x 5/8")	J	4PCS
2	ALLEN BOLT (1/4" x 2")	@www.	4PCS	5	SUCTION CUP (8mm)	Ģ	4PCS
3	SMALL ALLEN BOLT (1/4" x 1/2")	$\boldsymbol{\theta}_{m_j}$	4PCS	6	CAP (20 x 40 mm)		4PCS
PAGE 2 OF 6 COASTERFURNITURE.COM							

ITEM: 702587 ASSEMBLY INSTRUCTIONS




STEP 1

Do not tighten until each step is completed or instructed.

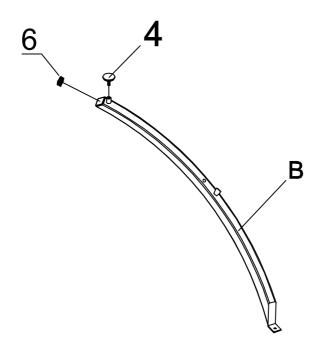

STEP 2

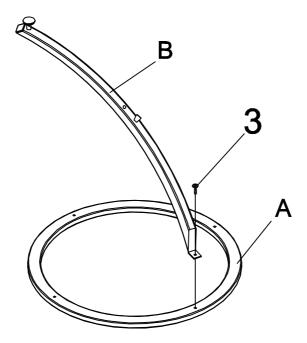


PAGE 3 OF 6


ITEM:702587 ASSEMBLY INSTRUCTIONS



STEP 3

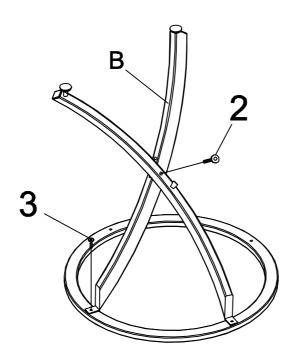

STEP 4

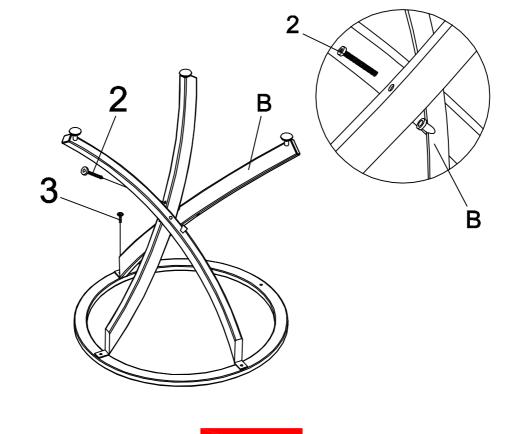


PAGE 4 OF 6


ITEM:702587 ASSEMBLY INSTRUCTIONS



STEP 5

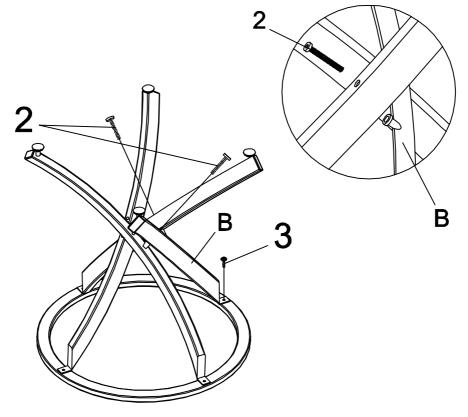

STEP 6

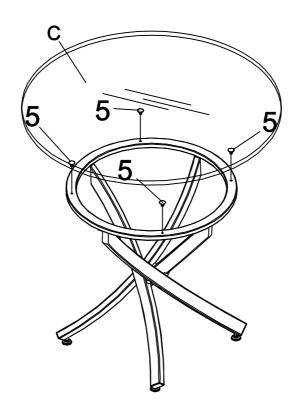


COMPLETE



PAGE 5 OF 6

ITEM: 702587 ASSEMBLY INSTRUCTIONS



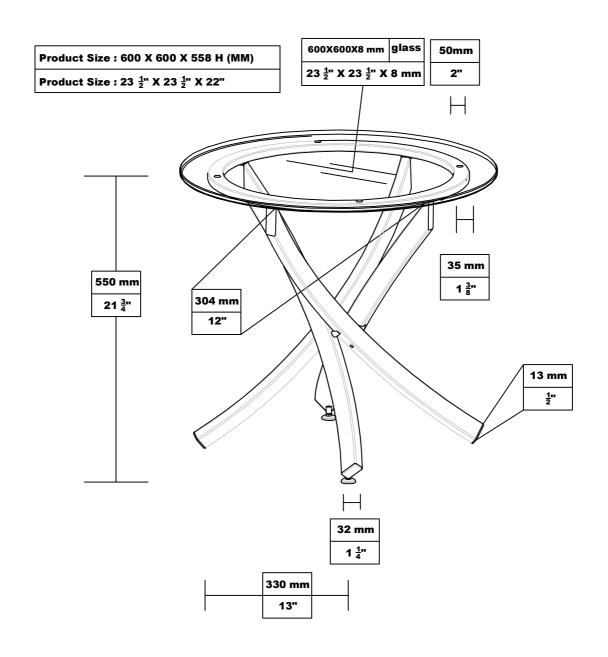

Note: Dimension tolerance ±5%