

COASTER[®]
FINE FURNITURE

108441

DINING TABLE

**ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE**



www.coastercompany.com


ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


**Warning!!**

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

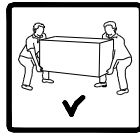


ASSEMBLY TIME PER UNIT: 30 MINUTES

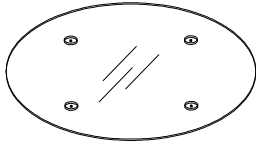


 

 
B1: TOP**PARTS IDENTIFICATION**

A			
TOP GLASS		1PC	

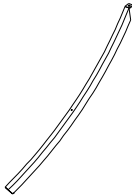B2: BASE


B			
LEG		4PCS	

HARDWARE PACKAGE


Z	DESCRIPTION	FIGURE	Q'TY
1	SHORT BOLT (5/16"x10mm)		4PCS
2	LONG BOLT (5/16"x63mm)		4PCS
3	LEVELER (5/16"x18mm)		4PCS
4	CAP (25x50mm)		4PCS
5	WASHER (φ 19mm)		4PCS
6	ALLEN WRENCH (4mm)		1PC

Hardware pack is located in 106440B2


STEP 1

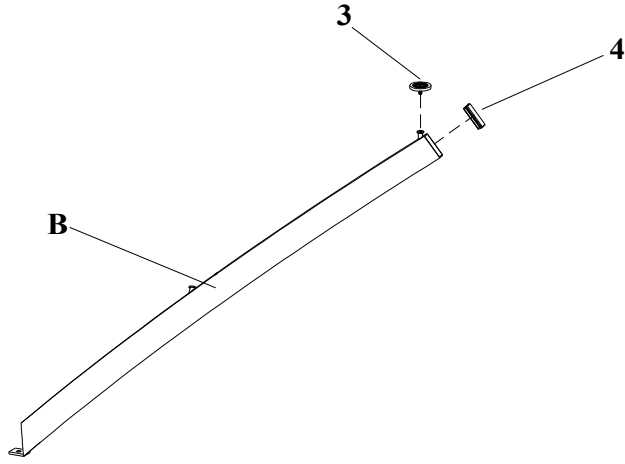


STEP 2

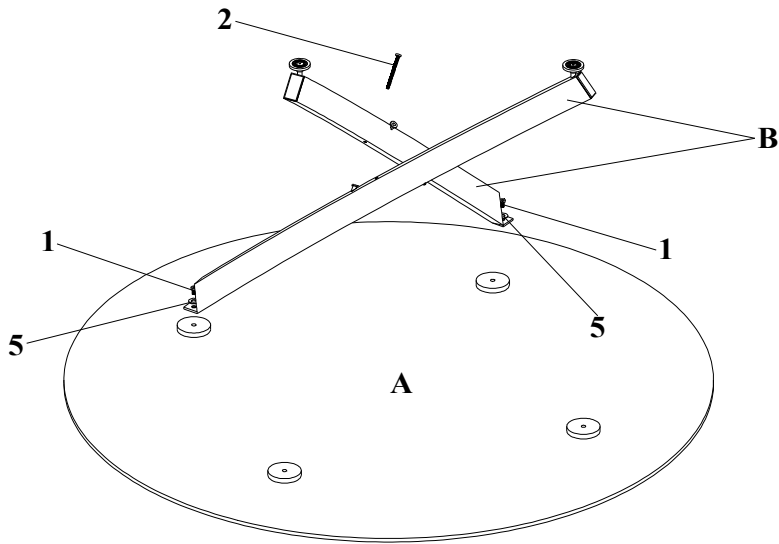

STEP 3

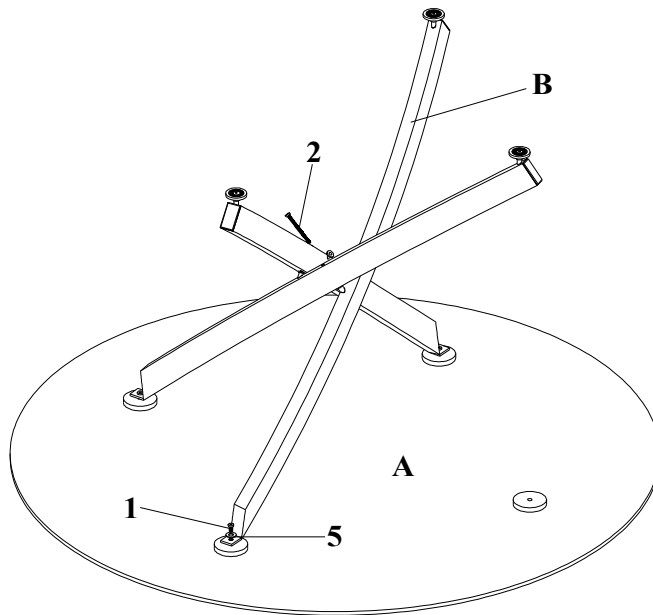

STEP 4

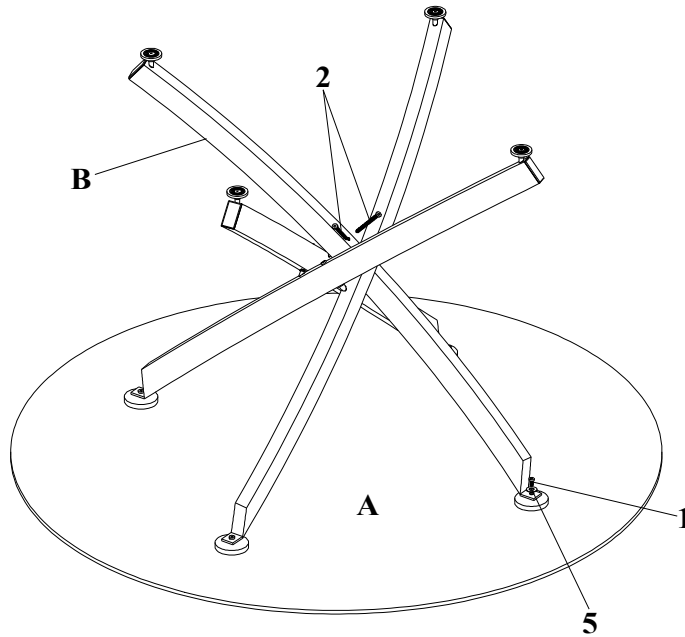

FINISH

