


**ASSEMBLY INSTRUCTIONS  
COASTER FINE FURNITURE**

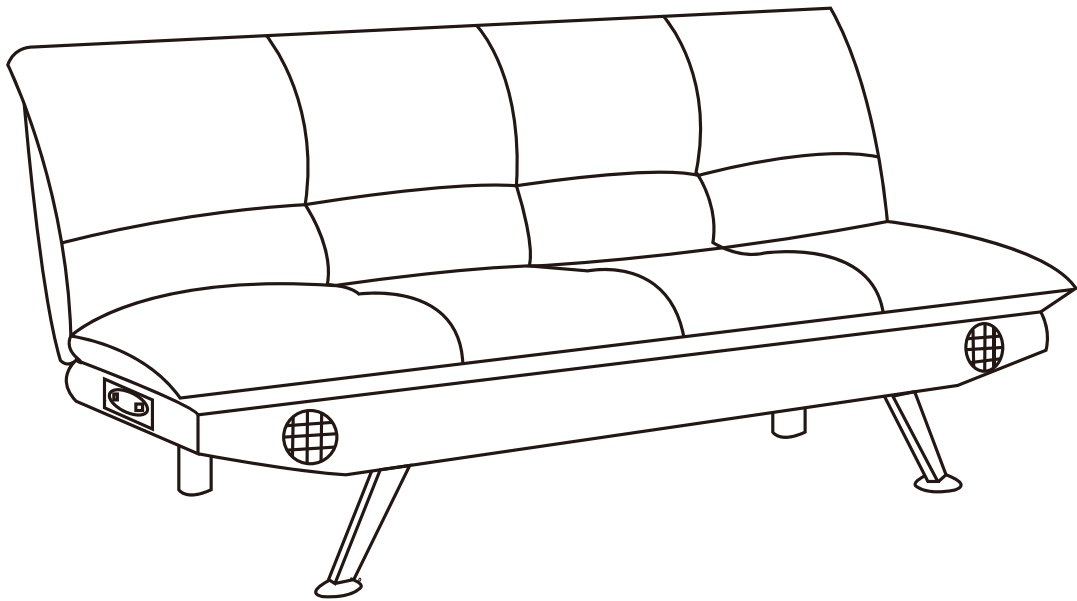

*Fine Furniture for every stage of life*

**500046  
SOFA BED**

ITEM: 500046

## ASSEMBLY INSTRUCTION


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

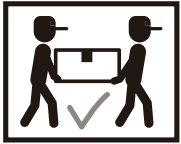


ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION

 
A BODY



1 PC

## HARDWARE IDENTIFICATION

 Z01 FRONT LEG



2 PCS

Z02 BACK LEG



2 PCS

Z03 BOLT  
(5/16x1")



 
8 PCS

Z04 ALLEN WRENCH  
(M5)





1 PC

Z05 SCREW(SPARE)  
(1")




20 PCS

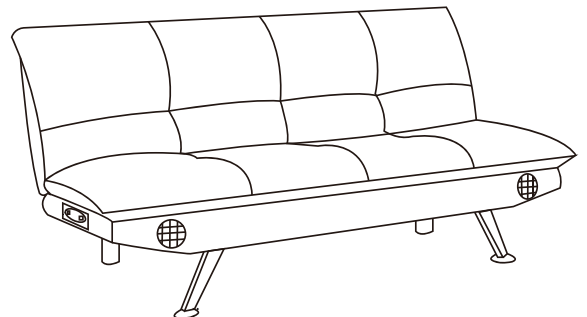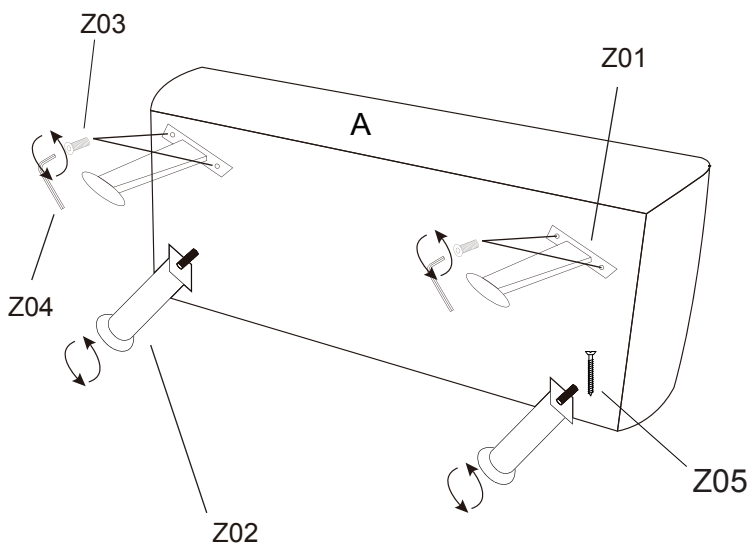

## Bluetooth Speaker Instruction

### CONTROL PANEL MENU :

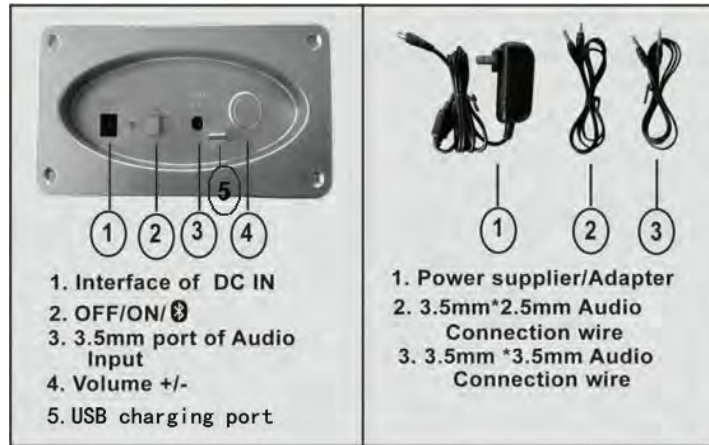

- 1 Connect the DC-IN power adapter to wall socket
- 2 Turn the switch from Off to Bluetooth
- 3 Enable the Bluetooth function in your digital device
- 4 Search for " GS06 " in the list of Bluetooth devices
- 5 Pair up with " GS06 "
- 6 Start playing your audio

To use the Auxiliary function, switch from Off to On, and then connect the Auxiliary Audio wire to the furniture and digital device, and start playing.

### INTRODUCTION :

- Ⓚ Playing Audio Via Bluetooth : High quality wireless sound for your iPad, iPhone, iPod, computer, PDA or other Bluetooth audio device.
- Ⓚ Playing Audio via Aux : High quality sound for your Smartphone, PC notebook, iPad, CD player or other 3.5mm or 2.5mm audio plug device.


### SPECIFICATIONS :

Power Input : 100-240V 50/60Hz 0.12A  
Power output : +12V 1A  
Rated(MAX.) Input : 7W  
Bluetooth Specifications : Version 2.1  
USB port : 5W

### WARNING :

- Ⓚ Please use the transformer which attached with the product. The different voltage of transformer may damage the device.
- Ⓚ DO NOT open the device. It may cause the short circuit and damage.
- Ⓚ AVOID direct exposure to sunlight or store in places with high temperature or in a wet environment.
- Ⓚ Do NOT use any organic solvent for cleaning.
- Ⓚ Objects do not fall and liquids are not spilled into any openings or vents located on the device.
- Ⓚ Unplug the device from the wall socket and disconnect the cable system when it is unused for long periods of time.
- Ⓚ In the event of a malfunction such as burning smell, immediately stop operation of the device, and disconnect the power plug.

ITEM: 500046

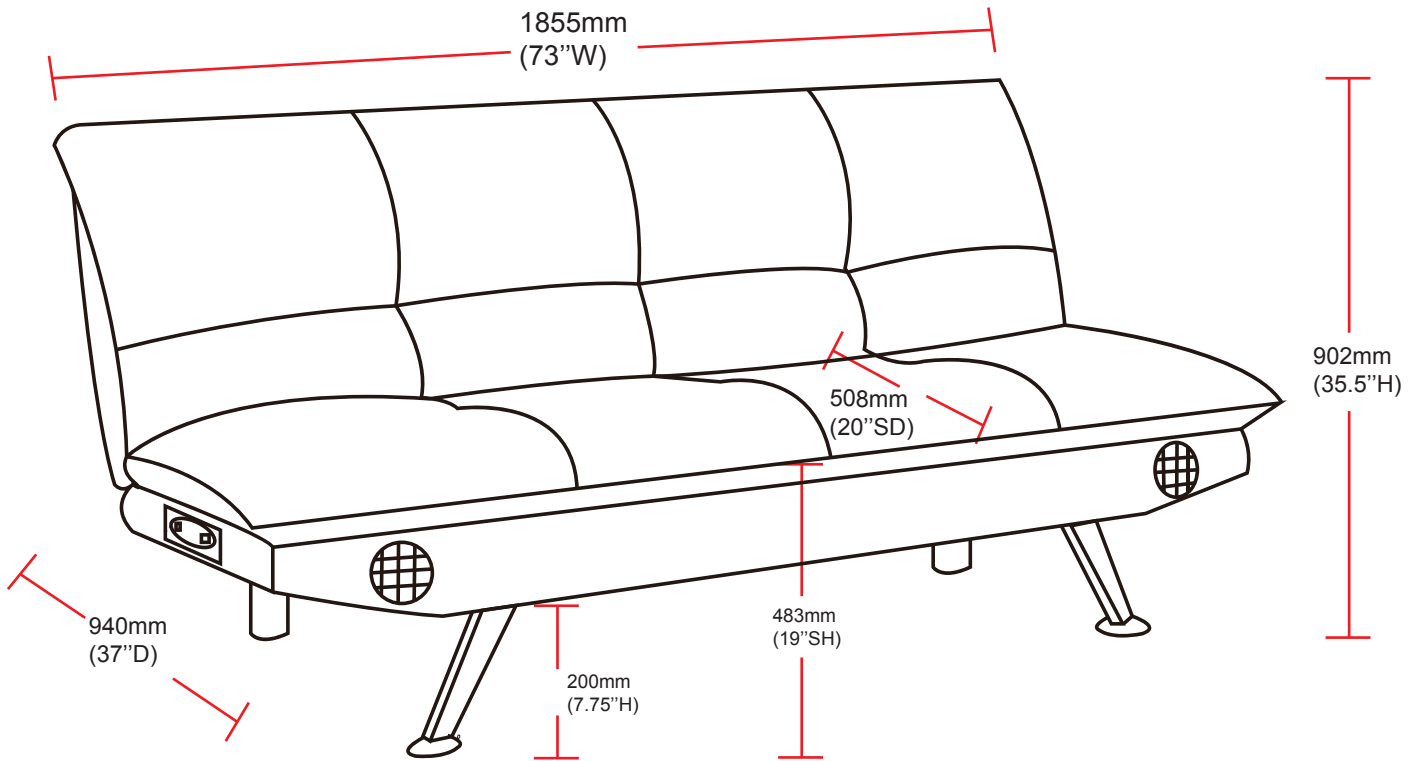

As sofa bed depth:1093mm(43"D)

Note : Dimension tolerance  $\pm 5\%$