

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

800264ii BOOKCASE

REVISION 0 : 04/20/2017 REVISION 1 : 06/18/2019 REVISION 2 : 12/16/2019

ITEM: 800264ii

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

Α	SIDE PANEL	2PCS	E	LOWER SHELF	2PCS
В	LARGE CROSS PANEL	2PCS	F	LOWER DIVIDER PANEL	2PCS
С	SMALL CROSS PANEL	2PCS	G	MIDDLE DIVIDER PANEL	2PCS
D	UPPER SHELF	2PCS	н	UPPER DIVIDER PANEL	1PC

HARDWARE IDENTIFICATION Z

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM BOLT Ø 7x35.5mm		24PCS
2	WOODEN DOWEL Ø 8x30mm		44PCS	5	BOLT Ø 9.5x55mm		20PCS
3	CAM LOCK Ø 15x12mm		24PCS	6	STICKER Ø 20mm		8PCS


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:800264ii

STEP 1




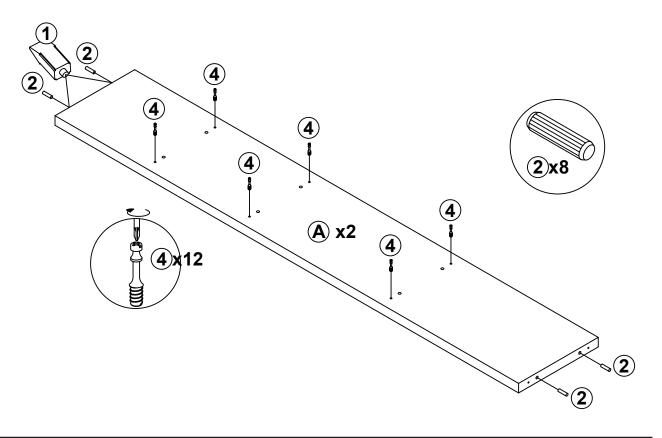

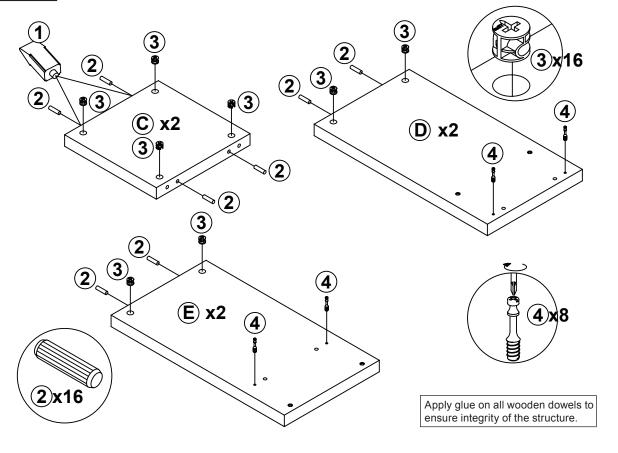


ITEM: **800264ii STEP 3**




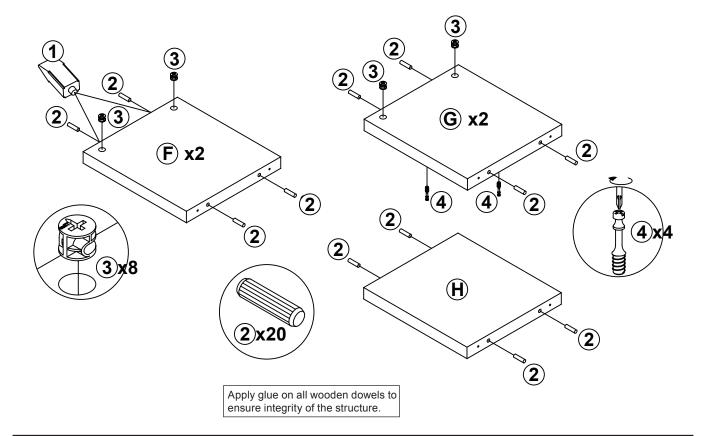

STEP 4

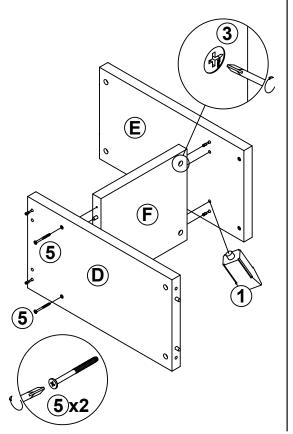

STEP 5

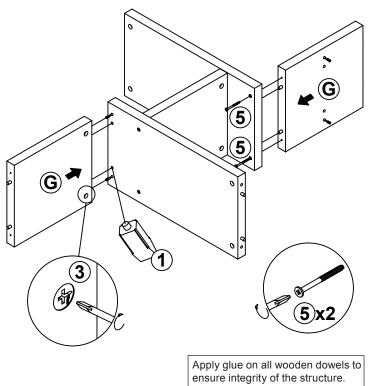



PAGE 4 OF 9

COASTERFURNITURE.COM

ITEM: **800264ii STEP 6**



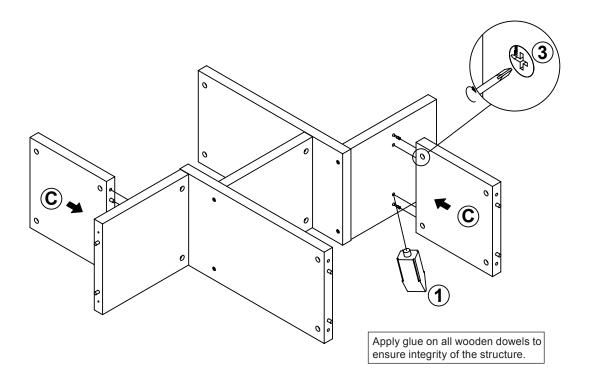


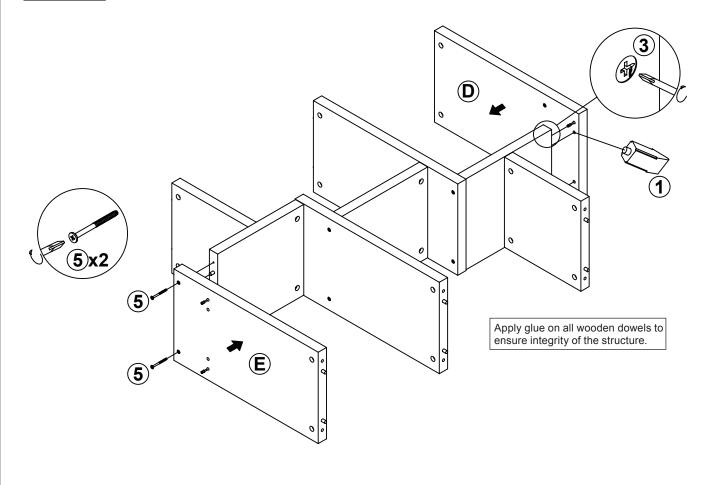


ITEM:800264ii


COASTER

STEP 8

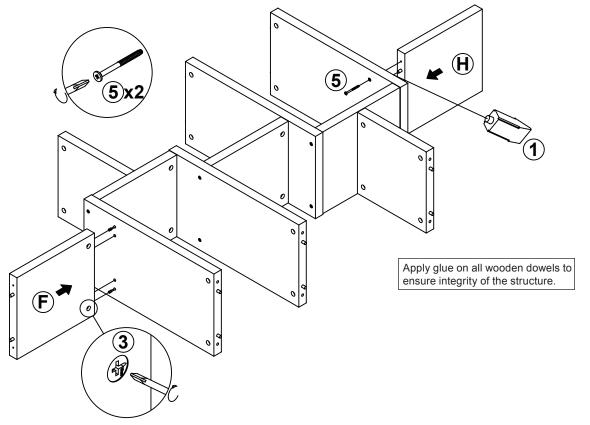

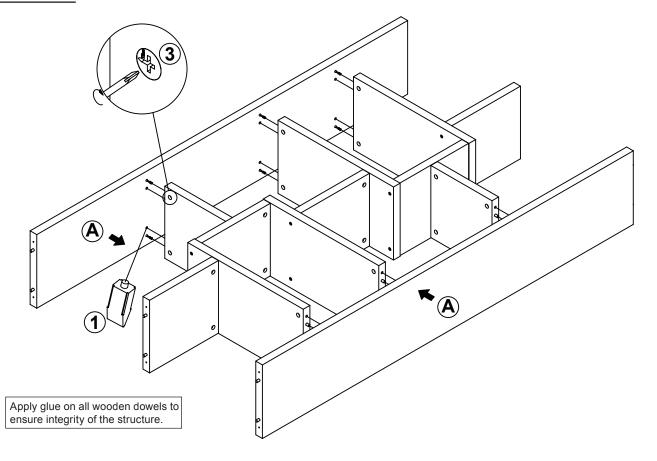


ITEM: 800264ii **STEP 10 (5) 5 (5**) **(5**) **(5**) **B** \bigcirc **(5**) A A **(5) (F)** Apply glue on all wooden dowels to ensure integrity of the structure. **(5**) \bigcirc **(5**) **(5) (5)**

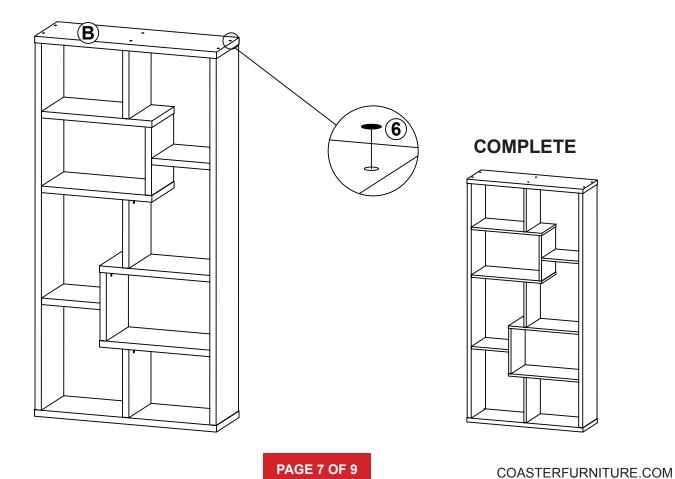

ITEM:800264ii



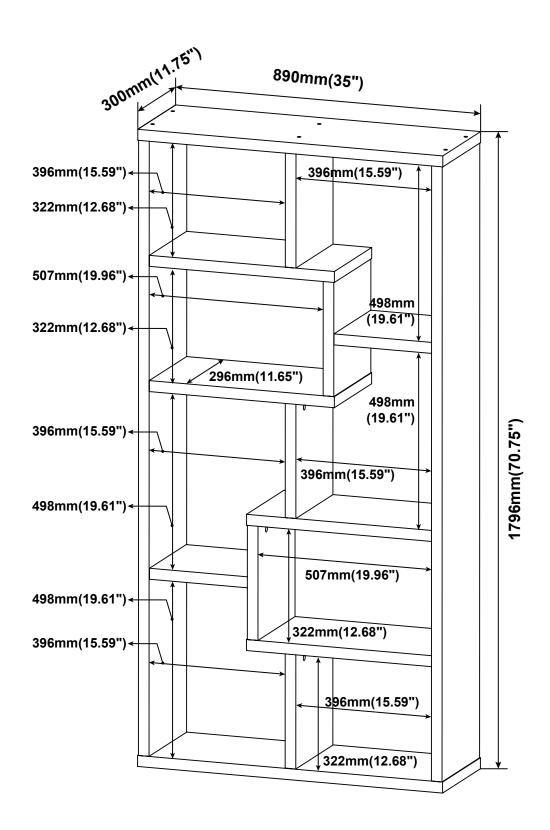

Note: Dimension tolerance ±5%

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)

