


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

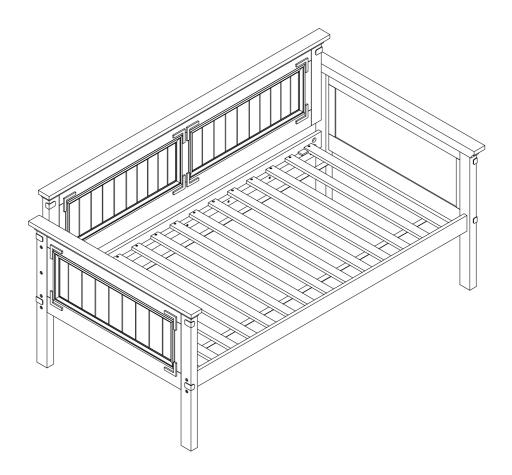

Fine Furniture for every stage of life

300675 (B1&B2) *Twin Daybed*

REVISION 0: 09/06/2017 REVISION 1: 11/08/2019

ITEM: 300675 (B1&B2)

ASSEMBLY INSTRUCTIONS

COASTER

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A LEFT SIDE FRAME

1PC C ROLL SLAT (13PCS)

1 SET

1 PC

1 PC

B2 (BOX 2)

D BED RAIL 2PCS E BACK PANEL 1PC

HARDWARE IDENTIFICATION

Z-B2 (BOX2) - HARDWARE PACK IS LOCATED IN 300675 (B2)

1	LONG BOLT (1/4 x 90mm Φ 15 - BLK)	0	8PCS	4	FLAT HEAD SCREW (4 x 35mm - BLK)	(†)	8PCS
2	HALF ROUND NUT (1/4 x 22mm - BLK)	0	8PCS	5	WOOD DOWEL (8 x 30mm)		8PCS
3	SHORT BOLT (1/4 x 70mm Φ 15 - BLK)	0	4PCS	6	ALLEN WRENCH (4MM - BLK)		8PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 300675 (B1&B2) ASSEMBLY INSTRUCTIONS

COASTER

STEP 1

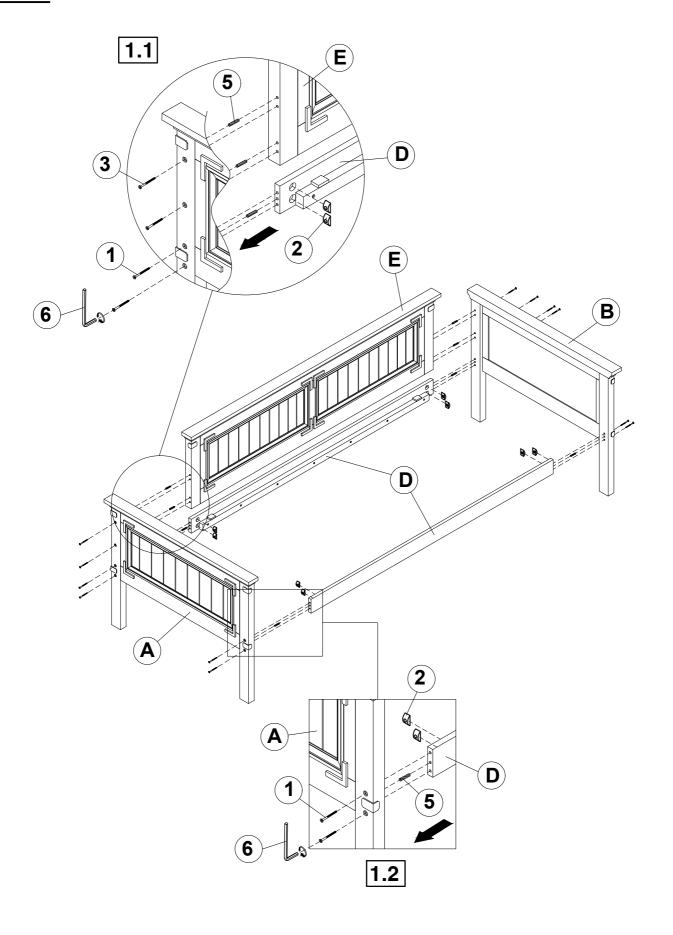

ITEM: 300675 (B1&B2) ASSEMBLY INSTRUCTIONS STEP 2 C

STEP 3 COMPLETE




PAGE 4 OF 4

ITEM: 300675 (B1&B2)



INNER SIZE: 76.5" X 39.25

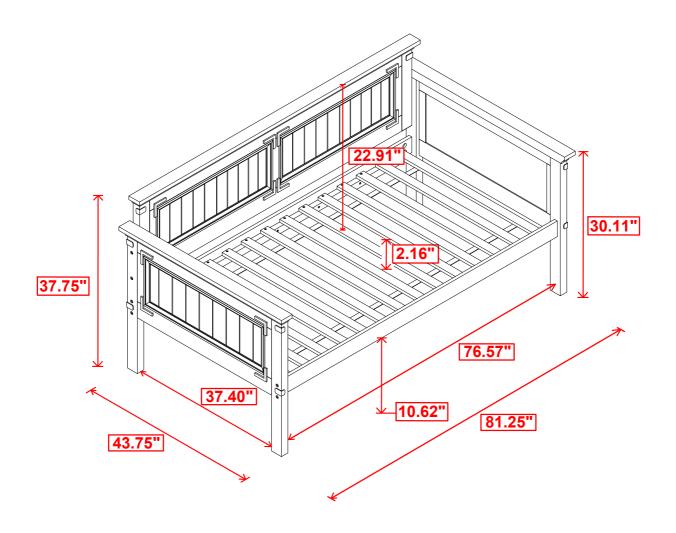

Note: Dimension tolerance ± 5%