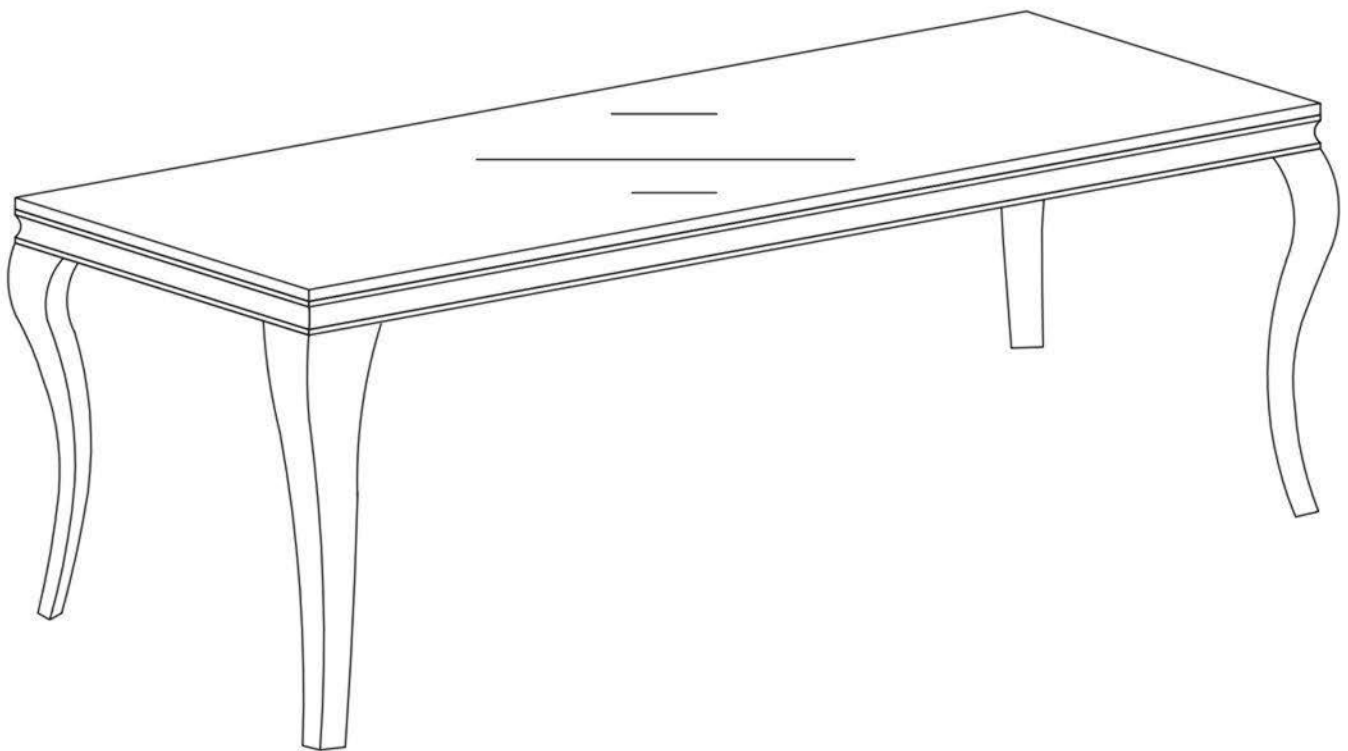


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

105071 (B1-B3)
DINING TABLE

ASSEMBLY INSTRUCTIONS

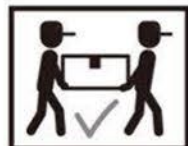
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 

ASSEMBLY TIME
10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

 
A Glass

1pc
C Leg

4pc
B Top Frame

1pc

Z HARDWARE IDENTIFICATION

B2 (BOX 2)-HARDWARE PACK IS LOCATED IN 105071(B2)

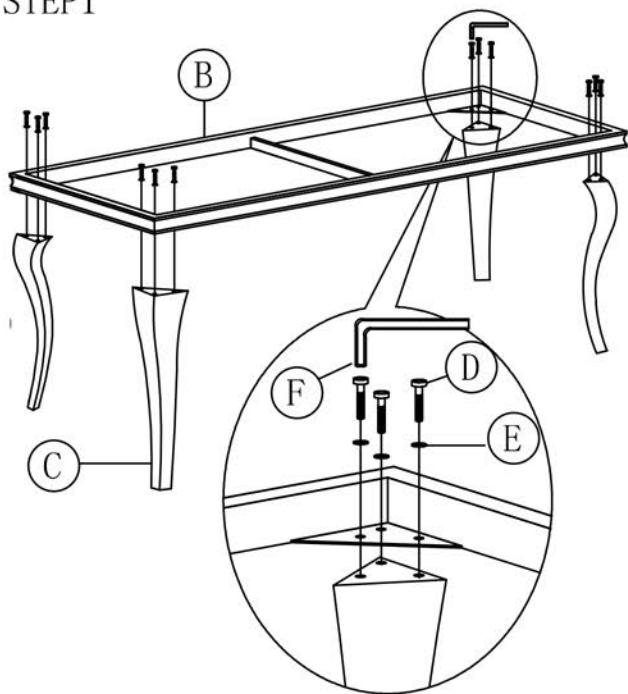
1 Bolts m10*12

12PC
2 Flat Washer Ø10*20

12pc
3 Allen Wrench 8mm

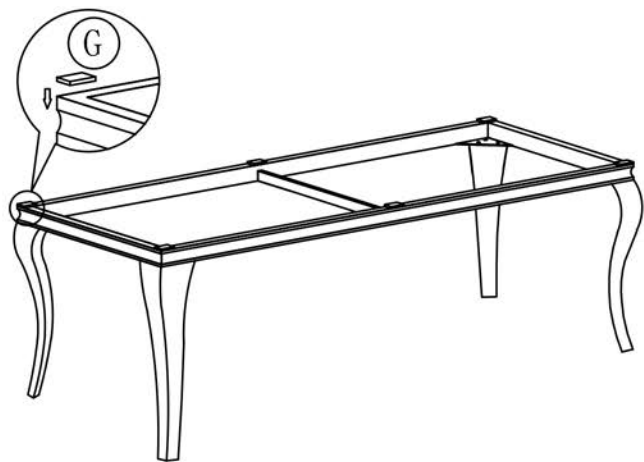
1pc
4 Glass Rest

6pc

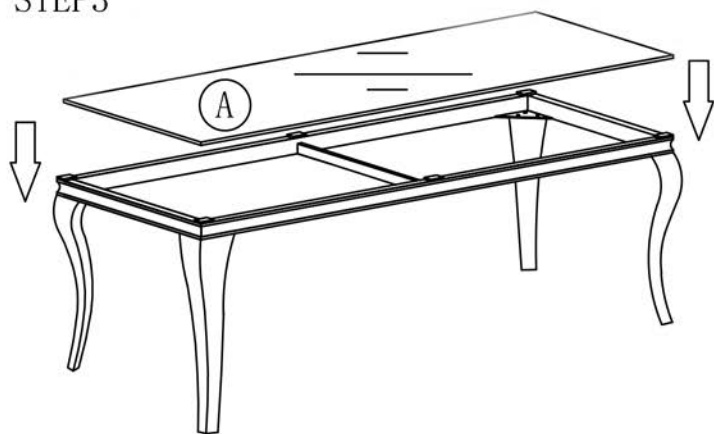
STEP1



STEP2



STEP3



STEP4

