

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

705709 Sofa Table



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.





ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

(A) TOP) 1 PC	(H) LEFT LEG FRAME 1 PC				
(B) BASE FRAME	PC	(I) RIGHT LEG FRAME 1 PC				
(C) SHELF	1 PC	(J) LEFT DRAWER FRONT : 1 PC				
(D) CROSSBAR	1 PC	(K) RIGHT DRAWER FRONT				
		(L) DRAWER LEFT SIDE PANEL 2 PCS				
(E) LEFT SIDE PANEL	1 PC	(M) DRAWER RIGHT SIDE PANEL 2 PCS				
		(N) DRAWER BACK PANEL 2 PCS				
(F) RIGHT SIDE PANEL	1 PC	(0) DRAWER BOTTOM PANEL 2 PCS				
(G) DIVIDER PANEL	1 PC	(P) BACK PANEL 1 PC				
PAGE 2 OF 11 COASTERFURNITURE.COM						




HARDWARE IDENTIFICATION

1	LARGE CAMBOLT	L29mm		16pcs
2	LARGE CAMLOCK	ø 15mm		16pcs
3	SMALL CAMBOLT	L20mm		8pcs
4	SMALL CAMLOCK	ET12mm	×	8pcs
5	SMALL CAMLOCK	L24mm		4pcs
6	SMALL CAMLOCK	ET12mm		4pcs
7	SHORT DOWEL	ϕ 8 \times 25mm		8pcs
8	LARGE SCREW	\$ 4x30mm	(x)	10pcs
9	WRENCH	M5mm		1pc
10	WASHER	Ø 8X16X2mm	©	4pcs
11	INNER HEX SCREW	M8x35mm		4pcs
12	INNER HEX SCREW	M6x30mm		4pcs
13	NAIL		0	22pcs
14	METAL SCREW	80x25x82mm		1pc
15	FLAT-HEAD SCREW	M6x12mm		2pcs
16	HANDLE	#96mm		2pcs
17	HANDLE SCREW	M4X20mm		4pcs
18	THE RESTRAINT STRAP	$197 \times 5 \times 1$ mm		1pc
19	PLASTIC ANCHOR	Ø8X40mm		1pc
20	SMALL SCREW	Ø4X25mm	€)	1pc
21	WALL SCREW	Ø5X40mm		1pc
22	BRACKET	$12 \times 12 \times 1$ mm	<u>aa</u>	2pcs
23	LARGE STICKER	♥ 22mm	0000	4pcs
25	WRENCH	M4mm		1pc
24	GLUE			1pc


ASSEMBLY INSTRUCTIONS

STEP 1



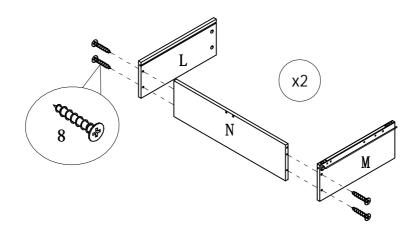

STEP 2

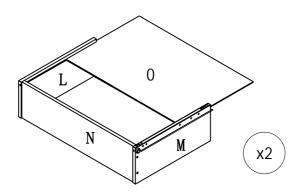


PAGE 4 OF 11

ASSEMBLY INSTRUCTIONS


COASIE

FINE FURNITURI

STEP 3

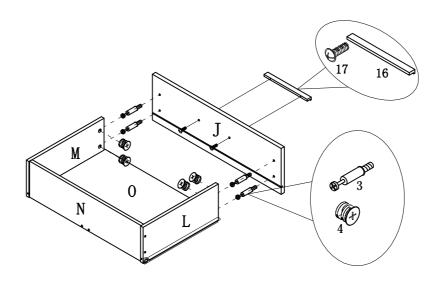

STEP 4

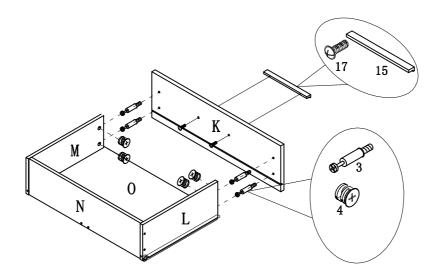



PAGE 5 OF 11

ASSEMBLY INSTRUCTIONS


STEP 5



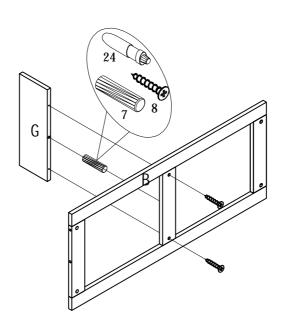

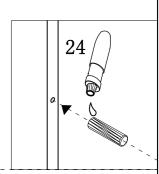

STEP 6

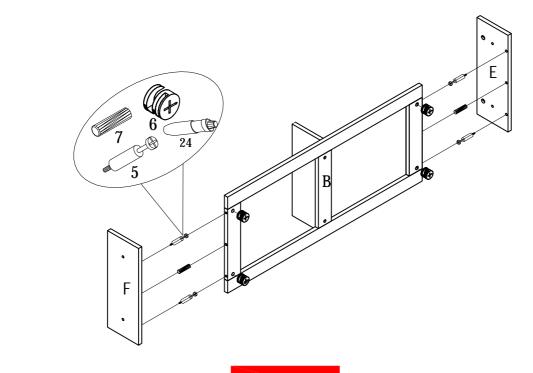



PAGE 6 OF 11


ASSEMBLY INSTRUCTIONS

STEP 7



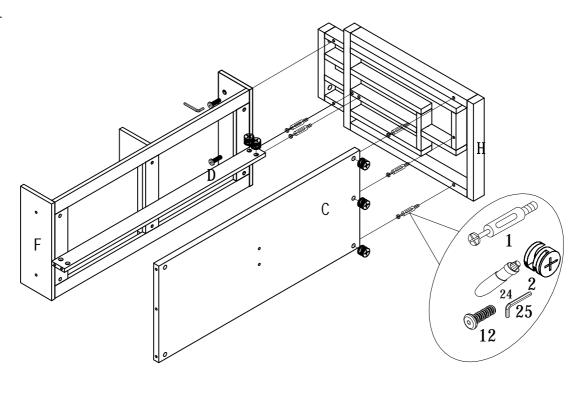

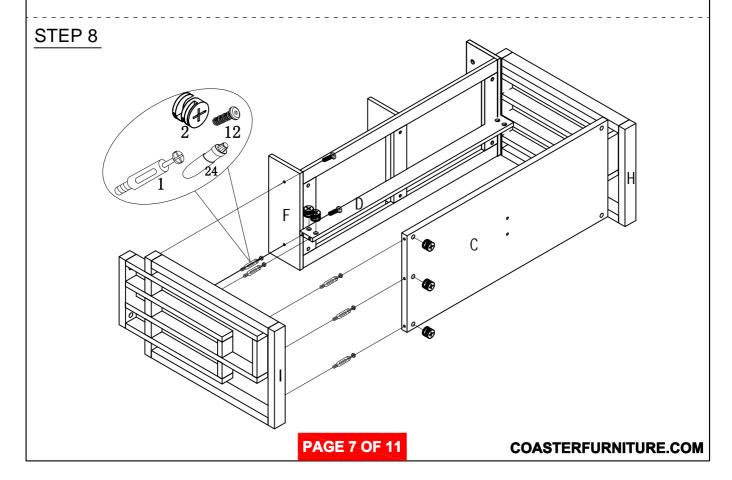


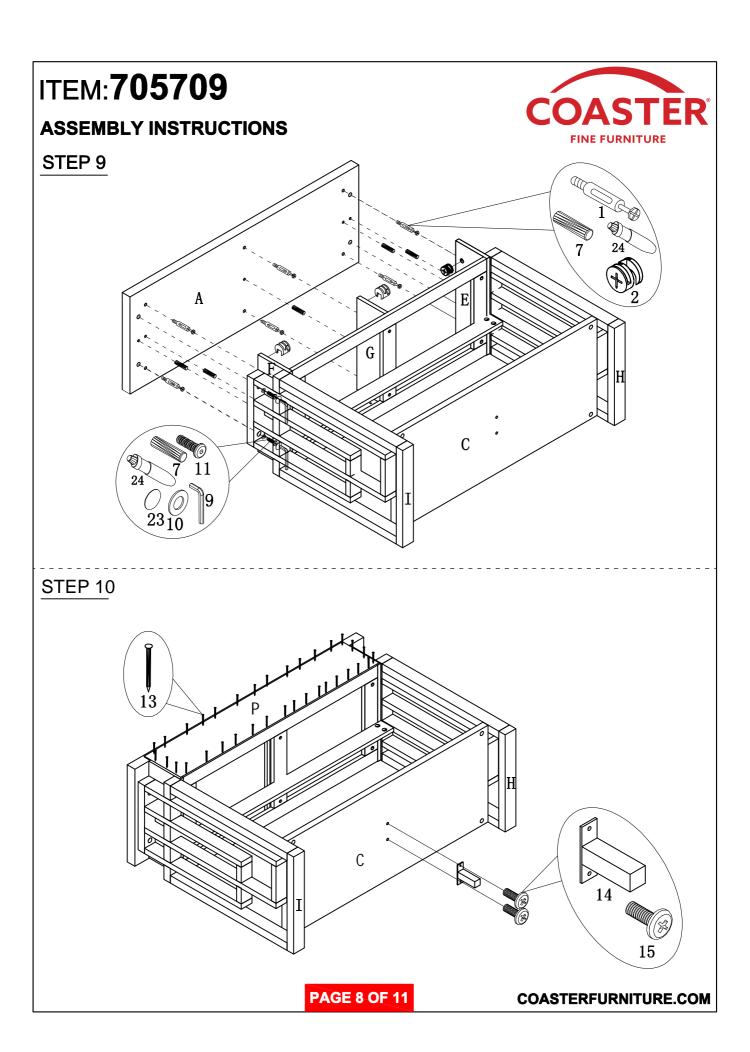


ASSEMBLY INSTRUCTIONS

STEP 11



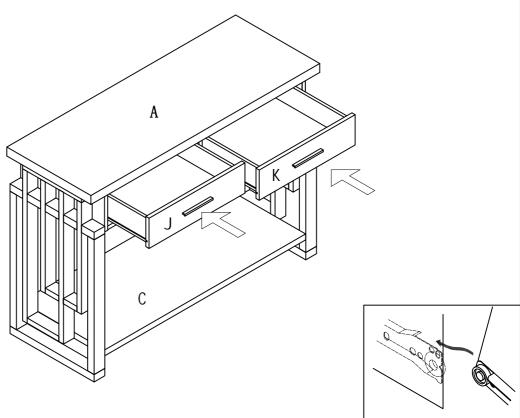

STEP 12

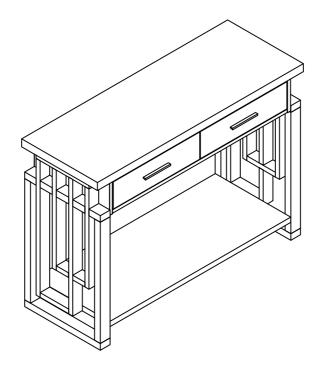


PAGE 9 OF 11

DIMENSION



ITEM: 705709 1066x392x759 (H)

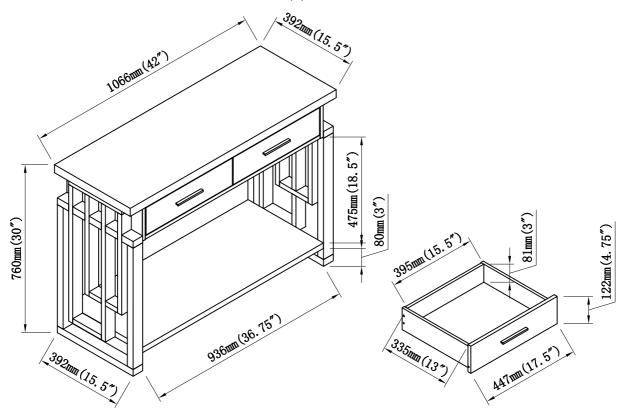

PAGE 10 OF 11



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furnituremay result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail to the furniture using short screw provided, through the smaller hole.

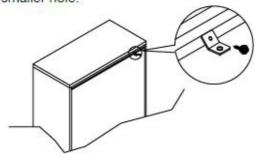


STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

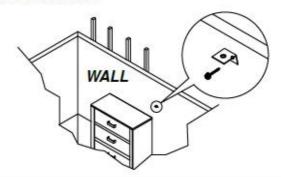

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking and draw it until all slack is removed. Confirm that the strap is securely laced and locked.

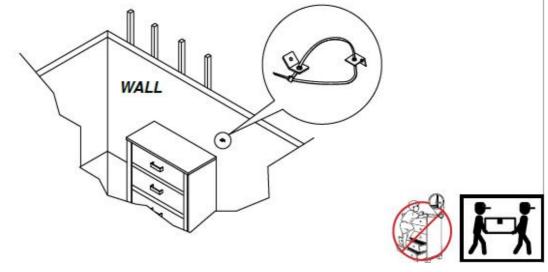

PAGE 11 OF 11