


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

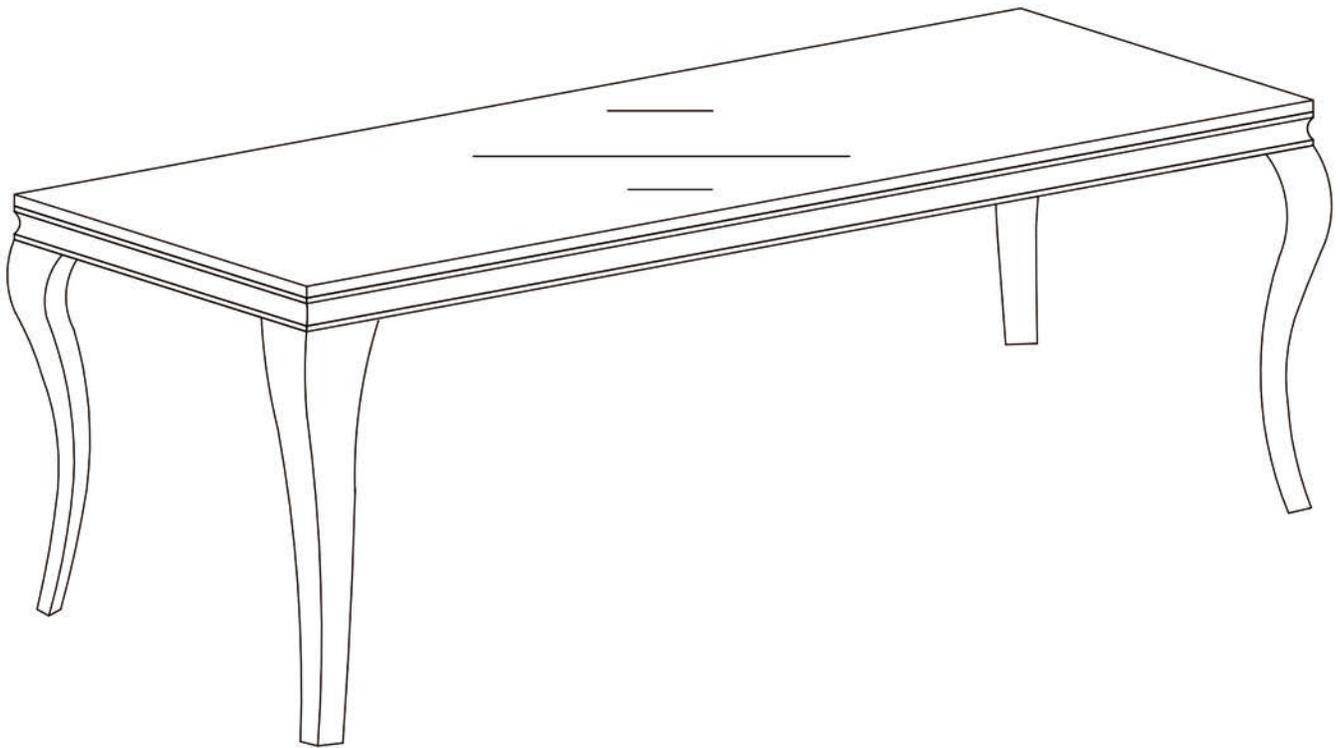

Fine Furniture for every stage of life

115071(B1-B3)
Dining Table

ITEM: 115071 (B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A GLASS



1PC

C LEG



4PCS

 
B TOP FRAME



1PC

Z HARDWARE IDENTIFICATION

B2 (BOX 2)-HARDWARE PACK IS LOCATED IN 115071(B2)

1 BOLTS M8*12  12PCS

2 FLAT WASHER $\phi 10*20$  12PCS


3 ALLEN WRENCH 8MM  1PC

4 GLASS REST  6PCS


ITEM: 115071(B1-B3)

ASSEMBLY INSTRUCTIONS


STEP1

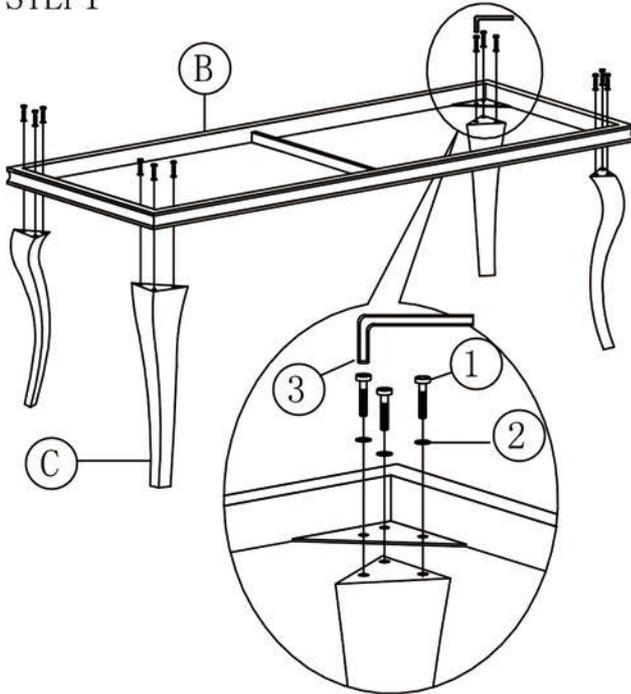

STEP2

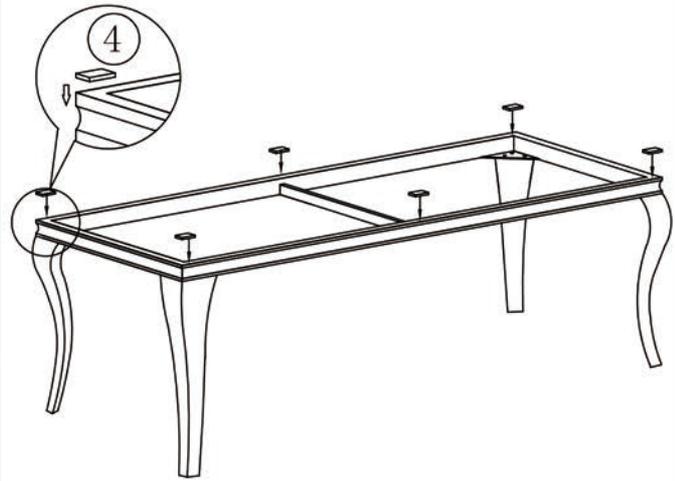

STEP3

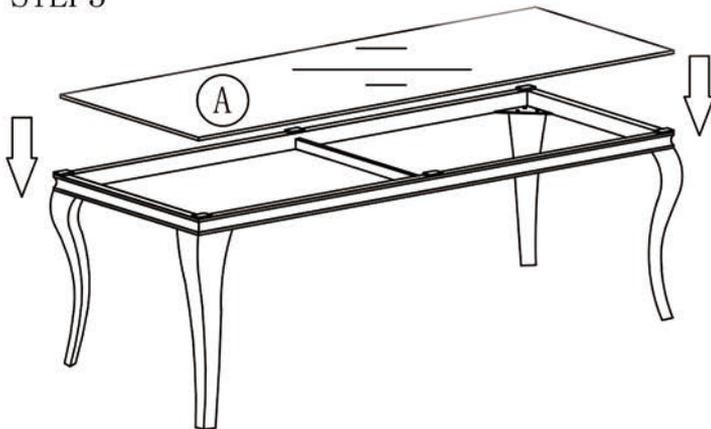

STEP4

