

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

504071 SOFA

REVISION 1: 07/09/2020 PAGE 1 OF 4 COASTERFURNITURE.COM

ITEM: 504071

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION



SOFA

1 PC

(B)



LEG

4PCS

ITEM: 504071


ASSEMBLY INSTRUCTIONS




STEP 1



STEP 2

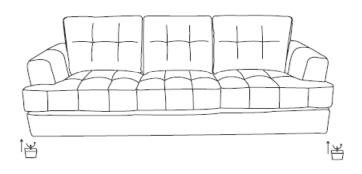


STEP 3

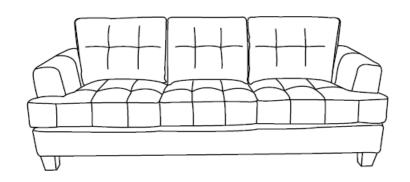



504071



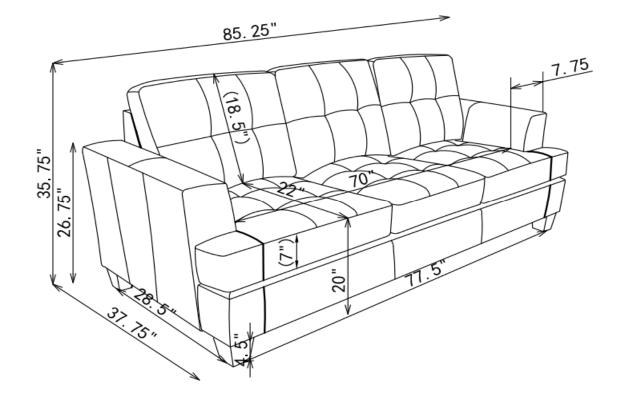

Note: Dimension tolerance ±5%

