




*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*

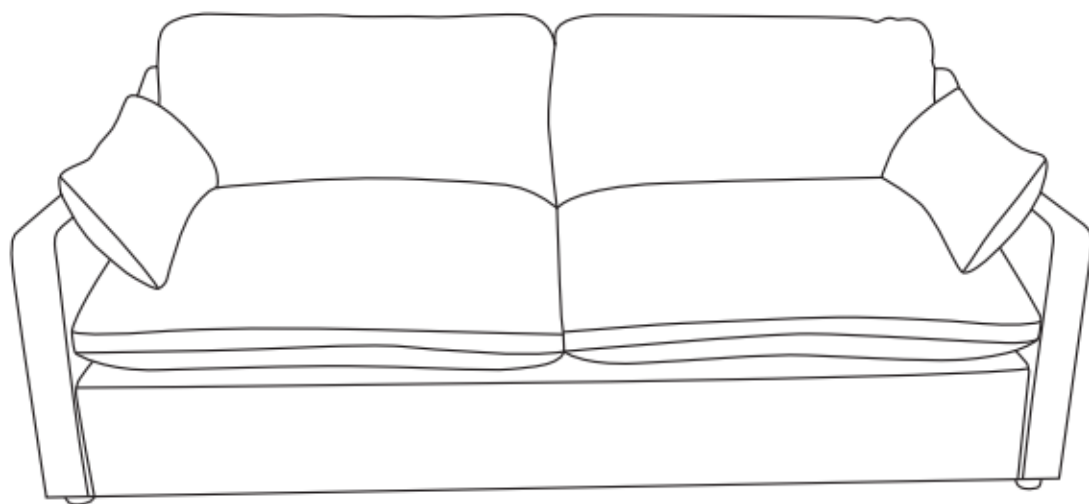

506771
SOFA

ITEM: 506771

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

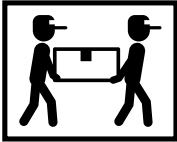

ASSEMBLY TIME

8 MINUTES

PARTS IDENTIFICATION


	PART NAME	FIGURE	QUANTITY
A	SOFA		1PC
B	ARM PILLOW		2PCS
C	BACK CUSHION		2PCS
D	SEAT CUSHION		2PCS
E	LEG		5PCS

ITEM: 506771


ASSEMBLY INSTRUCTIONS




STEP 1

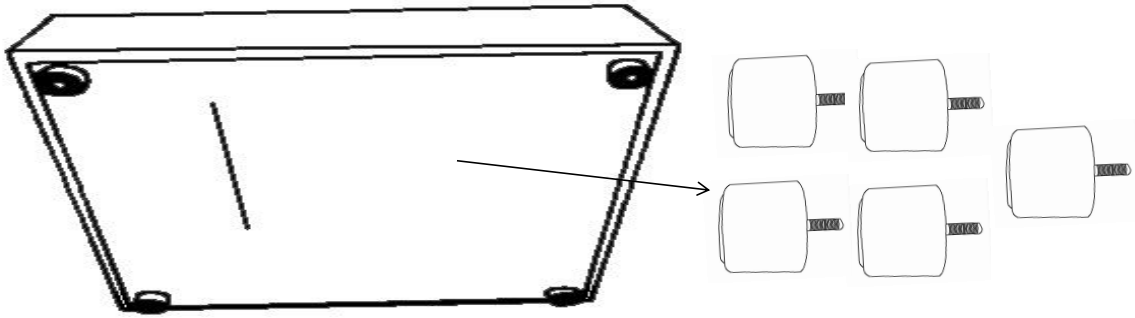


STEP 2

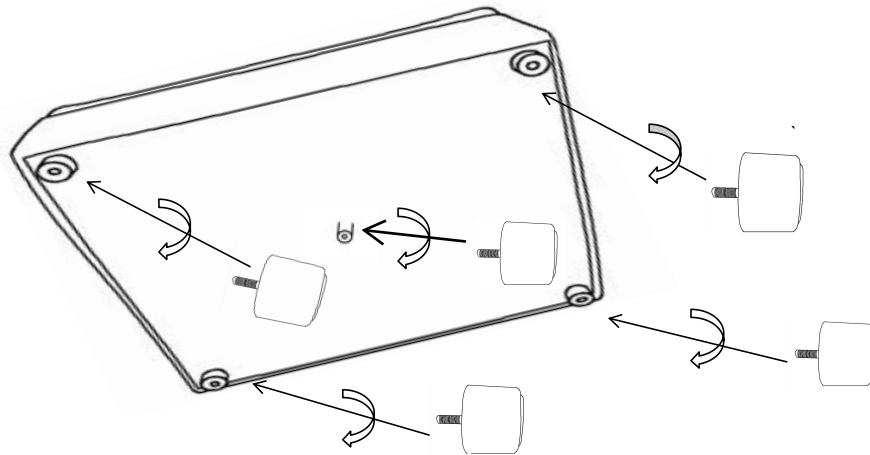

STEP 3

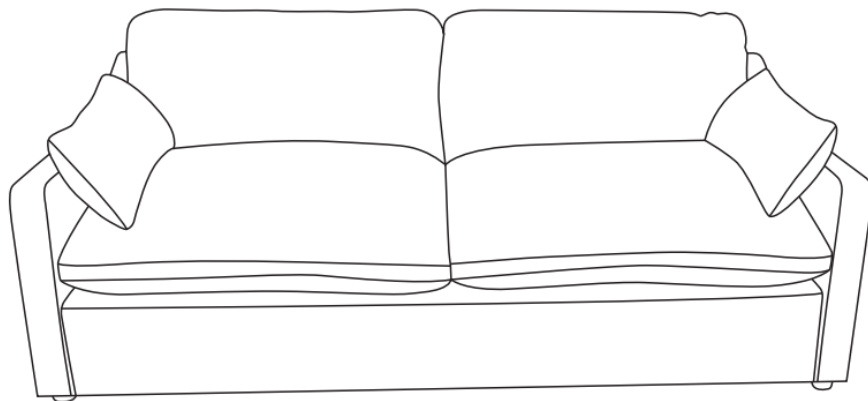

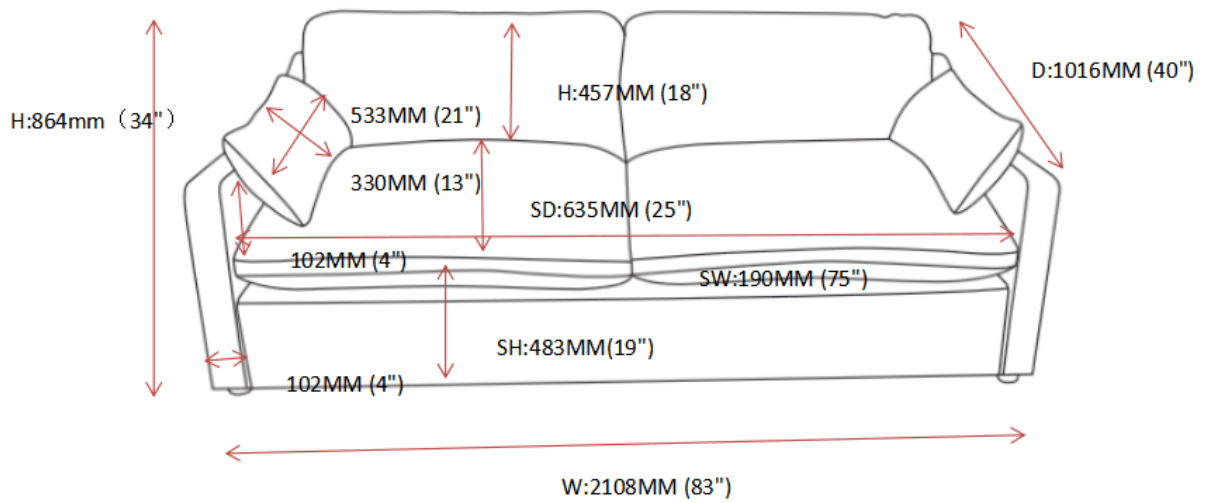

Note : Dimension tolerance $\pm 5\%$