



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

**509071
SOFA**

REVISION 0: 06/18/2020
REVISION 1: 07/20/2020

COASTERFURNITURE.COM

ITEM: 509071

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

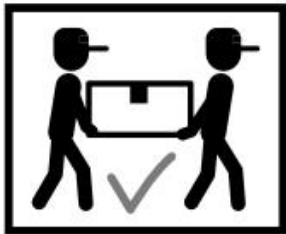

ASSEMBLY TIME 20 MINUTES

PARTS IDENTIFICATION


A		SOFA	1PC
B		BACK CUSHION	3PCS
C		PILLOW	2PCS
D		LEG	5PCS
E		WASHER	10PCS

ITEM: 509071




ASSEMBLY INSTRUCTIONS


STEP 1

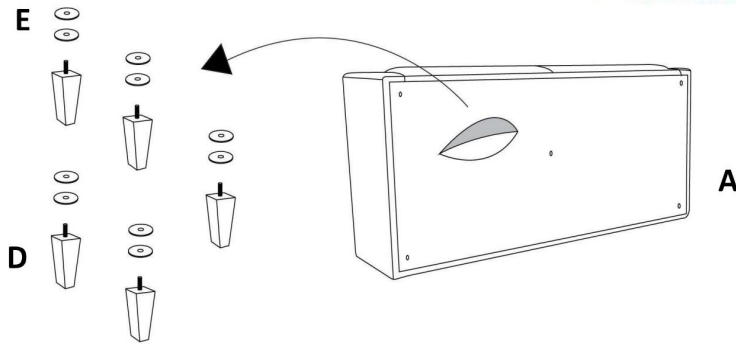



STEP 2

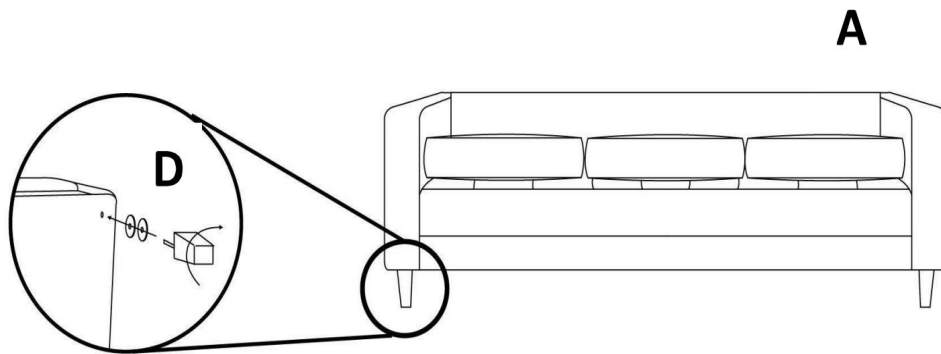


STEP 3

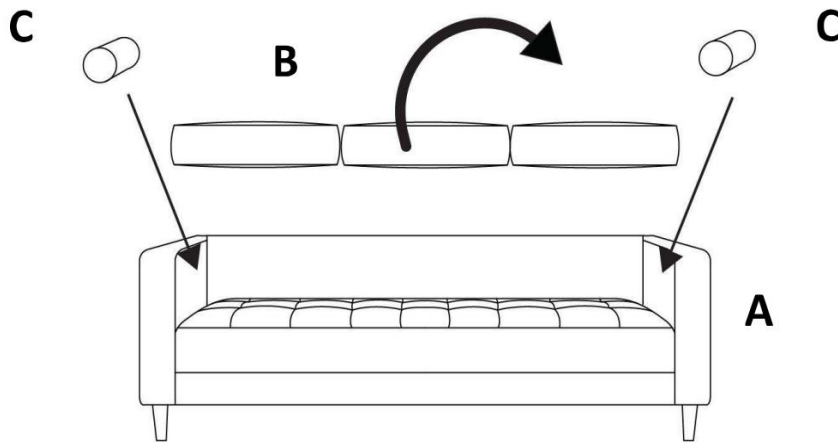

STEP 4

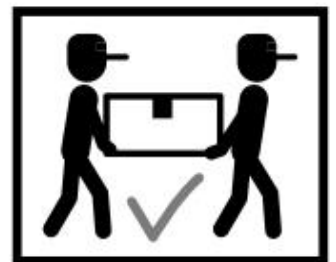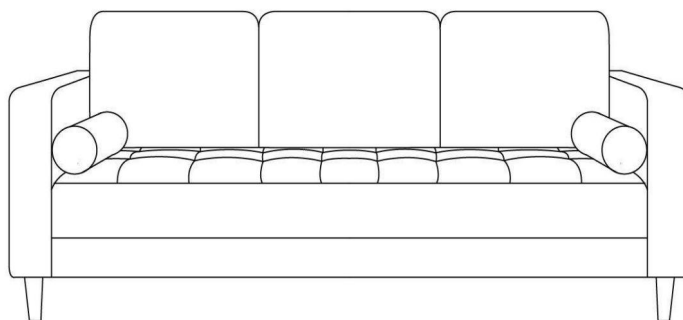

ITEM: 509071

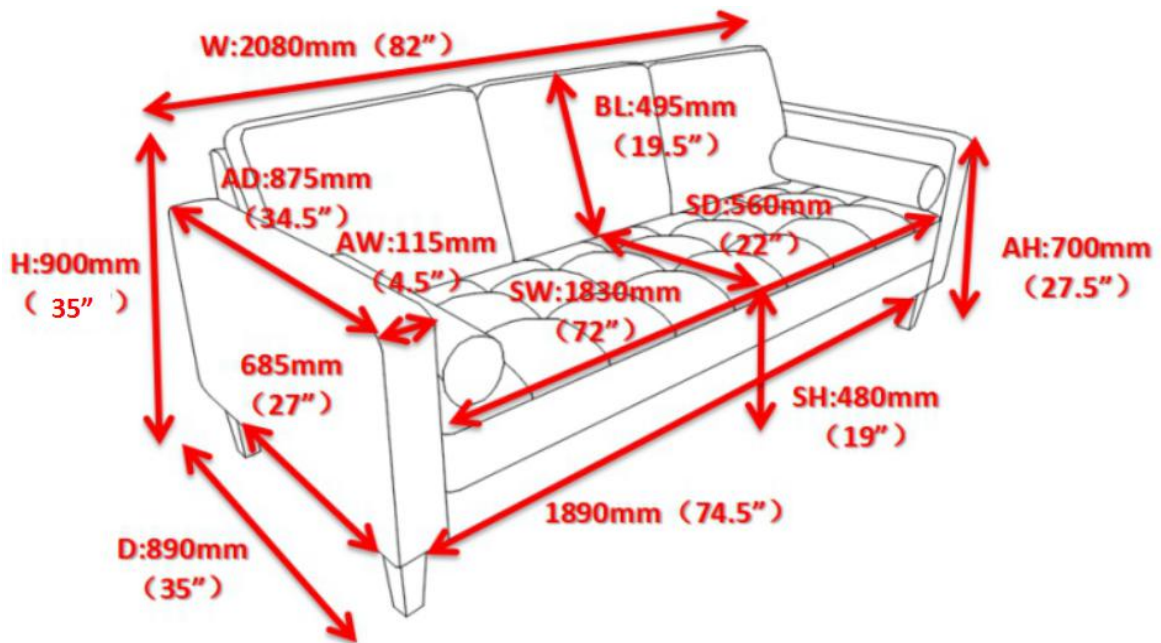

Note : Dimension tolerance $\pm 5\%$

COASTERFURNITURE.COM