

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509751 SOFA

REVISION 0: 05/16/2020 REVISION 1: 07/09/2020

COASTERFURNITURE.COM

ITEM: 509751

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

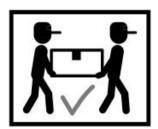


ASSEMBLY TIME 15 MINUTES

PARTS IDENTIFICATION

A BASE 1PC


B BACK 1PC

C LEG 4PCS

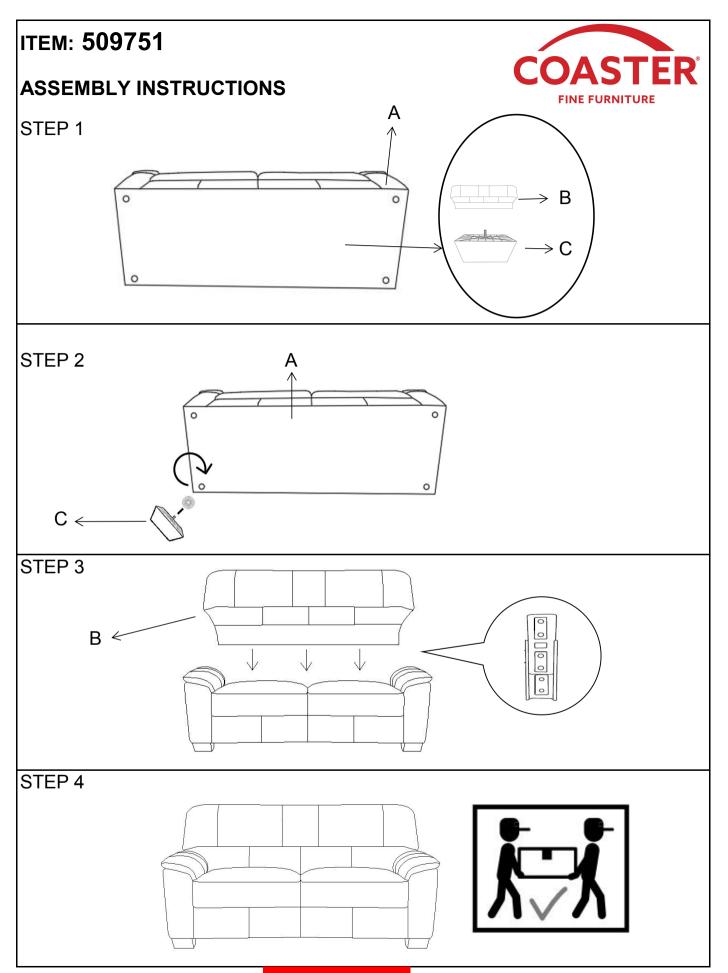

ITEM: 509751



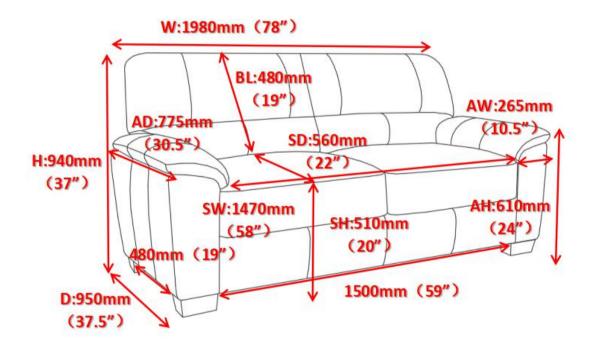

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM