

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

904018 SNACK TABLE

REVISION 0: 09/25/2017 REVISION 1: 08/24/2020

PAGE 1 OF 6

COASTERFURNITURE.COM



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 30 MINUTES

PARTS IDENTIFICATION

A	TOP GLASS	1PC	
В	TOP FRAME	1PC	
С	BOTTOM FRAME	1PC	
D	LEFT FRONT CROSSBAR	1PC	
E	RIGHT FRONT CROSSBAR	1PC	
F	FRONT CROSSBAR	2PC	S
G	SHELF PANEL	1PC	
	PAGE 2 OF 6	COASTERFURNITUR	E.COM




HARDWARE IDENTIFICATION

1	SHORT BOLT (3/16" x 12mm SR)	6PCS
2	LONG BOLT (1/4" x 38mm SR)	4PCS
3	SHELF BOLT (7 x 50mm)	4PCS
4	SUCTION CUP (ø15 x 8mm)	4PCS
5	FLOOR PROTECTOR (\$6mm)	4PCS
6	ALLEN WRENCH (4mm)	1PC




STEP 1

Do not tighten until each step is completed or instructed.

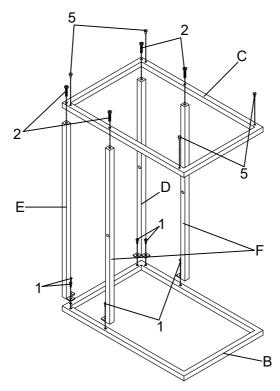


STEP 2

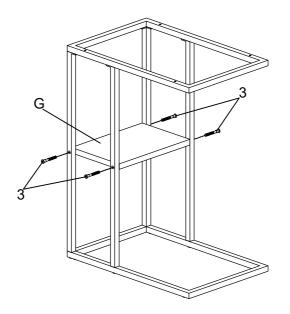




STEP 3

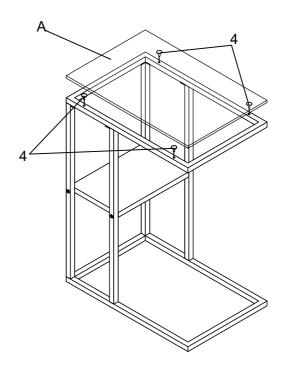

STEP 4 COMPLETE

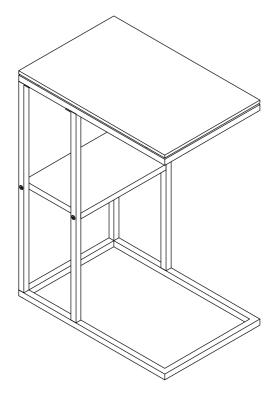


PAGE 5 OF 6

COASTERFURNITURE.COM



Product Size: 298 X 457 X 610 H (MM)

Product Size : $11\frac{3}{4}$ " X 18" X 24"

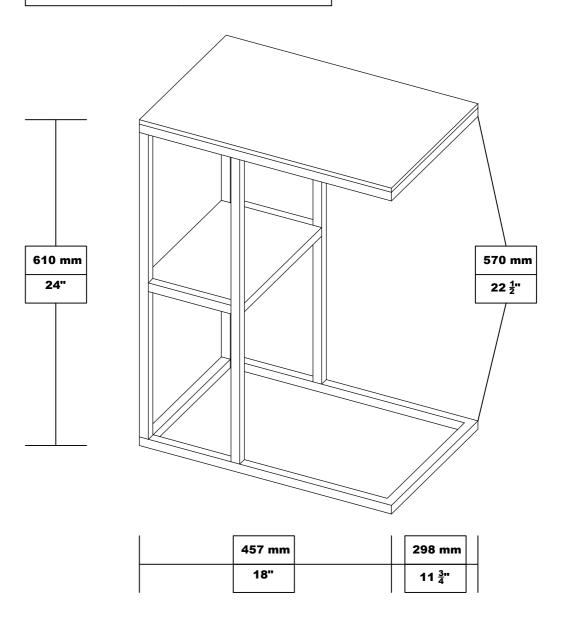

Note: Dimension tolerance ±5%