

ASSEMBLY INSTRUCTION COASTER FINE FURNITURE



Fine Furniture for every stage of life

101059 COUNTER HEIGHT STOOL

REVISION 1:24/5/2019

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 101059



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A	SEAT	O JO	1PC	C	LEG	0	4PCS
В	BASE		1PCS				

HARDWARE IDENTIFICATION


1	WRENCH 4mm		1PC	5	FLAT WASHER#2 1/4"×19mm	0	8PCS
2	LONG BOTL 1/4"×1-3/4"		8PCS	6	SHORT BOLT 1/4"×1-1/8"		4PCS
3	LOCK WASHER 1/4"×11mm	0	12PCS	7	ALLEN WRENCH 9mm	\bigcirc	4PCS
4	FLAT WASHER#1 1/4"×12mm	0	4PCS				

NOTE:

ITEM: 101059




ASSEMBLY INSTRUCTIONS STEP 1

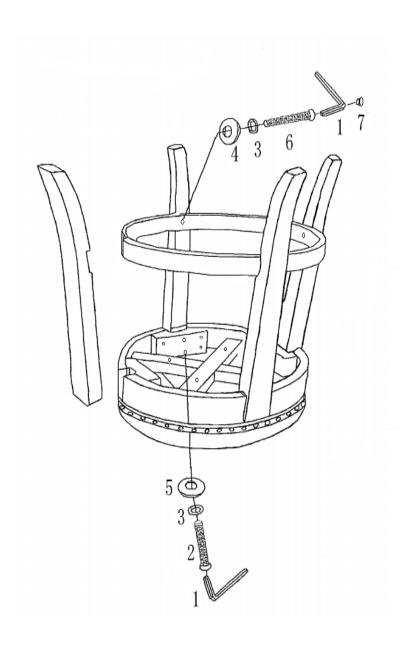

NOTE:

ITEM:101059



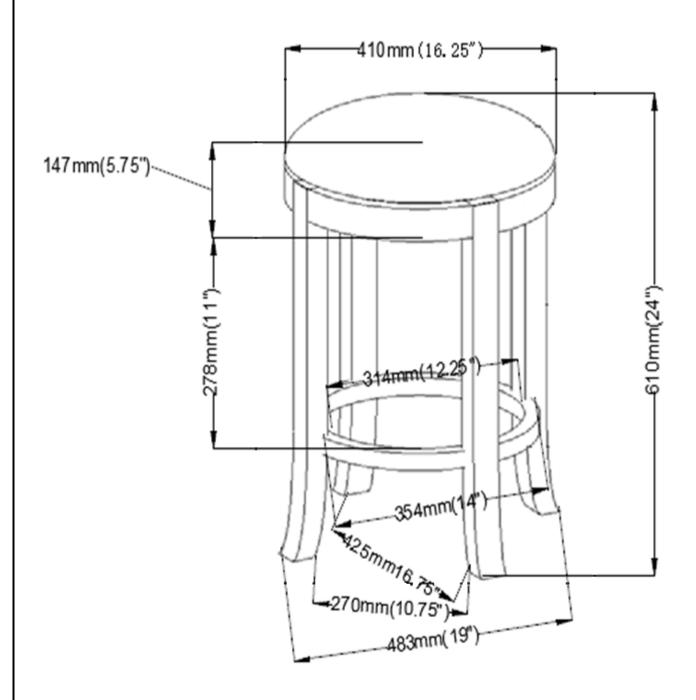

NOTE:

Dimension tolerance $\pm 5\%$