

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

204392 Nightstand

REVISION 0 : 10/30/2015 REVISION 1 : 01/21/2020

COASTERFURNITURE.COM

ITEM: 204392

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A	NIGHTSTAND	1PC	D RIGHT BACK LEG (WITH BR LABEL)	1PC
В	RIGHT FRONT LEG (WITH FR LABEL)	1PC	E LEFT BACK LEG (WITH BL LABEL)	1PC
С	LEFT FRONT LEG (WITH FL LABEL)	1PC		

HARDWARE IDENTIFICATION

1	BOLT (M6 x30mm - BLK)		8PCS	3 FLAT WASHER (1/4" x20mm - BLK)	0	8PCS
2	LOCK WASHER (1/4" - BLK)	©	8PCS	4 ALLEN WRENCH (M4 x 65mm - BLK)		1PC

NOTE:


Philips head screw driver in the assembly process; however, manufacturer does not provide the item


COASTERFURNITURE.COM

ITEM: 204392 ASSEMBLY INSTRUCTIONS




STEP 1

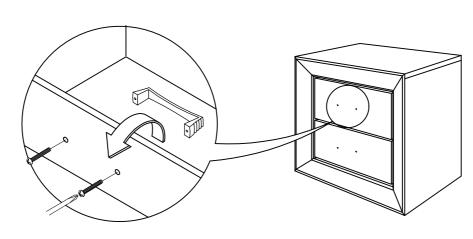

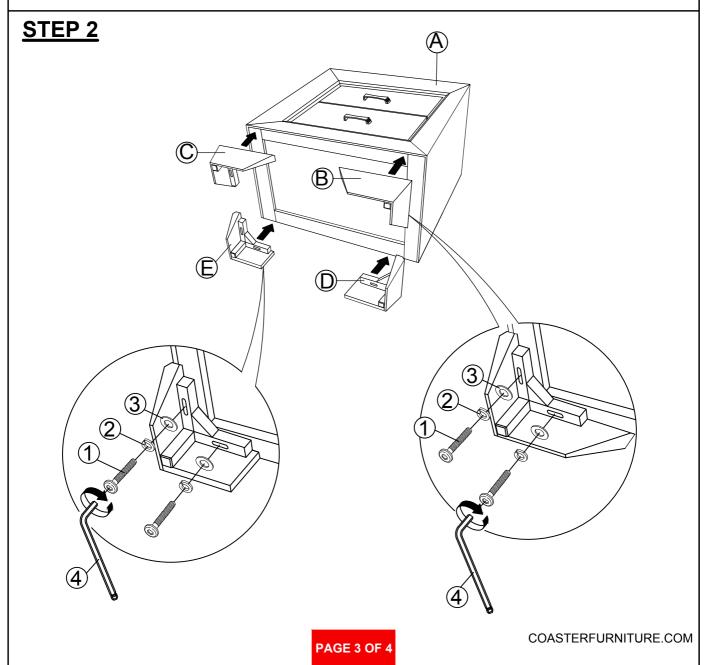

ITEM: 204392 ASSEMBLY INSTRUCTIONS STEP 3 COMPLETE



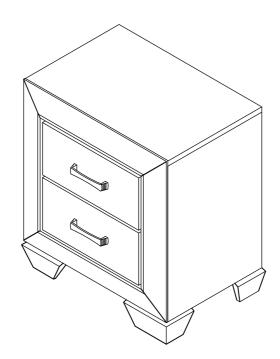




ITEM: **204392**



INNER SIZE OF DRAWER: 5.78" X 13.38" X 13.58"

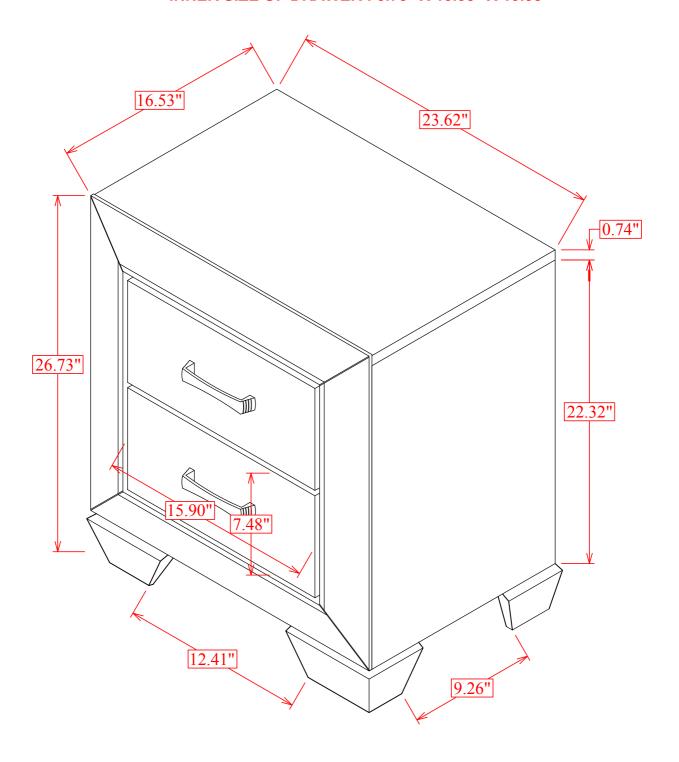

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM