



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

608939P

POWER RECLINER

ITEM: 608939P

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

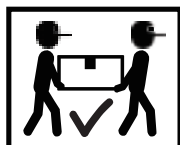



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

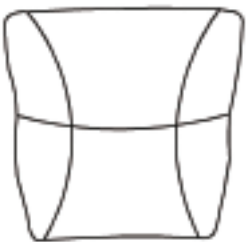PARTS IDENTIFICATION


| | PART NAME | FIGURE | QUANTITY |
|---|---|-------------|----------|
| A |  | BACK | 1PC |
| B |  | BASE | 1PC |
| C |  | POWER BOX | 1PC |
| D |  | POWER CABLE | 1PC |

ITEM : 608939P


ASSEMBLY INSTRUCTIONS



STEP 1

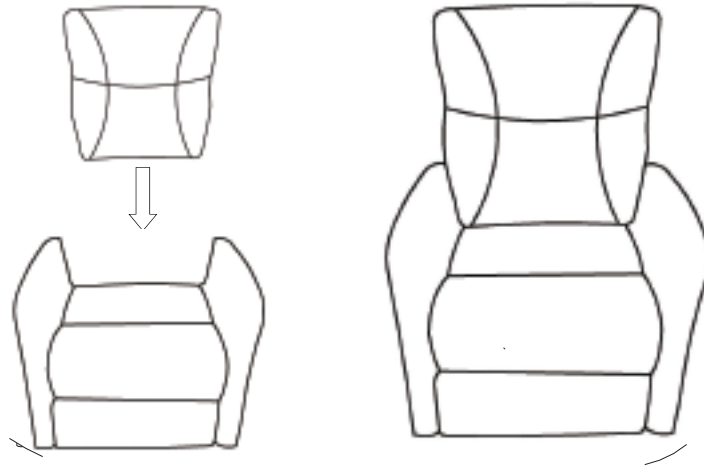

STEP 2

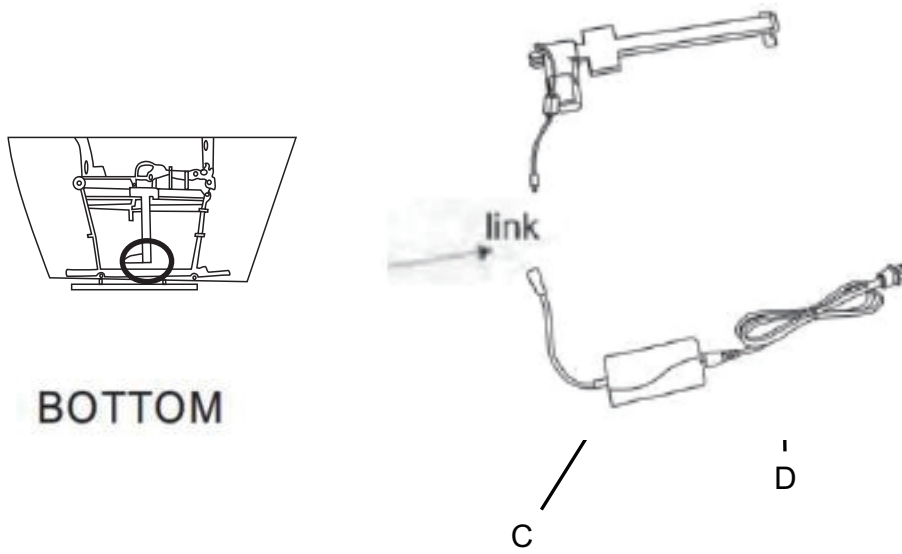

BOTTOM

STEP 3

