

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

805801 Ladder Desk

REVISION 0:30/11/2020

PAGE 01 OF 13

ASSEMBLY INSTRUCTIONS

COASTER

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.


2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

30 MINUTE

PARTS IDENTIFICATION

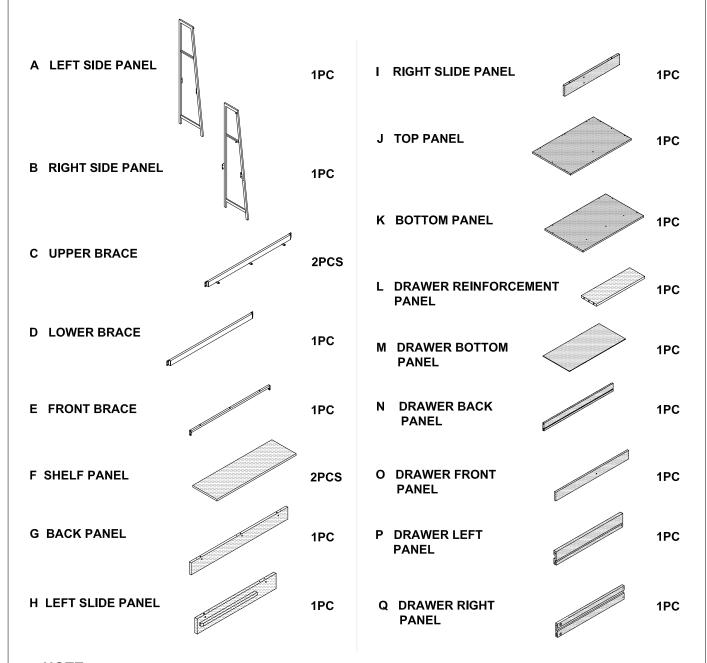

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




HARDWARE IDENTIFICATION

| 1 | SCREW (M4x15MM - BLK) | Spinno | 11PCS | 10 | CAM LOCK (¢13x10MM - BLK) | 38 | 15PCS |
|---|-----------------------------|--------|-------|----|------------------------------|-----------|-------|
| 2 | SCREW (M4x38MM - BLK) | | 7PCS | 11 | WOODEN DOWEL (Ø8.0X30MM) | | 18PCS |
| 3 | SCREW (M4x25MM -BLK) | | 4PCS | 12 | WOODEN DOWEL (\$6.0X30MM) | | 2PCS |
| 4 | BOLT (1/4"x1/2" - BLK) | | 22PCS | 13 | SCREW (M4x50MM -BLK) | | 1PC |
| 5 | BOLT (1/4"x1" - BLK) | | 3PCS | 14 | BRACKET | | 2PCS |
| 6 | BOLT (M4x19MM - BLK) | | 1PC | 15 | RESTRAINT STRAP | | 1PC |
| 7 | WASHER (¢16MM - BLK) | | 22PCS | 16 | ALLEN KEY (4x22x60mm) | | 1PC |
| 8 | WASHER (¢12MM- BLK) | 0 | 11PCS | 17 | PLASTC 55x24mm | | 1PC |
| 9 | CAM BOLT (M6x28MM - WHT) | | 15PCS | 18 | HANDLE | Co | 1PC |

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



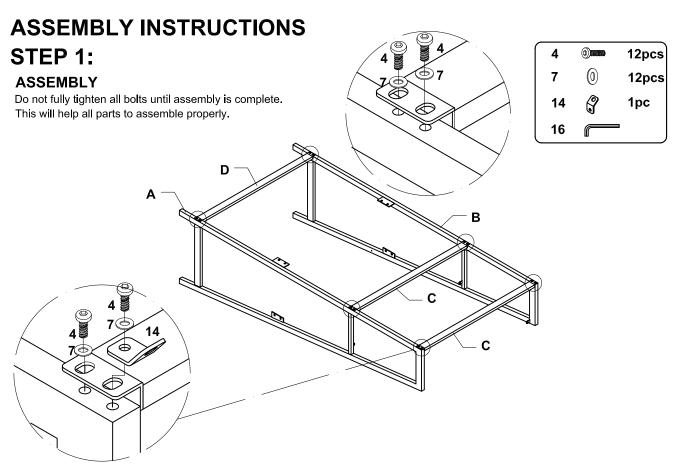

STEP 2:




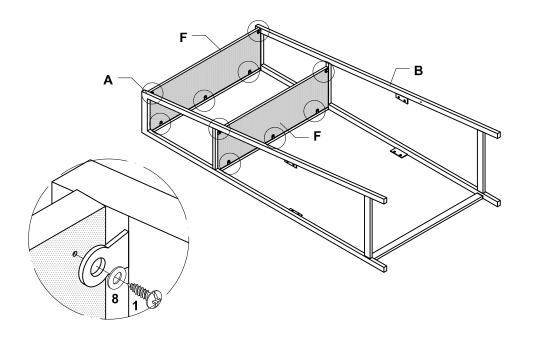


ASSEMBLY INSTRUCTIONS

 STEP 3:






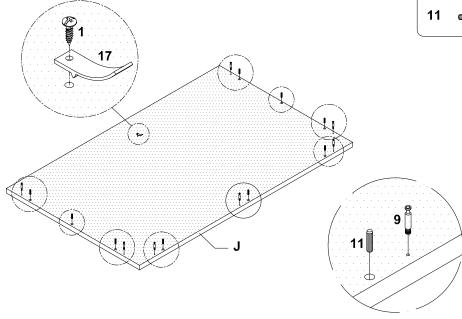

STEP 4:



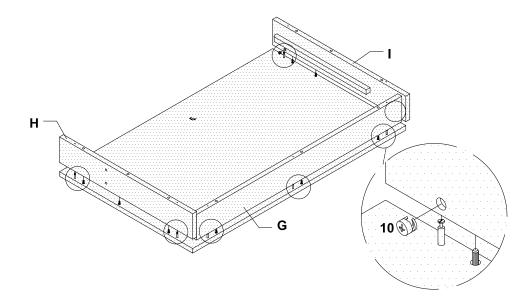


PAGE 05 OF 13

ASSEMBLY INSTRUCTIONS


STEP 5:



11 = 9pcs

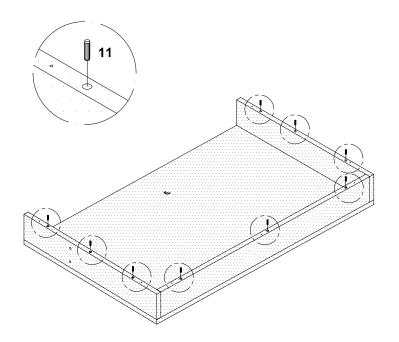


STEP 6:

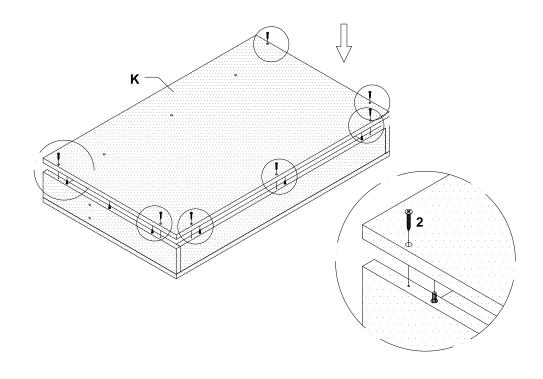



ASSEMBLY INSTRUCTIONS

 STEP 7:





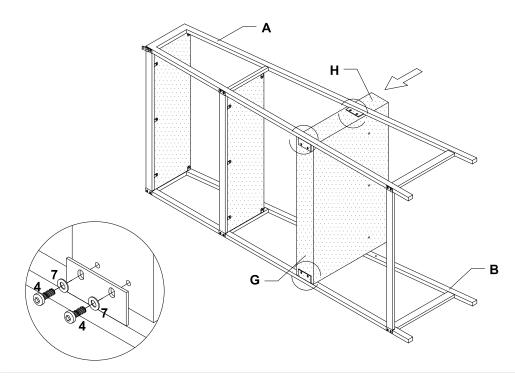


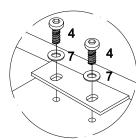

(1)


2pcs

STEP 8:

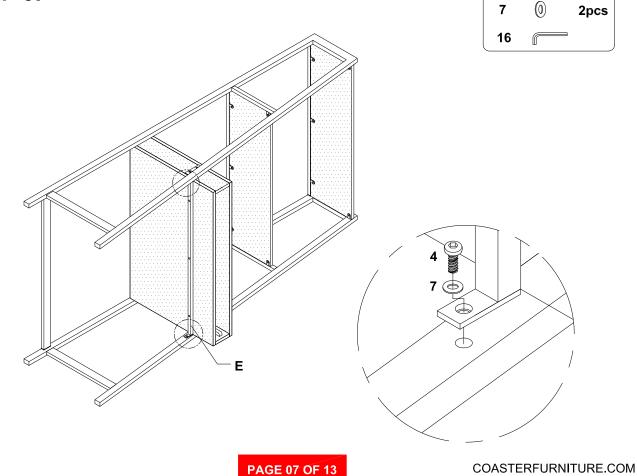


ASSEMBLY INSTRUCTIONS STEP 9:



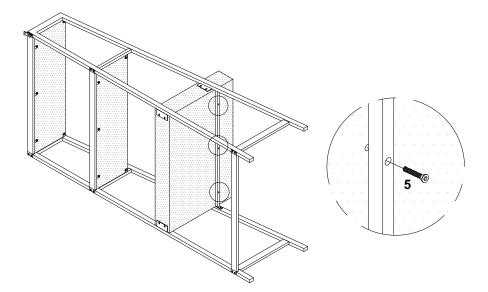

STEP 10:

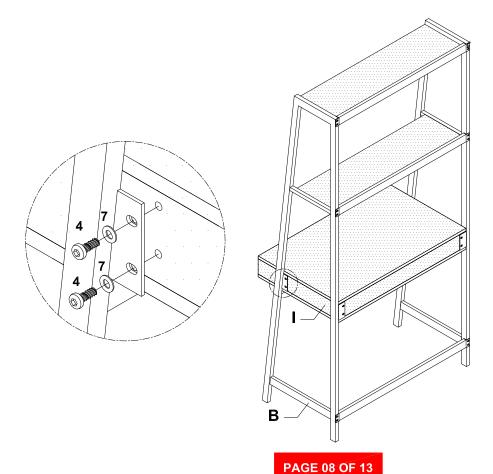


ASSEMBLY INSTRUCTIONS

STEP 11:




| 3 | *mmmm» | 4pcs | | |
|---|--------|------|--|--|
| 9 | | 2pcs | | |

12 📼 1pc

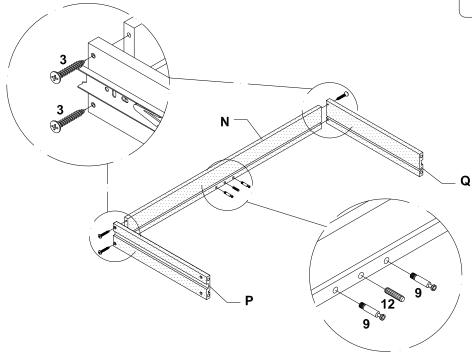

STEP 12:

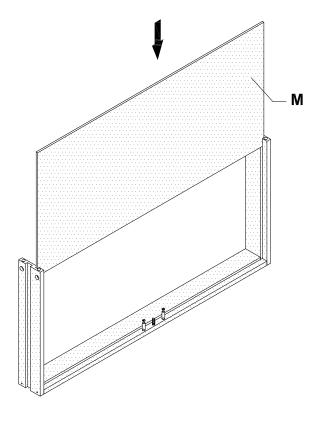





ASSEMBLY INSTRUCTIONS STEP 13:






2pcs

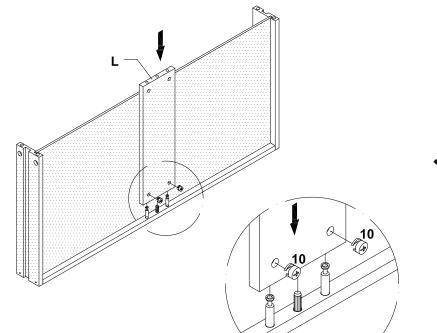

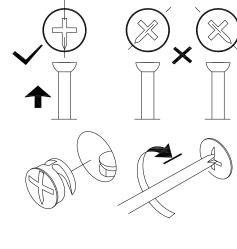

STEP 14:

9 (3) 6pcs 1pc

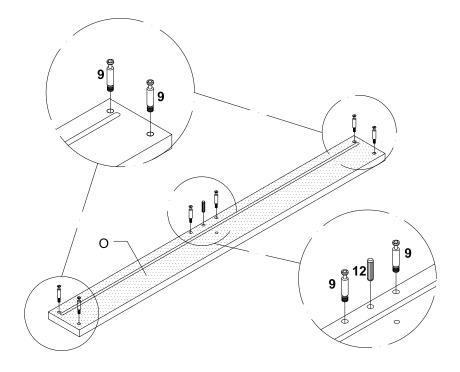




ASSEMBLY INSTRUCTIONS STEP 15:







6pcs

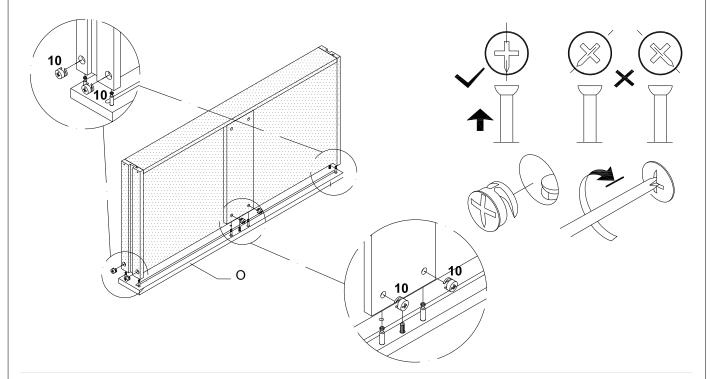

 
STEP 16:



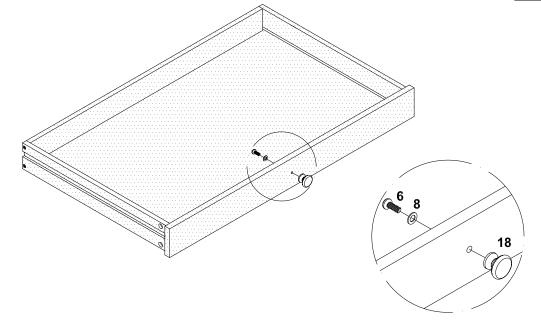

ASSEMBLY INSTRUCTIONS



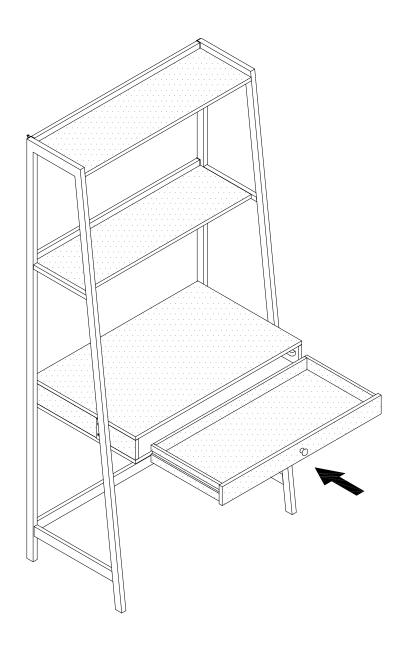



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FOR FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furnituremay result in injury and damage.


STEP 1

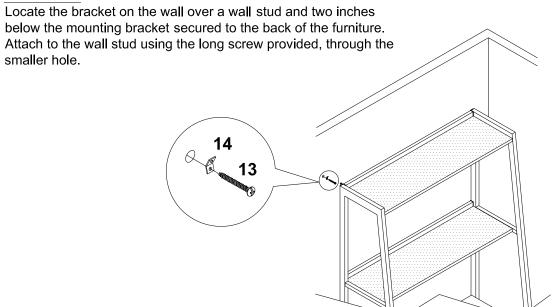

STEP 2

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

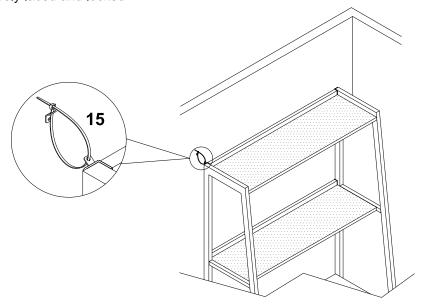

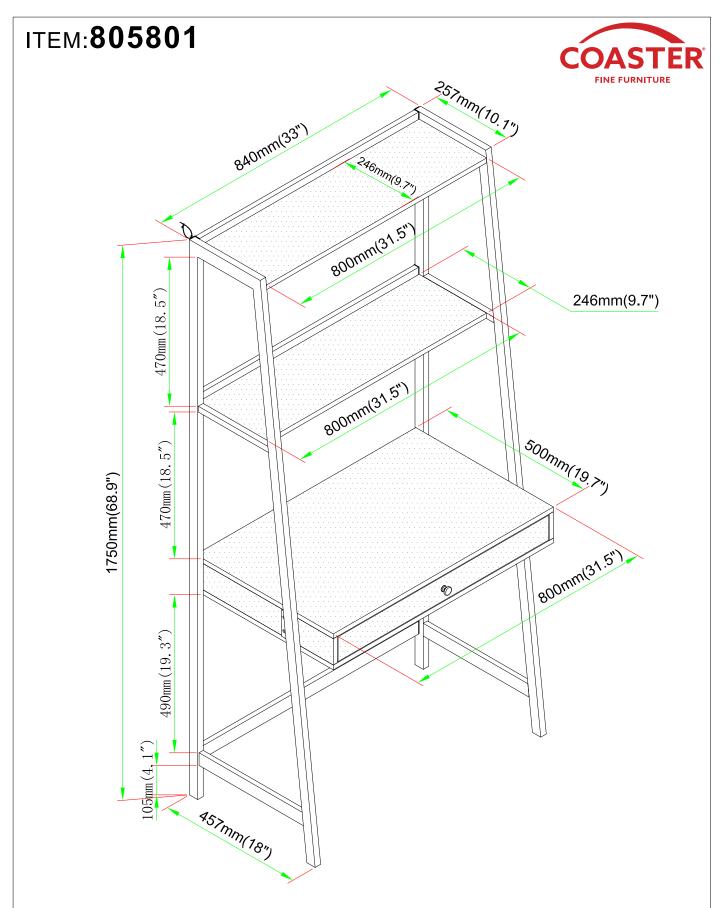

Note: Dimension tolerance ±5%