


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

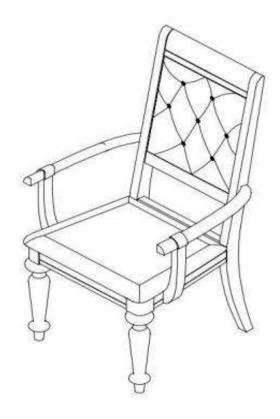

Fine Furniture for every stage of life

106473 Dining Arm Chair

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

Α	BACK FRAME		1PC
В	SEAT CUSHION WITH FRAME		1PC
С	FRONT LEG	E Co	2PCS
D	LEFT ARM REST		1PC
E	RIGHT ARM REST	F	1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (4MM - RBW)	1PC	5 LOCK WASHER (Ø5/16" - RBW)		12PCS
2	BOLT 4 (Ø5/16" x 3-1/7" - RBW)	4PCS	6 FLAT WASHER (Ø5/16" - RBW)		12PCS
3	BOLT 3 (Ø5/16" x 2-3/8" - RBW)	4PCS	7 BOLT 1 (Ø5/16" x 1-5/8" - RBW)		2PCS
4	BOLT 2 (Ø5/16" x 1-1/2" - RBW)	2PCS	8 PAN HEAD SCREW (Ø8/1-1/2" - RWB)	<i>⊕</i>	2PCS


NOTE:


Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ASSEMBLY INSTRUCTIONS STEP 1

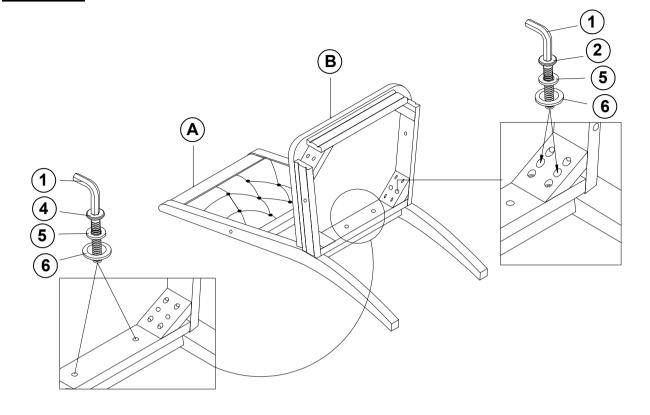

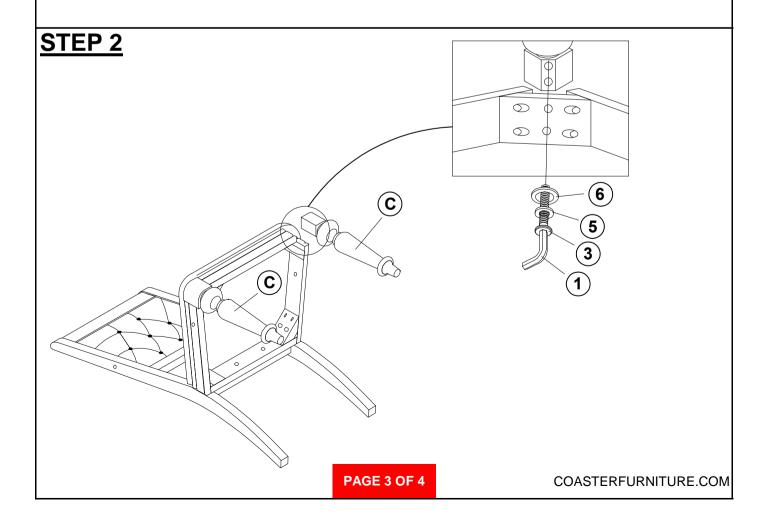


COASTER

ASSEMBLY INSTRUCTIONS STEP 3

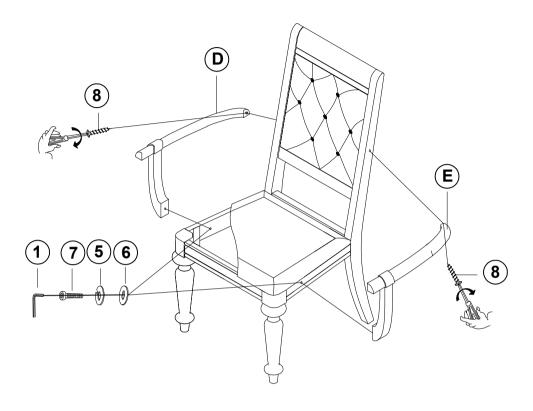


STEP 4 COMPLETE

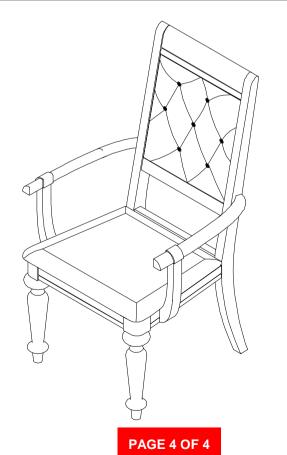



COASTERFURNITURE.COM



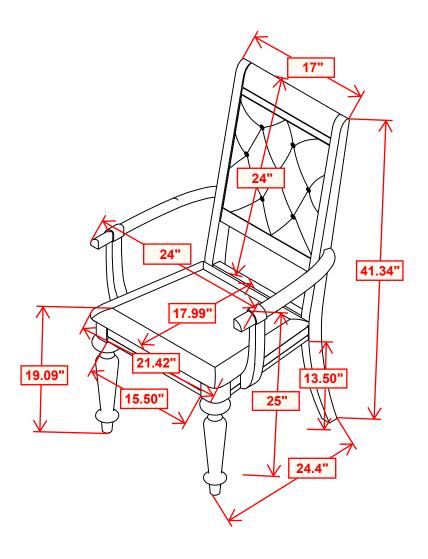

Note: Dimension tolerance ± 5%