

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

106044
Dining Chair

ITEM:106044



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A BACK AND SEAT

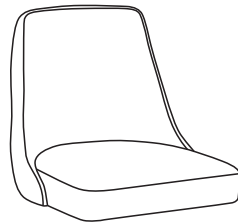


1 PC

B UPPER LEG

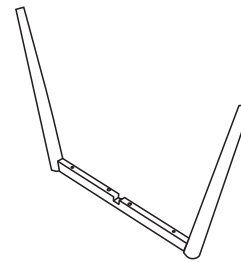

1PC


C LOWER LEG

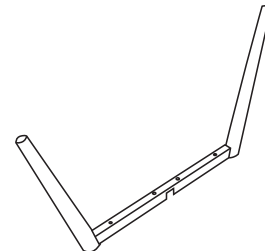

1PC

HARDWARE IDENTIFICATION

 1 BOLT 6X50MM



4pcs

4 WASHER Ø6X16X1.5MM



4pcs

2 BOLT 6X13MM



4pcs

5 ALLEN WRENCH 4MM



 
1pcs

3 BOLT M6



4pcs

6 CROSS PLATE



1pcs


ITEM:106044

ASSEMBLY INSTRUCTIONS




STEP 1

Step 1 : 50% tighten screw at this stage.

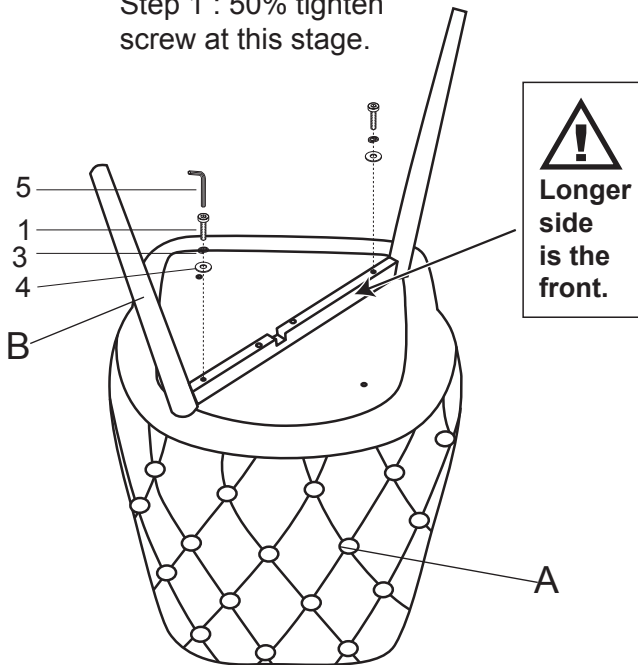


STEP 2

Step 2 : 50% tighten screw at this stage.

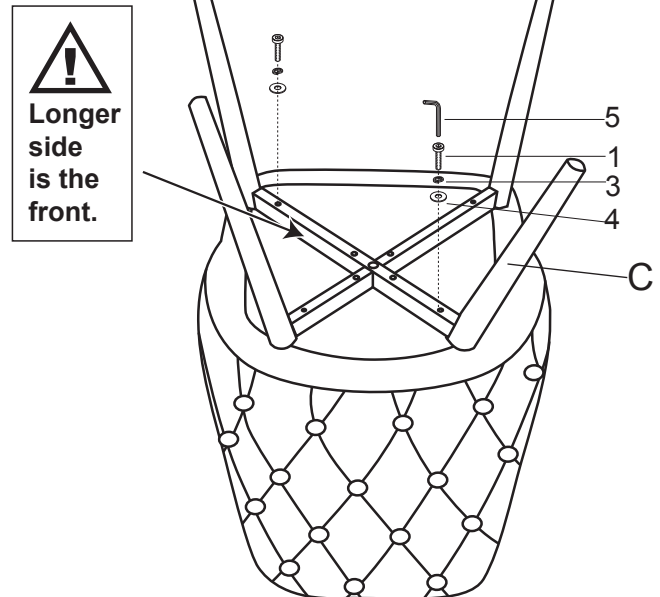


STEP 3

Step 3 : After all parts are in right position, then 100% tighten up all screws before using.

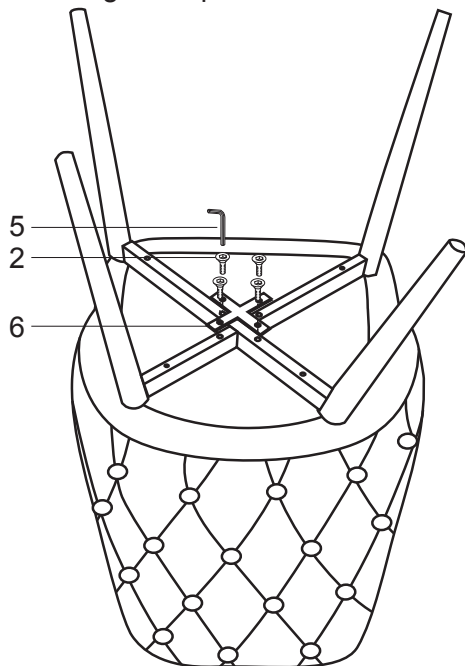

STEP 4

COMPLETE

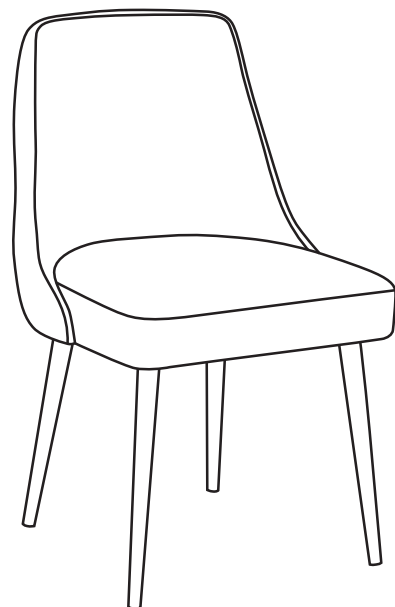

ITEM:106044

