 




*ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE*

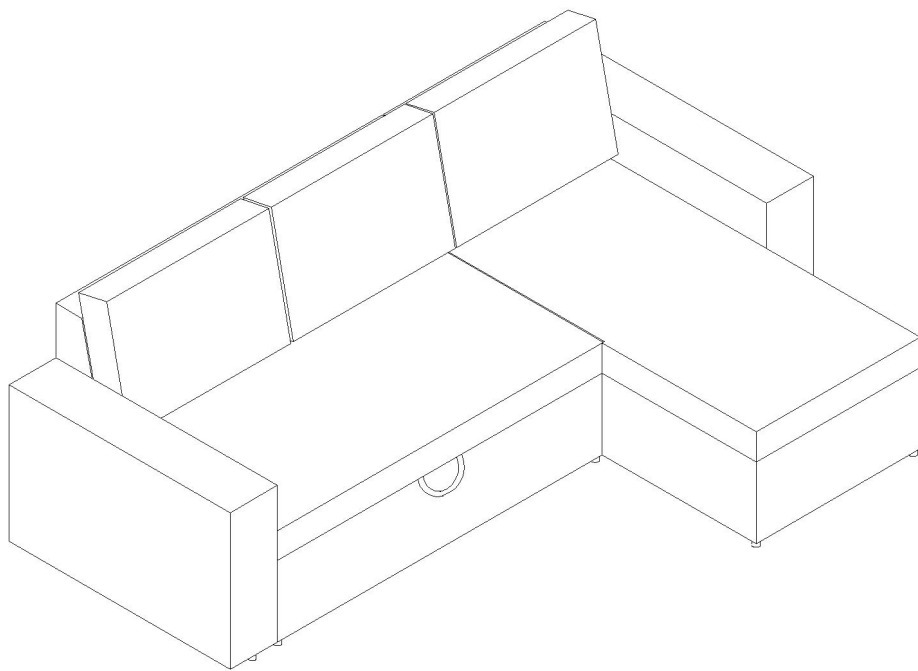

503929(B1-B2)
SECTIONAL

REVISION 0 : 05/01/2019
REVISION 1 : 07/10/2019
REVISION 2 : 08/07/2019
REVISION 3 : 11/03/2021

Page 1 of 6

COASTERFURNITURE.COM

ITEM: **503929(B1-B2)**



 
ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.





ASSEMBLY TIME 20 MINUTES

PARTS IDENTIFICATION:


HARDWARE IDENTIFICATION:

B1: Chaise & Left Armrest(BOX1)

  Z-HARD WARE PACK IS LOCATED IN 503929B1(BOX1)

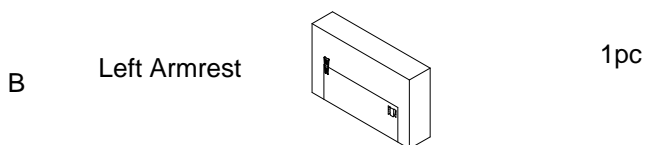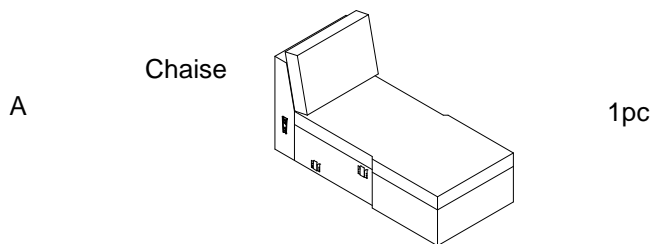

B2: Sofa & Right Armrest(BOX2)

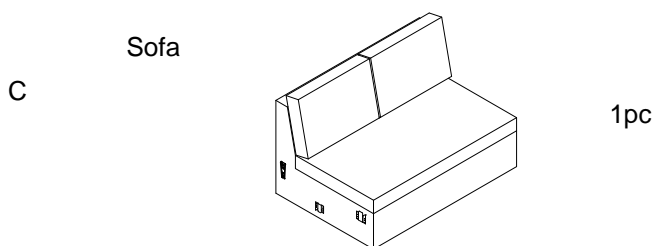 


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item .

ITEM: 503929(B1-B2)
ASSEMBLY INSTRUCTION

 
step 1

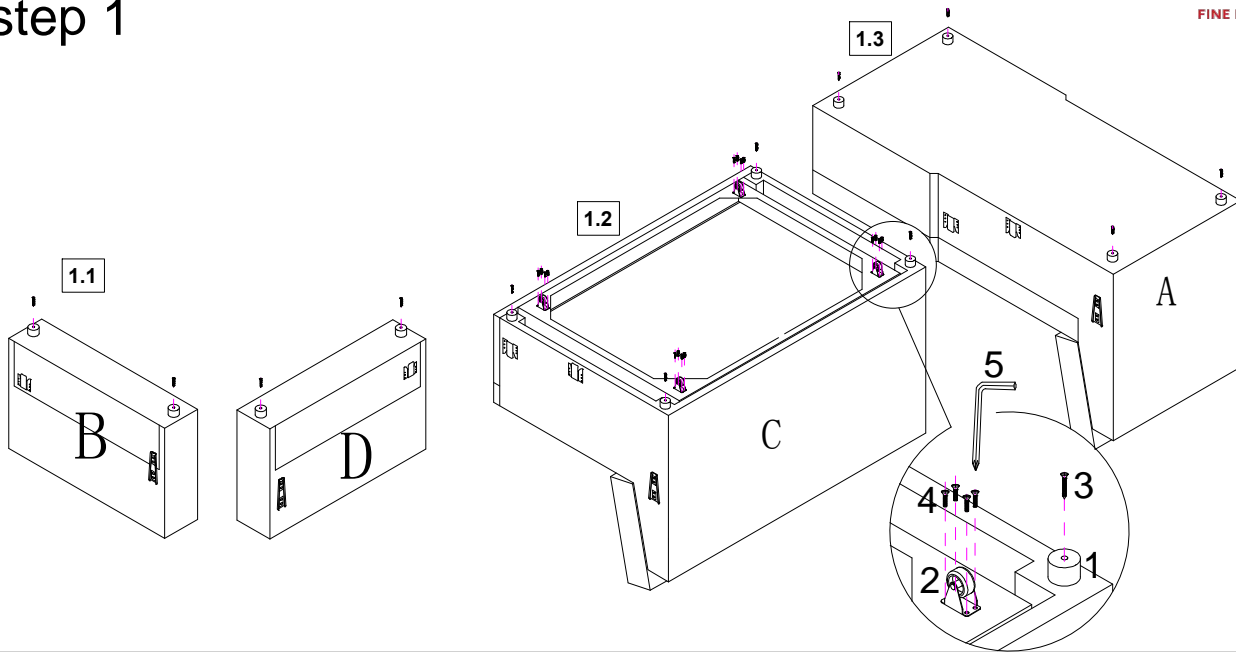

 
step 2

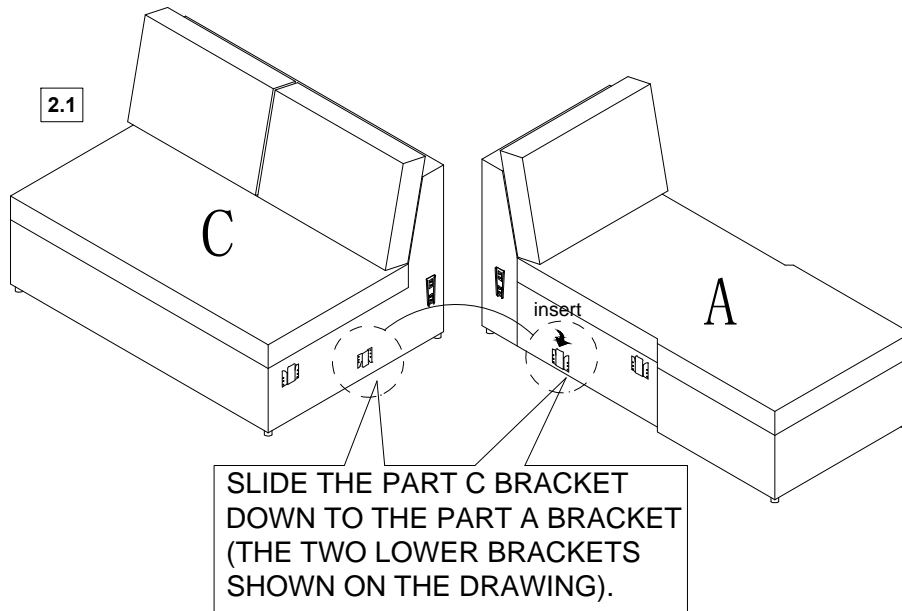

 
step 3

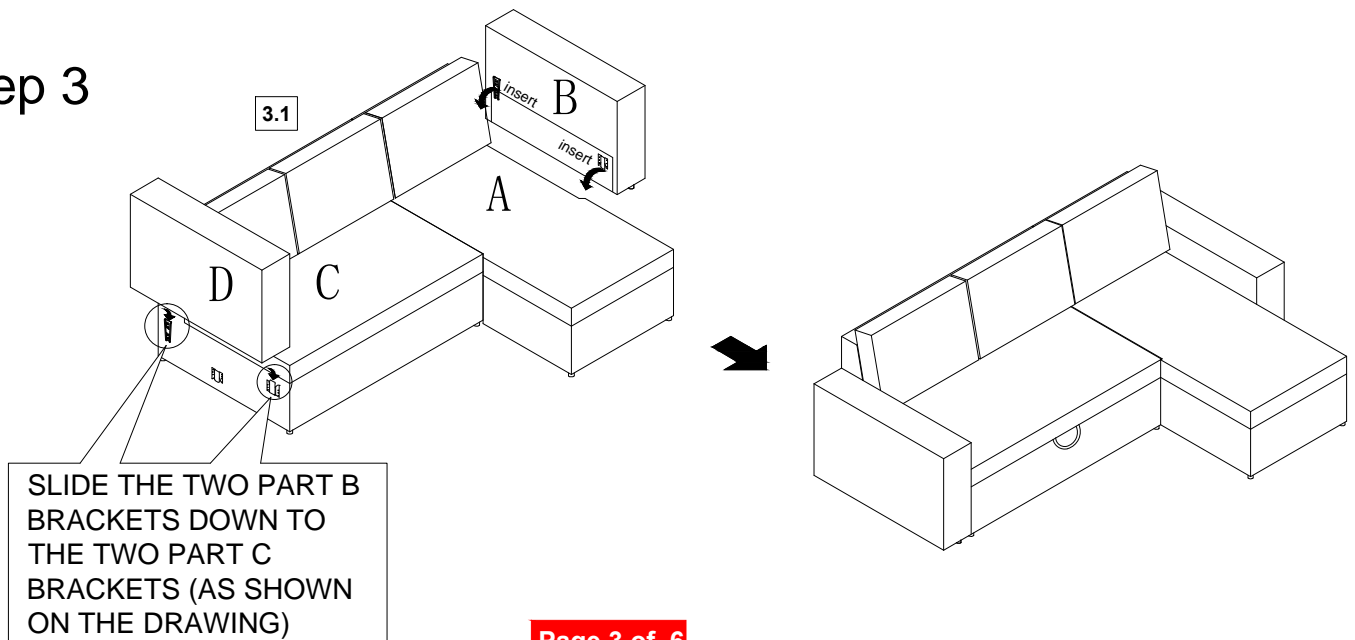



ITEM: 503929(B1-B2)
COMPLETE
step 4

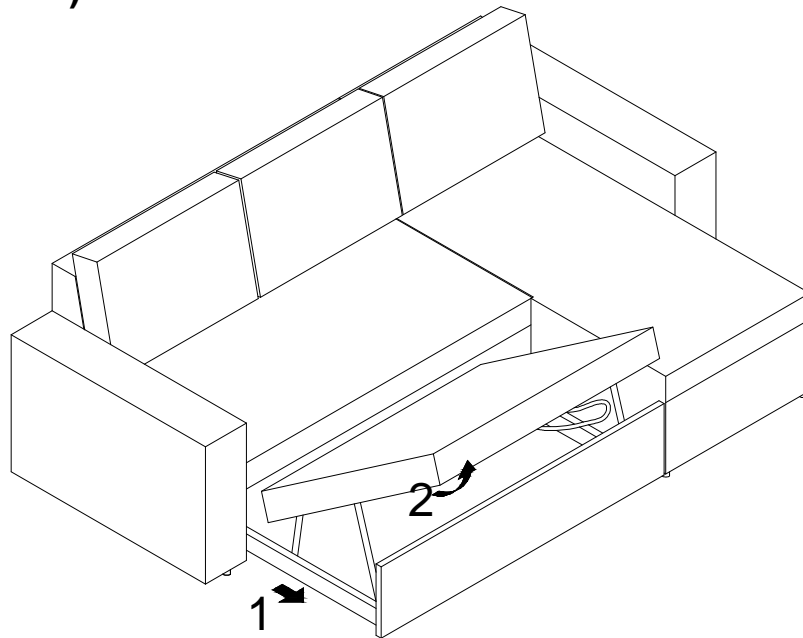 

 step 5
COMPLETE

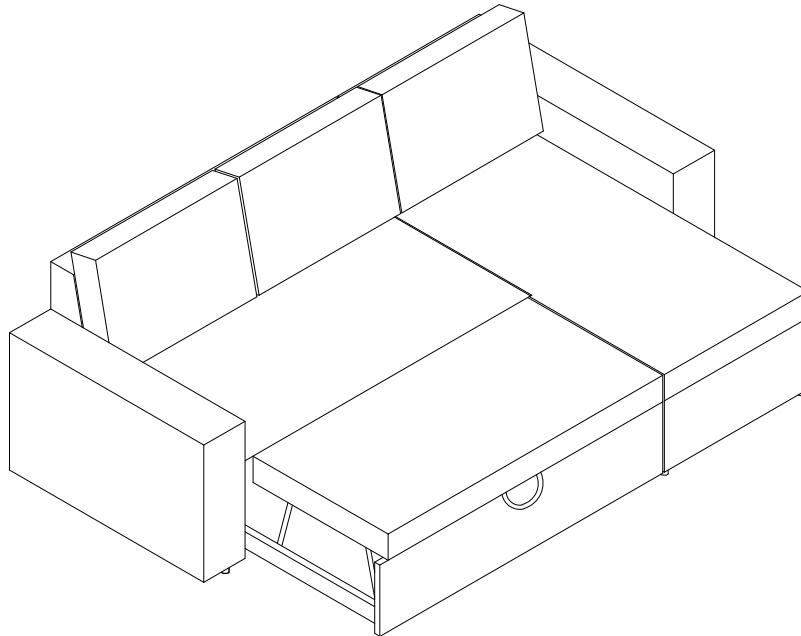

  step 6
COMPLETE

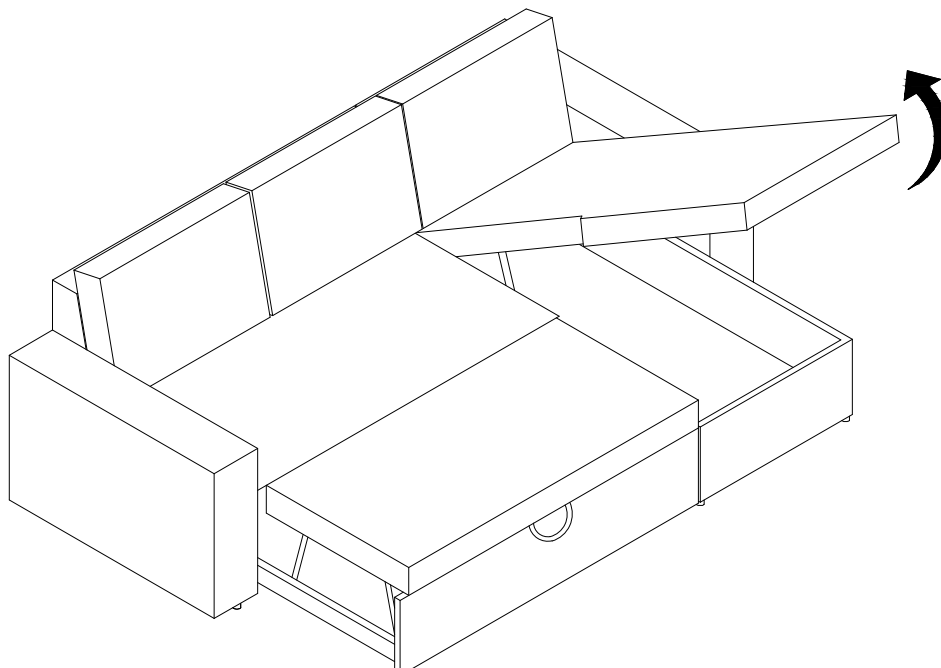

AFTER REMOVING THE ARMREST,
THE POSITION OF THE SOFA AND
THE CHAISE CAN BE REARRANGED.
THEN THE ARMREST CAN BE
ATTACHED AGAIN.

step 7

