

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

111103 DINING CHAIR

ITEM: 111103



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

\mathbb{N}

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10

PARTS IDENTIFICATION

B1 (BOX 1)

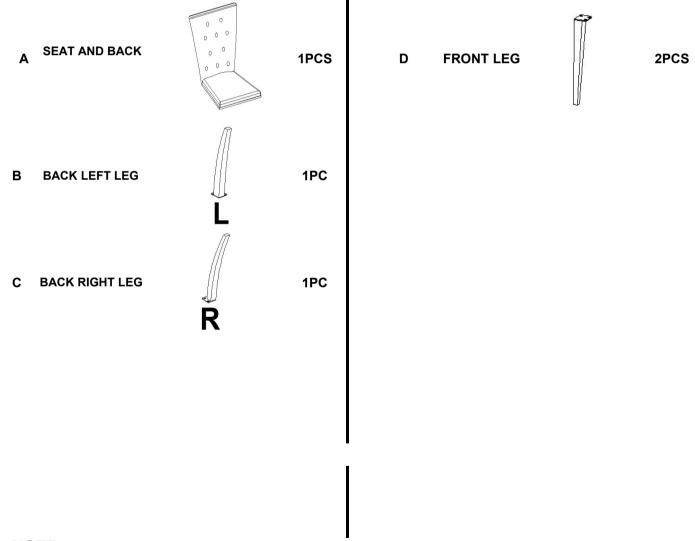

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:111103

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION


Z-B2 (BOX 1) - HARDWARE PACK IS LOCATED IN 111103

1 ALLEN WRENCH	-	1PC
2 SHORT BOLT (M8*20mm)		12PC
3 SPRING WASHER		12PCS
4 FLAT WASHER D20*2	0	12PCS

Hardware pack is located in 111103


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

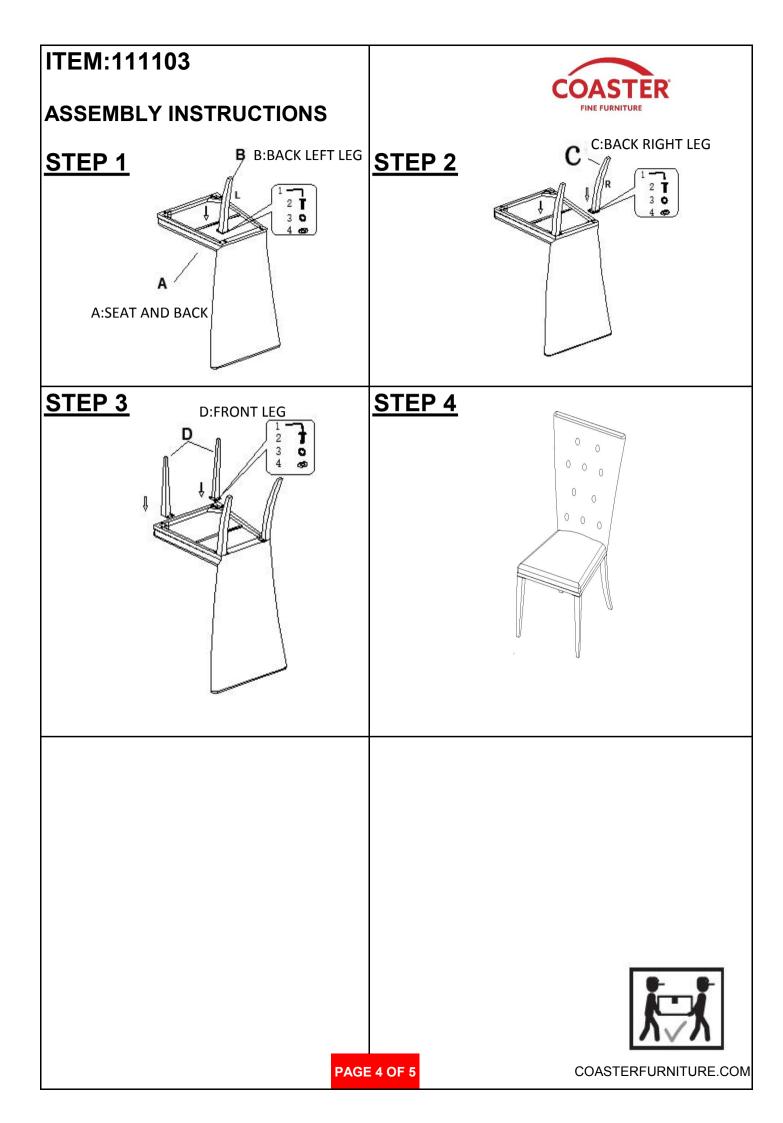

ITEM:111103



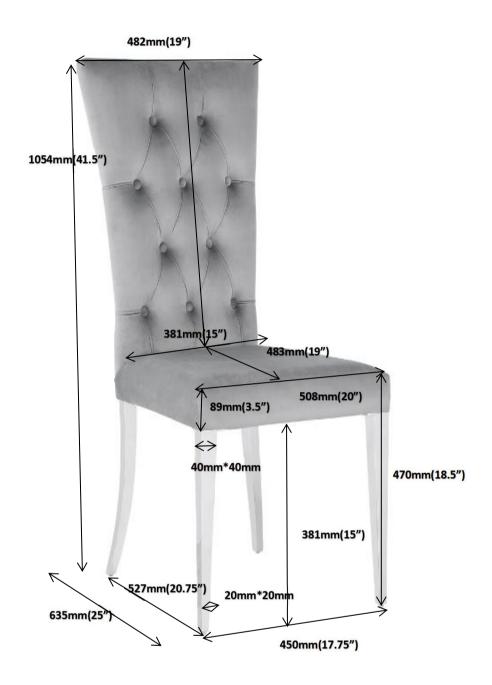

Note: Dimension tolerance ±5%