

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115231 DINING TABLE

REVISION 0: 01/24/2022 REVISION 1: 03/18/2022

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM:115231

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

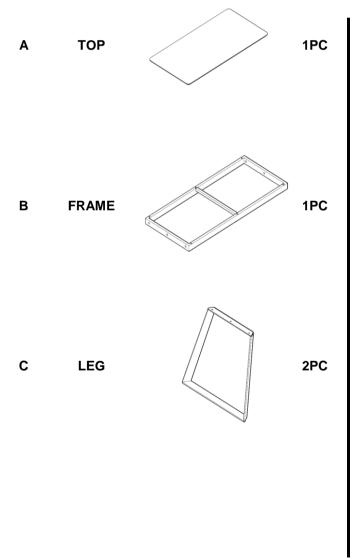

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 115231



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

HARDWARE IDENTIFICATION

1	ALLEN KEY (5MM)	1PC
2	FLAT WASHER (φ8*20*1.2)	12PCS
3	ALLEN SCREW (M8*20)	6PCS
4	ALLEN SCREW (M8*30)	6PCS
5	SPRING WASHER (Φ8.5*1.5)	6PCS
6	STICKER (50*50*2)	8PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 3 OF 5


COASTERFURNITURE.COM

ITEM:**115231**


COASTER

ASSEMBLY INSTRUCTIONS

STEP:1

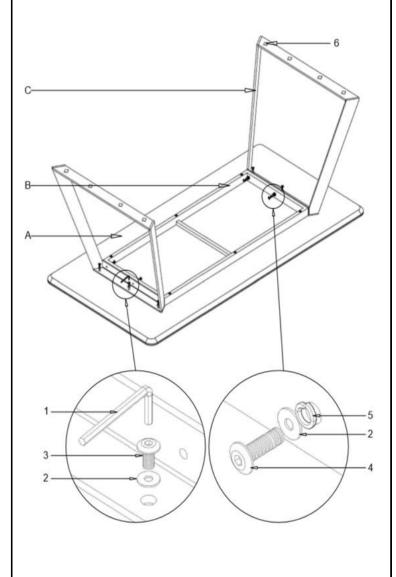

COMPLETE

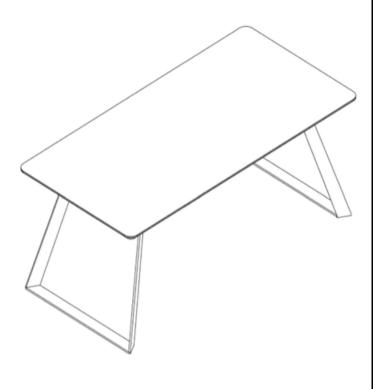

PAGE 4 OF 5

COASTERFURNITURE.COM

