

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

801455 WRITING DESK

# ITEM: 801455

### **ASSEMBLY INSTRUCTIONS**

### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!


Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

40 MINUTES

### PARTS IDENTIFICATION

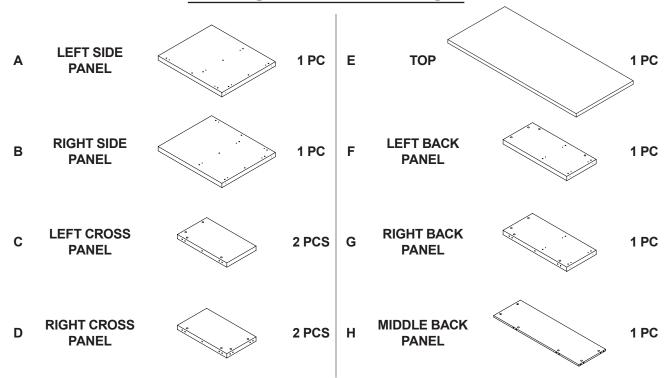


## HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm SR		34 PCS
2	WOODEN DOWEL Ø8x30mm		42 PCS	5	PLASTIC FEET Ø15mm		8 PCS
3	CAM BOLT Ø7x35.5mm SR		34 PCS	6	STICKER Ø20mm		6 PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

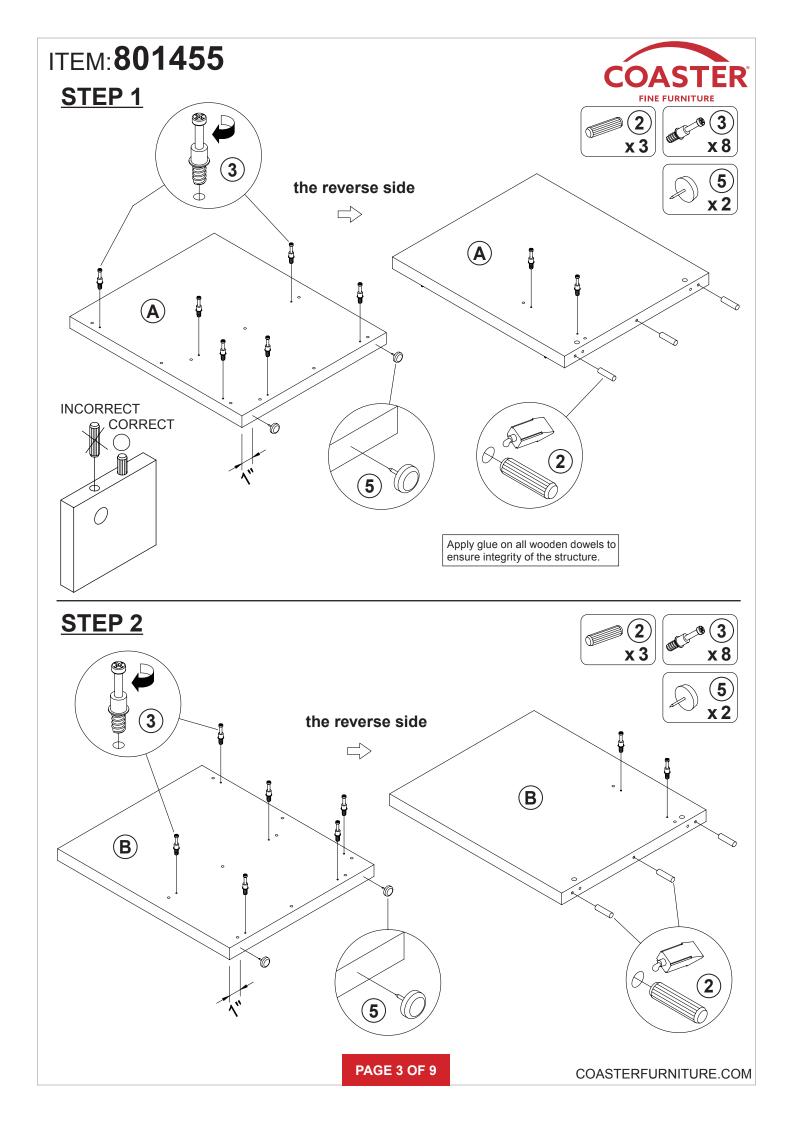


# ITEM: **801455 STEP 3**





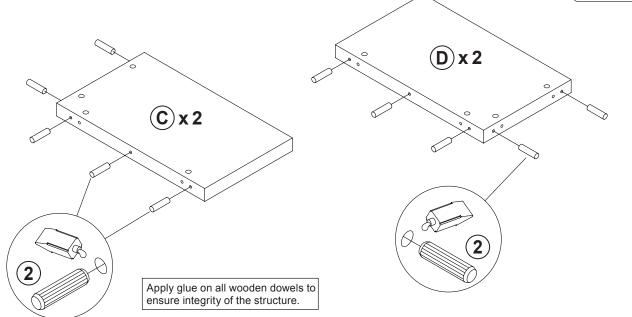

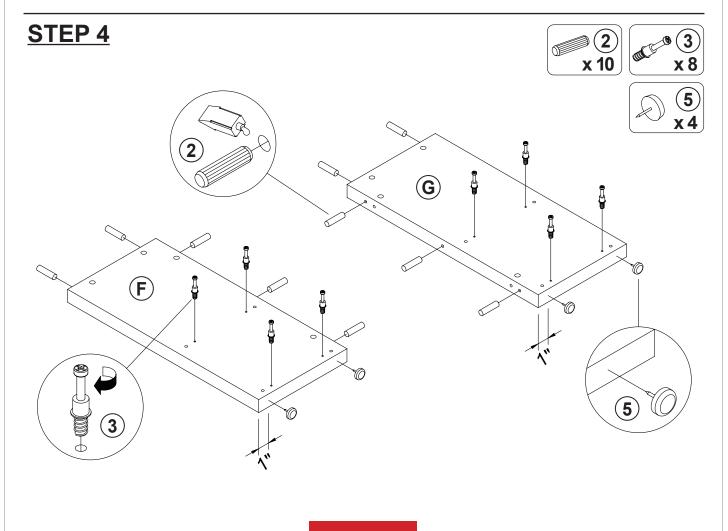

# ITEM: **801455 STEP 5**





Apply glue on all wooden dowels to ensure integrity of the structure.









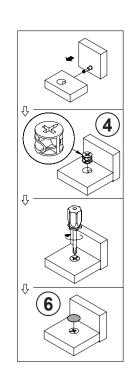


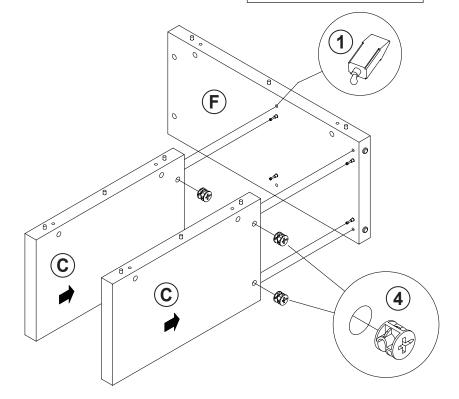


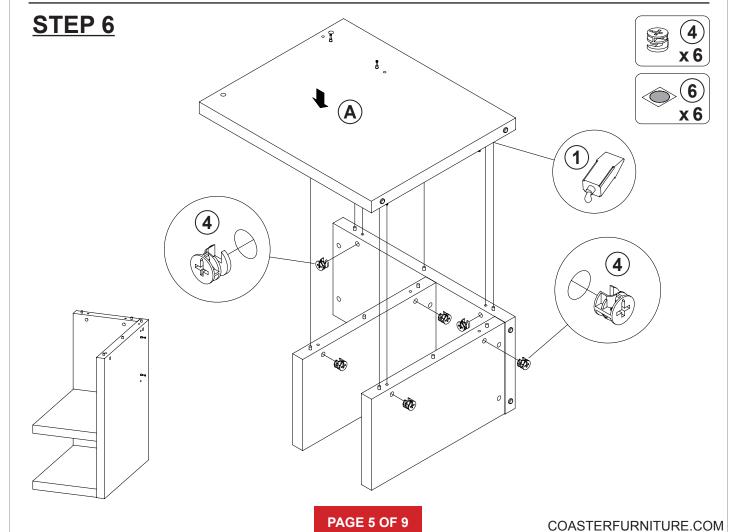


# STEP 7 Apply glue on all wooden dowels to ensure integrity of the structure.

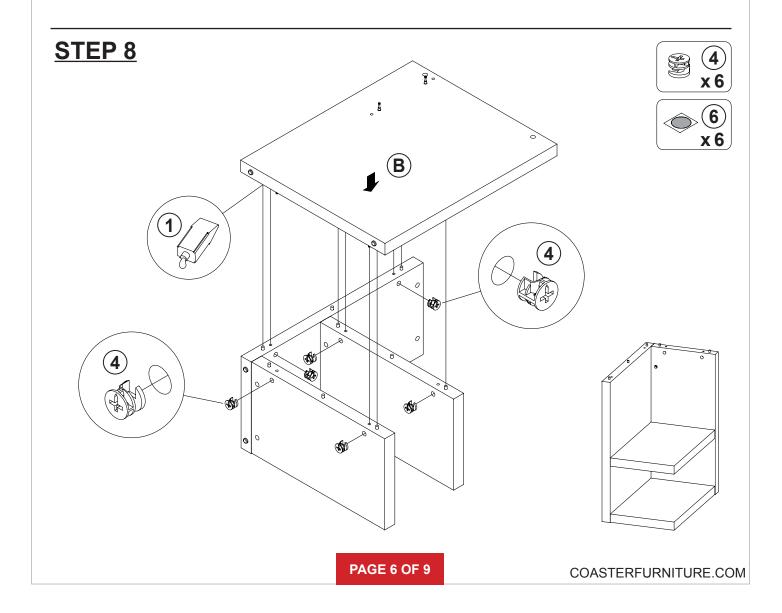

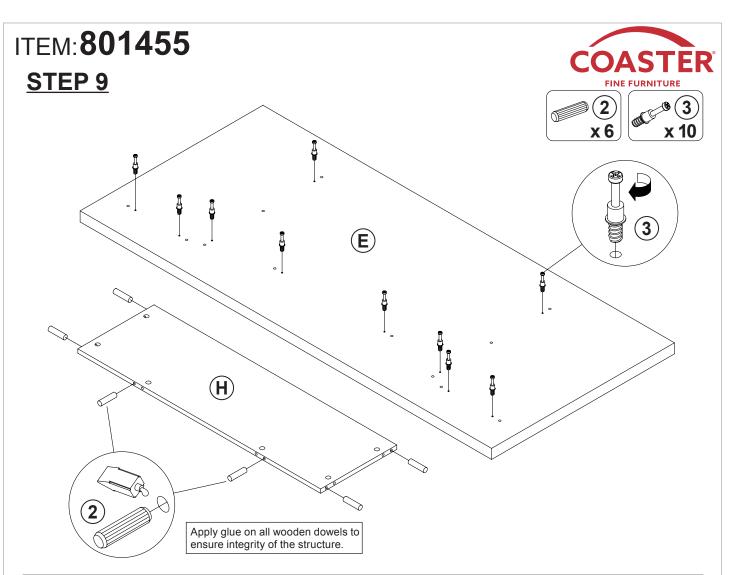


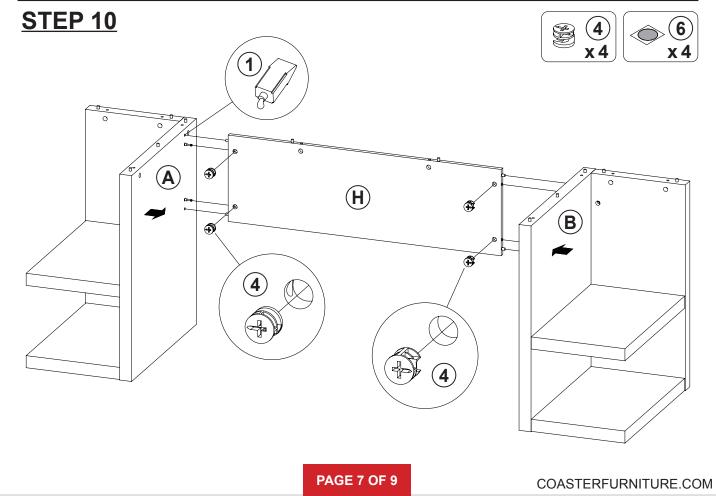

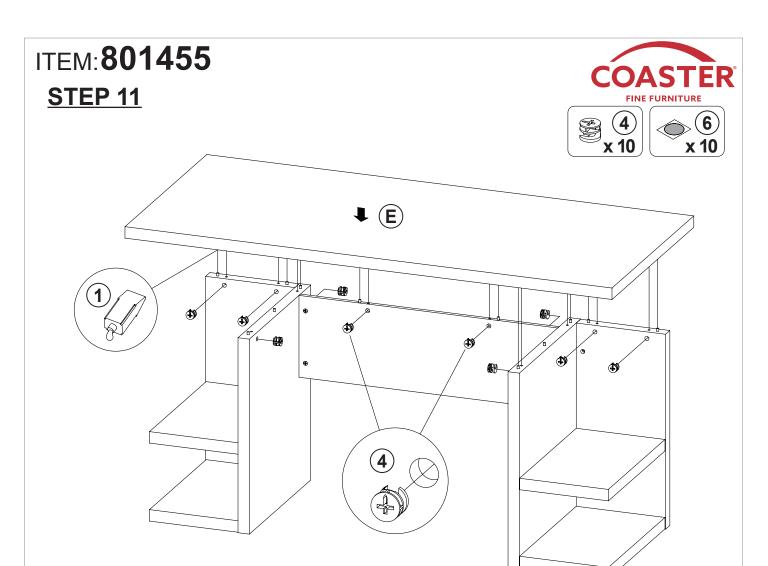

# **STEP 12**

**COMPLETE** 

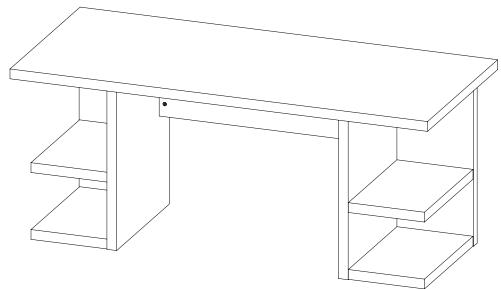






# ITEM:801455



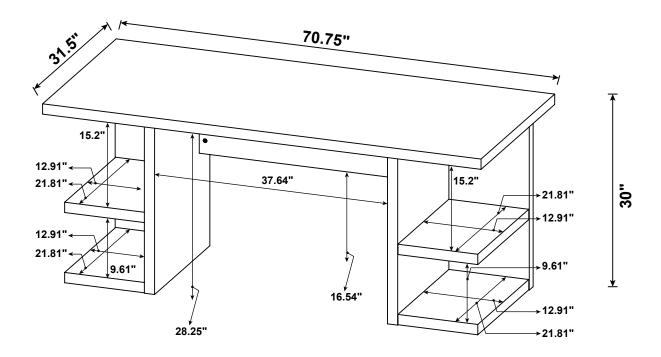

Note: Dimension tolerance ±5%