

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

801135 Bookcase

REVISION 0:05/03/2019

PAGE 1 OF 7

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS INDENTIFICATION:

No	DESCRIPTION & FIGURE	QTY
Α	Right Side Frame	1рс
В	Left Side Frame	1pc
С	Top Horizontal Pipe	2pcs
D	Front Horizontal Pipe	1pc
E	Back Bottom Horizontal Pipe	1pc
F	Left Top Frame	1pc
G	Left Middle Frame	1pc
Н	Right Top Frame	1рс


No	DESCRIPTION & FIGURE	QTY
1	Right Middle Frame	1pc
J	Horizontal Pipe	4pcs
К	Short Vertical Pipe	3pcs
L	Long Vertical Pipe (Inside The Plate)	2pcs
М	Long Vertical Pipe (Outside The Plate)	2pcs
N	Large board	2pcs
0	Small board	6pcs

HARDWARE PACKAGE:


No	DESCRIPTION	FIGURE	QTY
1	Large Bolt	Μ6 x35mm	31pcs
2	Medium Bolt	(® M6x12mm	14pcs
3	Small Bolt	‱@ M6x9mm	36pcs
4	ALLEN KEY (4MM)		1рс



STEP 1

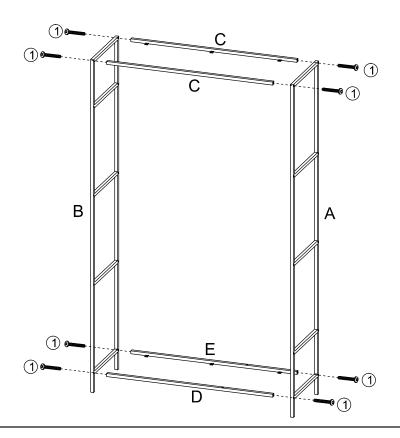


STEP 2

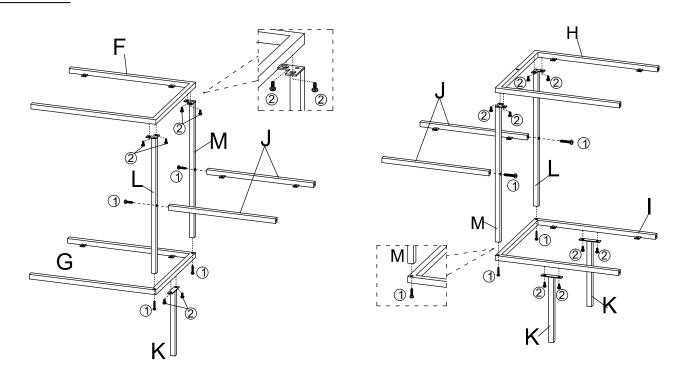


STEP 3



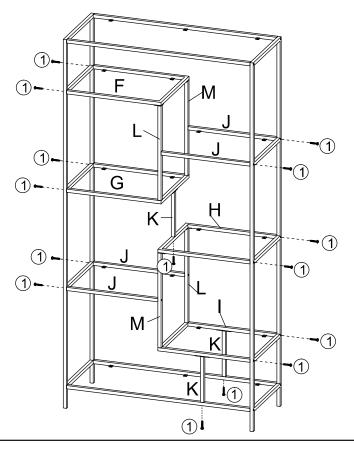

STEP 4

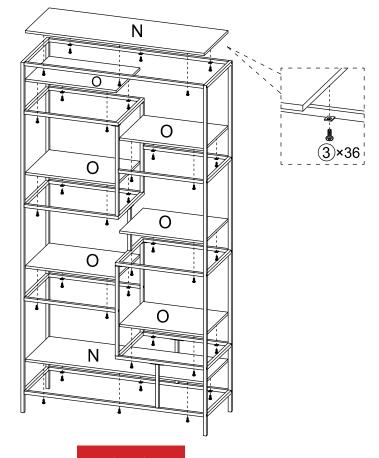


PAGE 4 OF 7

COASTERFURNITURE.COM

STEP 5



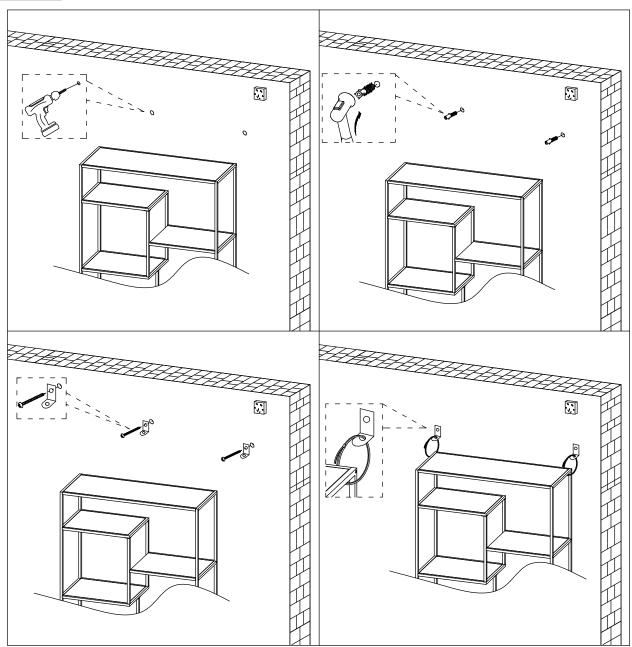

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture
This restraint is not a substitute for proper adult supervision.
This restraint may provide ptotection against tipping furniture.


Do not allow children to climb on furniture.

Failure to detach this restraint before moving furniture may result in injury and damage.

COASTER


STEP 6

COMPLETE

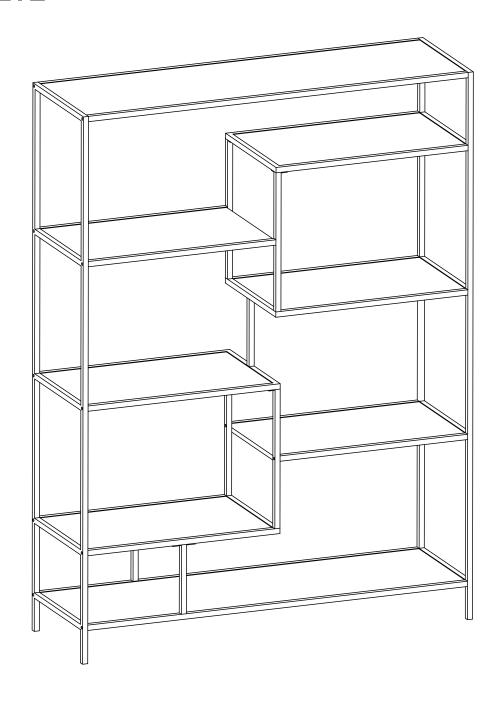





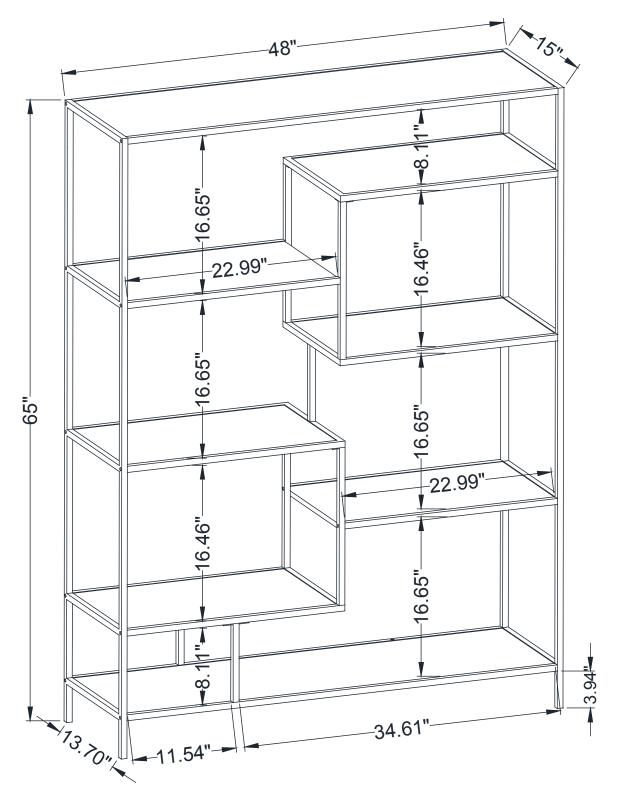

Note:Dimension tolerance ± 5%